

CR6307A- German keyboard	CR6307A- U.S. keyboard
 W010F01  WFF1908	  W010F01
 W010F00  WFF1900	  W010F00
Start configuration	End configuration