



HIFI SYSTEM - DVD VIDEO

Ref.: CH04



Instruction Manual

MPEG4 \ DVD \ SVCD \ VCD \ CD \ MP3 PLAYER



SAFETY PRECAUTIONS

ELECTRIC SHOCK WARNING



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
DO NOT EXPOSE TO DRIPPING OR SPLASHING.
DO NOT PLACE ANY OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES ON THE APPARATUS.
THE MAINS PLUG USED AS THE DISCONNECT DEVICE, DISCONNECT DEVICE SHALL REMAIN OPERABLE.**

CAUTION: To prevent electric shock. Ensure the 2pin VDE plug is fully inserted into its socket.

LASER SAFETY

This unit employs a laser. Only a qualified service person should remove the cover or attempt to service this device, due to possible eye injury.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURE OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.



SAFETY PRECAUTIONS

IMPORTANT SAFETY INSTRUCTIONS

1. This production was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

2. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.

3. Retain Instructions - The safety and operating instructions should be retained for future reference.

4. Follow Instructions - All operating and use instructions should be followed.

5. Heed Warnings - All warning on the appliance and in the operating instructions should be adhered to.

6. Water and Moisture - The appliance should not be used near water, for example, near a bathtub, wash-bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

7. Ventilation - the appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

8. Heat - The appliance should be situated away from heat sources such as radiators, stoves, or other appliances (including amplifiers) that produce heat.

9. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

10. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.

11. Power-Cord Protection - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to power cords in plugs.

12. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

13. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

14. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
The power-supply cord or the plug has been damaged;
Objects have fallen, or liquid has spilled into the appliance;
The appliance has been exposed to moisture;
The appliance does not appear to operate normally
Exhibits a marked change in performance;
The appliance has been dropped, or the enclosure damaged.

15. Servicing - The user should not attempt to service the appliance beyond that described in the operation instructions. All other servicing should be referred to qualified service personnel.

16. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that has the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

17. Lightning - All electrical apparatus should be disconnected from the Mains supply, during an Electrical storm to protect from power surges.

18. Overloading - Do not overload wall outlets, extension cords, as this can result in a risk of fire or electric shock.

CONTENTS

Thank you for purchasing this DVD player.
For operation and security, read this manual carefully and keep it handy for future reference.

† Screen displays and illustrations in this manual may differ from the actual ones for better visibility.

TABLE OF CONTENTS

SAFETY PRECAUTIONS	1-2	FUNCTION SETTING	13-17
ELECTRIC SHOCK WARNING	1	GENERAL SETUP	13-14
IMPORTANT SAFETY INSTRUCTIONS	2	AUDIO SETUP	14
TABLE OF CONTENTS	3	DOLBY SETUP	14-15
INTRODUCTION	4-5	VIDEO SETUP	15-16
FEATURES	4	PREFERENCE SETUP.....	16-17
ABOUT THIS MANUAL	5	BASIC OPERATIONS	18-22
PREPARATIONS BEFORE OPERATION	6	PLAY DISCS	19
PRECAUTIONS FOR DISCS	6	SELECT ANGELS	20
REMOTE CONTROL	6	OSD	20
FRONT AND REAR PANEL	7-8	SELECT SUBTITLE LANGUAGE	21
FRONT PANEL	7	PLAYING DISCS IN VARIOUS WAYS ..	21-22
REAR PANEL	7	OTHERS	23-24
REMOTE CONTROL	8	TROUBLE SHOOTING	23
LOCATION OF CONTROLS	9	TEHNNICAL SPECIFICATION	24
INSERT CARD READER	9		
USB/CARD READER OPERATION	9		
CONNECTIONS	10-12		
SUPPORT BLOCK ASSEMBLY			
DIAGRAM	10		
CONNECT TO A TV	11		
CONNECT TO AN AMPLIFIER	12		

INTRODUCTION

FEATURES

1. HIGH RESOLUTION

1. This DVD Player used MPEG2 format to give high resolution pictures of over 500 "horizontal" lines.

2. UNIQUE FUNCTIONS

Multi-angle and multi-language bring unique functions. Parental lock makes it easy to control the content of discs.

3. SCREEN

4 : 3 and 16 : 9 "Wide screen" formats are available.

4. COMPATIBILITY

The appliance can play DVD, VCD, MP3, CD and JPEG Disc.

5. TIME SEARCH

It can search a specific part on a disc.

6. MULTI-FUNCTIONS

Fast forward, fast reverse, slow play, frame play, repeat play and program play.

DETAILS AND PRECAUTIONS ON THE USE OF BATTERIES :

- Discard a used battery in nature or garbage pollutes and prevents the recovery of recyclable materials. It is therefore important **to limit consumption of batteries** and follow these guidelines:
 - focus on alkaline batteries (that last longer than the saline batteries) and when possible, rechargeable batteries
 - deposit batteries and accumulators in specific containers arranged among traders. For example, metals will be valued and polluted the environment because they contain heavy metals hazardous to health and the environment primarily (cadmium and nickel)
 - The piles must installation by respecting the polarity indicated on the apparatus and the pile. An incorrect positioning can is to damage the apparatus, is to cause escapes on the level of the pile, is to the extreme to cause a fire or the explosion of the pile.
 - To ensure proper operation, the batteries must be in good condition. In case of abnormality in the functioning of the device, put fresh batteries
 - Never attempt to recharge non-rechargeable batteries. They could run, warm up, causing a fire or explosion.
 - Replace all batteries at the same time. Never mix zinc batteries with alkaline batteries or rechargeable batteries
 - The batteries must be removed from the device
 - Also, remove the batteries from your device if you do not use it for a long time, if the batteries may leak and cause damage.
 - Never try to short-circuit the battery terminals
 - Never dispose of batteries in fire, they might explode
 - Charging of batteries is to be performed by an adult.
 - Remove batteries from the device before reloading.
 - We recommend an adult to supervise children when they change the batteries so that these instructions are complied with or to make himself the replacement of batteries.
 - If a battery is swallowed, immediately consult a doctor or poison control center nearest you.
- Do not forget to carry the product with you

INTRODUCTION

ABOUT THIS MANUAL



 

PRINCIPLES FOR USING

This manual mainly describes how to operate the DVD player using the buttons on the remote control.

The buttons on the front panel of the DVD player operate the unit and the buttons have the same or similar names to those on the remote control.

The marks shown in the right chart are used in the manual.

Ⓞ May appear on the TV screen during operation. This icon means the function explained in the owner's manual is not available on that specific DVD video disc.

MARK	INDICATION
	Functions of DVD
	Functions of VCD
	Functions of Mp3
	Functions of CD

PLAYABLE DISCS

TYPE	CONTENT	SIZE	PLAYING TIME	REMARK
DVD	Audio + Video (Motion pictures)	12cm	About 4hrs (single-side disc)	All models
			About 8hrs (double-side disc)	
		8cm	About 80mins (single-side disc)	
			About 160mins (double-side disc)	
VCD	Audio + Video	12cm	About 80 Mins	All models
		8cm	About 23 Mins.	
CD	Audio	12cm	About 75 Mins	All models
		8cm	About 20 Mins.	
MP3	Audio	12cm	About 600 Mins.	All models
JPEG	Picture file	12cm	Depends on picture files size	All models

PREPARATIONS BEFORE OPERATION

PRECAUTIONS FOR DISCS

PLACEMENT

- Put the unit where ventilation is good enough to prevent overheating. Never put the unit in direct sunlight or near heat sources.
- Put the unit horizontally, never put any heavy object on the unit.
- To protect the laser, do not put the unit where there is dust. If there is dust on the laser, use a cleaning disc to clean it.
- Refer to the operation instructions of the cleaning disc before use.

CONDENSATION

Water will appear on the pickup lens in the following cases:

- The unit is suddenly moved from a cold place to a warm place.
- The unit had been used in a humid place. In this case, the unit will not work. Unload the disc and leave the unit on for about one hour to evaporate the condensation.

CLEANING

- Use a soft cloth with a little neutral detergent to wipe the cabinet, panel and controls. Never use abrasive paper, polishing powder or solvent like alcohol.

HANDLING DISC

To keep the disc clean, do not touch the play sides of the disc.
Do not attach paper or tape to the disc.



Keep the disc away from direct sunlight or heat sources.
Store the disc in a disc case after use.

CLEANING DISC

Wipe the disc outwards from the center with clean cloth.




- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or anti-static spray.

REMOTE CONTROL

- Open the battery cover.
 - Insert two AAA batteries, make sure to match "+" and "-" of the batteries to marks inside the battery compartment.
 - Point the remote control at the remote sensor, operate in the range of 5 meters and 60° from the front of the remote sensor. Make sure there is no obstruction between them.
- Ⓛ Batteries can last about 6 months Change the batteries if the remote does not work.
- Ⓜ If the remote control is not used for a long time, remove the batteries to prevent battery leakage.


LOCATION OF CONTROLS

Front Panel

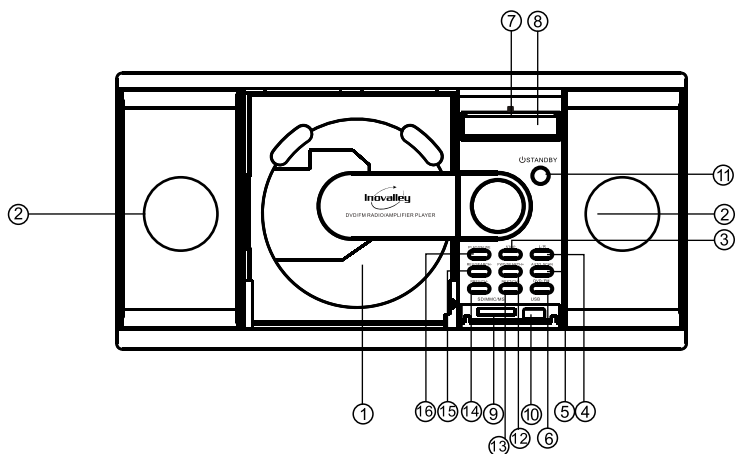

- | | |
|---------------------------|------------------------|
| 1. DVD DOOR | 9. SD/MMC/MS JACK |
| 2. SPEAKER | 10. USB JACK |
| 3. STOP BUTTON | 11. STANDBY |
| 4. L/R BUTTON | 12. FWD/SEARCH+ BUTTON |
| 5. AUTO SCAN BUTTON | 13. NEXT/CH+ BUTTON |
| 6. DVD/FM BUTTON | 14. PREV/CH- BUTTON |
| 7. REMOTE RECEIVER WINDOW | 15. REV/SEARCH- BUTTON |
| 8. DISPLAY WINDOW | 16. PLAY/PAUSE BUTTON |


Rear Panel

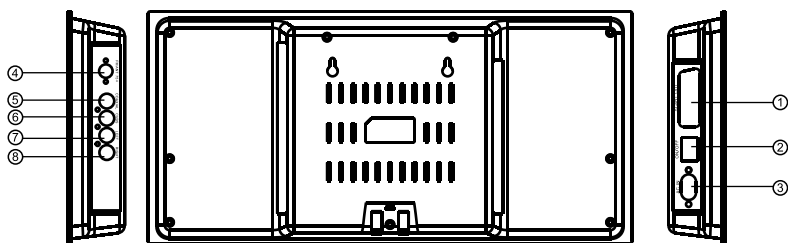

- | | |
|---------------------------|---------------------------------------|
| 1. SCART OUT output jack | 5. Digital Signal Coaxial output jack |
| 2. switch | 6. CVBS output jack |
| 3. AC IN | 7. 2CH Left output jack |
| 4. FM ANT 75Ω output jack | 8. 2CH Right output jack |

LOCATION OF CONTROLS




 
Remote control

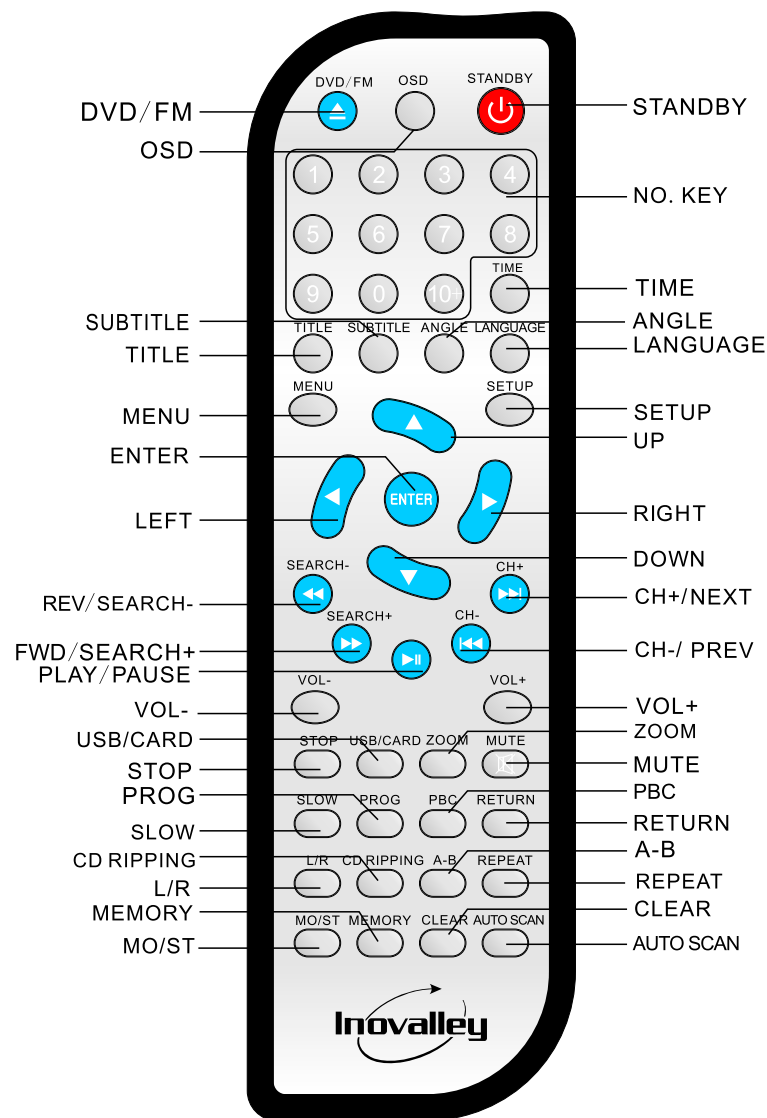

- | | | | | | |
|-------------|----------|------------|------------|-----------|-----------|
| DVD/FM | DVD/FM | OSD | OSD | STANDBY | STANDBY |
| OSD | 1 | 2 | 3 | 4 | NO. KEY |
| | 5 | 6 | 7 | 8 | |
| | 9 | 0 | 10 | TIME | TIME |
| SUBTITLE | TITLE | SUBTITLE | ANGLE | LANGUAGE | ANGLE |
| TITLE | MENU | | SETUP | | LANGUAGE |
| MENU | ENTER | | | | SETUP |
| ENTER | LEFT | ENTER | RIGHT | | UP |
| LEFT | SEARCH- | SEARCH+ | CH+ | | RIGHT |
| REV/SEARCH- | SEARCH+ | SEARCH- | CH- | | DOWN |
| FWD/SEARCH+ | VOL- | VOL+ | | | CH+/NEXT |
| PLAY/PAUSE | VOL- | VOL+ | | | CH-/PREV |
| VOL- | USB/CARD | STOP | USB/CARD | ZOOM | VOL+ |
| VOL+ | STOP | PROG | PBC | RETURN | ZOOM |
| USB/CARD | PROG | PBC | RETURN | | MUTE |
| STOP | SLOW | CD RIPPING | A-B | REPEAT | PBC |
| PROG | L/R | L/R | CD RIPPING | A-B | RETURN |
| SLOW | MEMORY | MO/ST | MEMORY | CLEAR | A-B |
| CD RIPPING | MO/ST | MO/ST | CLEAR | AUTO SCAN | REPEAT |
| L/R | | | | | CLEAR |
| MEMORY | | | | | AUTO SCAN |
| MO/ST | | | | | |

LOCATION OF CONTROLS

    INSERT CARD READER

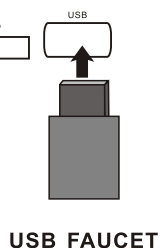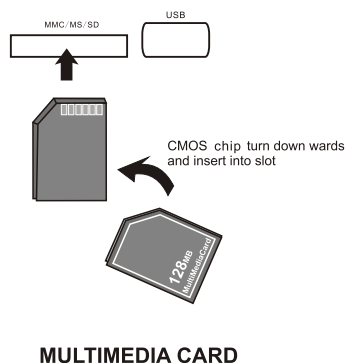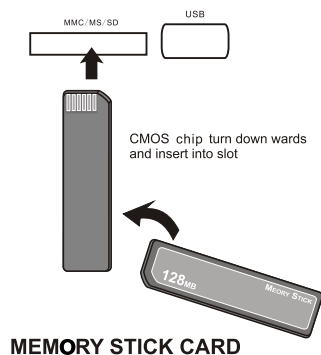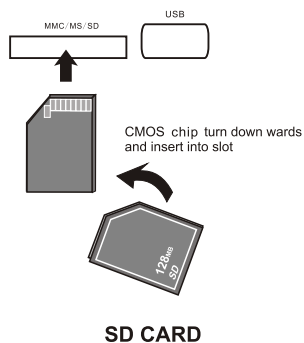


Note:
The USB and Card Reader perform Mp3 and JPEG picture playback only.They don't support DIVX function completely.Also do not insert more than one Card Reader.

USB/CARD READER OPERATION


Power on your DVD player.
Insert your USB device or memory card , press USB/CARD button to select the USB device or memory card source, Press **Direction key** to move ,Press **ENTER** button to confirm your selection .When you chose the file from the USB device or memory card, the DVD player will play the media file automatically
Note: This button is available while the player is in stop or no disc status.

CONNECTIONS


SUPPORT BLOCK ASSEMBLY DIAGRAM

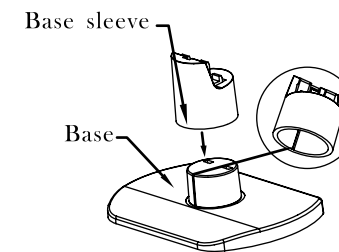



Step one: assemble base sleeve with base.
Note: when assembling, the gluten-bit of base sleeve must match the slot of base or it can't assemble.

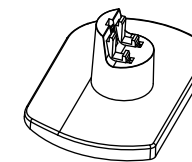

After assembling

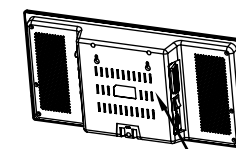


Step two: assemble the unit with support block.

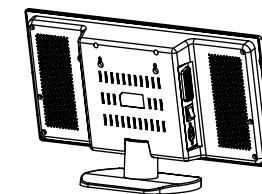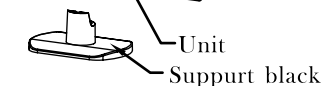

After assembling

CONNECTIONS

Connect to a TV

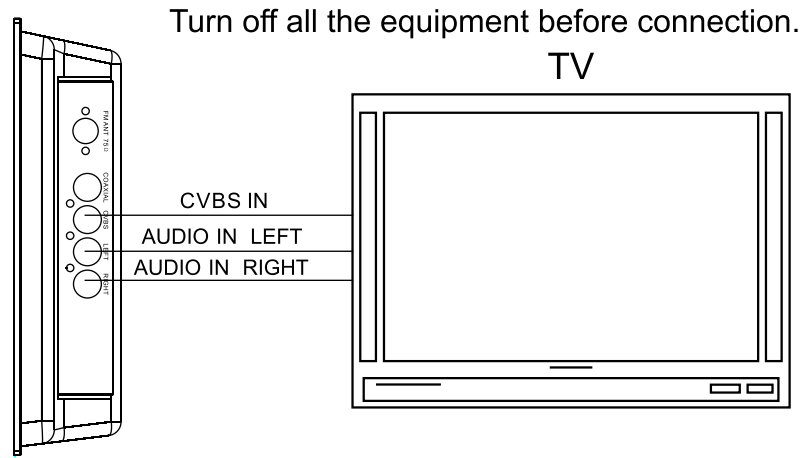


A. RCA JACK

- 1) Plug the yellow coloured RCA cable into the VIDEO OUT jack on the back of the DVD player, plug the opposite end of the cable in the Video input jack of your TV.
- 2) Plug the red and white coloured RCA cables into the AUDIO OUT jacks on the back of the DVD player. Plug the opposite end of the cable to the audio input jacks on the rear of your TV.

CONNECTIONS

Coaxial connection

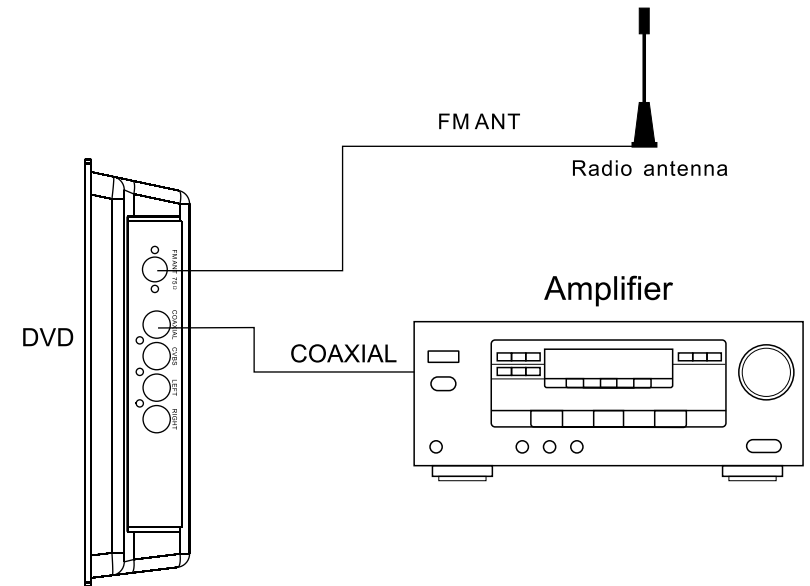


1. After connecting radio antenna with FM ANT, then pressing "DVD/FM" on the remote control to transfer, in FM state, press "auto scan" on remote control to search radio. When radio begins, it succeeds.
2. Plug a RCA cable into the COAXIAL DIGITAL OUT jack on the back of the DVD player. Connect the other end of the cable to the Digital Coaxial input on your amplifier.

FUNCTION SETTING

GENERAL MENU

Select GENERAL SETUP in the SETUP MENU and then select the desired option using the cursor (▲, ▼, ◀, ▶) buttons to navigate through the menus/screens and press the ENTER button to select.

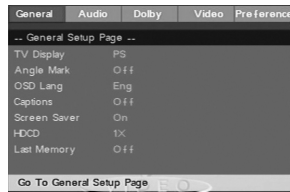

TV Display

4 : 3/PS : Pan scan. Select when the unit is connected to a conventional TV. Video material formatted in the Pan Scan style is played back with the left and right edges are cut off.

4 : 3/LB : Letter Box. Select when the unit is connected to a normal TV. Wide-screen images are shown on the screen with a black band at the top and bottom.

16:9 : Select when the unit is connected to a wide-screen TV.




Note:

The displayable picture size is preset on the DVD disc. Therefore the playback picture of some DVD discs may not conform to the picture size you select.

Angle Mark

Some DVDs include scenes recorded from different angles. This selection can show the marking.

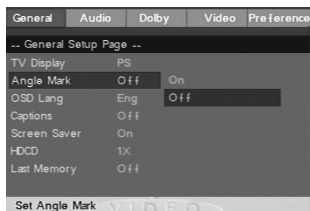

On-Screen Display Language

You can set the SETUP and on-screen messages to appear in English, French, Italian or Spanish. This language selection will not affect the languages of DVD disc or Title menus or any audio or subtitle languages.




Captions

This option can show or hide the captions.

- ON (show captions)
- OFF (hide captions)


Note: This function can only be used for DVD disc with captions.

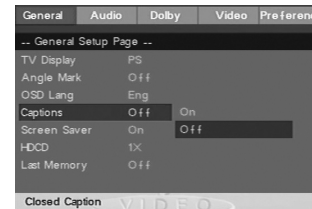

The TV set must support closed captions function.

Screen Saver

The Screen Saver is the moving DVD logo that appears on your TV screen when Disc playback is stopped and you do not use the player or its remote control for about few minutes. The screen saver prevents damage to your TV caused by leaving a still image on the screen for a long time.

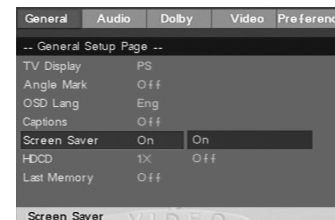


FUNCTION SETTING

HDCD


User can setup the filter.

- Off
- 1X
- 2X

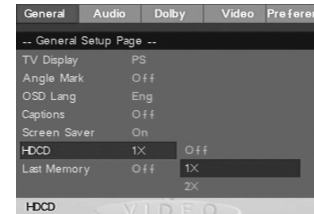

AUDIO SETUP

Select audio setup in the setup up menu and then select the desired option using the cursor (▲, ▼, ◀, ▶) buttons to navigate through the menus/screens and press the enter button to select.

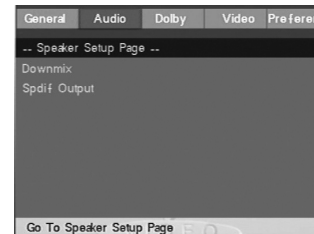


SPEAKER SETUP

Select speaker setup in the setup up menu and then select the desired option using the cursor (▲, ▼, ◀, ▶) buttons to select the desired option and press the ENTER button to select.


Downmix

- LT/RT
- A disc recorded multi channel soundtrack, the output signal will be incorporated to left and right channel.
- STEREO
- A disc recorded multi channel soundtrack, the output signal will be incorporated to stereo.

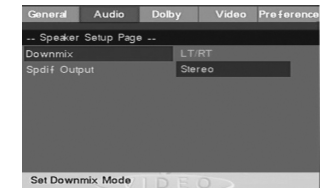

SPDIF Output

- Press ▲ or ▼ to select SPDIF output, then press ENTER.
- Press ▲ or ▼ to select SPDIF OFF, SPDIF/RAW, or SPDIF/PCM, then press ENTER.
- Choose SPDIF OFF if no external audio equipment is connected.
- Select SPDIF RAW if the player is connected to a 5.1 home theatre system by a coaxial cable (not supplied).
- Select SPDIF PCM to enable the internal Dolby Digital decoder of this player.

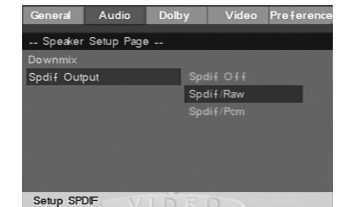

DOLBY DIGITAL SETUP


Select DOLBY DIGITAL SETUP in the setup up menu and then select the desired option using the cursor (▲, ▼, ◀, ▶) buttons to navigate through the menus/screens and press the enter button to select.



FUNCTION SETTING

Dual mono

This is the output mode of the L and R signals of the set audio output. If it is set to "MIX MONO", the function only works when the DVD being played is 5.0-channel.

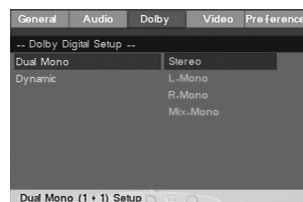


- **STEREO**
Choose this option, the audio output should be dummy stereo signal.
- **L-MONO**
- **R-MONO**
- **MIX-MONO**

Dynamic Range Compression

Dynamic Range Compression reduces volume changes by letting you adjust the difference between soft and loud sounds.

Press ▲ or ▼ to set Dynamic Range higher dynamic sound will be produced if dynamic range is selected.

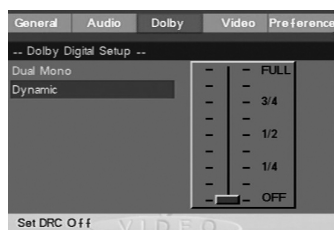


VIDEO SETUP

Video

Select VIDEO SETUP in the set up menu, then press ENTER.


Video will be selected. Press ►.

- Press ▼ or ▲ to select CVBS, RGB then press ENTER.

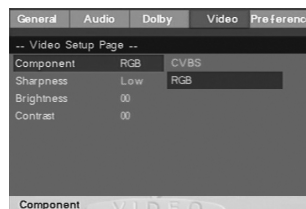


Sharpness

Press ▼ or ▲ to select High, Medium, Low then press ENTER.

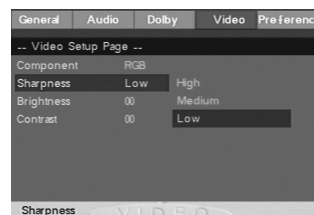

Brightness


For BRIGHTNESS, the range is -20 to +20.

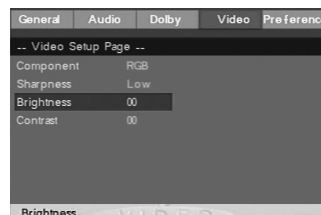

FUNCTION SETTING

Contrast

For CONTRAST, the range is -16 to +16.

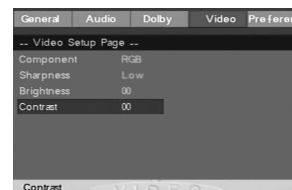

PREFERENCE SETUP MENU

Select PREFERENCE SETUP in the setup menu, then press ENTER.

TV Type

TV type will be selected. Press ►.

- Press ▲ or ▼ to select PAL, Auto or NTSC then press ENTER.
- Choose PAL if your TV is PAL-compatible. Choose Auto if your TV is Auto-compatible. Choose NTSC if your TV is NTSC-compatible.



Audio

Audio will be selected. Press ►.

- Press ▲ or ▼ to select the desired audio language and then press ENTER.



Subtitle

Subtitle will be selected. Press ►.

- Press ▲ or ▼ to select the desired subtitle language and then press ENTER.



Disc Menu

Disc menu will be selected. Press ►.


Press ▲ or ▼ to select the desired disc menu language and then press ENTER.



Parental control levels

Parental lock will be selected. Press ►.

- Press ▲ or ▼ to select a parental control level (1-8), then press enter or select off to completely turn off the parental controls.
- Press the number buttons to enter your 4-digit password as requested, then press ENTER. You cannot play DVD discs rated higher than the level you selected unless you cancel the parental lock function.

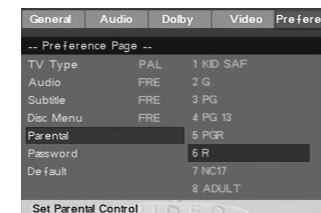

FUNCTION SETTING

RATING EXPLANATIONS

- KID SAF – Kid safe; it is safe even for kids.
- G – General Audience; recommended as acceptable for viewers of all ages.
- PG – Parental Guidance suggested.
- PG 13 – Material is unsuitable for children under age 13.
- PG-R – Parental Guidance-restricted; recommended that parents restrict children under age 17 from viewing or allow children to view only when supervised by a parent or adult guardian.
- R – Restricted, under 17 requires accompanying parent or adult guardian.
- NC-17 – NO children under age 17; not recommended viewing for children under age 17.
- ADULT – Mature material; should be viewed only by adults due to graphic sexual material, violence, or language.

Notes: Parental control is a relatively new feature encoded into DVD discs. Currently very few DVD titles (if any) include parental control .


“PASSWORD” : You need in “PASSWORD” setting to set the NEW PASSWORD or use SUPERUSER PASSWORD “0000”.



Parental control Password

Parental control limits viewing of DVDs when a DVD has movie rating that exceeds the parental level you selected.

To adjust the PARENTAL level so that DVDs cannot be played if the level has exceeded, see PARENTAL CONTROL LEVELS. Press **▼** and **▶** to select password, CHANGE will be highlighted and then press ENTER.

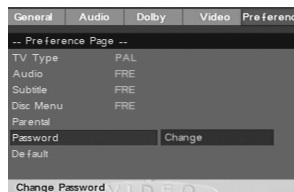

- A box beside OLD password will be highlighted. Press the number buttons to enter your Old 4-digit password. The box beside NEW password will be highlighted automatically. Press the number buttons to enter new 4-digit password of your choice. The box beside CONFIRM PWD will be highlighted automatically.
- Press the number buttons to enter the same new 4-digit password you just entered for the NEW PASSWORD.
- Press ENTER to save the new password.



To clear 4-digit password if you forget your password, follow the procedure below.

1. At the change page enter 4-digit number “0000” (SUPERUSER PASSWORD) and then press ENTER.
2. Enter a new password.


NOTES: When first time to use this DVD player, “OLD PASSWORD” just press ENTER to bypass. Enter the NEW PASSWORD for this DVD player.

Default

To restore the original settings of the player, follow the steps below.

Press **▼** and **▶** to select DEFAULT. RESET will be highlighted. Press ENTER.

- The original settings of the player will be restored.

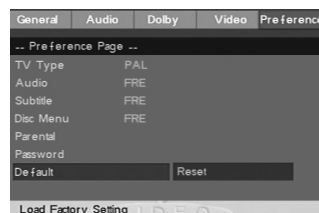


BASIC OPERATIONS

PLAY DISCS


TV/AUDIO SELECTION

Press POWER button on the TV and audio system.

1. Press "TV/VIDEO" on the TV, select VIDEO mode (TV).

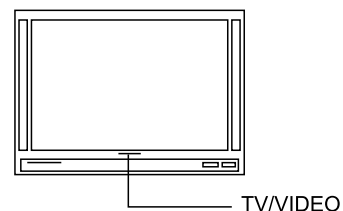

2. Select the correct audio input on the amplifier. Each amplifier is different from another, please refer to the manual of the amplifier. (E.g., Connect the audio output of the DVD player to the DVD audio input of an amplifier.)

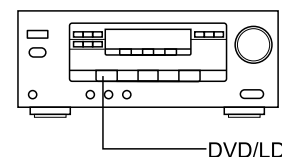

Notes: This step can be cancelled if you do not connect it to the amplifier.

BASIC PLAY

Preparation for playing a DVD.

- Switch on the TV and audio amplifier if used.

1. Press the POWER button of the DVD player. A display should now be seen on the TV screen. Most TV's will select the DVD input when the DVD player is turned on. Older TV's may need switching to AV input.

Play DVD's and VCD's

The TV screen shows the DVD title and menu. For VCD it will play automatically.

PLAY CD and MP3's

Put in the disc the player will play the disc automatically. Press **▲/▼** to select another track then press ENTER to play.

5. Stop playback. Push the “Stop” button twice to fully stop playback.



 
6. When you have finished using the player remove the disc with the **▲** button and close the tray. Turn off the player.

BASIC OPERATIONS

SELECT ANGLES

SELECT ANGLES


Some discs have images with different screen angles, you may select among them. For example, when you watch a running train, you may watch it from the front, the left window or the right window without stopping it.



Example: A DVD has four screen angles (Subject to the movie) available.

1. Press ANGLE button to select ANGLE1.

 
The screen shows:



2. Press ANGLE button again to select other angles, the screen shows respectively:

3. While a disc is playing, press ANGLE on the remote (the Angle Display appears).

 
4. Press ANGLE again, at the top right hand side there appears:



Select the angle you prefer then press SELECT on the remote control.

OSD

 OSD




1. When you press the OSD button once, the screen shows:




2. When you press OSD button twice, the screen shows:



 
3. Press OSD button three times, the screen shows:



 4. Press OSD button four times, the screen shows the audio language.



 5. Press OSD button five times, the screen shows:




Press OSD button again the screen resumes to normal play mode.


BASIC OPERATIONS

SELECT SUBTITLE LANGUAGE

 
You can select the subtitle language from those indicated on discs. This operation works only with discs on which multiple subtitle languages are recorded.



 1. Press SUBTITLE, the screen shows:



 2. Keep pressing this button to select the desired language.

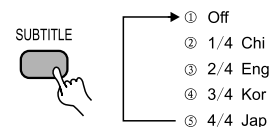

3. Remove the subtitle: Press SUBTITLE until the screen shows "SUBTITLE OFF".

Notes:

 
- 1. For some discs, subtitles can not be removed.
- 2. Different discs differ in the language of Subtitles.
- 3. If the subtitles of discs can not be selected, Press SUBTITLE, the screen will show "NO SUBTITLE".

You may select a subtitle as required. Some discs may not have "SUBTITLE OFF" function.


PLAY DISCS IN VARIOUS WAYS

PROGRAM PLAY


You may program the chapter on a disc and play them in the programmed order.



 
1. Press ▲ or ▼ to select disc menu, press prog the screen appears:

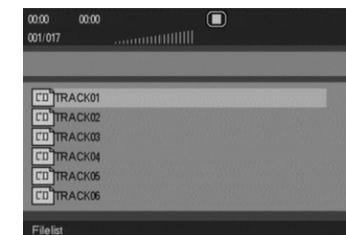

 2. Press ▲ or ▼ to select the track of the discs, press CLEAR to add into menu list.

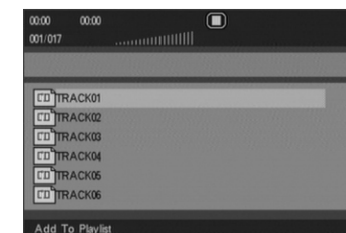

 3. Press PROG again to show menu list, press ▲ or ▼ to select track, the screen ENTER to play. press CLEAR to delete the from the list

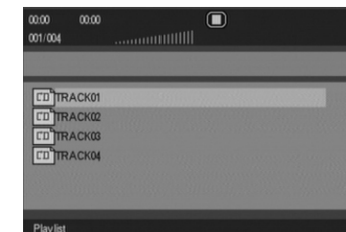


BASIC OPERATIONS

FAST PLAY


When playing a disc, you may play it fast forward or fast backward to find what you want.

WHEN PLAYING DVD

 1. Press **▶▶** to play fast forward. Each time you press the button, the screen shows:

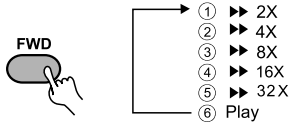

 
2. Press **◀◀** to reverse the disc fast. Each time you press the button, the screen shows:

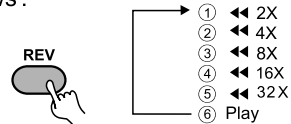

3. Press **▶** to switch to normal play while Fast Forward or Fast Backward is playing.

TIME SEARCH

 
You may directly enter a time, title or chapter number to search fast on a disc, the player plays from that point.



PLAY DVD

1. Press **TIME** button to go to a chapter. For example, enter Chapter 2 in title 6.

Press **TIME** on the remote, the screen shows:

Tt  /60 ch:00/00

- Press button 6 to select Title 6, then press **▼** to switch to Chapter enter mode.

Tt 6/60 ch:02/08

- Press button 2 then press **ENTER**, it play form Chapter 2 in Title 6.

2. TIME SEARCH

- Press **TIME** on the remote, then press **▼** button twice, the screen shows:

Tt 6/60 Time: __: __

- Press number buttons to enter hour, minute and second. For example, enter 0,1,0,2,3,6. After setting, the disc is played from 1:02:36.

PLAY CD and VCD

To jump to a specific time, use **TIME SEARCH** to set the time for the desired location.

1. Press **TIME** once to select the track time to play, the screen shows:

Track Go To: __: __

2. Press **TIME** again to select the track, the screen shows:

Select Track __/05

3. Press **TIME** thire, the disc plays according to the selecting time.

Disc Go To: __: __

BASIC OPERATIONS

SLOW PLAY

Play slow motion by the following steps.

 


WHEN PLAYING DVD OR VCD

- * Press **SLOW** button



The screen will show:

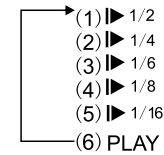


REPEAT SOME PARTS


You may press **A—B** to enjoy some parts repeatedly when playing a disc.

PLAY DVD/VCD/CD

 1. Set a starting point A



 2. Set an ending point B




Afterwards, the unit plays from A to B.

3. Press **A—B** again till "A-B off " appears.

REPEAT PLAY

 This function can be used to repeat play a title, chapter, track, disc, or some part on a disc.




PLAY DVD

You may repeat a title or chapter.


1. Repeat a chapter.

* Press **REPEAT**, the screen shows:

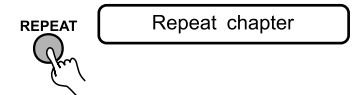

2. Repeat a title

* Press **REPEAT** twice, the screen shows:

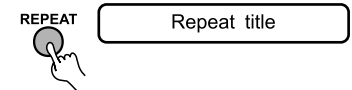

3. To cancel repeat function, press again and **OFF** shows on the display.

OTHERS

TROUBLE SHOOTING

If you experience the following problems while using the player, this trouble shooting guide can help you.

No Sound

- ☛ Check if the unit is connected securely.
- ☛ Make sure you operate the TV or amplifier correctly.
- ☛ Make Sure you have selected DVD player position on the amplifier.
- ☛ Check the Audio or Digital output Setting.

No Image

- ☛ Check if the unit is connected securely.
- ☛ Make sure you operate the TV correctly.
- ☛ Check the TV type for correct system standard e.g. NTSC. PAL.

Bad Sound Quality

- ☛ Make sure the audio output mode is set correctly.
- ☛ Make sure the audio connection between the player and amplifier is correct.
- ☛ Increase the centre speaker level.
- ☛ Check DOWNMIX setting is OFF.

Disc can not be played

- ☛ There is no disc in the unit.
- ☛ Put the disc on the disc tray properly with the label side up.
- ☛ Moisture has condensed in the unit. Remove the disc and leave the unit on for about one hour (at power on condition).
- ☛ DVD may be wrong region.

Remote Control does not work

- ☛ Point the remote control at the remote control sensor of the player.
- ☛ Replace the batteries with new ones.
- ☛ Object blocking line of sight between remote control and player.

Player buttons & remote do not work

- ☛ In very rare occasions the player may not respond when you press buttons on the remote or on the player's front panel. To remedy this problem simply turn off the power or unplug the player, wait one minute and resume normal operation.

Déclaration de Conformité (DoC) EMC

Nous, Société Inovalley, 9 rue Rapporteur, 95310 Saint-Ouen l'Aumône, déclarons sous notre seule responsabilité que le produit:

Marque : Inovalley

Nom commercial : Chaîne HIFI - Lecteur DVD

Type: CH04 - Modèle: Y2903

auquel se réfère cette déclaration est conforme aux exigences essentielles et aux autres dispositions de la directive pour la Compatibilité Electro-Magnétique EMC 2004/108/CE qui lui sont applicables.

Le produit est en conformité avec les normes et/ou autres documents normatifs suivants :

EN 55013 :2001+A1 :2003+A2 :2006 EN 61000-3-2 :2006
 EN 55020 :2007 EN 61000-3-3 :1995+A1 :2001+A2 :2005
 EN 60065 :2002+A1 :2006+A11 :2008

Lieu et date d'édition
 St Ouen l'Aumône, le 21 Septembre 2009

Le fabricant
 INOVALLEY


 J.L. THIRY (PDG)

OTHERS

TECHNICAL SPECIFICATIONS

Laser Bandwith	WAVELENGTH 645-660nm	
Video System	PAL / AUTO / NTSC	
Frequency Response	±1dB(20Hz ~ 20KHz)	
Signal/ Noise Ratio	≥90dB	
Audio Distortion	≤ 1%	
Channel Separation	≥80dB (1KHz)	
Dynamic Range	≥80dB (1KHz)	
Output	Audio out (Analog audio)	output level: 2 ± 0.1V load impedance: 10K Ω
	Audio out (Digital signal)	output level: 0.5Vp-p load impedance: 75 Ω
	Video out	output level: 1Vp-p load impedance: 75 Ω , imbalance, negative polarity
Power supply	AC 110-240V ~ 50/60Hz	
Power consumption	15W	
Loudspeaker	2X20Watts	
Dimension	400X115X240mm	
Weight	Around 1.3Kgs	

For improved performance during production some details may be changed without notice.



The symbol opposite indicates that the electric and electronic components are the subject of a selective collection, it represents a dustbin on wheels barred of a cross. The electric and electronic products can contain substances having negative effects on the environment and health. Worn, they should not be thrown with domestic waste but to be imperatively recovered in the selective collections: dump, associations of social economy and interdependent. The selection of waste decreases the potential effects on the environment and human health due to the substances dangerous which can compose certain components electric and electronic.

Take an active part: to remove you not from the apparatuses with domestic waste!

