



# Installation instructions of the PIKO switch board

## Connecting the PIKO switch machine

The switch board # 55260 has got 8 separate momentary contacts in 4 groups to control turnouts and signals. You can control 4 turnouts or signal with one board. All works have to be done only by non high voltage. In cause of a short circuit the power supply has to be saved that it can not burn. Please apply a usual and VDE/EM conformed transformer for model trains.

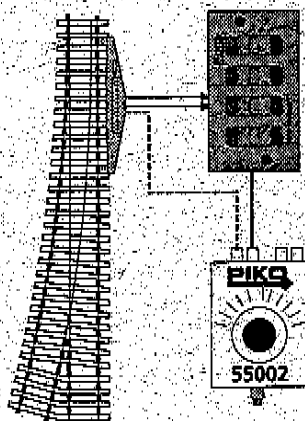

## How to connect several Switch boards

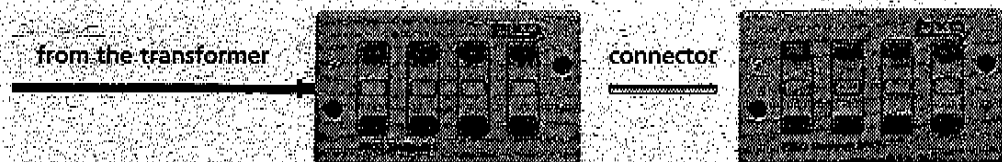

You can put several switch boards # 55260 together by using the enclosed connector.

## plug installation

① strip the wire



③ push plug on



② twist the wire



④ turn wire round



## Technical Data:

max. switching voltage: 24V AC/DC  
max. contact load: max: 2A

This product is not a toy.  
Not suitable for children under 8 years!  
Keep instructions!