

# PORTABLE RADIO

CITY 31


PR 3201

ENGLISH



FOR A GOOD REASON

# GRUNDIG

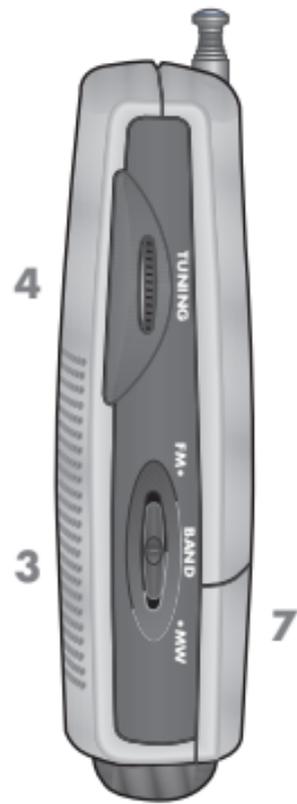



# CONTROLS

---

- 1 ON/OFF** Switches the device on and off;  
**VOL**  Adjusts the volume.
- 2**  Jack for commercially available stereo earphones.
- 3 FM-BAND-MW**  
Selects the FM (VHF) and MW (Medium Wave) frequency bands.
- 4 TUNING** For tuning to a radio station.
- 5 FM MHz** Frequency display.  
**MW kHz**
- 6** Telescopic antenna for FM reception.
- 7** Battery compartment.

# PREPARATION

---

- 1 Remove the battery compartment cover on the back of the device.
- 2 Insert two batteries (micro type, 1.5 V, LR 06/AM3/AA) in the battery compartment. Make sure the polarity of the battery is as marked on the bottom of the compartment.



- 3 Push the battery compartment cover back in.

## Note:

- If you are not going to use the device for a long period of time, remove the batteries from the compartment. Remove a flat battery immediately.
- Batteries, including those which are free of heavy metal, must not be disposed of with household waste. Please dispose of used batteries in an environmentally sound manner. Observe the legal regulations which apply in your area.

# RADIO MODE

---

- 1 Turn »**ON/OFF**« to the left to switch on the device.
- 2 You can connect the earphones to the »« socket.
- 3 Adjust the volume with »**VOL** «.
- 4 Use »**FM·BAND·MW**« to select the frequency band (FM or MW).
  - The radio has a built-in rod antenna for MW reception. Turn the device to point the antenna.
- 5 Use »**TUNING**« to tune to a station.
- 6 Turn »**ON/OFF**« to the right to switch off the device.

# GENERAL INFORMATION

---

## Stereo earphone volume

Excessive volume can be dangerous to yourself and other road users. Listen at a volume which allows you to hear outside noises such as horns, emergency vehicles and police cars.

## Cleaning

Do not use any cleaning agent, as this may damage the casing. Clean the device with a clean, moist leather cloth.

## Safety



This device is designed for the playback of audio signals. Any other use is expressly prohibited. Protect the device from moisture (dripping or sprayed water). Never open the device casing. The manufacturer will not accept any liability for damage resulting from improper handling.

The type plate is located on the back of the device.

This device is noise-suppressed according to the applicable EC directives. This product fulfils the European directives 2004/108/EC.

## Technical data

Batteries: 2 x 1.5V, LR 06/AM3/AA.

Reception range:

FM 87.5 - 108 MHz, MW 526.5 - 1606.5 kHz.

Output: 100 mW.

Dimensions: 72 x 123 x 34 mm.

Weight: 170 g.

Technical and optical modifications reserved.

Grundig Intermedia GmbH  
Beuthener Strasse 41  
90471 Nürnberg

[www.grundig.com](http://www.grundig.com)  
72011 409 1000 12/51

AUS GUTEM GRUND

**GRUNDIG**