

MusicMan[®] MA Soundstation

Mobile Speaker / Soundsystem with built-in MP3 player + FM radio

User Manual

The Declaration of Conformity: www.technaxx.de/ (in bottom bar "Konformitätserklärung")

- Mobile stereo wide range speaker system for MP3/4, CD/DVD, iPhone, iPad, iPod, PSP, mobile phones, PC/Notebook, with integrated MP3 player for USB flash disk and MicroSD card (up to 32GB)
- Built-in FM radio and Line-IN/AUX
- Housing out of aluminium, lightweight, durable, available in 5 different metallic colours
- Protection grille for the speaker cone
- Several power supply options: built-in rechargeable battery, computer USB or AC adapter* DC 5V (*not included)
- Ideal for traveling, easiest installation, excellent sound quality



Key functions

| No. | Key | Line-IN mode | USB/MicroSD mode | FM mode |
|-----|-----------|---|---|---|
| 1 | ▶ ■ | Play / Pause | Play / Pause | Play / Pause |
| 2 | VOL – | Volume down | Volume down | Volume down |
| 3 | VOL + | Volume up | Volume up | Volume up |
| 4 | ⏮ | invalid | One back (keep pressing for fast reverse) | FM search back (back to previous station) |
| 5 | ⏭ | invalid | Next one (keep pressing for fast forward) | FM search forward (forward to next station) |
| 6 | USB/SD/FM | Switches between USB / MicroSD / FM / Line-IN | | |

Notice: USB / MicroSD / Line-IN → the last inserted has priority.

Play Music

- MP3 files are played in the same order, like they are stored on the USB flash disk or MicroSD card.
- If you stored music files in different folders, the files are played folder by folder. Neither you cannot jump between the folders, nor you can select a folder.
- If new MP3 files are stored, the row of music files will change. The device will mix the files itself. You have no influence on that.
- If the USB flash disk or MicroSD card is removed from the device, and inserted again later, playback will start with the last MP3 file you heard.

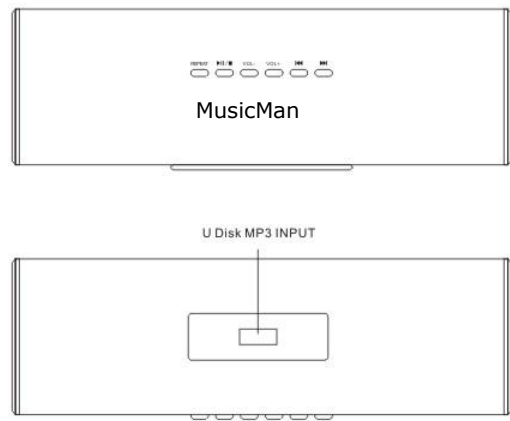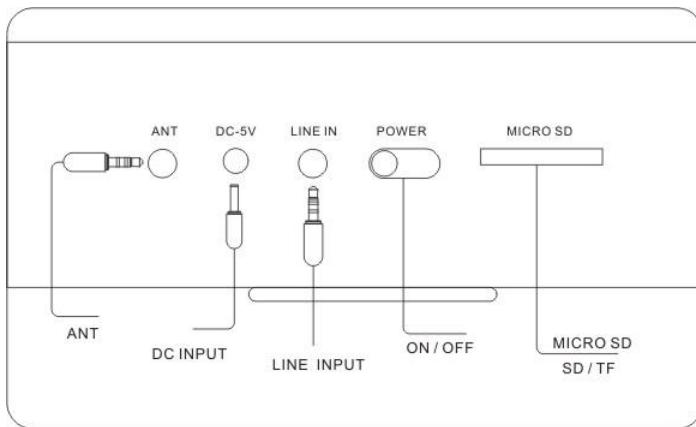

Technical specifications

| | |
|-------------------|--|
| Flash memory | USB flash drive + MicroSD card (up to 32GB) |
| Power (switch) | ON: Blue LED is on / OFF: Blue LED is off |
| Built-in | Stereo FM radio + Line-IN / AUX (3.5mm analog audio input) |
| Battery | Built-in rechargeable Lithium battery 600mAh Charging time ~4 hours Playing time ~6 hours (using MicroSD card) Playing time ~5 hours (using USB) |
| Charging | Red LED is on while charging → Red LED is off when battery is fully charged |
| ANT | FM antenna 3.5mm plug (use audio cable as FM antenna) |
| DC 5V | Input power (0.4-1.0 A) from USB or AC adapter* (*not included) |
| Loud Speakers | 2x 1.77" (external Ø 45mm) magnetic resistant 4 Ohm Signal / Noise Ratio ≥80dB Output: RMS 6W (3W + 3W) THD = 10% Frequency response 150 – 18000Hz (±3dB) |
| Weight device | 215 g |
| Dimensions device | 50 x 53 x 163 mm |

Package Contents: MusicMan[®] MA Soundstation, USB/Power/Audio cable, User Manual

Security and Disposal Hints for Batteries: Hold children off batteries. When a child swallowed a battery go to a doctors place or bring the child into a hospital promptly! Look for the right polarity (+) and (−) of batteries! Always change all batteries, never use old and new batteries or batteries of different types together. Never short batteries. Do NOT open, deform or load up batteries! There is a **risk of injury** by battery leakage fluid! NEVER throw batteries into fire! There is a **risk of explosion!**



Hints for Environment Protection: Packages materials are raw materials and can be recycled. Do not disposal old devices /batteries into the domestic waste. **Cleaning:** Protect the device from contamination and pollution. Only clean the device with soft cloth or drapery, avoid using rough or coarse-grained materials. Do NOT use solvents or other aggressive cleaner. Wipe the device after cleaning accurately. **Important Notice:** Should battery fluid leak from a battery, wipe the battery-case with a soft cloth dry.