

CURLS & VOLUME HAIR STYLER

HS 3120


ENGLISH



FOR A GOOD REASON

GRUNDIG



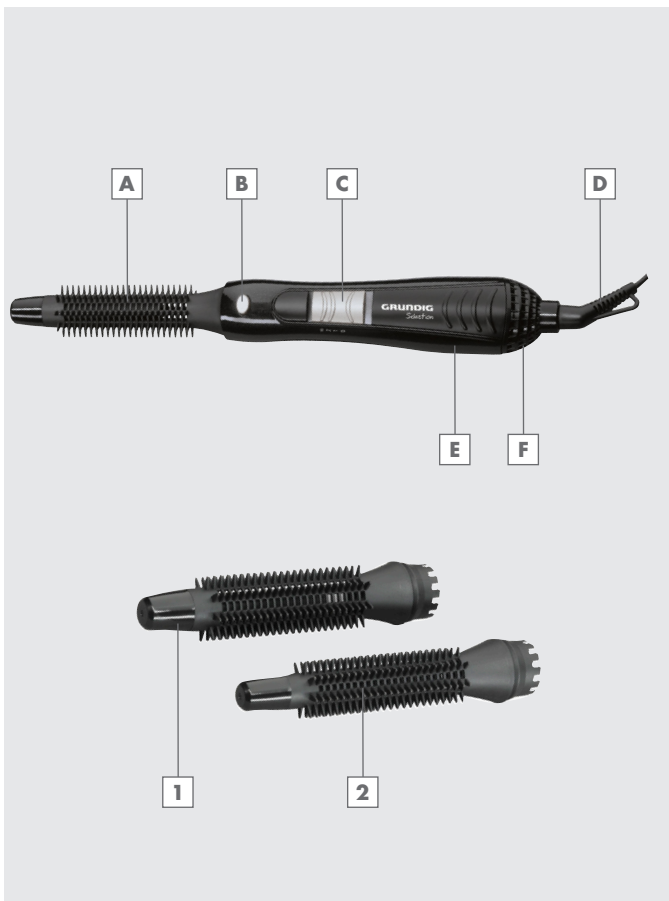

SAFETY

Please read this instruction manual thoroughly prior to using this appliance! Follow all safety instructions in order to avoid damage due to improper use!

- Keep the instruction manual for future use. Should a third party be given the appliance, please ensure the instruction manual is included.
- This appliance is intended for domestic use only.
- Never use the appliance in the bath, shower or over a wash basin filled with water; nor should it be operated with wet hands.



- Do not immerse the appliance in water or let it come into contact with water, even during cleaning.
- Do not use the appliance near water in bathtubs, wash basins or other vessels.
- If the appliance is used in the bathroom, it is essential that you unplug it after use, as any water close to the appliance can still pose a hazard, even if the appliance is switched off.
- If not already in use, installing a residual current-operated protective device (RCD) is recommended for additional protection with a rated residual operating current not exceeding 30 mA in the electrical circuit of your bathroom.
Ask your electrician for advice.
- Never place the appliance on soft cushions or blankets during operation.
- Ensure the air intake and outlet openings are not covered during operation.
- The appliance is equipped with an overheating protection system.
- Unplug the appliance after use. Do not disconnect the plug by pulling on the cord. Place the appliance on a heat resistant surface and allow it to cool down.
- Never use the appliance if it or the power cord is visibly damaged.

SAFETY

- Never wind the power cord around the appliance, as this can result in damage. Check the power cord and the appliance regularly for visible damage.
- Our GRUNDIG Household Appliances meet applicable safety standards, thus if the appliance or power cord is damaged, it must be repaired or replaced by a service centre to avoid any dangers. Faulty or unqualified repair work may cause danger and risks to the user.
- Always keep the appliance out of the reach of children.
- The appliance should not be used by the following persons, including children: those with limited physical, sensory or mental capabilities and also those with a lack of experience and knowledge. This does not apply to the latter if they were instructed in the use of the appliance or if they use it under the supervision of a person responsible for their safety. Children should always be supervised to ensure that they do not play with the appliance.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
- Check if the mains voltage on the type plate (on the handle of the appliance) corresponds to your local mains supply.

OVERVIEW

Dear customer,

Congratulations on the purchase of your HS 3120 Hair Styler.

Read the following user notes carefully to ensure full enjoyment of your quality Grundig product for many years to come.

Special features

Your Hair Styler has a roll-out function, which makes it particularly easy to style your hair, even if it is long.

A responsible approach!



GRUNDIG focusses on contractually agreed social working conditions with fair wages for both internal employees and suppliers. We also attach great importance to the efficient use of raw materials with continuous waste reduction of several tonnes of plastic every year. Furthermore, all our accessories are available for at least 5 years.

For a future worth living.
For a good reason. Grundig.

Control elements

- A** Detachable round brush (styling attachment)
- B** Roll-out button
- C** Switches the device on and off. Controller for two temperature and blower levels and cold air setting
- D** Swivel cord with hanging loop
- E** Handle
- F** Air inlet grille

Accessories

- 1** Round brush ø 19 mm, medium
- 2** Round brush ø 16 mm, small

OPERATION

Settings

Your appliance has the following setting options:

Temperature level/ blower level **C**

- **0** : off
- **1** : gentle air flow and moderate temperature for gentle drying and styling
- **2** : stronger airflow and high temperature for faster drying and styling

Cold air setting **C**

- ***** : interrupts the hot air supply and provides cold air for fixing a hairstyle

Changing the styling attachments

- 1** Remove the styling attachment **B** by pulling it off.
- 2** Place a different styling attachment and allow it to latch in place.

Notes:

- The size of curls depends on the diameter of the styling attachment.
- The styling attachment with a diameter of 16 mm creates small curls and is especially suitable for short hair.
- The styling attachment with a diameter of 19 mm can be used to attain greater volume and medium sized curls with longer hair.

OPERATION

Operation

- 1 Towel dry your hair thoroughly after washing and let it dry for a little while.
- 2 Plug the power cord **[D]** into the wall socket.
- 3 Turn on the appliance with the switch **[C]** and set the temperature and blower level.
- 4 If required you can interrupt the hot air supply when drying by turning the switch **[C]** to »❄« (cold air setting).

Note

- The cold air setting interrupts the hot air operation and provides a cool air flow. This allows you to fix your hair-style better and more lastingly.
- 5 After rolling in the hair section allow the heat to set for few seconds.

- 6 Unroll your hair section by pressing the roll-out button **[B]**.
 - This releases the brush and it can be rolled out of the curled section.
- 7 After use, switch off the appliance with the **[C]** button and pull out the power cord from the wall socket.

Caution

- Never wind the power cord around the appliance, as this can result in damage. Check the power cord and the appliance regularly for visible damage.

Cleaning and care

Pull the plug out before cleaning.

Never submerge the appliance in water.

Use a soft dry cloth for cleaning the housing.

Remember to clean the air inlet grille **F** regularly with a soft brush to remove any hair and dust.

Storage

If you do not plan to use the appliance for a long period of time, please store it carefully.

Make sure the appliance is unplugged and completely dry.

Store the appliance in a cool, dry place.

Make sure the appliance is kept out of the reach of children.

Environmental note

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling.




Therefore, do not dispose of the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please consult your local authorities to find out the location of the nearest collection point.

Help protect the environment by recycling used products.

Technical data

 This product conforms to the European directives 2004/108/EC, 2006/95/EC and 2009/125/EC.

Power supply:
220-240V~, 50-60Hz

Power:
400 W

Technical and design modifications reserved.

www.grundig.com
720119083800 12/27

AUS GUTEM GRUND
GRUNDIG