

# TS-RDP8 Photo Recovery Software

## Activation Process

1. Install the software included on the CD (You can only activate the software by installing from the CD. Downloaded versions will not work).
2. After installation, start the application (default path: Start > Programs > PHOTORECOVERY – PHOTORECOVERY). An “Activation” window like the one below will be displayed. Please click the blue hyperlink in the middle of the screen to connect to the registration website. (<http://activations.lc-tech.com/quicklicense/activate.php>)  
Your computer must be connected to the Internet to register online and receive a Activation Code.



- Once connected to the website, please select your language and enter your personal information and product S/N, which is the 24-digit number printed on the back of your card reader. An Activation Code will be automatically mailed to your e-mail address.

LC Technology International Inc.

English  
Français  
Español  
Deutsch  
Italiano  
Português  
繁體中文  
简体中文  
Nederlands  
العربية  
Türkçe  
हिन्दी  
한국어  
日本語

**LC TECHNOLOGY**  
INTERNATIONAL

### Product Activation Code Request

To request an instant activation code, enter the product **Serial Number (S/N)**. Please fill your customer information as completely as possible. This will assure a more complete solution to any technical support issues.

Request Number:

Serial Number (S/N):  -  -  -  -

First Name:

Last Name:

Company:

Phone:

Fax:

Email:

Address 1:

- Enter the Activation Code that was sent to your e-mail address and click "Activate Now."

**Activation**

PHOTORECOVERY requires an Activation Code (can be activated up to 3 times). Click the URL below to start the PHOTORECOVERY activation process.

<http://activations.lc-tech.com/>

'Request Number: '1004938800

When you receive your PHOTORECOVERY Activation Code, paste it in the field below and click the Activate Now button.

Activate Now    Activate Later

5. If you choose to “Activate Later,” you will still be able to view rescued photos, but will not be able to save them.

**IMPORTANT NOTES:**

- The Activation Code can only be used with the same computer that you installed and registered the software on.
- The same S/N (24-digit number which is printed on the back of the card reader) can be activated up to THREE times. Please keep this in mind before you register.
- Lost or damaged S/N will not be reissued. Please keep it in a safe place.