

DRS Series DIN rail mountable sockets

The DRS Series provides a convenient and easy way to install most of the Crydom single-in-line solid state relays on a standard DIN rail base. This product family offers both the preassembled SSR / Socket sets (DRA) and "socket only" (DRS) options. Both are available in either single or four channel versions. For complete assembly part numbers and availability, see DRA Series at www.crydom.com.

FEATURES

- 10 mm Single channel and 44 mm Four channel DIN Rail mount sockets available.
- Input status LED for either 3 to 15 or 15 to 32 VDC control applications.
- Cage style screw terminals for easy and reliable wire connection.
- Socket clip fits all standard 35 mm DIN rail profiles.

PART NUMBER NOMENCLATURE Series



 
1: one channel 4: four channels

ASSEMBLY INSTRUCTIONS

Please read all of the assembly instructions before beginning assembly of the DRS sockets.


- Insert and solder each component as noted below including the selected SSR. Components are placed such that their leaded ends exit the board on the side with the copper circuit traces. Crydom recommends use of RoHS compliant solder. A
- The LED input status indicator plastic standoff should be installed on the LED leads prior to insertion in the PC board. Observe LED lead polarity (see below LED diagram to determine lead polarity), and place the corresponding LED leads in the holes using the (+) mark on the PC board as reference.
- The input terminal block (marked 3 & 4) is placed in the holes on the PC board adjacent to the LED with its wire entry openings facing outward toward the end of the board. The output terminal block (marked 1 & 2) is placed in the holes on the opposite end of the PC board also with its wire entry openings facing outward toward the end of the board.
- Select and install the correct resistor for the SSR control voltage range (see instructions below on resistor selection). The resistor should have one of its leads bent at 180° over its body such that each lead can be placed through the holes in the PC board adjacent to the LED input status indicator.
- Insert the SSR leads into the PC board and solder to the board. Care should be taken to place the SSR as near to perpendicular to the PC board as possible so as not to create an interference with adjacent assemblies when installed on the application DIN rail.
- The final step is to place the PC board with soldered components into the plastic housing. The PC board assembly must be placed in the housing pieces as shown in the assembly diagrams. Note: for the 4 channel assembly, there is an additional extruded plastic piece that supports the board. The PC board assembly should be slid into the slots in this supporting piece before attaching the right and left side pieces. Caution !: do not over tighten the screws attaching the side pieces. Recommended torque is 6 to 8 in lbs (0.7 to 0.9 Nm).

WIRING DIAGRAM^B



SINGLE CHANNEL SOCKET D List of parts included in the DRS1 kit

- Printed circuit board
- Housing right side (includes 2 screws) Housing left side
- ğ
- 4 Green LED
- LED standoff õ
- Resistor 1K Ω, 0.25W (brown-black-red) Õ Resistor 4.7K Ω, 0.25W (yellow-violet-red)
- 8 Output terminal block (marked 1 & 2)
- ğ Input terminal block (marked 3 & 4)

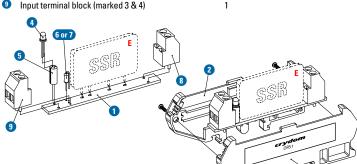

Quantity

Quantity

FOUR CHANNEL SOCKET

List of parts included in the DRS4 kit

Printed circuit board 2 Housing - right side (includes 2 screws) ð Housing - left side (includes 2 screws) 4 Profile extrusion õ Green LED 6 LED standoff õ Resistor 1K Ω, 0.25W (brown-black-red) 8 Resistor 4.7K Ω, 0.25W (yellow-violet-red) 9 Output terminal block (marked 1 & 2) 6 Input terminal block (marked 3 & 4)

A The temperature of the SSR pins must not exceed 260°C/ 500°F for more than 3 seconds, with an allowable iron temperature of 350°C / 662°F to prevent possible damage to the components during assembly or repair.

LED DIAGRAM

B Wiring diagram is identical for each individual section whether it is a single or four channel assembly.

C For AC loads, the AC line can be wired to either SSR/socket terminal 1 or terminal 2. The AC load may also be wired on either the line or neutral side of the SSR. For DC loads, the proper polarity must be observed for the power supply, load and SSR/socket with terminal 1 being positive with respect to terminal 2.

D Use 1K Ω (brown-black-red) resistor for applications with control voltage range between 3-15 Vdc and 4.7K Ω (yellow-violet-red) resistor for applications with control voltage range between 15-32 Vdc. LED status indicator is not required for proper function of the SSR and may be omitted. No resistors are needed when LED is not installed. For AC input SSR control applications LED status indicator and resistor must not be used E SSR(s) purchased separately Rev: 010610

A DANGER / DANGER / GEFARH / PELIGRO / PERICOLO / 危险		
HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH	RISQUE D'ELECTROCUTION, D'EXPLOSION OU D'ARC ELECTRIQUE	STROMSCHLAG-, EXPLOSIONS- ODER LICHTBOGENGEFAHR
Turn off power supply before working on this equipment.	 Coupez l'alimentation avant de travailler sur cet appareil. 	 Vor dem Arbeiten an dem Gerät dessen Stromversorgung abschalten.
Failure to follow these instructions will result in death or serious injury.	Le non-respect de ces instructions provoquera la mort ou des blessures graves.	Die Nichtbeachtung dieser Anweisungen führt zu Tod oder schwerer Körperverletzung.
RIESGO DE ELECTROCUCIÓN, EXPLOSIÓN O ARCO ELÉCTRICO	RISCHIO DI SCOSSA ELETTRICA, DI ESPLOSIONE O DI OFTALMIA DA FLASH	存在电击、爆炸或电弧闪烁危险
Desconecte toda alimentación antes de realizar el servicio.	 Scollegare l'apparecchio dalla presa di corrente prima di qualsiasi intervento. 	 •在操作此设备之前请先关闭电源。
Si no se siguen estas instrucciones provocará lesiones graves o incluso la muerte.	Il mancato rispetto di queste istruzioni provocherà morte o gravi infortuni.	若不遵守这些说明,可能会导致严重的人身伤害甚至死亡。