

DPP240-XX-1 Din Rail Mountable Switching Power Supply



Technical Data Installation and Operation

# **DEFINITION OF MODELS**

Output Voltage

DPP240-24-1: 24V output

DPP240-48-1: 48V output

Fig. 1

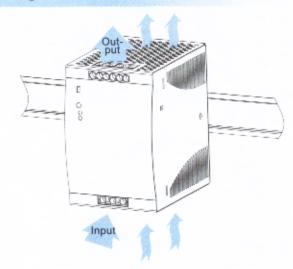


Fig. 2


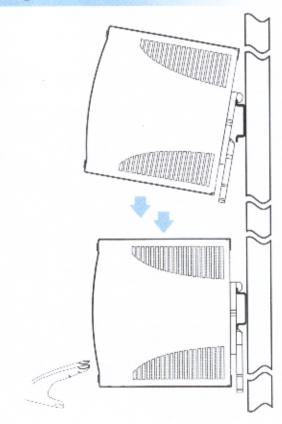



Fig. 3

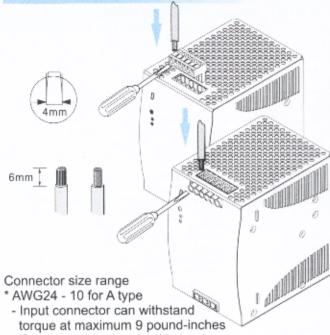

- Output connector can withstand
- torque at maximum 5.5 pound-inches
- \* AWG24 14 for B type
- Connector can withstand torque at maximum 7 pound-inches

use copper conductors only, 60/75 °C

Fig. 4

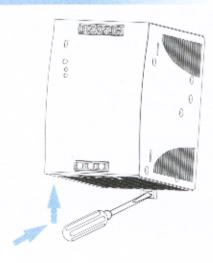



# Safety notes

#### Read Instructions!

Before working with this unit, read these instructions carefully and completely. Make sure that you have understood all the information!

## Disconnect system from supply network

Before any installation, maintenance or modification work: Disconnect your system from the supply network. Ensure that it cannot be re-connected inadvertently!

## Before start of operation

## Ensure appropriate installation

Warning! Improper installation / operation impair safety and result in operational difficulties or complete failure of the unit. The unit must be installed and put into service appropriately by qualified personnel. Compliance with the

relevant regulations must be ensured. Before operation is begun the following conditions must be ensured, in particular:

- Connection to main power supply in compliance with VDE01000 and EN50178.
- With stranded wires: all strands must be secured in the terminal blocks (potential danger of short circuit).
- Unit and power supply cables must be properly fused; if necessary a manually controlled disconnecting element must be used to disengage from supply mains.
- The non-fused earth conductor must be connected to the " \( \exists "\) terminal (protection class 1).
- All output lines must be rated for the power supply output current and must be connected with the correct polarity.
- Sufficient air-cooling must be ensured.

## In operation: No modifications!

As long as the unit is in operation; do not modify the installation! The same applies also to the secondary side. Risk of electric arcs and electric shock (fatal)!

# Only connect/disconnect plug connectors when the power is off!

## Convection cooling (See Fig. 1)

Do not cover any ventilation holes!

Leave sufficient space around the unit for cooling!

## Warning: High voltage! Stored energy!

The unit contains unprotected conductors carrying a lethal high voltage, and components storing substantial amounts of energy. Improper handling may result in an electric shock or serious burn!

- The unit must not be opened except appropriately trained personnel!
- · Do not introduce any object into the unit!
- Keep away from fire and water!

#### Installation

#### Application

This unit is a primary switched-mode power supply designed for use in panel-board installations or building-in applications where access to the supply is restricted (shock-hazard protection). It must only be installed and put into service appropriately by qualified personnel.

#### Mounting

#### Mounting (See Fig. 1)

Permissible mounting position: keep free ventilation hole, leave space for cooling! Recommended to have 25mm free space at all sides for ventilation / cooling.

#### Snap on support rail (See Fig. 2)

- · Tilt the unit slightly rearwards.
- · Fit the unit over top hat rall.
- Slide it downward until it hits the stop.
- Press against the bottom front side for locking.
- Shake the unit slightly to check the locking action.

#### Front elements

#### Operation indicator

Indicates whether the unit is working properly, Green LED is lit if the voltage at the output terminal is more than 75%.

#### DC output low indicator

Red LED is lit when the voltage at the output terminal is 70% to 90% of the rated output voltage.

#### Potentiometer

Used to set the output voltage.

## Connection / Internal fuse

#### Connection (See Fig. 3)

- · Data for permitted loads, cable cross-sections and stripping.
- Use only commercial cables designed for the indicated voltage and current values!
- With flexible cables: make sure that all stranded cable are secured in the terminal.
- Ensure proper polarity at output terminals!

#### Grounding

- Do not operate without PE connection! To comply with EMC and safety standards (CE mark, approvals), the unit must only be operated if the PE terminal 

  is connected to the non-fused earth conductor.
- Secondary side is not earthed; if necessary the ⊕ or ⊝ terminal can be earthed optionally.

#### Internal fuse

The internal input fuse serves to protect the unit and must not be replaced by the user. In case of an internal defect, the unit must be returned to the manufacturer for safety reasons.

#### Removal

#### Removal from DIN Rail

Insert a flat screwdriver into the slot in the clamp. Pull down the clamp out unit the clamp clicks, and turn the switching power supply bottom out. (See Fig. 4)

## Technical Data

 
All specifications are typical at norminal line, full load, 25°C; Unless otherwise noticed.

Output Wattage	vo [v]	Io [A]	Eff. [typ.]	Inrush Current	
				115Vac	230Vac
240	24	10	89%	< 24A	< 48A
	48	5	90%		

## General Specification

II-41	*******
Isolation	
Isolation Resistance	100 M ohm
Operation amb. Temperature	
Storage Temperature	
Derating	+61 ~ +71 °C (see Fig. 5)
Relative Humidity	95% RH
Cooling	
Temperature Coefficient	
Dimension	L125 x W83 x D126 (in mm) for A type
	L142 x W83 x D126 [in mm] for B type
Weight	1000g

## Fig. 5 Derating



#### Input Specification

#### Output Specification

Output Accuracy	
Line Regulation	
Load Regulation	+/- 0.5% for single mode
	±5% for parallel mode
Ripple & Noise	
Voltage Trim Range	22.5 ~ 28.5 Vdc for 24V models
	47 ~ 56 Vdc for 48V models
Hold up time	>25ms
DC ON Indicator	Green LED
DC LOW Indicator	
Parallel Operation	3 unit max.

#### Control And Protection

Input Internal Fuse	T6.3A / 250 Vac
Output Shart Circuit	
Output Over Load	120 % ~ 145 %

#### Approvals And Standard

UL / cUL	UL 508 Listed , UL 60950-1 Recognized
TUV	
CE	EN 55022 & EN 61000-6-3,
	EN 61000-3-2, EN 61000-3-3,
	EN 55024 & EN 61000-6-2,
	EN 61000-4-2, EN 61000-4-3,
	EN 61000-4-4, EN 61000-4-5.
	EN 61000-4-6, EN 61000-4-8.
	EN 61000-4-11