


ASSEMBLY INSTRUCTION

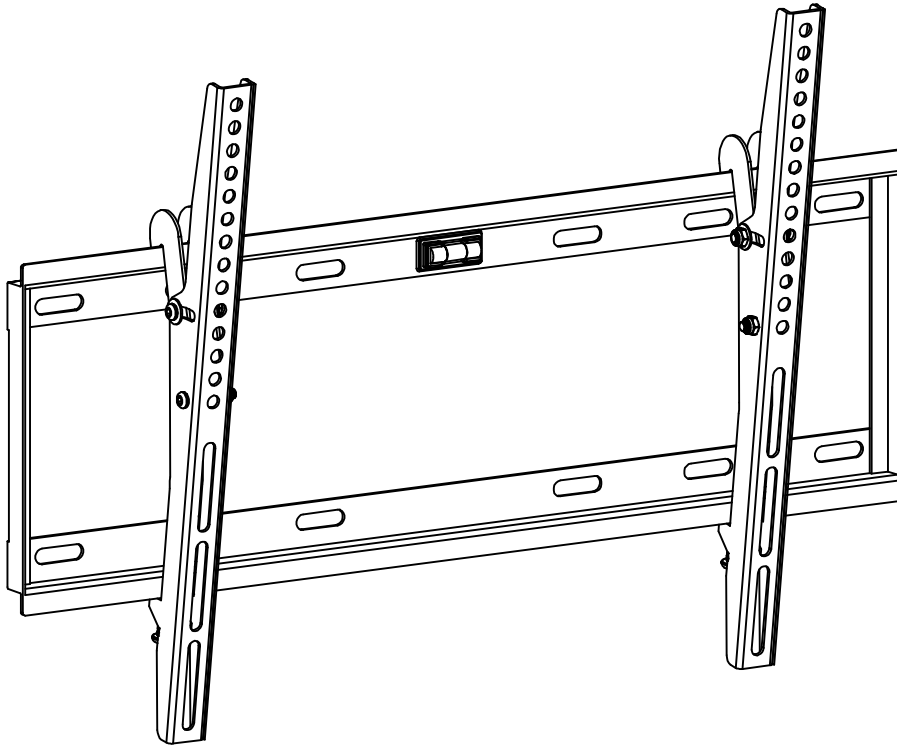

MODEL: XD 2168-C

- Please read this instruction carefully before assembly.
- Fits for 32-63in plasma and LCD TV.
- Weight Capacity : 60KG (132 LBS).

Safety Warning:

Never let children climb on product or play with product.

Do not sit or stand on product.

Do not fasten a TV that is heavier than the recommended load rating to the mount.


Improper installation may cause property damage and/or personal injury, so the installation must be done by two qualified contractors. The manufacture is not liable for damage or injury caused by incorrect mounting , assembly or use .

Improper handling can result in cuts and lacerations .

Pictures for reference only , subject to our available products .

Keep this instruction for future reference .

● Part list:

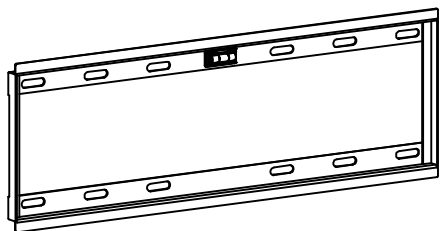

1-Wall plate
1pc


 












 

2-Bracket(L)
1pc



3-Bracket(R)
1pc

● Hardware list:

		
A-log bolt 4pcs	B-Anchor 4pcs	C-M6/M8 washer 8pcs

						
D-M5X12 bolt 4pcs	E-M6X12 bolt 4pcs	F-M8X16 bolt 4pcs	G-M5X30 bolt 4pcs	H-M6X35 bolt 4pcs	I-M8X40 bolt 4pcs	J-M5 washer 4pcs
						
K-Large spacer 4pcs	L-Small spacer 4pcs	M-4mm Alley key 1pc	N-Wrench 1pc			

Step 1: Hold wall plate (1) against wall at desired position , then using a pencil mark 4 hole locations . then drill holes according pencil marks using 2/5" or 10mm size drill bit to a depth of 2.5" or 64mm . Insert wall anchor (B) to the holes , the fix wall plate (1) to the wall with washers (C) and screws(A) .

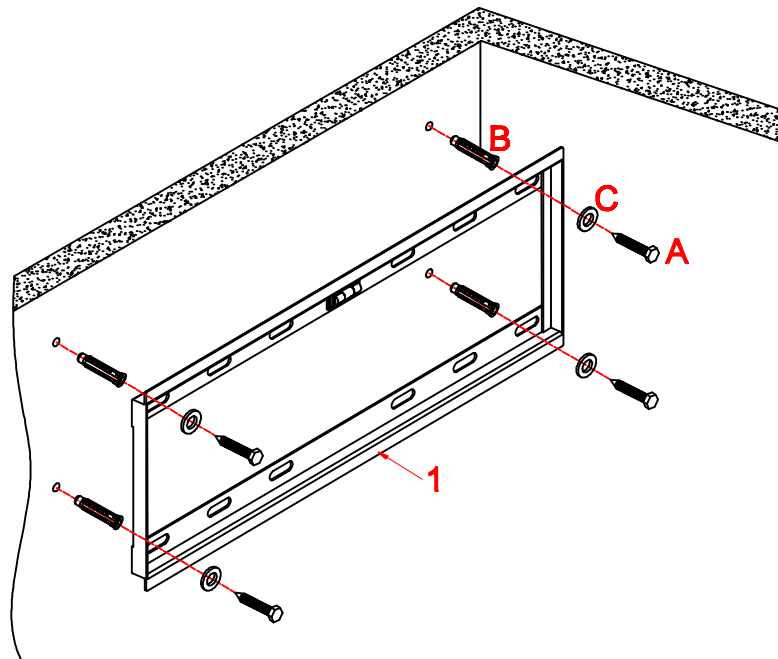


Figure 1 (keep the wall plate level)

Step 2: Attach two brackets (2) and (3) to TV back choose suitable screws and spacer.

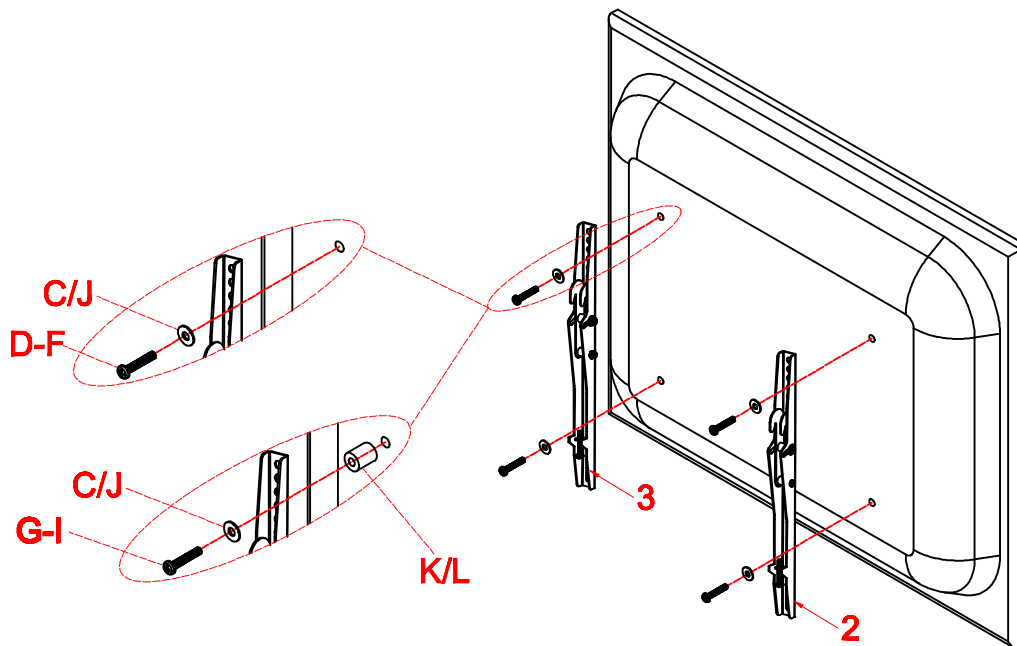


Figure 2

Step 3: Hang pre-assembled TV unit on the wall plate and tighten the safety screws .

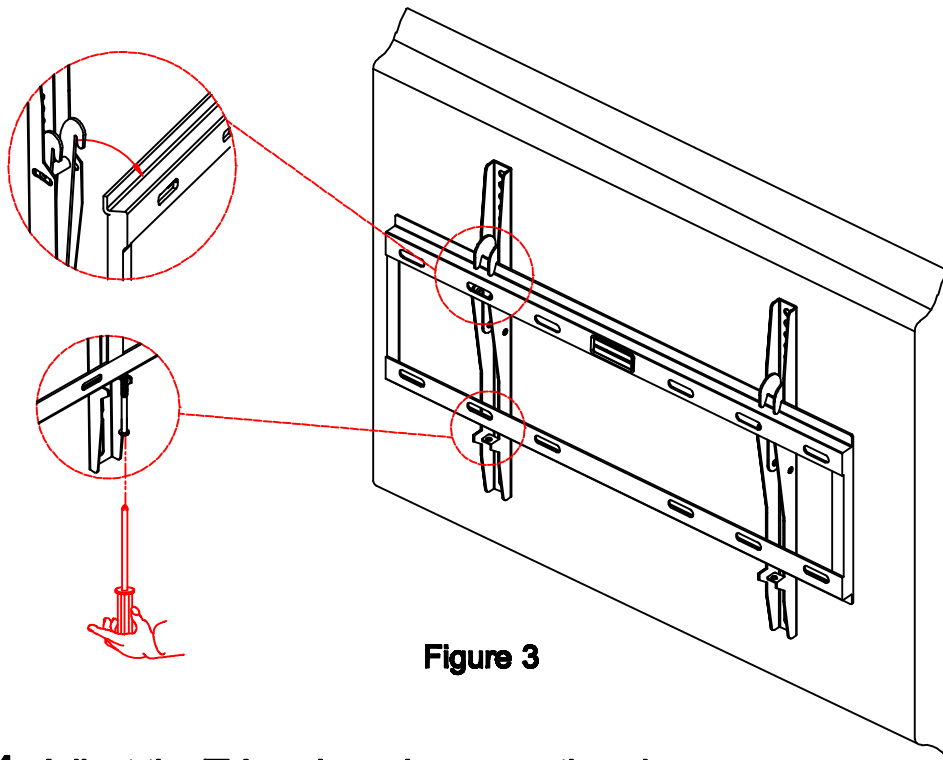


Figure 3

Step 4: Adjust the TV angle and manage the wire.

You can loosen screw ③ to adjust tilting angle. When it is at your desired angle, you can tighten screws.

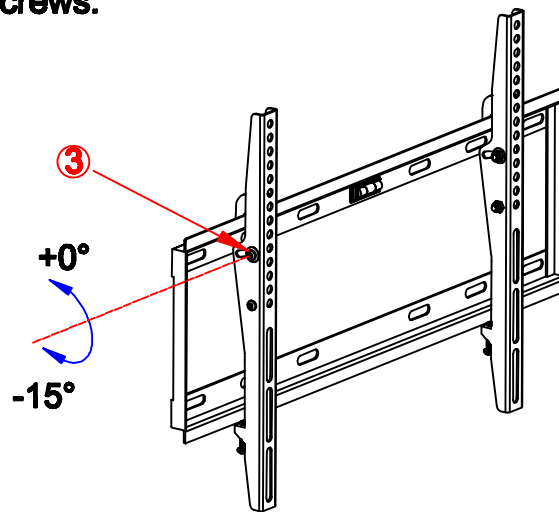


Figure 4

PAY EXTRA CARE AND ATTENTION WHEN YOU FASTEN TWO TV MOUNTS TO THE BACK PANEL OF TV IN STEP 2 . MAKE SURE THE APPROPRIATE MOUNT HARDWARE IS BEING USED PROPERLY .

1. Select correct Mounting Hardware according to the screw hole size of your TV, discard any remaining screws or spacers.
2. Carefully lay your TV on its face on a non-abrasive surface, making sure to lay padding underneath it so as not to damage the screen .
3. Place left TV mount and right mount in the appropriate position, making sure **CENTERED** on the back of the TV and **LEVEL** with on another .