Using Instructions



These instructions relate ONLY to this product and contain important information for using the product for the first time. Please keep these instructions for later reference and should always accompany the product in the event of transference to a new user.

1. Introduction

Dear Costumer.

Thank you for purchasing the solar light. With this solar light you purchased a product manufactured according to the current state of technology.

This product fulfils all requirements of the valid European and national regulations. The conformity was proved. The relevant declarations and documentation are deposited with the manufacturer.

To maintain this state and guarantee a safe operation, you as the user will have to follow this operating manual!

2. Safety Instructions



- In case of damages caused by not following this operating manual, the warranty rights will expire! We exclude liability for any consequential damages!
- We exclude liability for property or personal damages caused by inappropriate handling or not following the safety instructions.
- In these cases any guarantee rights will expire.

Due to safety and admission reasons (CE) it is not allowed to arbitrarily reconstruct and/or change the solar light.

Therefore, please keep to the operating manual.

The accident prevention rules of the association of the industrial trade cooperative association for electric plants and working material are to be considered in industrial environments.

3. Intended use

The string of lights is automatically switched on at darkness and switched out at morning light. It is possible to select 7 different light programs. With a full accumulator, the maximum duration of illumination (depending on the operating mode) amounts to 10 hours. The solar module installed in the upper part of the housing charges the integrated accumulator. The two switches on the string of lights are used in order to switch the string on and off or set the desired flashing mode. The string of lights is suitable for outdoor use. The LEDs must not be immersed into water (pond).

Note: Make sure that the lamp is always adjusted to the south and shadows are avoided. The product may not be used if adjusted to the north. In the winter, it is required to keep the solar module free of snow. Due to the reduced solar radiation, the duration of illumination will be shorter in winter.

4. Initiation

- Please carefully take all parts out of the package and unfold the string of lights.
- Wrap the string of lights around a shrub or bush. Please make sure that
 the string of lights is not permanently positioned in water (e.g. in a pond).
 Rain and snow won't impair the string of lights; it is suitable for outdoor
 use.
- Put the right rocker switch into the position "AUTO" and the left rocker switch into the position "ON". The string of lights is now switched-on and all eight flashing modes are activated one after the other.

Setting of a permanent mode:

If you want to permanently adjust a cer-

tain mode (e.g. permanent light), please simply set the switch into the position "MODE" as soon as the desired mode is reached. The desired mode is now fixed.

Note: During the transition from the last flashing mode to permanent light, the string will remain dark for approx. 7 seconds. This time is also pre-set and normal. There is no defect.

 
Note: The string of lights is switched-off in the position "OFF" and the accumulator will not be charged.

4. The control unit may be inserted into the ground with the ground spike or screwed to a floor or wall by means of the bracket.

Note: During the winter months, the duration of illumination will generally be shorter. In case the light should not give light on the first evening, please wait for a sunny day.

5. Battery replacement

Battery capacity will be lower after one or two years requiring replacement. The battery is available from the manufacturer and other suppliers. Only batteries of identical design must be used.



position "AUTO".

2. Unscrew the 4 screws on the

lower part of the encasement and remove the cover.

Remove the battery from the support.

1. Insert the new battery ensuring proper polarity. Close the assembly.

Note: Used batteries should be disposed of environmentally friendly, i.e. not as a part of domestic waste. Return them to the supplier, who is obligated by law to take them back.

2.

6. Malfunctions

Lamp is not automatically switched on at darkness

 An outside light source (e.g. streetlight) simulates daylight and prevents the lamp from switching on. Place the lamp at a darker location.

Lamp is not switched on at darkness or only for a short period of time.

- Is the lamp connected?
- Accumulator weak or defective. Exchange of the accumulators.

During the transition to permanent light, the LEDs remain dark for approx. 7 seconds.

- This is absolutely normal and pre-set in the electronic control.

7. Specifications

- Operating voltage: 1.2 V

- Battery: NiMh 1.2 V/2000 mAh

- Illuminating units: 100 LEDs

- Illumination time: max. 10 h with a full battery

Battery take-back

- Batteries must not be discarded into domestic waste.

 The consumer is legally required to return batteries after use, e.g. to public collecting centers or to battery distributors.

Contaminant-containing batteries are labeled with the sign "crossed-out trashcan" and one of the chemical symbols. Used batteries should be disposed environmentally friendly and should not be discarded into domestic waste. Your dealer is legally required to take back old batteries.



NiMh

Rechargeable battery notes

- Rechargeable batteries should not be played with by children. Never leave rechargeable batteries lying around; they could be swallowed by children or pets.
- Rechargeable batteries must never be short-circuited, disassembled or thrown into fire. This leads to a danger of explosion!
- Leaking or damaged rechargeable batteries can cause chemical burns when they come into contact with skin. For this reason, please make use of suitable protective gloves.
- Rechargeable batteries should only be replaced by structurally identical rechargeable batteries from the same manufacturer. Normal batteries must not be used since these are not rechargeable.
- Make sure the rechargeable batteries are inserted with the correct polarity.
- For long periods of time of non-use (for example, storage), remove the inserted rechargeable batteries to avoid damages via the leaking rechargeable batteries.

Customer support:

If you have problems or questions regarding this product, simply contact us!

Monday to Friday 8 am to 12 noon and 1 pm to 4 pm.

By phone: 09605-92206-27 Internet: www.esotec.de

By e-mail for ordering spare parts: ersatzteil@esotec.de

Manufacturer Art.-No.: 102102 (light color warm white)

Manufacturer Art.-No.: 102103 (light color multicolored)

Disposal:

MODE

AUTO

ON

Dear customer,

please cooperate in avoiding waste. When you intend to dispose of the product in future, please consider that it contains valuable raw materials suited for recycling.

Therefore, do not dispose it of with domestic waste but bring it to a collection point for the recycling of waste electrical and electronic equipment.

Thank you very much for your cooperation!