



1. The Sink Shower Head swivels in a full circle of 360° reaching each corner of the sink.
2. Pulling down on the nozzle yields a fine shower.
3. Pushing up on the nozzle gives you aimed water without splashing.

**Instructions**

1. Remove any existing aerator.
2. Insert rubber washer inside of Sink Shower Head.
3. If faucet has outer threads, then screw Sink Shower Head onto faucet.
4. If faucet has inner threads, then screw adaptor on Sink Shower Head and place 2nd washer on adaptor and install on faucet.

To clean (Use following diagrams)



Important: Suitable for all pressure resistant water boilers. If doubts exist as to compatibility, consult a plumbing professional.