




SOLDAPULLT[®]


Desoldering Tools

US140, US240 & US340 Disassembly:

1. Push loading knob all the way down and hold
2. Open cover
3. Snap out cover
4. Remove both back stoppers
5. With loading knob fully down, press trigger and slowly slide out plunger and trigger

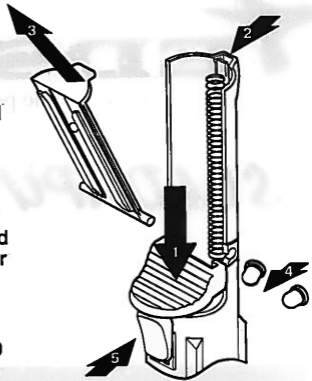

US140, US240 & US340
To replace the Tip, push Loading Knob all the way until the Tip pops out.

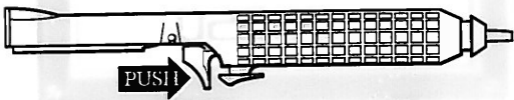

Tool	Replacement Tip	O-Ring
US140	SRT12 Tip	ODS31
US240	MRT16 Micro	ODS31
US340	LS197 Low Static	ODS31
SS343	LS915 Micro	OS130
SS350	LS363 Low Static	OS130
SS750LS	LS751 Low Static	OS130

SS750LS



*To remove tip, remove barrel then press down tip on hard surface.
To install new tip, place tip on shaft, insert barrel, then push knob to locking point*

SS343 SS350



To replace the tip on SS343, SS350 simply unscrew old tip and replace with new one (do not cross thread)

