



HOW TO CONNECT

TEST PROGRAM

NO MAINS!

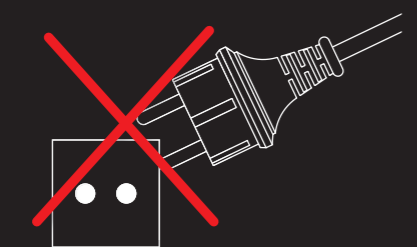

CONNECT TO BATTERY!

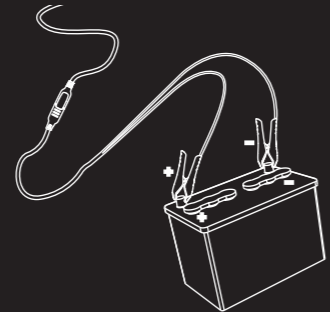


READ RESULT!




HOW TO TEST

BATTERY VOLTAGE


PRESS!

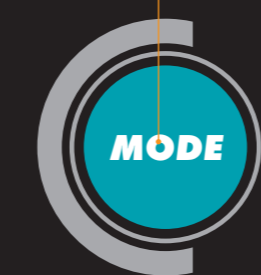

LIGHT!

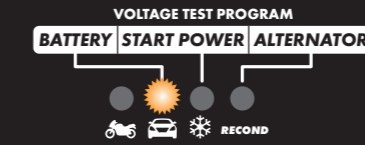


READ RESULT!

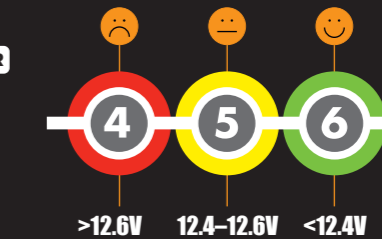


HOW TO TEST

START POWER VOLTAGE


PRESS!

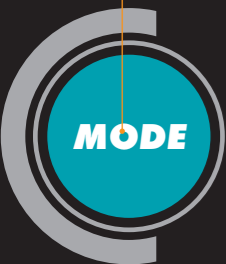

LIGHT!

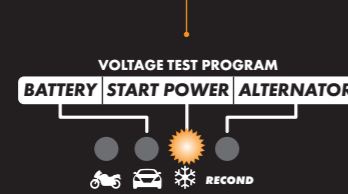

1. START ENGINE!
2. READ RESULT!

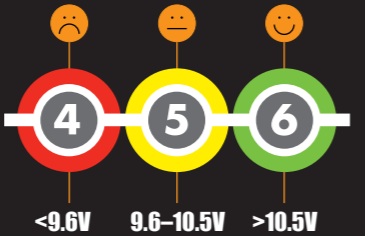


HOW TO TEST

ALTERNATOR VOLTAGE


PRESS!



LIGHT!

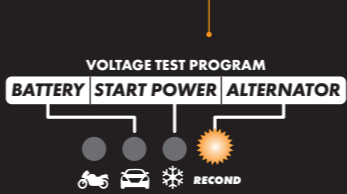

1. START ENGINE
2. RUN 2000 RPM FOR 10 SEC!
3. READ RESULT!

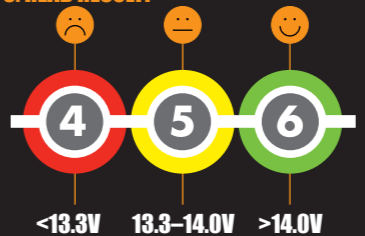

HOW TO USE

TEST PROGRAM

www.ctek.com



20018237A_PO1

