

DIGITAL AIR TEMP GAUGE SMOKE GAUGE SERIES

- A. RESISTANCE: 72705 ~538 Ω
- B. UNITS TYPE: °C
- C. AIR TEMP GAUGE DISPLAY: DIGITAL TYPE → -20~ 125°C; ANALOG LED → -20 ~ 125°C
- D. IF THE AIR TEMP IS BELOW 3°C FOR 3 SECONDS, THE BUZZER.WILL BEEP 3 TIMES. WHEN THE AIR TEMP IS LOWER THEN 0°C FOR 3 SECONDS, THE BUZZER WILL BEEP FOR 2 SECONDS AND THE WARNING LIGHT WILL LIGHT ON.
- E. WHEN THE DIGITAL SCREEN DISPLAYS [- - -], IT IS A SENSOR ERROR CODE. PLEASE CHECK IF THE SENSOR IS DISCONNECTED OR DEFECTIVE.
- F. DPI OF DIGITAL DISLAY=1°C
- G. DPI OF LED ANALOG DISPLAY =7.2°C
- H. LED ANALOG INDICATOR (THERE ARE 20 PCS OF LED LIGHT IN SIDE)

-20~50°C GREEN LED X 10 PCS	51~ 78°C YELLOW LED X 4 PCS	79~125°C RED LED X 6 PCS
--------------------------------	--------------------------------	-----------------------------

- B. UNITS TYPE: °F
- C. AIR TEMP DISPLAY: DIGITAL TYPE → 0~ 250°F; ANALOG LED(0 ~ 250°F.
- D. IF THE AIR TEMP IS BELOW 37°F FOR 3 SECONDS, THE BUZZER.WILL BEEP 3 TIMES. WHEN THE AIR TEMP IS LOWER THEN 32°F FOR 3 SECONDS, THE BUZZER WILL BEEP FOR 2 SECONDS AND THE WARNING LIGHT WILL LIGHT ON.
- E. WHEN THE DIGITAL SCREEN DISPLAYS [- - -], IT IS A SENSOR ERROR CODE. PLEASE CHECK IF THE SENSOR IS DISCONNECTED OR DEFECTIVE.
- F. DPI OF DIGITAL DISPALY=1°F
- G. DPI OF LED ANALOG DISPLAY = 12.45°F
- H. LED ANALOG INDICATOR (THERE ARE 20 PCS OF LED LIGHT IN SIDE)

0~125°F GREEN LED X 10 PCS	126~175°F YELLOW LED X 4 PCS	176~250°F RED LED X 6 PCS
-------------------------------	---------------------------------	------------------------------

FUNCTIONS:

1. OPENING CEREMONY:
TURN ON AND TURN OFF THE ENGINE: GREEN → YELLOW → RED LED WILL SCAN ONCE.
2. DISPLAY FUCTON:
DISPLAY AIR TEMP VALUE, NUMBER AND LED WILL CORRESPOND RECIPROCALLY.

INSTALLATION INSTRUCTIONS:

- YELLOW - BATTERY (+)
- RED - 12V+ IGNITION SWITCH
- BLACK - ENGINE GROUND(-)
- GREEN - AIR TEMP SENSOR

AIR TEMP SENSOR:

- BLACK - CONNECT TO ENGING GROUND
- BLACK/WHITE - CONNECT TO GAUGE GREEN WIRE