

HAIR DRYER CERAMIC

HD 3700



EN

FOR A GOOD REASON

GRUNDIG



HAIR DRYER HD 3700

Safety

Please note the following instructions when using the appliance.

- The appliance is designed for domestic use only.
- Never use the appliance in the bath, shower or over a wash basin filled with water; nor should it be operated with wet hands.



- Do not immerse the appliance in water or let it come into contact with water, even during cleaning.
 - Do not use the appliance near water in bathtubs, wash basins or other vessels.
 - If the appliance is used in the bathroom, it is essential that the power plug is pulled out after use, as water close to the appliance can still constitute a danger, even if the appliance is switched off.
 - If not already present, for additional protection it is recommended to install a residual-current-operated protective device (RCD) with a rated residual operating current not exceeding 30 mA in the electrical circuit of your bathroom. Ask your plumber for advice.
 - Never place the appliance on soft cushions or blankets during operation.
 - Ensure that the air-induction and output openings are not covered during operation.
 - The appliance is equipped with an overheating protection system.
 - Pull out the power plug after use. Do not disconnect the plug by pulling on the cable.
- Never use the appliance if it or the power cord is visibly damaged.
 - If the power cord is damaged, it must be replaced by the manufacturer, its service centre or a similarly qualified person to prevent danger arising.
 - Keep the appliance away from children.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
 - Do not open the appliance under any circumstances. No warranty claims are accepted for damage resulting from improper handling.

HAIR DRYER HD 3700

Packing contents

- 1 HD 3700 1800 W ceramic hair dryer
- 2 Slim concentrator nozzle **E** for professional styling

Settings

Your appliance has the following settings:

Blower level **C**

- **0**: Off
- **1**: Gentle air flow
- **2**: Strong air flow

Temperature level **B**

- **1** : Cool air
- **2** : Moderate temperature for gently drying and styling
- **3** : High temperature for fast drying

Cold setting (Cool Shot) **D**

- **⚡**: Interrupts heating and provides a cool air flow

Operation

Check if the mains voltage on the type plate (on the handle of the device) corresponds to your local mains supply.

- 1 Towel dry your hair thoroughly after washing.
- 2 Attach the **E** concentrator nozzle on the hairdryer and align it as required.
- 3 Plug the power cord **A** into the wall socket.
- 4 Turn on the appliance with switch **C** and set the blower level.
- 5 Set the temperature level with switch **B**.
- 6 While drying, you can interrupt the hot air flow, by pressing and holding down **D** (Cool Shot).

Note

- The Cool Shot interrupts the hot air with a flow of cold air. This allows you to fix your hairstyle better and more lastingly.
- 7 After use, switch off the appliance with the **C** button and pull out power cord **A** from the wall socket.

Caution

- Never wind the power cord around the appliance, as this can result in damage.
Check the power cord and the appliance regularly for visible damage.

Cleaning and care

Pull the plug out before cleaning.

Never submerge the appliance in water.

Use a soft, dry cloth to clean the housing. Remember to clean the air inlet grille **G** occasionally with a soft brush to remove hairs and dust.

Take off the air inlet grille **G** and clean the filter at regular intervals. Pull back the grille to do this.

HAIR DRYER HD 3700

Environmental note

This product has been made from high-quality parts and materials which can be re-used and recycled.



Therefore, do not throw the product away with normal household waste at the end of its service life. Take it to a collection point for recycling electrical and electronic devices. This is indicated by this symbol

on the product, in the operating manual and on the packaging.

Please find out about collection points operated by your local authority.

Help protect the environment by recycling used products.

Technical data



This product fulfils the European directives 2004/108/EC, 2006/95/EC and 2009/125/EC.

Power supply

230 - 240 V ~ 50 Hz

Power

1600 - 1800 W

Technical and design modifications reserved.

Grundig Intermedia GmbH
Beuthener Strasse 41
90471 Nürnberg

www.grundig.com
72011 903 6100 12/48

AUS GUTEM GRUND

GRUNDIG