# HAIR DRYER TRAVEL Move

# HD 2509





# GRUNDIG



ENGLISH

10-13

### HAIR DRYER HD 2509

#### Security

Please note the following information when using the appliance:

- The appliance is designed for domestic use only.
- Never use the appliance in the bath, shower or over a washbasin filled with water; nor should it be operated with wet hands.



- Do not immerse the appliance in water or let it come into contact with water, even during cleaning.
- Do not use the appliance near water in bathtubs, wash basins or other vessels.
- If the appliance is used in the bathroom, always pull out the mains plug after use, as water near the appliance can still constitute a danger, even if it is switched off.
- If not already present, for additional protection it is recommend to install a residual-current-operated protective device (RCD) with a rated residual operating current not exceeding 30 mA in the electrical circuit of your bathroom. Ask your plumber for advice.
- Never place the appliance should on soft cushions or blankets during operation.
- Ensure that the air-induction and output openings are not covered during operation.
- The appliance is equipped with an overheating protection system.
- Pull out the mains plug after use. Do not pull out the plug by pulling on the cable.
- Do not use the appliance if the mains cable is damaged or the appliance itself is visibly damaged.

## HAIR DRYER HD 2509

- If the power cord is damaged, it must be replaced by the manufacturer, its service centre or a similarly qualified person to prevent danger arising.
- Keep the appliance away from children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Never open the appliance under any circumstances. No warranty claims are accepted for damage resulting from improper handling.

#### **Special features**

You can use your appliance anywhere in the world. You can switch the mains voltage between 115-120 V~ and 230-240 V~.

#### Caution

Before using for the first time, check the information on the voltage switch corresponds to the local mains supply.

The device may overheat if the voltage switch is in the wrong position.

#### Settings

Your appliance has the following settings:

#### Blower level, temperature level

- 0: Off
- I : Gentle air flow, temperature approx. 70 °C
- II: Strong air flow, temperature approx. 80 °C

#### Voltage switch C

- **115** (115-120 V~)
- 230 (230-240 V~)

### HAIR DRYER HD 2509

#### Operation

- 1 Thoroughly towel dry your hair after washing.
- 2 Fold out the soft-touch handle D.
- 3 If necessary change the mains voltage setting using the rotary switch **C**, for example using a coin.
- 4 Plug the A power cord into the wall socket.
- 5 Turn on the device with the switch **B** and select the blower/temperature level you require (I or II).
- 6 Align the concentrator nozzle E as required.
- 7 After use, switch off the appliance with the switch and pull the plug of the mains cable A out of the socket.

Note

Never wind the mains cable around the appliance, because this can cause damage.

Please check the appliance and the cable regularly for visible damage.

#### **Cleaning and care**

Pull the plug out before cleaning.

Never submerge the appliance in water.

Use a soft, dry cloth to clean the housing. Remember to clean the air inlet grille © occasionally with a soft brush to remove hairs and dust.

#### **Environmental note**

This product has been made from high-quality parts and materials which can be re-used and recycled.



Therefore, do not throw the product away with normal household waste at the end of its life. Take it to a collection point for recycling electrical and electronic devices. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please find out about collection points operated by your local authority.

Help protect the environment by recycling used products.

#### **Technical data**

This product fulfils the European directives 2004/108/ EG, 2006/95/EG and 2009/125/EG.

**Power supply** 115-120 V~ / 230-240 V~, 50 Hz

**Power** 1400-1500 W

Technical and design modifications reserved.

Grundig Intermedia GmbH Beuthener Strasse 41 90471 Nürnberg

www.grundig.com 72011 906 6500 12/48

