

**HAIR DRYER**

**IONIC**

**HD 6080**

**ENGLISH**



FOR A GOOD REASON

**GRUNDIG**





# SAFETY

---

Please note the following instructions when using the appliance:

- The appliance is designed for domestic use only.
- Never use the appliance in the bath, shower or over a wash basin filled with water; nor should it be operated with wet hands.



- Do not immerse the appliance in water or let it come into contact with water, even during cleaning.
- If the appliance is used in the bathroom, it is essential that you unplug it after use, as any water close to the appliance can still pose a hazard, even if the appliance is switched off.
- Do not use the appliance near water in bathtubs, wash basins or other vessels.
- If not already in use, installing a residual current-operated protective device (RCD) is recommended for additional protection with a rated residual operating current not exceeding 30 mA in the electrical circuit of your bathroom. Ask your plumber for advice.
- Never place the appliance on soft cushions or blankets during operation.
- Ensure that the air-induction and output openings are not covered during operation.
- The appliance is equipped with an overheating protection system.
- Unplug the appliance after use. Do not disconnect the plug by pulling on the cord.
- Never use the appliance if it or the power cord is visibly damaged.
- If the power cord is damaged, it must be replaced by the manufacturer, a service centre or a similarly qualified person to avoid any danger of electrical shock.
- Keep the appliance out of the reach of children.

# SAFETY

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Never open the appliance under any circumstance. No warranty claims are accepted for damage caused by improper handling.
- Check if the mains voltage on the type plate (on the handle of the appliance) corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to unplug it.
- Never wrap the power cord around the appliance.
- Never use the appliance in or near to combustible, inflammable places and materials and furniture. Do not let the appliance come into contact with or become covered by inflammable materials e.g. curtains, textiles, walls, etc. Please make sure that the appliance is always kept a safe distance away from flammable materials and furniture.
- The nozzle becomes very hot in usage. Do not touch it with your bare hands. Avoid any contact of the skin with the hot parts. Do not allow the nozzle to come into contact with your face, neck or head.
- A warm flow of air is required to achieve a perfect result. Please note that a metallised brush can become extremely hot during prolonged or intensive use. To avoid injury, please adjust the usage time of the appliance to the accessory being used.

# AT A GLANCE

---

Dear Customer,

Congratulations on the purchase of your HD 6080 Hair Dryer.

Please read the following user notes carefully to ensure full enjoyment of your quality Grundig product for many years to come.

## A responsible approach!



GRUNDIG focusses on contractually agreed social working conditions with fair wages for both internal employees

and suppliers. We also attach great importance to the efficient use of raw materials with continuous waste reduction of several tonnes of plastic every year. Furthermore, all our accessories are available for at least 5 years. For a future worth living. For a good reason. Grundig.

## Controls

See the figure on page 3.

- A** Slim concentrator nozzle for professional styling
- B** Air inlet grille
- C** ✳ Cool shot (Interrupts the hot air supply with a cold air flow)
- D** Temperature level switch
  - ) low temperature
  - ECO: environment-friendly eco-mode for gently drying, styling and electricity saving
  - ))) high temperature for fast drying
- E** Blower level switch
  - 0: Off
  - 1: Gentle air flow
  - 2: Strong air flow
- F** Power cord with hanging loop

# OPERATION

---

## Caution

- Check that the mains voltage on the type plate (on the handle of the appliance) corresponds to your local mains supply.
  - The nozzle becomes very hot in during use. Do not touch it with your bare hands. Avoid any contact between the skin and the hot parts. Do not allow the nozzle to come into contact with your face, neck or head.
  - A warm flow of air is required to achieve perfect results. Please note that a metal brush can become extremely hot during prolonged or intensive use. To avoid injury, please adapt the usage time of the appliance to the accessory being used.
  - Place the appliance on a solid, flat, heat resistant surface. Do not place the appliance on any soft or uneven surfaces such as carpets, rugs or bedding and never cover.
- 1 Towel dry your hair thoroughly after washing.
  - 2 Attach the concentrator nozzle **A** on the hairdryer and align it as required.

- 3 Plug the power cord **F** into the wall socket.
- 4 Turn on the appliance with the switch **E** and set the blower level.
- 5 Set the temperature level with the switch **D**.
- 6 While drying, you can interrupt the hot air flow, by pressing and holding down **C** (Cool Shot switch).

## Note

- The Cool Shot switch interrupts the hot air with a flow of cold air. This allows you to fix your hairstyle better and more lastingly.
- 7 After use, switch off the appliance with the button **E** and unplug the power cord **F** from the wall socket.

## Caution

- Never wind the power cord around the appliance, as this can result in damage. Check the power cord and the appliance regularly for visible damage.

## Cleaning and care

- 1 Switch off the appliance with the button **E** and unplug power cord **F** from the wall socket.
- 2 Clean the appliance only with a damp, soft cloth. Remember to clean the air inletgrille **B** occasionally with a soft brush to remove hairs and dust. Take off the air inlet grille and clean the filter at regular intervals. Pull back the grille to do this.

## Caution

- Never put the appliance or power cord in water or any other liquid. Do not use any cleaning agents.

## Note

- Before using the appliance after cleaning, dry all parts carefully using a dry soft towel.

## Storage

If you do not plan to use the appliance for a long period of time, please store it carefully.

Make sure that it is unplugged, has completely cooled and is completely dry.

Do not wrap the power cord around the appliance.

Keep it in a cool, dry place.

Make sure that the appliance is kept out of the reach of children.



## Environmental note

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling.



Therefore, do not dispose the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please consult your local authorities to learn the nearest collection point.

Help protect the environment by recycling used products.

## Technical data



This product conforms to the European directives 2004/108/EC, 2006/95/EC and 2009/125/EC.

**Power supply:** 230 - 240 V~,  
50 Hz

**Power:** 2000 - 2200 W

Technical and design modifications reserved.

Grundig Intermedia GmbH  
Beuthener Strasse 41  
90471 Nürnberg

[www.grundig.com](http://www.grundig.com)  
72011 906 4500 12/49

AUS GUTEM GRUND  
**GRUNDIG**