

Camping Light „Montana“ 2in1

Operating instructions

Technical features

- Rough-service aluminium housing
- With high-performance Cree LED XR-E 3W
- 2 switching modes: 100% brightness / 50% brightness / OFF
- Splashproof
- Up to 9 hrs. lighting duration at 50% brightness
- Opal glass for glare-free light distribution
- Power supply: 4 x Mignon /LR6/ AA batteries
- Weight: 285 g with batteries
- Measures: 155 mm H x 58 ø mm

Instructions

The camping light “Montana” is operated with 4 batteries type Mignon / LR6/ AA.

To insert batteries, unscrew black bottom cap anti-clockwise. Observe correct polarity when inserting batteries. When screwing the bottom cap on, take care to fit the two springs in the cap bottom to the minus poles of the two embedded batteries. Afterwards close bottom cap.

To adjust lighting from “all-round lighting” to spotlight / torch function, use the rotary knob at the lamp head.

Use the On/Off mode selector switch (marked “ON”) to choose between two operating modes. Switch from one to the next mode by pressing the switch once.

100 % brightness

50 % brightness

OFF

Maintenance instructions

Only use mild detergents for cleaning your camping light. Only use a soft, slightly moistened cloth or sponge; never use abrasive or sharp tools for cleaning.

Never immerse your light in water, not even for cleaning.

Remove batteries if you don't use your light for a longer period of time.

Do not throw batteries into domestic waste. Batteries must be disposed of according to applicable regulations.