


2 Software Installation (The installtion procedures in Windows XP/ Vista/ 7/8 are similar. Here takes the procedures in Windows 7 for example.)

1	Insert the TP-LINK Resource CD into the CD-ROM drive.	The InstallShield Wizard window will appear. 5 Click Next to continue.	Click Change to specify the destination location or you can leave it default. Click Next to continue.
2		<page-header></page-header>	<image/>
0650419	9		

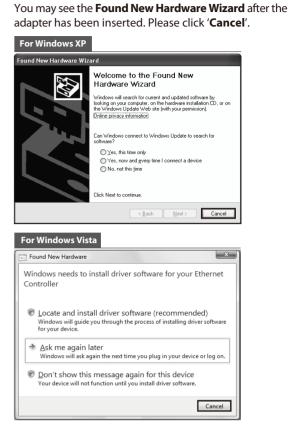

TP-LINK Wireless Configuration	on Utility and Driver - InstallShield Wizard			
The InstallShield Wizard is installing TP-LINK Wireless Configuration Utility and Driver				
C:\\Windows\system32\athr.s	sys			
and the second				
InstallShield				
Instalioneu -	Cancel			
	screen will then appear. complete the setup.			
TP-LINK Wireless Configuration	on Utility and Driver - InstallShield Wizard			
TP-LINK Wireless Configuration	on Utility and Driver - InstallShield Wizard InstallShield Wizard Complete			

3 Connect to network (You can skip to Appendix: Connect to Wireless Router by WPS to quickly connect to a network if your Router or Access Point features WPS or QSS function.)

After installation, the configuration page will pop up on your desktop.

	WPS			100	
Status	WPS	Network	Profile	Advanced	
Network Nan	ne(SSID)	Sec	urity 👻	Channel 👻	Signal 👻
TP-LINK_Net	vork1	WPA/	WPA2-Personal	4 (2.4G)	in.
TP-LINK_352	73C	None		6 (2.4G)	
TP-LINK_352	7	WPA/	WPA2-Personal	6 (2.4G)	
TP-LINK		WPA2	-Enterprise	5 (2.4G)	100
tplink		None		1 (2.4G)	-10-
TP-LINK_86A	3E7	WPA2	-Personal	11 (2.4G)	
spark_bro		WPA2	-Personal	1 (2.4G)	100
TP-LINK 86A	3	WPA7	-Personal	1 (2.4G)	

The icon will appear on your desktop. Double-clicking on the icon can start the utility.

2 Click **Network** in the tools section to display a list of available wireless networks. Highlight the target network name (e.g. TP-LINK_Network1) and then click **Connect** to build a connection.

Status WPS	Network Profile	Advanced	
Network Name(SSID)	Security 👻	Channel 👻	Signal 👻
TP-LINK_Network1	WPA/WPA2-Personal	4 (2.4G)	at l
	Connect automatically	Conne	ect
TP-LINK_35273C	None	6 (2.4G)	at
TP-LINK_3527	WPA/WPA2-Personal	6 (2.4G)	100
TP-LINK	WPA2-Enterprise	5 (2.4G)	
tplink	None	1 (2.4G)	
TP-LINK_86A3E7	WPA2-Personal	11 (2.4G)	
spark_bro	WPA2-Personal	1 (2.4G)	

Note

Here we only choose a wireless network with the security type of **WPA/WPA2-Personal** as an example to elaborate the following steps.

If you want to know more about the connection to a wireless network with the security type of **WPA/WPA2-Enterprise**, please refer to the User Guide on the resource CD included.

3 If the network is unsecured, you will directly connect to it. If it is secured (with WPA/WPA2-Personal), there are two ways to connect to it.

Method One:

Input the password into the **Security Key** field and then click **OK** to continue.

Please input the pa	ssword:
Security Key:	****
	Show characters
	OK Cancel

Method Two:

Without entering a key, push the WPS or QSS button on your Router as hinted "You can also connect by pushing the button on the router". Then click **OK** to continue.

A CALLER		
Please input the pa	assword:	
Security Key:		
	Show characters	
()	You can also connect by pushing the button on the router.	
	ОК	Cancel

Appendix: Connect to Wireless Router by WPS

If your wireless Router features the WPS or QSS function, you can also set up a wireless connection in this way.

For mor


For more configuration methods of WPS, please refer to the User Guide on the Resource CD.



Push the **WPS/RESET** button on the Router. (Here takes Router TL-WR841ND for example.)



2 Launch the configuration utility and click **WPS** in the tools section. Select **Push the button on my access point or wireless router** and then click **Connect**.

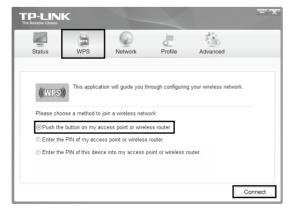

The third option "Enter the PIN of this device into my access point or wireless router" is only available in OS Windows XP and Window Vista, but not in Windows 7/8.

3 Wait for the connection process to complete. The following screen indicates successful connectivity. Click **OK** to finish the WPS connection.

Configuring the	wireless network.	
	(((WPS))))
Successfully c	onnected to the net	work by WPS !
		OK

4

The following screen indicates successful connectivity. Click **Close** to enjoy the Internet.



5

To view more information about the network connected, click **Status** in the tools section.

					-
Status	WPS	Network	Profile	Advanced	
Profile Name:		TP-LINK_Network1			
Network Name	(SSID):	TP-LINK_Network1			
Network Type:		Infrastructure	Rate:	150Mbps	
Channel:		9 (2.4G)	Encrypti	ion Type: AES	
AP MAC:		94-0C-6D-2F-3C-BE	Wireless	s Mode: 802.11g	
IP Address:		192.168.0.111			
Signal Strength				96% Exc	ellen

