

We are pleased that you have decided to buy our product. We wish you were a lot of fun with this product.

## Information on this user manual.

This user manual contains important information for the safe use of the product.

Therefore, for your own safety and for a successful use, please read this user manual completely before assembling and using the product.

## Checking the contents

When unpacking your package make sure that all components are there and intact. If any components are missing or damaged please contact a specialist or your local dealer immediately.

Keep the packing and user manual in a safe place for future transport. When passing on the product to another person, be sure to include the user manual.

## Contents

- Mini-Alarm with Keychain
- User manual

## Designated use.

This personal mini-alarm with keychain is an alarm unit with dual alarm tone and triggered when the keychain is pulled off. The designated use is also defined by the instruction manual and in following the appliance and the warnings mentioned in this user manual. This device is only designed for your personal safety and convenience not for commercial or industrial use.

## General notes

All mentioned company and product names are registered trademarks under the rights of their owners. All rights reserved.

No liabilities will be taken for damages or claims resulting out of not reading and/or not following the user guide and/or any form of modification on or in the product. Under these circumstances, no warranty services will be given. Liability cannot be taken for consequential damages.

The contents of this user manual may differ from the product. If so, please consult additional manuals in the packing. Keep this user manual in a safe place. If you give this product away to a third party, make sure that you also pass on the user manual.

The CE conformity has been declared and proven, and the corresponding documents have been deposited with the manufacturer. For the reason of safety and CE-licensing it is not allowed to modify this unit in any way and/or use it for functions, other than the designated use.

## Service | Importer

Service Address	lived non food GmbH TOR 8 – 9 Donaustraße 20 D-38120 Braunschweig
Fon	+49 (0) 531/224356-82
E-Mail	service@x4-life.de
Internet	www.x4-life.de

Importer Address	lived non food GmbH Donaustraße 20 D-38120 Braunschweig
E-Mail	info@lived-non-food.de
Internet	www.lived-non-food.de

## Safety guide

Please read the safety guide before using the product. This information is for your safety and the protection of the device and devices connected. You will also find specific safety instructions in the following chapters of this user manual.

**Caution! Loud alarm signal! Do not expose your hearing to this sound for an extended period of time, otherwise severe hearing loss can be the result!**


- This product is not a toy and should not be handled by infants and small children. Children cannot assess the dangers connected with electrical devices.
- Do not leave the packaging material lying around. Children might play with the plastic bags and risk suffocation.
- This device should only be opened and/or repaired by an expert or a person who is qualified to do so. Only original spare parts may be used.
- If the device is not used for a longer period of time, the batteries should be taken out of the device. Batteries stored and active over a longer period of time may leak.
- If you have doubts on the function or questions, please contact your local dealer or our service center.

## Getting started



## Activating the batteries

- The alarm is supplied with 4 x LR41 batteries integrated. To protect the batteries from becoming empty the transportation foil has been inserted.
- To activate the device pull out the transportation foil from the battery compartment.
- To change batteries the battery compartment needs to be screwed open. Back the new batteries so that "+" is connected to "-" and insert the stack with the "+" pointing in the direction of the device centre.

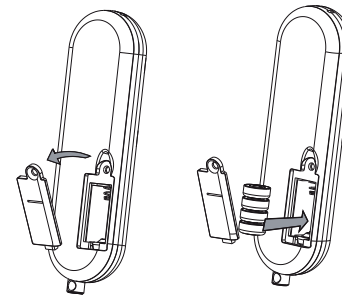

## Using the alarm

The alarm is activated when the contact pin on the keychain is pulled out.

To silence the alarm reinsert the contact pin into the device.



## Cleaning and maintenance

Always use a soft, dry and lint-free cloth to clean the unit's exterior. If the device is extremely dirty you can use a soft cloth, dampened with water or a mild cleaning solution to clean. Never use any abrasive or harsh cleaning agents (e.g. alcohol, petrol or thinners) as these could damage the controls, casing or any markings and labels found on the device.

## Specifications

Alarm: >120 dB SPL/30 cm  
Power supply: 4x LR41 Batterien  
Dim.: 25 x 17 x 85 mm

## Disposal

**Electrical- and electronic devices must never be disposed of in the regular household waste!**



Consumers are legally obligated and responsible for the proper disposal of electronic and electrical devices by returning them to collecting sites designated for the recycling of electrical and electronic equipment waste. For more information concerning disposal sites, please contact your local authority or waste management company.

**Do not throw batteries and rechargeable batteries into the household waste!**



Customers are legally obliged to return used and rechargeable batteries, whether they contain harmful substances\* or not, designated disposal sites or collecting sites in shops selling batteries. By doing so you are contributing to a better and cleaner environment.

\* marking: Cd= Cadmium; Hg= Mercury; Pb= Lead