



Instructions:

1. Recognize your connector:

This tool can crimp RG59 and RG6-F , BNC , & RCA waterproof connector as shown in FIG.1

2. Select a suitable cable for your connector. Strip the cable and assemble with your connector.

3. Adjust the crimper to a suitable crimp length.

For your first usage , Please read Notes below before adjusting.

a. Turn the released screw by counter clockwise direction to release the adjusting shaft.

b. Insert the connector with cable into the crimper and adjust the adjusting shaft until it provides the correct crimping length.

c. Fasten the released screw.

d. To start the crimping process for the same spec. connectors.

NOTE:

1. When crimping is completed or handles are stuck , but ratchet is not release yet , please follows below steps.

a. Squeeze the handles a little more and turn the released nut on the ratchet by clockwise direction to release the handles.

b. When handles were stuck , it means that the crimping length is too short , you have to increase the crimping length.

c. The above steps may help you to shorten your adjusting time and you will be more familiar when crimping different spec. of connectors.

2. For crimping RCA or BNC connectors , please release the " F " nut first and screw it onto the frame for storage.

