


INSTRUCTION MANUAL

MODEL BR 28

FEATURES

1. LCD Display
2. USB slot
3. SD slot
4. Button UHR
5. Button MIN
6. Button STUNDE
7. Button UP
8. Button DOWN
9. Button ZEIT
10. Button PLAY/PAUSE
11. Button Sender ▼
12. Button Sender ▲
13. Speaker
14. Screw for battery cover
15. Volume control
16. Handlebar bracket
17. Function switch
18. Charging LED

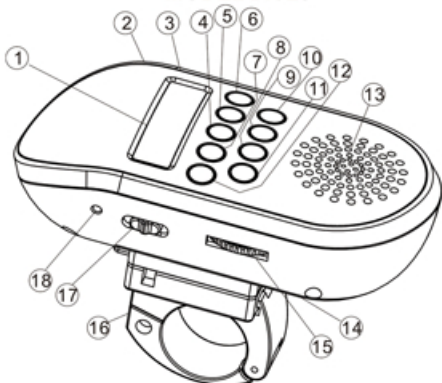

SAFETY INSTRUCTIONS

- Do not operate on the unit while taking part in road traffic. The traffic requires increased Attention. Listening to loud music can distract.
- Take care of the environment. Do not throw batteries into the household waste. Please dispose of them in the appropriate manner i.e. at a collection point for used batteries. Packaging materials should be disposed of in a suitable way.
- This device is designed to used outdoors. It should, however, not be left outside in heavy rain or extreme temperatures.

FOR FIRST OPERATION PLEASE INSERT THE BATTERY AND RECHARGE IT

- The unit is operated by rechargeable Li-Ion battery:
3.7 V / 800 mAh (Size: 5,5 mm x 34 mm x 53 mm), included.
- First loosen screw (14) for battery cover with a coin and remove the cover.
- Then insert the battery in the battery compartment.
Make sure the contact point is correctly positioned.
- Replace the battery cover and turn the screw (14) tightly.
- For charging, insert the USB charging cord (provided) to the USB slot (2) and connect it to a computer, the rechargeable battery will be charged. During charging the charging LED indicator (18) will turn red. Once the battery is fully charged the indicator will turn green. The use of a corresponding socket outlet adapter is also possible.
- If the radio is not in use for a longer period of time, remove the battery.

ATTACHMENT TO BICYCLE

- Attach the enclosed bicycle fitting (16) onto the left or right side of the handlebars. Loosen screw completely and open up the fitting. Place the fitting in the required position on the handlebars; the open side of the fitting should point in the direction of the bicycle's front wheel. Make sure that the rubber insert is in position in order to ensure a firm hold as well as to prevent damage to the bicycle paintwork.
- Close the fitting and turn the screw tightly.
- Slide the radio down into the fitting until it locks into place.
- To remove the radio, press the release catch to the side and slide it out of the fitting.

RADIO OPERATION

- Switch the function switch (17) to position Radio, the display (1) will show the radio frequency.
- Turn the volume control to desired volume level.
- Select the radio channel of your choice with by long pressing the Sender ▲(12) or Sender ▼(11) button.
- The fine tuning of the frequency can be done by pressing the Sender ▲(12) or Sender ▼(11) longer.

USB/SD Playback

- Switch the function switch (17) to position USB/SD position, the display (1) will show the time.
- For USB and SD playback, insert a USB stick or SD card with music files. Press the PLAY/PAUSE button (10) to playback or pause the music. Press UP button (7) to get to the next song. Press the DOWN button (8) to go back to the previous song.

VIEWING THE TIME

- In radio mode, frequency will be shown on the display. Press to the button UHR (4) for showing the time. The time is shown for 3 seconds on the display.

SETTING THE TIME

- The clock has a 24-hour display. Press the button ZEIT(9). Set the time using the buttons STUNDE(6) and MINUTE(5). To end the process press the button ZEIT(9) again.

LCD DISPLAY BACKLIGHT

- Display backlight will lit on when you press any of the function keys. After 3 seconds it will dim down.

INSTRUCTIONS FOR ENVIRONMENTAL PROTECTION



- When this product reaches the end of its serviceable life, do not dispose of in the normal household waste system, please take it to a collection point for the recycling of electric and electronic devices. Follow the symbols printed on the product, on the operating instructions or on the packaging.
- The materials used in the manufacture of this product are reusable as indicated. The recycling of materials or used appliances, makes an important contribution towards the protection of our environment.
- Please contact your local authorities regarding the appropriate form of waste disposal or for the nearest recycling centre.

BATTERY SAFETY INSTRUCTIONS

- Use only specified battery.
- Charge the battery only in accordance with the requirements.
- Do not heat or throw into fire.
- No moisture.
- Do not short circuit, it may cause an explosion.
- Damaged battery need to be discarded and replaced.

DISPOSAL OF BATTERIES

- Batteries should not be disposed of in the household waste. Either dispose of the batteries at the appropriate collection points or return them to the place of purchase.

SECURITY plus® Model BR 28
ML SOLUTION GmbH
Lippestr. 3
45701 Herten
Germany