

Instruction Manual



((

Einzelkochplatte

General Safety Instructions

Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

- The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use.
 - Do not use it outdoors. Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet. unplug it immediately.
- When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull the plug itself, not the lead) if the appliance is not being used and remove the attached accessories.
- Do not operate the machine without supervision. If you leave the room you should always turn the device off.
 Remove the plug from the socket.
- The device and the mains lead have to be checked regularly for signs of damage. If damage is found the device must not be used.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always have faulty cable be replaced only by the manufacturer, by our customer service or by qualified person and with a cable of the same type.
- Use only original spare parts.
- Pay careful attention to the following "Special Safety Instructions".

Children and Frail Individuals

 In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.

! WARNING!

Caution! Do not allow small children to play with the foil as there is a **danger of suffocation!**

- This device is not intended to be used by individuals (including children) who have restricted physical, sensory or mental abilities and/or insufficient knowledge and/or experience, unless they are supervised by an individual who is responsible for their safety or have received instructions on how to use the device.
- Children should be supervised at all times in order to ensure that they do not play with the device.

Symbols in these Instructions for Use

Important information for your safety is specially marked. It is essential to comply with these instructions in order to avoid accidents and prevent damage to the machine:

WARNING:

This warns you of dangers to your health and indicates possible injury risks.

This refers to possible hazards to the machine or other objects.

NOTE:

This highlights tips and information.

Special Safety Instructions for this Device

Symbols on the product

You will find symbols with warning or informational character on the product:

MARNING: Danger of burns!

During operation the temperature of the exposed surface may be very hot.

Thus you should touch the unit only on the thermostatic controller.

- Place the unit onto a level surface resistant to moisture and heat
- In case of sensitive surfaces, place a heat-resistant plate under the unit.
- Because of the rising heat and vapors, do not operate the unit under suspended cupboards.
- Keep a sufficient safety distance (30 cm) from easily flammable objects like furniture, curtains, etc.! Never install the unit in a cupboard.
- Do not heat empty cooking utensils on the hotplate, as this
 can lead to dangerous over-temperatures.
- · Do not move the device when it is in use.
- During use, ensure that the mains lead does not come into contact with hot sections of the device.
- Do not touch the hot parts of the device.
- Please do not operate the device with an external timer or a separate remote control system.

Electrical connection

Connected Wattage

The total power consumption of this device can be up to 1500 W. With this connected load a separate supply line protected by a 16 A household circuit breaker is recommended.

- If you use extension leads, these should have a cable cross-section of at least 1.5 mm².
- Do not use any multiple sockets, as this device is too powerful.

Connection

- Make sure that the unit is switched off. The thermostatic controller must be set to MIN.
- Make sure that the device voltage (see name plate) and the line voltage match.
- The mains plug should only be inserted into a correctly installed 230 V ~ 50 Hz socket with earthing contact.

Initial Operation of the Unit

Before first use, operate the unit for 5 minutes to remove the protective coating of the hotplate. Set the thermostatic controller to **MAX**.

NOTE:

Occurrence of light smoke and odours is normal with this procedure. Take care of suitable ventilation.


Using the Hotplate

Switching on/off

The unit is switched on with the thermostatic controller. The unit is switched off when the thermostatic controller is set to MIN

Notes for cooking utensils

 For optimum use of energy, use only pots/pans with a flat bottom (see Fig.).

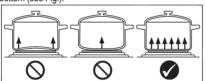

 The cooking utensil never should be smaller than the hotplate. This wastes energy. In extreme cases, the hotplate can become distorted.

Operation

Use the thermostatic controller to select the temperature of the hotplate according to the purpose:

Notch 1: Warming up

Notch 2: Warming up/simmering

Notch **3**: Simmering Notch **4**: Frying

Notch **5**: Parboiling, browning

Notch **MAX**: Browning, quick heating

NOTE:

The pilot lamp indicates the heating up of the hotplate. It is switched on and off during operation. This is normal and indicates that the temperature is controlled and maintained by the thermostatic controller.

Switching Off

- Set the thermostatic controller to MIN.
- Remove the mains plug from the socket.
- · Let the unit cool down before storing it.

MARNING: DANGER OF BURNS!

After the cooking process, the radiated heat can cause dangerous temperatures at the hotplate.

Cleaning

/ WARNING:

- Always pull out the plug from the mains socket before cleaning and wait until the unit has cooled down.
- Under no circumstances should you immerse the device in water for cleaning purposes. Otherwise this might result in an electric shock or fire.

∧ CAUTION:

- Do not use a wire brush or any abrasive items.
- · Do not use any acidic or abrasive detergents.

Hotplate

- Remove food residues with a moist cloth or a paper towel while still warm.
- Clean the hotplate with a soft sponge and a small amount of water, and dry it thoroughly with a soft cloth.

Enclosure

- Clean the enclosure after use with a lightly moistened cloth.
- Take care that no liquid enters into openings in the enclosure. This could damage the unit or could lead to electric shock.

Technical Data

Model:	EKP 3582
Power supply:	
Power consumption:	
Protection class:	
Net weight:	2 00 kg

Subject to technical changes without prior notice!

This device has been tested according to all relevant current CE guidelines, such as electromagnetic compatibility and low voltage directives, and has been constructed in accordance with the latest safety regulations.



Meaning of the "Dustbin" Symbol

Protect our environment: do not dispose of electrical equipment in the domestic waste.

Please return any electrical equipment that you will no longer use to the collection points provided for their disposal.

This helps avoid the potential effects of incorrect disposal on the environment and human health.

This will contribute to the recycling and other forms of reutilisation of electrical and electronic equipment.

Information concerning where the equipment can be disposed of can be obtained from your local authority.

GARANTIEKARTE

warranty card • garantiekaart • carte de garantie • scheda di garanzia • tarjeta de garantía • cartão de garantia • garantikort • karta gwarancyjna • záruční list • kartica jamstva • carte de garanție • Гаранционна карта • záručný list • garancijski list • garanciajegy • гарантійнийформуляр • Гарантийный талон • نامض قواطب

FKP 3582

24 Monate Garantie gemäß Garantieerklärung • 24 months warranty according to warranty declaration · 24 maantde garantie volgens garantieverklaring · 24 mois de garantie solen la déclaration de garantie · 24 mesi di garanzia secondo la dichiarazione di garanzia · 24 meses de garantia de acuerdo con la declaración de garantia · 24 meses de garantia, de acuerdo con la declaración de garantia · 24 meses de garantia, de acuerdo con la declaración de garantia · 24 meses de garantia · 24 meses de garantia · 24 menaderes garanti i henhold til garantibetingelsene · 24 miesiące gwarancji na podstawie oświadczenia gwarancyjnego · záruka 24 meścich podle prohlášeni o záruce · 24 mjesečno jamstvo u skladu s jamstvenom deklaracijom · 24 luni garantię conform declaratiei de garantię · 24 месеца гаранция в съответствие с гаранционната декларация · 24-mesačná záruka podla wyhlásenia o záruke · 24-mesešcha garancija, skladno z garancijsko tizjavo · 24 hónap garancia a garanciafeltetelekben leirtak szerint · гарантия на 24 місяці відповідно заяві про гарантію · Гарантия 24 месяца согласно заявленным гарантивном гарантирамнамным правилам · удель учей мужей субы в сейм сейм заявленным гарантивном гарантирамнамным правилам · учейм сужей субы за су

Kaufdatum, Händlerstempel, Unterschrift - date of purchase, dealer stamp, signature - aankoopdatum, dealerstempel, handtekening - date d'achat, tampon du concessionnaire, signature - data di acquisto, timbro del rivenditore, firma - festa de compra, sello del distribuidor, firma - data de compra, carimbo do distribuidor, assinatura - kiposdato, forhandierstempel, signatur - data zakupu, pieczęć sprzedawcy, podpis- datum zakupueni, raziko prodejec, podpis - datum kopyonie, ĝig trgovac, potpis - data de achzijle, stampla furnizorului, semnatura - Дата на понулката, Печат на Продавача, Подпис - datum nakupu, pe (zakas ob-chodinka/predajaku, podpis - datum nakupa, žig trgovac, podpis - vsådatis datum, akresekdo belyegzōje, aláriás - дата приобретения, Штамп продавца, Подпись -

— дата приобретения, Штамп продавца, Подпись - Дата приобретения, Штамп продавца, Подпись -

— дата приобретения правительного в

— дата приобретения правительного в

— д



