

COFFEE MILL

CM 3260

ENGLISH



FOR A GOOD REASON

GRUNDIG





SAFETY AND SET-UP

Please read this instruction manual thoroughly prior to using this appliance! Follow all safety instructions in order to avoid damage due to improper use!

Keep the instruction manual for future reference. Should this appliance be given to a third party, this instruction manual must also be handed over.

- This appliance is intended for domestic use only. It is not designed for professional use in:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - hotels, motels, and other residential type environments;
 - bed and breakfast type accommodations.
- Do not use the appliance in the bathroom.
- Check if the mains voltage on the rating label corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to pull the plug from the wall socket.
- For additional protection, this appliance should be connected to a household current fault protection circuit breaker of no more than 30 mA. Consult an electrician for advice.
- Do not immerse the appliance, power cord, or power plug in water or any other liquids. Do not hold it under running water and do not clean any parts in the dishwasher. Only the lid can be cleaned safely with water and washing-up liquid.
- Disconnect the power plug after using the appliance, before cleaning the appliance or leaving the room and if a fault occurs. Do not disconnect the plug by pulling on the cord.
- Do not squeeze or bend the power cord and do not rub it on sharp edges in order to prevent any damage.
- Keep the power cord away from hot surfaces and open flame.
- Do not use an extension cord with the appliance.
- Never use the appliance if the power cord or the appliance is damaged.
- Our GRUNDIG Household Appliances meet applicable safety standards, thus if the appliance or power cord is damaged, it must be repaired or replaced by an authorised service centre to avoid any dangers. Faulty or unqualified repair work may be dangerous and cause risk to the user.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
- Always keep the appliance out of the reach of children.
- The appliance should not be used by the following persons, including children: those with limited physical, sensory or mental capabilities and also those with a lack of experience and knowledge. This does not apply to the latter if they were instructed in the use of the appliance, or if they use it under the supervision of a person responsible for their safety. Children should always be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance unattended while it is in use. Extreme caution is advised when the appliance is being used near children and people with limited physical, sensory or mental capabilities.
- Before using the appliance for the first time, carefully clean all parts which come into contact with coffee beans. Do not immerse the motorized base or blades in liquid, or place them in the dishwasher. Only the see-through lid may be immersed. Please see full details in the "Cleaning and Care" section.
- Wipe the stainless steel grinding bowl, blades and lid with a lint free cloth before connecting it to mains supply.
- Never operate or place any part of this appliance on or near hot surfaces such as a gas burner, hotplate or heated oven.

SAFETY AND SET-UP

- Do not use the appliance for anything other than its intended use. The coffee mill is designed for grinding coffee beans. Do not use the appliance to grind any other food.
- Never use the appliance in or near to combustible or inflammable places and materials.
- Operate the appliance only with the delivered parts.
- Do not use the appliance with damp or wet hands.
- Always use the appliance on a stable, flat, clean, dry, and non-slip surface.
- Make sure that there is no danger that the power cord could be accidentally pulled or that someone could trip over it when the appliance is in use.
- Position the appliance in such a way that the plug is always accessible.
- The appliance should not be operated with an external clock timer or separate remote control system.
- The blades are very sharp! Handle the sharp blades with utmost care, especially during cleaning, in order to avoid injuries.
- Do not use the appliance if the blades are damaged or show signs of wear.
- Never clean the appliance with your bare hands.
- Check the stainless steel bowl for foreign objects before using.
- Do not operate the appliance without coffee beans in the stainless steel grinding bowl.
- Never try to use the appliance without the see-through lid.
- Do not attempt to remove the see-through lid until the blades have completely stopped.
- A spatula may be used to remove the coffee from the grinding bowl. The appliance must be switched off before doing this.
- Never operate the appliance for longer than necessary for processing the coffee beans.
- To prevent overheating, do not use the appliance continuously for more than 4 batches. Leave to cool for 10 minutes after every 4 batches of operation.
- Do not attempt to chop ice.

AT A GLANCE

Dear Customer,

Congratulations on the purchase of your new GRUNDIG Coffee Mill CM 3260.

Please read the following user notes carefully to ensure full enjoyment of your quality Grundig product for many years to come.

A responsible approach!



GRUNDIG focusses on contractually agreed social working conditions with fair wages for both internal employees and suppliers. We also attach great importance to the efficient use of raw materials with continuous waste reduction of several tonnes of plastic every year. Furthermore, all our accessories are available for at least 5 years.

For a future worth living.
For a good reason. Grundig.

Special features

The GRUNDIG Coffee Mill is equipped with:

- Stainless steel blades and grinding bowl for up to 55 g freshly ground coffee
- One-hand-operation
- See-through lid provides great control of grinding fineness
- Safety on/off switch - grinding action will not start unless lid is secure

Controls and parts

See the figure on page 3.

- A** See-through lid
- B** Safety on/off switch
- C** Grinding bowl
- D** Stainless steel blades
- E** Secure spot

OPERATION

Preparation

Caution

- The coffee mill is designed for grinding coffee beans. Do not use the appliance to grind any other food.
 - The appliance should be unplugged when not in use.
- 1 Remove all packaging and stickers and dispose of them according to applicable legal regulations.
 - 2 Before using the appliance for the first time, carefully clean all parts which come into contact with coffee beans.
Please see full details in the "Cleaning and Care" section.
 - 3 Make sure that the appliance is placed in an upright position and on a stable, flat, clean, dry, and non-slip surface.

Grinding Coffee

Caution

- Do not touch the blades with your bare hands.
 - Check the stainless steel bowl for foreign objects before using.
- 1 Remove the see-through lid **A**.
 - 2 Fit the see-through lid **A** in correct position on the grinding bowl **C**. Make sure that the safety on/off switch **B** is placed properly on the secure spot **E**.
 - 3 Insert the plug into the wall socket.

- 4 Press and hold the safety on/off switch **B**.
- The appliance starts operating.



- 5 Release the safety on/off switch **B** to finish the operation.

Notes


- Do not remove the see-through lid **A** until the blades **D** have completely stopped.
 - To prevent overheating, do not use the appliance continuously for more than 4 batches. Leave to cool for 10 minutes after every 4 batches of operation.
- 6 Disconnect the plug from the wall socket.
 - 7 Remove the grinded coffee from the grinding bowl.

Notes

- A spatula may be used to remove the food from the grinding bowl. The appliance must be unplugged before doing this.

Cleaning and care

Caution

- Never use petrol, solvents, abrasive cleaners, or metal objects and hard brushes to clean the appliance.
 - The blades are very sharp! Handle the sharp blades with utmost care in order to avoid injuries.
 - Never clean the appliance with your bare hands.
- 1 Turn the appliance off and disconnect it from the wall socket.
 - 2 Allow the appliance to cool down.
 - 3 Remove the see-through lid .
 - 4 Use a damp soft cloth and some mild cleanser to clean the exterior of the appliance.
 - 5 Clean the see-through lid.

Note

- Do not immerse the motorized base or blades in liquid, or place them in the dishwasher. Only the see-through lid may be immersed.
- 6 Wipe the stainless steel grinding bowl, blades and lid with a lint free cloth before the next usage.

Storage

If you do not plan to use the appliance for a long period of time, please store it carefully. Make sure the appliance is unplugged and completely dry.

Store the appliance in a cool, dry place. Make sure the appliance is kept out of the reach of children.

Environmental note

This product has been made from high-quality parts and materials which can be re-used and are suitable for recycling.



Therefore, do not dispose the product with normal household waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please find the closest collection points operated by your local authority.

Help protect the environment by recycling used products.

Technical data



This product conforms to the European directives 2004/108/EC, 2006/95/EC and 2009/125/EC.

Power supply: 230 V ~, 50 Hz

Power: 110 W

Max. grinding capacity: 55 g

Technical and design modifications reserved.

www.grundig.com
720119085100 12/27

AUS GUTEM GRUND

GRUNDIG