

AUS GUTEM GRUND
GRUNDIG

CHOPPER
CH 6280
CH 6280 W/T/L/R



EN





SAFETY AND SET-UP

Please read this instruction manual thoroughly before using this appliance! Follow all safety instructions in order to avoid damages due to improper use! Keep the instruction manual for future reference. Should this appliance be given to a third party, then this instruction manual must also be handed over.

- This appliance is intended for private domestic use only. It should not be used for commercial purposes.
- The blades are very sharp! Handle the sharp blades with utmost care, especially during removing and cleaning, in order to avoid injuries.
- Never clean the appliance with your bare hands. Always use a brush.
- Do not touch any moving parts of the appliance. Do not attach or remove the parts until the device comes to a complete stop.
- Always keep hair, clothing and any other accessories away from the appliance during operation in order to prevent injury and damages.
- Check if the mains voltage on the rating label corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to pull out the plug.
- Do not wrap the power cord around the appliance.
- For additional protection, this appliance should be connected to a residual current protection switch with a rating of no more than 30 mA. Please contact an electrician for advice.
- Do not immerse the appliance, power cord or power plug in water or in other liquids.
- Always disconnect the power plug before assembling, after using, before disassembling, before cleaning the appliance, before leaving the room or if a fault occurs. Do not disconnect the plug by pulling on the cord.
- Do not squeeze or bend the power cord and do not rub it on sharp edges in order to prevent any damage. Keep the cord away from hot surfaces and open flames.

SAFETY AND SET-UP

- Do not use an extension cord with the appliance.
- Never use the appliance if the power cord or the appliance is damaged.
- Our GRUNDIG Household Appliances meet applicable safety standards; if the appliance or power cord is damaged, it must be repaired or replaced by the dealer, a service centre or a similarly qualified and authorized service person to avoid any dangers. Faulty or unqualified repair work may cause danger and risks to the user.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
- Always keep the appliance and its cord out of reach of children aged less than 8 years.
- The appliance should not be used by the following persons, including children: those with limited physical, sensory or mental capabilities and also those with a lack of experience and knowledge. This does not apply to the latter if they were instructed in the use of the appliance or if they use it under the supervision of a person responsible for their safety. Children should always be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance unattended when it is in use. Extreme caution is advised when the appliance is being used near children and people with limited physical, sensory or mental capabilities.
- Before using the appliance for the first time clean all parts carefully which come into contact with food. Please see details in the "Cleaning and care" section.
- Dry the appliance and all parts before connecting it to the mains supply and before attaching the accessories.

SAFETY AND SET-UP

- Do not operate the appliance without the ingredients in the bowl.
- Never place the appliance, attachments, power cord or plug on or near hot surfaces such as gas or electric burners or heated oven and never use them with hot liquids or food. Let hot food and liquids cool down to min. 80°C or less before using the appliance.
- Do not use the appliance for anything other than its intended use. It is designed for chopping food only.
- Never use the appliance longer than necessary for processing the food.
- Never use the appliance with damp or wet hands.
- Operate the appliance with delivered parts only.
- The appliance has been designed for processing food and liquids in common household quantities.
- Do not use the appliance if the blades are damaged or show signs of wear.
- Always use the appliance on a stable, flat, clean and dry surface.
- Make sure that there is no danger that the power cord could be accidentally pulled or that someone could trip over it when the appliance is in use.
- The appliance has to be positioned in such a way that the plug is always accessible.
- A spatula may be used to remove the food from the bowl. In order to do this, the appliance must be switched off before.
- This appliance is not suitable for dry or hard foods as this will quickly cause the blades to become dull.
- Remove bones and stones from food to prevent the blades and the appliance from damage.
- Make sure that the lid is seated properly on the chopping bowl before switching on the appliance.

SAFETY AND SET-UP

- To prevent overheating, do not use the appliance continuously for more than 10 seconds. After operating the appliance for 10 seconds, switch it off and wait for 1 minute to cool down if you would like to use it another 10 seconds.
- Hold the appliance firmly at the top of it while operating.
- Run appliance pulsewise instead of running it constantly.

AT A GLANCE

Dear Customer,

Congratulations on the purchase of your new GRUNDIG Chopper CH 6280 / CH 6280 W/T/L/R.

Please read the following user notes carefully to ensure you can enjoy your quality GRUNDIG product for many years to come.

A responsible approach!



GRUNDIG focuses on contractually agreed social working conditions with fair wages for both internal employees and suppliers. We also attach great importance to the efficient use of raw materials

with continuous waste reduction of several tonnes of plastic every year. Furthermore, all our accessories are available for at least 5 years.

For a future worth living.

For a good reason. Grundig.

Controls and parts

See the figure on page 3.

- A** Operation switch
- B** Base unit
- C** Inner lid
- D** Side placement section
- E** Upper blade
- F** Bowl
- G** Fixed shaft
- H** Lower blade

Recipe idea Salsa

Ingredients:

3 tomatoes, seeded

1 red onion

1 garlic clove

1 red bell pepper

1 jalapeño chilli pepper, seeded

2 tablespoons fresh cilantro

½ teaspoon salt

Preparation:

Peel the onion and place with the garlic, bell pepper and chilli pepper into the bowl of the appliance and pulse until the ingredients are coarsely chopped. Gradually add the tomatoes, cilantro and salt and pulse a few times until the ingredients are thoroughly mixed.

OPERATION

Notes

- Your chopper has been designed for processing small quantities of food and should not be used for any other purpose.
- Do not chop extremely hard ingredients such as coffee beans, nutmeg, grains, ice or bones. Remove stalks from herbs, shells from nuts and bones, tendons and gristle from meat.
- The appliance should be unplugged when not in use.

Preparation

- 1 Remove all packaging and sticker materials and dispose of them according to the applicable legal regulations.
- 2 Before using the appliance for the first time, clean all parts which come into contact with food (see the "Cleaning and care" section).
- 3 Cut the food into small pieces before using the appliance.

Chopping

Caution

- Do not touch the blades with your bare hands.
- 1 Place the upper blade **E** to the lower blade **H** and then on the fixed shaft **G** in the bowl **F**.
 - 2 Put the food that you would like to prepare in the bowl **F**.

Maximum quantities and processing time

Refer to the table for processing time and maximum quantities.

Ingredients	Maximum quantity	Processing time
Meat (diced)	100 - 150 g	10 - 20 pulses
Cheese (cut into small cubes)	100 - 150 g	5 - 10 pulses

- 3 Fit the inner lid **C** on the bowl **F**. Turn the inner lid **C** to the side placement section **D** and fix it, otherwise the base unit **B** will not be fit on the inner lid **C** and chopping process can't be operated.
- 4 Mount the base unit **B** on the inner lid **C** on the bowl **F**.
- 5 Insert the plug into the wall socket.
- 6 Press and hold the operation switch **A**.
 - The appliance starts operating.

Note

- You can press the operation switch **A** intermittently to activate the "PULSE" function of the appliance. You can achieve a better quality of chopping with the "PULSE" function.
- 7 Release the operation switch **A** to finish the operation. Disconnect the plug from the wall socket.

Notes

- Do not operate the appliance continuously for more than 10 seconds.
- 8 Remove the base unit **B** and the inner lid **C**. Take out the upper blade **E** from the lower blade **H** carefully. Remove food from the bowl **F**.

Caution

- Do not touch the blades with your bare hands. The blades are very sharp.

OPERATION

Ingredients	Maximum quantity	Processing time
Onions/Garlic (peeled & cut into 8 pieces)	150 - 200 g	5 - 10 pulses
Tomato (cut into 6 pieces)	250 - 300 g	10 -20 pulses
Fruits/Vegetables (cut into 8 pieces)	250 - 300 g	5 - 15 pulses

INFORMATION

Cleaning and care

Caution

- Never use petrol, solvents or abrasive cleaners, metal objects or hard brushes to clean the appliance.
- Do not touch the chopping blade with your bare hands. The blades are very sharp. Use a brush!

- 1 Turn the appliance off and disconnect it from the wall socket.
- 2 Let the appliance cool down completely.
- 3 Use a soft, damp cloth to clean the exterior of the base unit **B** and then wipe it dry.
- 4 The bowl **F**, upper blade **E**, lower blade **H** and inner lid **C** can be washed in the dishwasher on the upper shelf.
- 5 Before storing, clean and dry the upper blade **E** and lower blade **H**.

Caution

- Never put the base unit **B** or power cord in water or any other liquids and never hold them under running water.

Note

- Before using the appliance after cleaning, dry all parts carefully using a soft towel.

Storage

- If you do not plan to use the appliance for a long period of time, please store it carefully.

- Make sure that the appliance is unplugged and completely dry.
- Do not wrap the power cord around the appliance.
- Store it in a cool, dry place.
- Make sure the appliance is always kept out of the reach of children.

Environmental note

This product has been manufactured with high-quality parts and materials which can be re-used and are suitable for recycling.



Therefore, do not dispose of the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic appliances. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please consult your local authorities to find out where the nearest collection point is.

Help protect the environment by recycling used products.

Technical data



This product conforms to the European directives 2004/108/EU, 2006/95/EU, 2009/125/EU and 2011/65/EU.

Power supply: 220 V - 240 V~, 50/60 Hz

Power: 450 W

Technical and design modifications reserved.

FOR A GOOD REASON

GRUNDIG

Grundig Intermedia GmbH
Beuthener Strasse 41
D-90471 Nürnberg

www.grundig.com
72011 908 7100 15/27