

# **Portable GPS Tracker GP-102 User's Manual**

GKEEPER GPS-KEYCHAIN



www.canmore.com.tw

## Chapter 1 GP-102 Overview

- The GP-102 is the best available portable GPS tracker and sports analyzer with the most functions with the simplest operations.
- The SiRFstarIV<sup>TM</sup> navigation processor is equipped to deliver the best positioning quality.
- The GP-102 sports tracker provides a wide variety of sports modes to support analysis with different software analyzers.
- The GP-102 allows users to retrieve previous tracks.
- The GP-102 provides route planning or sports tracking functions.
- The GP-102 comes with versatile additional functions, such as pedometer, barometer, weather station, level, etc.



# **Functions of Keys**

## **Function Tree Diagram of GP-102**

Using the GP-102 for the first time, press and hold the right key to turn the GP-102 on and the following screen will appear:



# Chapter 2 Sports Mode and Tracker (Options: Press and hold the right key for 2-3 seconds to enter the following pages)



Press and hold the right key for 2-3 seconds to enter the Sports Mode.



Sports and Travel Options

The following *results* examples are based on the jogging mode . Press and hold the right key *results* for 2-3 seconds to enter the jogging mode :





Jogging Mode. GPS Signal Meter. Charging
 As shown on the left screen, Distance is 320m, Average Speed is
 4.5km/h and the sports Duration is 4 minutes and 14 seconds.

## Select Save as POI. (Press and hold the right key for 2-3 seconds to enter POI setup)



Select Save as POI and press and hold the right key for 2-3 seconds to enter POI setup.

Select Save as POI and press and hold the right key for 2-3 seconds to enter POI setup and the following screens will appear:



Available types of POIs.

After selecting a POI, press and hold the right key to go to the previous page.



## Select Stop Log and press and hold the right for 2-3 seconds to enter Stop Log setup.



Switch screen to



F Jogging Mode off

GPS off

**Data 2 :** 







As shown on the left screen, Speed is 0 km/h, Average Speed is 8km/h and Maximum Speed is 9.2 km/h.

### Select Save as POI. (Press and hold the right key for 2-3 seconds to enter POI setup)



Select Save as POI and press and hold the right key for 2-3 seconds to enter POI setup.

Select Save as POI and press and hold the right key for 2-3 seconds to enter POI setup and the following screens will appear:



Available types of POIs.

After selecting a POI, press and hold the right key to go to the previous page.



## Select Stop Log and press and hold the right key for 2-3 seconds to enter Stop Log setup



Switch screen to



✗ Jogging Mode off

GPS off

Data 3 :



Press the right key once to switch screen

14:15:48	₿₰₭₮₢₪			
Pace	Pace			
	/km			
Avg Pace	Min Pace			
7.5	6.5			

14:15:48 Pace	₿₰₭₮₿₢₫
	- /km
AvgPace	Min Pace
7.5	6.5

As shown on the left screen, Pace is hours/km, Average Pace is 7.5 hours/km and Minimum Pace is 6.5 hours/km.

### Select Save as POI. (Press and hold the right key for 2-3 seconds to enter POI setup)



Select Save as POI and **press and hold the right key for 2-3 seconds to enter POI setup.** 

Select Save as POI and **press and hold the right key for 2-3 seconds to enter POI setup and the following screens will appear:** 



Available types of POIs.

After selecting a POI, **press and hold the right key to go to the previous page**.



## Select Stop Log and press and hold the right key for 2-3 seconds to enter Stop Log setup.



Switch screen to



✗ Jogging Mode off

GPS off

Data 4:



Press the right key once to switch screens





As shown on the left screen, Altitude is 60.3m, Total Ascend is 8.4 and Gradient is 0%.

#### Select Save as POI. (Press and hold the right key for 2-3 seconds to enter POI setup)



Select Save as POI and **press and hold the right key for 2-3 seconds to enter POI setup.** 

Select Save as POI and **press and hold the right key for 2-3 seconds to enter POI setup and the following screens will appear:** 



Available types of POIs.

After selecting a POI, **press and hold the right key to go to the previous page.** 



## Select Stop Log and press and hold the right key for 2-3 seconds to enter Stop Log setup.



Switch screen to



𝔭 Jogging Mode off

GPS off





Press the right key once to switch screens



14:33:13**) F \[ [2]** Calories **57.1** Kca Steps Temp. 25 28°C

As shown on the left screen, Calories consumed is 57.1, Steps are 25 and Temperature is 28°C.

#### Select Save as POI. (Press and hold the right key for 2-3 seconds to enter POI setup)

Save as POI Select Save as POI and press and hold the right key for 2-3 seconds to enter POI setup.

Select Save as POI and **press and hold the right key for 2-3 seconds to enter POI setup and the following screens will appear:** 



After selecting a POI, **press and hold the right key to return to the previous page.** 



## Select Stop Log and press and hold the right key for 2-3 seconds to enter Stop Log setup.



Switch screen to



𝔭 Jogging Mode off

GPS off

Data 6 :



14:34:08 ℱ \/ ● 100 m



A POI has been selected.

As shown on the left screen, the object is moving.

#### Select Save as POI. (Press and hold the right key for 2-3 seconds to enter POI setup)



Select Save as POI and **press and hold the right key for 2-3 seconds to enter POI setup.** 

Select Save as POI and **press and hold the right key for 2-3 seconds to enter POI setup**, **and the following screens will appear:** 



Available types of POIs.

Select Stop Log and press and hold the right key for 2-3 seconds to enter Stop Log setup.



Switch screen to



𝔭 Jogging Mode off

GPS off

After selecting, **press and hold the right key to return to the previous page.** 

143	4:01	1	1	15
9	0		Ħ	+
	-	4		-
100 m -				

Save as POI Stop Log Map Scale Select Map Scale and press and hold the right key for 2-3 seconds to enter Map Scale.

Map Scale 5 6 0

After selecting, press and hold the right key to go to the previous page.

14:3 ©	4:	30	32	F	Y,	(	2
		1		)	-		
100 m -					-		



14:3 ©	4:08 7 `	
	R	
100 m -		

Press the right key once to switch screens.

1.	4:3	5:3	53	٩ŗ	Z
N. Contraction	24	` <b>4</b> 9	<u>'09</u>	.44	N
1	21	01	20	.98	E
		1			
14	231	25182	9 <sub>32</sub> 16	30 <sup>12</sup> 0	000



The GPS status is as shown on the left screen.

Select Save as POI. (Press and hold the right key for 2-3 seconds to enter POI setup)



Select Save as POI and **press and hold the right key for 2-3 seconds to enter POI setup.** 

Select Save as POI and **press and hold the right key for 2-3 seconds to enter POI setup and the following screens will appear:** 



After selecting, **press and hold the right key to go to the previous page.** 



## Select Stop Log and press and hold the right for 2-3 seconds to enter Stop Log setup.





𝔭 Jogging Mode off

GPS off

On the left screen below, press the right key once to return to the first screen as shown on the right.

(Z

14:35:35 🞢 🖌 🛃	13:48:52 🎢 🕻 🖾 Distance
1210120.98 E	<b>320</b> m
	Avg Spd Duration
14 <sup>22</sup> 31 <sup>25</sup> 18 <sup>29</sup> 32 <sup>16</sup> 30 <sup>12</sup> 00 <sup>00</sup>	4.0 0.044

Users can retrieve the POI to CANWAY (software) for further analysis.

# **Chapter 3** Trip Planning (Select and press and hold the right key for 2-3 seconds to enter and set trip planning).



1. First, edit the required routes on the CanWay Planner.

2. Upload data to the GP-102 with the Sync function.



#### 3. Route upload in progress.



4. Press and hold the right key to enter Trip Planning. Next, the route uploaded from the PC is shown on the screen as Test 1.



5. The GP-102 receives GPS signals in open sky. After your position is detected, press and hold the right key to enter route Test 1.

105	5:07	
0	<b>A</b>	
	1380	
500 m	0 60 00	

6. Press and hold the right key to call out Save as POI and Map Scale.

10:55:07 Yıll) Ə	Save as POI Map Scale	Select Save as POI to save data as a POI.
500 m	Save as POI Map Scale	Select Map Scale to adjust map display scale

7. Press and hold the right key to enter Map Scale and press the left and right keys to adjust the map scale.

10:57:51 Yill 🏧	Map Scale
e 162	5
-Save as POI	6
Map Scale	0

8. After adjusting the map scale, the route planned in Test 1 will be displayed on the map. If a POI is set in the CanWay Planner, it will be displayed on the map at the same time.

11:	01	:08	ľ	(100
۲	Q	2		1
	1	$\nabla$	1	
		-		
100 m	+			100

15:34:20 📼

Press and hold the left key for 2-3 seconds to return to Home.

# Chapter 4 Geotag Mode (Select ) and press and hold the right key for 2-3 seconds to enter setup as shown below.)



Press and hold the right key for 2-3 seconds to enter POI setup.



After setting a POI, turn the GPS on 📶.

**♣0411-1401**: The POI set at 14:01 on April 11.

Select New POI: **Press and hold the right key for 2-3 seconds to enter POI setup** 



Select POI type. Select **Press and hold the right key for 2-3 seconds.** 



The direction, distance, and altitude of POI set at 15:45 on April 11 from the present location.

15:47	7:43	<u>n</u>
	۲	
100 m —		

The relative position of the POI and current location.

Press and hold the right key for 2-3 seconds to enter Map Scale setup.



Press and hold the left key for 2-3 seconds to return to the previous screen.



The new POI **★0411-1545** has been added to the GP-102.

Press and hold the left key for 2-3 seconds to return to Home.



# Chapter 5 Historical Data (Select and press and hold the right key for 2-3 to enter setup as shown below.)



Press and hold the right key for 2-3 seconds to enter Historical Data Mode.



Select 2-3 and press and hold the right key for 2-3 seconds to enter the historical data mode.

10:32:21	7 (5)
★0412	-1008
Distance	466 m
Duration	0:0551
Ave Spd	4.8kph
Avg.Pace	12.5/km

Data include Distance, Duration, Average Speed and Average Pace.

Press the right key once to go to the next page.

10:37:04	
★0412	-1008
꿩 Speed	5.6kph
W Pace	10. <u>8</u> /km
Ascent	.5.m
Steps	488

Data include Best Speed, Best Pace, Ascent and Steps.

Press the right key once to go to the next page.

10:41:39	(000)
★0412-	1008
Calories	19.8Kcal

Data include Calories.

Press the right key once to go to the next page.



Please refer to the track on the left screen. **Press and hold the right key for 2-3 seconds to enter the Follow Historical Data mode.** 

Follow Map Scale



Select Follow and press and hold the right key for 2-3 seconds to enter the Follow Historical Data mode



Select Map Scale and press and hold the right key for 2-3 seconds to enter the Map Scale setup.

Мар	Scale
(* - {	5
	6
	0



When the  $\blacktriangle$  Follow sign appears, follow the track as shown on the left screen to return to the origin.

Press and hold the left key for 2-3 seconds to return to Home.



# Chapter 6 Extra Function Mode (Select and press and hold the right key to enter setup.)



When your compass appears on the screen, press and hold the right key for 2-3 seconds to calibrate the compass.

Rotate as Shown + 14 s Rotate the GP-102 as shown for 20 seconds.

Press and hold the left key for 2-3 seconds to return to the previous page.

Press the right key to display the following.



The atmospheric pressure is shown on the Barometer. Press the right key for 2-3 seconds to calibrate the altimeter.



#### Press and hold the left key for 2-3 seconds to go to the previous page.

Press the right key to display the following:



Weather conditions.

Press the right key to display the following:



When the Pedometer appears, press and hold the right key for 2-3 seconds to calibrate the Pedometer.



Press and hold the left key for 2-3 seconds to go to the previous page.

Press the right key to display the following:



Water Level.

# Chapter 7 Setup (Select and press and hold the right key to enter setup)



1. Select **Log** to display the following:



Select Log Rule and press and hold the right key.



#### Select Log Rule: by Time and by Distance

Ø 1 <b>S</b>	0200 m
0 5 \$	□500 m
□ 10 <b>S</b>	Ø 5 m

Select Delete All Log to clear all log data.

#### Press and hold the left key for 2-3 seconds to go to the previous page.

2. Select Auto Pause to display the following:

14:59:19	(100
Auto Pau	lseે
Ø Off	
Stopped	
Custom	
0.4351.04.040.00002	

Off: Turn Auto Pause off.

Stopped: Pause when speed is below 1.5kmh.

Custom: Users can customize speed and related pause.



3. Select **User Profile** to display the following:



4. Select **Calibration** (altimeter and compass) to display the following:



### Select Altimeter and press and hold the right key to display the following:





Select Compass and press and hold the right key to display the following:



Rotate the GP-102 as shown for 20 seconds.

5. Select GPS (set GPS status) to display the following:



Differential GPS: Turn Differential GPS on or off. Self-AGPS: Turn Self-AGPS on or off.

	OFF
0	ON
	OFF

Press and hold the left key for 2-3 seconds to go to the previous page.

6. Select System (set System status) to display the following:

15:57:51 🖉	<b>m</b> 15:58:59 (mm
System	System
Display	Language
Power Down	Factory Reset
Time	1990). 19
Units	

A. Select Display and press and hold the right key for 2-3 seconds to enter setup.



Select Backlight press and hold the right key for 2-3 seconds to enter Backlight setup.

Always ON 10 s 30 s

Available options in include Always On, 10 seconds, and 30 seconds.

Select Contract and press and hold the right key for 2-3 seconds to enter Contrast setup.

Contras	t

Set display contrast.

## Press and hold the left key for 2-3 seconds to go to the previous page.

B. Select Power Down and press and hold the right key for 2-3 seconds to enter setup.



Set G-Sensor to on and off; *i.e.*, the system will enter the sleep mode if there is no motion for 5 minutes.

**Canmore Corporation** 

#### Press and hold the left key for 2-3 seconds to go to the previous page.

C. Select Time and press and hold the right key for 2-3 seconds to enter setup.



Select Format and press and hold the right key for 2-3 seconds to enter Time Format setup

24 Ho	ur
12 Ho	un

Select Daylight Saving and press and hold the right key for 2-3 seconds to enter Daylight Saving setup.

	OFF	
0	ON	

#### Press and hold the left key for 2-3 seconds to go to the previous page.

D. Select Units press and hold the right key for 2-3 seconds to enter setup.

⊠ km,m,kg □ mi,ft,lb

Options include: km/m/kg and mi/ft/lb.

#### Press and hold the left key for 2-3 seconds to return to the previous page.

E. Select Language and press and hold the right key for 2-3 seconds to enter setup.

☑ English
 □ 繁體中文
 Select your language.

#### Press and hold the left key for 2-3 seconds to go to the previous page.

F. Select Factory Reset and press and hold the right key for 2-3 seconds to enter setup.

NO	
YES	

Select YES to reset all settings to the default settings. Next, turn off the power and restart GP-102.

# Appendix

The package includes the following items: GP-102 Software Disc/ User's Manual USB Cable

# Precautions

- Keep the GPS receiver away from children's reach. It contains small parts that may come off the unit and cause suffocation.
- Follow all safety regulations for electronic devices and turn off electrical devices or RF products when requested.
- This product uses a lithium battery. Keep away from fires and high temperatures.
- Improper disposal of waste equipment or battery may cause explosion.
- Dispose of or recycle the battery as instructed. Please call your local recycling centers for details.

## **Charging the Battery**

It takes about two hours to charge the battery to full level. First, connect the mini-USB connector of the USB cable to the USB port on the GP-102. Next, connect the end of the USB cable to an adaptor or the USB port of your PC or laptop. When charging is in progress, the charging indicator (blue) will always be illuminated. When the battery is full, the charging indicator will turn off. Then, remove the USB cable from the GP-102.



# **Battery Warning**

If you do not follow the instructions below, you may risk shortening the battery life and causing a fire, chemical burn, electrolyte leakage or other damage.

- Operating temperature :-10°C to 60°C (-4°F to 140°F) Charging temperature: 0°C to 45°C (32°F to 113°F), using GP-102.
- 2. Storage temperature:  $-20^{\circ}$ C to  $65^{\circ}$ C ( $14^{\circ}$ F ~  $113^{\circ}$ F).

# **Charging Power Supply**

To ensure safety, please charge your GP-102 with the following power sources:

- Standard PC or laptop USB port.
- Car USB adaptor: Input 12V; Output 5.0V.
- Indoor USB adaptor: Input 110/220VAC; Output 5.0V.

# FAQ

- Q1: Why can't I find my position with my GP-102?
- A1: Please make sure that you are using your GP-102 in open sky and the LCD screen is facing upward.
- Q2: Why does my GP-102 sometimes work very fast and sometimes very slowly?
- A2: If you have used your GP-102 in open sky within the past two hours, it works really fast; otherwise, you will need to wait for 30-40 seconds to find your position. It will take a longer time (a few minutes) if you are under a tree shade, inside a tall building, or in places with weak GPS signal.
- Q3: Why does the compass work incorrectly?
- A3: First, calibrate the compass on the GP-102 and make sure that there are no metal objects around. The GP-102 works with a magnetic sensor which is easily affected by metals.
- Q4: Why is the direction incorrect inside a slowly moving car?
- A4: When the speed is below 10km/h, the GP-102 will calculate the direction of the destination with the built-in digital compass. If you are inside a car, the metal body of the car may interfere with the compass operations. When the speed is over 10km/h, the GP-102 will calculate the direction of the GPS. By placing the GP-102 horizontally in the car, it will point to the destination correctly.
- Q5: How does the satellite signal level meter work?
- A5: The strength of the satellite signals affects positioning accuracy. When the signal is strong, the GP-102 can find your position more accurately. In places with weaker signals, you may need to wait some time for the signal to ensure positioning accuracy.
- Q6: Will the GP-102 store my POIs after I turn it off?
- A6: You may turn the GP-102 off to save power, all POIs will be stored. When you turn it on again, the GP-102 will display the last mode you used. Even if the battery is out, the GP-102 will store all settings.

# **Concerning of Poor GPS Signal**

<ul> <li>Inside the tunnel, GPS signal is blocked.</li> </ul>
<ul> <li>Beside some buildings, GPS signal</li> <li>is low or disturbed.</li> </ul>
<ul> <li>Covers above, GPS signal are blocked.</li> </ul>
<ul> <li>Inside forests, or too many covers,</li> <li>GPS signal is low or disturbed.</li> </ul>
<ul> <li>Inside buildings, GPS signal is blocked.</li> </ul>

It is possible unable to receive GPS signal or signal low in these places:

- If you use the USB GPS Receiver inside the car, some anti-sunlight windscreen film will make the GPS signal degraded or signal blank.
- GPS satellite is owned by America military; sometimes they will tune-down the accuracy by some reason. In such cases, the GPS position may not fixed exactly.

-



Used equipment must be disposed of in compliance with current environmental protection regulations.

You should return it to your reseller or dispose of it in an approved recycling centre.

DECLARATION: We hereby declare that this product complies with essential requirements and other related requirements, of the 1999/5/EC R&TTE directive and particularly with article 3 sections 1a, 1b and 3.

# Rohs (e fœ

# Warranty Card

Thank you for purchasing CANMORE products. The GP-102 is a portable GPS tracker independently developed by CANMORE. Before shipping out of the factory, each unit has been tested to comply with related quality and regulatory requirements. CanMore provides the following warranty for this product.

- 1. CanMore shall provide one year free repair and maintenance service as of the date of purchase for product failures from normal use.
- 2. The exceptions of the warranty shall include:
  - A. Force majeure, such as natural disasters, fire, earthquake, etc and human negligence.
  - B. Users have disassembled and/or modified the unit.
  - C. Natural wear and tear of components and consumables.
  - D. Failure and/or damage due to handling and being dropped after purchase.
  - E. Failure and/or damage after warranty has expired.
  - F. Alteration or forgery of any part of this warranty.
- 3. If you have any problems or need to have your GP-102 repaired, please contact your dealer or CanMore.