

# **TOSHIBA**

Leading Innovation >>>

## **ON-LINE MANUAL**

40L544\*DG

LED Backlight LCD Satellite TV

During the life of your TV firmware updates will be made available to ensure that your TV maintains optimum performance.

You can download the latest version of firmware from

[www.toshiba-om.net/firmware.php](http://www.toshiba-om.net/firmware.php)

Some features listed in this document are limited due to local legislation and may not be available in all countries.

# Contents

Safety Precautions .....	4	Renaming a Channel .....	22
Air Circulation .....	4	Locking a Channel .....	22
Heat Damage .....	4	Viewing Info Banner, Electronic Programme Guide .....	23
Mains Supply .....	4	Viewing Info Banner .....	23
Warning .....	4	Electronic Programme Guide .....	23
Do .....	4	Language Selection .....	24
Do not .....	4	Language Settings .....	24
Installation and Important Information .....	5	Preferred .....	24
EXCLUSION CLAUSE .....	5	Current .....	24
Important safety information .....	6	Digital Settings - Parental Control, Menu Lock, Set PIN .....	25
Fitting or Removing the pedestal stand .....	7	Viewing Parental Control Menu .....	25
The Remote Control .....	8	Menu Lock .....	25
Inserting Batteries and Effective Range of the Remote Control .....	8	Maturity Lock .....	25
Connecting External Equipment .....	9	Child Lock .....	25
Connecting an HDMI® or DVI Device to the HDMI Input .....	10	Set PIN .....	25
To Connect an HDMI Device .....	10	Configuring Picture Settings .....	26
To Connect a DVI Device .....	10	Configuring Picture Settings .....	26
Connecting a Computer .....	11	Operating Picture Settings Menu Items .....	26
To Connect a Computer .....	11	3D Settings .....	26
Connecting to a DVD Player via YPbPr .....	11	Mode .....	26
Connecting a USB Memory .....	11	Contrast .....	26
To Connect a USB Flash Drive .....	11	Brightness .....	26
Connecting a home network .....	12	Sharpness .....	26
Power Save Mode .....	13	Colour .....	26
Environmental Information .....	13	Power Save Mode .....	26
Controlling the TV .....	14	Backlight .....	26
Switching on .....	14	Noise Reduction .....	26
Using the Remote Control .....	14	Advanced Settings .....	26
Using the Controls on the TV .....	14	Reset .....	27
Initial Installation .....	15	Changing Picture Format .....	28
Auto Tuning .....	18	Configuring PC Picture Settings .....	29
Auto Tuning .....	18	PC Picture Settings (*) .....	29
Auto Channel Scan Menu Operation .....	18	PC Picture controls .....	29
Manual Tuning, Analogue Fine Tuning .....	19	PC Position .....	29
Digital Aerial Manual Search .....	19	Autoposition .....	29
Digital Cable Manual Search .....	19	H Position .....	29
Analogue Manual Search .....	19	V Position .....	29
Digital Satellite Manual Search .....	19	Dot Clock .....	29
Analogue Fine Tune .....	20	Phase .....	29
Clear Service List (*) .....	20	Configuring Sound Settings .....	30
General Operation .....	21	Configuring Sound Settings .....	30
Stereo and Bilingual Transmissions .....	21	Operating Sound Settings Menu Items .....	30
Displaying Subtitles .....	21	Volume .....	30
Viewing Main Menu .....	21	Equalizer (Only for speaker) .....	30
Controlling Volume and Muting Sound .....	21	Balance (Only for speaker) .....	30
Selecting Programme Positions .....	21	Headphone .....	30
Standby Notifications .....	21	Sound Mode .....	30
Channel List, Sorting Programmes, Programme Locking .....	22	AVL .....	30
Viewing Channel List .....	22	Headphone/Lineout .....	30
Moving a Channel .....	22	Dynamic Bass .....	30
Deleting a Channel .....	22	Surround Sound .....	30
		Digital Out .....	30

# Contents

Settings Menu Operation, Conditional Access .....	31	3D Settings .....	41
Configuring Your TV's Settings .....	31	3D Viewing Information.....	41
Viewing Settings Menu .....	31	USB Record Feature .....	43
Using a Conditional Access Module .....	31	Instant Recording.....	43
Viewing Conditional Access Menu (*).....	31	Timeshift Recording.....	43
Setting Timers.....	32	Watching Recorded Programmes .....	43
Timers .....	32	Slow Forward .....	43
Setting Sleep Timer .....	32	About the USB Record Feature .....	43
Setting Programme Timers .....	32	Using Media Browser .....	44
Adding a Timer.....	32	Manual Start .....	44
Editing a Timer.....	32	Auto Start.....	44
Deleting a Timer.....	32	Playing MP3 Files.....	45
Recording Configuration.....	33	Viewing JPEG Files .....	45
Recording Configuration.....	33	Slideshow Feature .....	46
Setting Date/Time.....	34	Video Playback .....	46
Configuring Date/Time Settings.....	34	Recordings.....	47
Configuring Source Settings.....	34	Media Browser Settings.....	47
Input Selection .....	34	Using MENU button in Media Browser Mode .....	48
Configuring Satellite Settings.....	35	To Close the Media Player.....	48
Other Controls .....	36	Analogue Only Text Services.....	49
Configuring Other Settings - General .....	36	Analogue Text Services .....	49
Operation .....	36	Using Text Button -TEXT .....	49
Menu Timeout.....	36	Accessing Sub-Pages .....	49
Scan Encrypted Channels .....	36	Revealing Concealed Text.....	49
Hbb TV.....	36	Holding a Page .....	49
Blue Background .....	36	To display an initial page.....	49
Software Upgrade.....	36	Appendix A: PC Input Typical Display Modes.....	50
Application Version .....	36	Appendix B: AV and HDMI Signal Compatibility (Input Signal Types).....	51
Hard of Hearing .....	36	Appendix C: PIN Information.....	52
Audio Description.....	37	Appendix D: Supported File Formats for USB Mode.....	53
Auto TV Off .....	37	Cautions for 3D.....	54
Standby Search (optional) .....	37	Important information for 3D viewing.....	54
Bisskey .....	37	Cautions and Other Information for 3D.....	55
Store Mode .....	37	Notes on watching the TV.....	55
Media Renderer.....	37	Specifications and Accessories .....	56
Power Up Mode .....	37	License Information .....	57
Virtual Remote .....	37	Q & A Section .....	58
CEC .....	37		
CEC Auto Power On.....	37		
Network Settings, Portal, Internet Browser and YouTube .....	38		
Configuring Network Settings .....	38		
First enter to Toshiba Portal.....	38		
Using the Toshiba Portal.....	38		
Using the Internet Browser .....	38		
Using YouTube™ .....	39		
Using 3D Feature .....	40		
Operating the 3D Mode "3D" .....	40		
LITHIUM BATTERY CAUTION .....	40		
Using the 3D Eyewear.....	40		
Viewing 3D images .....	40		
Changing 3D format from the Quick menu .....	40		
Watching 3D images in 2D format.....	40		
Watching 2D images in 3D format.....	40		
Switching left and right images .....	40		

## Safety Precautions

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products.

### Air Circulation

Leave more than 10cm around all edges when wall mounting the television to allow adequate ventilation. This will prevent overheating and possible damage to the television. Dusty places should also be avoided.

### Heat Damage

Damage may occur if the television is left in direct sunlight or near a heater. Avoid places subject to extremely high temperatures or humidity, or locations where the temperature is likely to fall below 5°C (41°F).

### Mains Supply

The set should be operated only from a 220-240 V AC 50 Hz outlet. DO ensure that the television is not standing on the mains lead. DO NOT cut off the mains plug from this equipment, this incorporates a special Radio Interference Filter, the removal of which will impair its performance. It should only be replaced by a correctly rated and approved type. IF IN DOUBT PLEASE CONSULT A COMPETENT ELECTRICIAN.

### Warning

To prevent the spread of fire, keep candles or other open flames away from this product at all times.



### Do

**DO** read these operating instructions before you attempt to use the equipment.

**DO** ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturers' instructions. Switch off and withdraw the mains plug before making or changing connections.

**DO** consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

**DO** be careful with any glass panels or doors on equipment.

### Do not

**DON'T** remove any fixed cover as this may expose dangerous voltages.

**DON'T** obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage.

**DON'T** allow electrical equipment to be exposed to dripping or splashing or objects filled with liquids.

**DON'T** place hot objects or naked flame sources, such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires.

**DON'T** use makeshift stands and use the stand manufacturers supplied screws.

**DON'T** leave equipment switched on when it is unattended, unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off by withdrawing the plug, make sure your family know how to do this. Special arrangements may need to be made for people with disabilities.

**DON'T** continue to operate the equipment if you are in any doubt about it working normally, or it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

**WARNING** - excessive sound pressure from earphones or headphones can cause hearing loss.

**ABOVE ALL - NEVER let anyone, especially children, push or hit the screen, push anything into holes, slots or any other openings in the case.**

**NEVER guess or take chances with electrical equipment of any kind - it is better to be safe than sorry.**


**THE MAINS PLUG IS USED AS A DISCONNECTING DEVICE AND THEREFORE SHOULD BE READILY OPERABLE.**

*Note: Interactive video games that involve shooting a "gun" type of joystick at the on-screen target may not work with this TV.*

The illustrations and the OSD in this operation manual are for explanation purposes and may vary slightly from the actual operations.

# Installation and Important Information

## Where to install

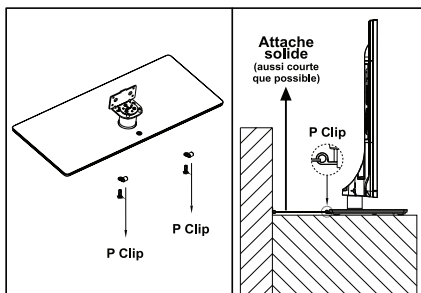

La position de clip en "P" du téléviseur dépend du modèle.

\* Button and stand style is dependent on model.

Locate the television away from direct sunlight and strong lights. Soft, indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen.

Place the TV on a stable, level surface that can support the weight of the TV. In order to maintain stability and prevent it falling over, its recommended to secure the TV to a wall using a sturdy tie on the back of the stand.

The LCD display panels are manufactured using an extremely high level of precision technology; however, sometimes some parts of the screen may be missing picture elements or have luminous spots. This is not a sign of a malfunction.

Make sure the television is located in a position where it cannot be pushed or hit by objects, as pressure will break or

damage the screen. Also, please ensure that small items are not inserted into slots or openings in the case.



Avoid using chemicals (such as air refreshers, cleaning agents, etc.) on or near the TV pedestal.

Studies indicate that plastics may weaken and crack over time from the combination effects of chemical agents and mechanical stress (such as weight of TV). Failure to follow these instructions could result in serious injury and/or permanent damage to TV and TV pedestal.

Cleaning the screen and cabinet...

Turn off the power, and clean the screen and cabinet with a soft, dry cloth. We recommend that you do not use any proprietary polishes or solvents on the screen or cabinet as this may cause damage.

## Please take note

The digital reception function of this television is only effective in the countries listed in the "Country" section during the first time installation menu. Depending on country/area, some of this television's functions may not be available. Reception of future additional or modified services cannot be guaranteed with this television.

If stationary images generated by 4:3 broadcasts, text services, channel identification logos, computer displays, video games, on screen menus, etc. are left on the television screen for any length of time, they could become conspicuous. It is always advisable to reduce both the brightness and contrast settings.

Very long, continuous use of the 4:3 picture on a 16:9 screen may result in some retention of the image at the 4:3 outlines. This is not a defect of the LCD TV and is not covered under the manufacturer's warranty. Regular use of other size modes will prevent permanent retention.

## EXCLUSION CLAUSE

Toshiba shall under no circumstances be liable for loss and/or damage to the product caused by:

- i) fire;
- ii) earthquake;
- iii) accidental damage;
- iv) intentional misuse of the product;
- v) use of the product in improper conditions;
- vi) loss and/or damage caused to the product whilst in the possession of a third party;
- vii) any damage or loss caused as a result of the owner's failure and/or neglect to follow the instructions set out in the owner's manual;
- viii) any loss or damage caused directly as a result of misuse or malfunction of the product when used simultaneously with associated equipment;

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.

## Important safety information

- Any function related to the digital television (with the DVB logo) is available only within the country or area where such signals are transmitted. Verify with the salesperson if it is possible to receive a DVB - T/C/S/S2 signal in the area where you live.
- Even if the television conforms to the required DVB - T/C/S/S2 specifications, the compatibility with future digital DVB - T/C/S/S2 transmissions is not guaranteed.
- Some digital television functions may not be available in certain countries.
- The DVB - T/C/S/S2 system present in this device, allows reception of both FTA (Free To Air) and Encrypted channels.
- Note; Encrypted channels require a specific encryption system to view, which may not be available in certain countries.
- DVB is a registered trademark of the DVB Project. The DVB logo indicates that the product is compliant with European Digital Broadcasting.

## IMPORTANT INFORMATION

### TV Installation

- Do not stand the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.
- Always hold the plug when disconnecting the unit from the socket outlet. Do not pull on flex. The flex can become damaged and cause a short circuit.
- Use a soft, dry cloth to clean the unit.
- Set up unit so that no one will trip over the flex.
- If you intend to wall mount the unit, contact the shop where you purchased the unit for advice, and leave the installation work to professionals. Improper installation can cause damage and/or injuries.
- To protect the unit during a thunder storm, unplug the AC power cord and disconnect the aerial, cable and satellite decoder/systems etc.

**Caution:** Do not touch the aerial or satellite connector.


- The unit becomes warm when in operation. Do not place any covers or blankets on the unit in order to prevent overheating.
- The ventilation holes should not be blocked. Do not set up near radiators. Do not place in direct sunshine.
- Moisture condensation occurs in the following situations:
  - When you move the unit from a cold place to a warm place.
  - When you use the unit in a room where the heater was just turned on.
  - When you use the unit in an area where cold air from an air conditioner directly hits the unit.
  - When you use the unit in a humid place.
- Never use the unit when moisture condensation could occur.
- Using the unit when moisture condensation exists may damage its own internal parts. Allow two or three hours, the unit will warm up and moisture will be evaporated before switching on.

## Fitting or Removing the pedestal stand

### Fitting or Removing the pedestal stand

- (1) Carefully lay the front of the unit face down on a flat, cushioned surface with the stand hanging over the edge.
- (2) To fit the stand use the screws supplied.
- or
- (3) Remove the screws fixing the pedestal stand
- (4) After the screws are removed, hold the pedestal stand in place, then remove the pedestal stand and the plastic moulding from the TV.

**Note:** Extreme care should always be used when removing the pedestal stand to avoid damage to the LCD panel.

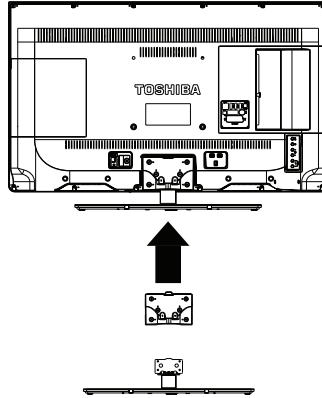

For 40L544\*DG models


### When using a Wall Bracket

Please use a wall bracket appropriate for the size and weight of the LCD TV and two people are required for the installation.

- (1) Unplug and remove any cables and/or other component connectors from the rear of the TV.
- (2) Carefully lay the front of the unit face down on a flat, cushioned surface such as a quilt or blanket.
- (3) Follow the instructions provided with your wall bracket. Before proceeding, make sure the appropriate bracket(s) are attached to the wall and the back of the TV as described in the instructions provided with the wall bracket.

# The Remote Control

Simple at-a-glance reference of the remote control. The supplied type is model dependant.

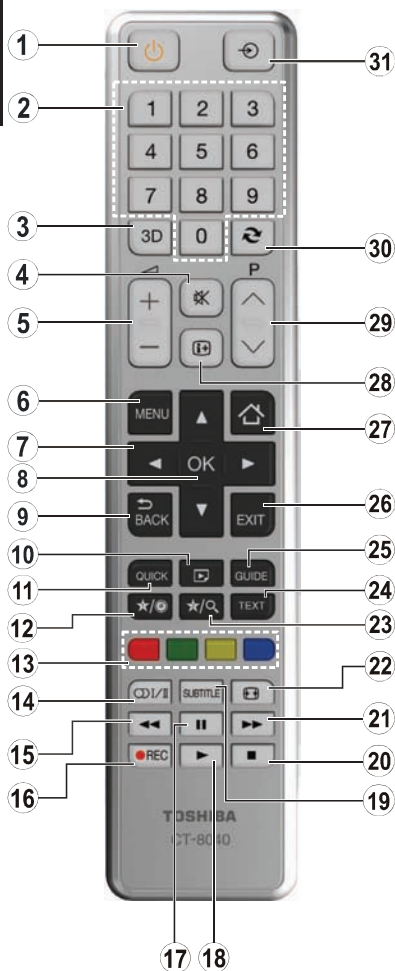

1. Standby
2. Numeric buttons
3. 3D Settings
4. Mute
5. Volume Up / Down
6. Menu on-off
7. Navigation buttons (Up/Down/Left/Right)
8. Okay (Confirm) / Hold (in TXT mode) / Channel List
9. Return / Index page (in TXT mode)
10. Media Browser
11. Quick Menu
12. My button 1(\*)
13. Coloured buttons
14. Mono/Stereo - Dual I-II / Current Language (in DVB channels)
15. Rapid reverse
16. Programme recording
17. Pause / Timeshift recording
18. Play
19. Subtitle on-off (in Media Browser mode and in DVB channels)
20. Stop
21. Rapid advance
22. Image size
23. My button 2(\*)
24. Teletext / Mix (in TXT mode)
25. Electronic programme guide(in DVB channels)
26. Exit
27. Internet portal
28. Info / Reveal (in TXT mode)
29. Programme Down / Page up - Programme Up / Page down
30. Previous programme
31. AV / Source selection

## (\*) MY BUTTON 1 & MY BUTTON 2

These buttons may have default functions depending on the model. However you can set a special function to these buttons by pressing on them for five seconds when on a desired source or channel. A confirmation message will be displayed on the screen. Now the selected MY BUTTON is associated with the selected function.

Note that if you perform first time installation, MY BUTTON 1&2 will return to their default function.

## Inserting Batteries and Effective Range of the Remote Control



Remove the back cover to reveal the battery compartment and make sure the batteries are inserted the right way round. Suitable battery types for this remote are AAA, IEC R03 1.5V.

Do not combine a used, old battery with a new one or mix battery types. Remove exhausted batteries immediately to prevent acid from leaking into the battery compartment. Dispose of them in a designated disposal area.


**Warning:** Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

The performance of the remote control will deteriorate beyond a distance of five metres or outside an angle of 30 degrees from the IR receiver. If the operating range becomes reduced the batteries may need replacing.



# Connecting External Equipment

Before connecting any external equipment, remove the mains plug from the wall socket.

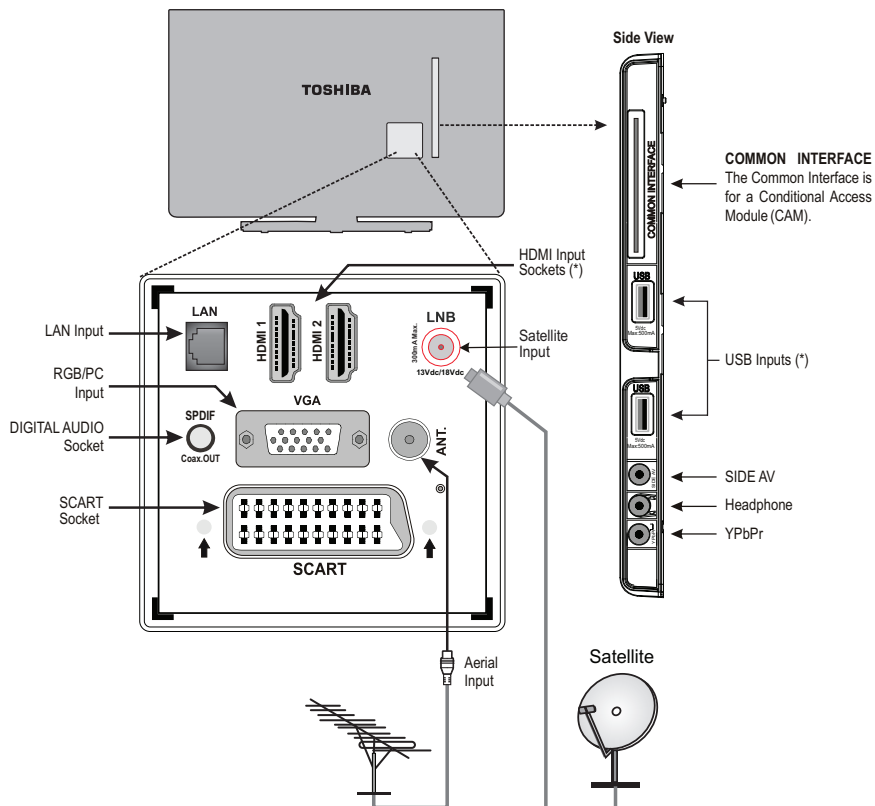

(\*) Number of these inputs may change according to the model of your TV.

**Aerial cable:**.....  
Connect the aerial to the ANT. socket on the rear of the TV.

**Satellite cable:**.....  
Connect the LNB from the satellite dish to the Satellite Antenna socket on the rear of the TV.

If your satellite connection is different, suitable adaptors are available from most satellite equipment retailers.

**SCART lead:**.....  
If you use a **decoder\*** or a **media recorder**, it is essential that the scart cable is connected to the TV.

Before running **first time installation**, any connected devices need to be set to standby mode.

The DIGITAL AUDIO socket enables the connection of a suitable surround sound system.


**HDMI® (High-Definition Multimedia Interface)** is for using with a DVD decoder or other equipment with digital audio and video output. It is designed for best performance with 1080i and 1080p high-definition video signals but will also accept and display VGA, 480i, 480p, 576i, 576p and 720p signals. PC format signals will also be displayed.

**Note:** Although this TV is able to connect to HDMI equipment, it is possible that some equipment may not operate correctly.

When connecting a device via the Side AV input, you must use the supplied connection cable to enable connection.

When connecting a device via YPbPr input, you must use the supplied connection cable to enable connection.

**LAN** Input is used to connect the TV to your home network. A wide variety of external equipment can be connected to the TV; therefore, the relevant owner's manuals for all additional equipment must be referred to for exact instructions.

If the TV automatically switches over to monitor external equipment, return to normal TV by pressing the desired programme position button. To recall external equipment, press "**SOURCE** - " button repeatedly to switch between sources.

Regardless of source's property, audio output from the DIGITAL AUDIO socket cannot be copied.

# Connecting an HDMI® or DVI Device to the HDMI Input

The HDMI inputs on your TV receive digital audio and uncompressed digital video from an HDMI source device or uncompressed digital video from a DVI (Digital Visual Interface) source device.

These inputs are designed to accept HDCP (High-Bandwidth Digital-Content Protection) programme material in digital form from EIA/CEA-861-D-compliant [1] consumer electronic devices (such as a set-top box or DVD player with HDMI or DVI output).


## NOTE:

- Some early HDMI equipment may not work properly with your latest HDMI TV.
- Supported Audio format: Linear PCM, sampling rate 32/44.1/48kHz.

## To Connect an HDMI Device

Connect an HDMI cable (type A connector) to the HDMI terminal. For proper operation, it is recommended that you use an HDMI cable with the HDMI Logo (HDMI®).

- If your HDMI connection is capable of 1080p and/or your TV is capable of refresh rates greater than 50Hz, you will need a Category 2 cable. Conventional HDMI/DVI cable may not work properly with this mode.
- HDMI cable transfers both video and audio. Separate analogue audio cables are not required (see illustration).
- To view the HDMI device video, press **"SOURCE - [TV]**" button to select the appropriate HDMI input.

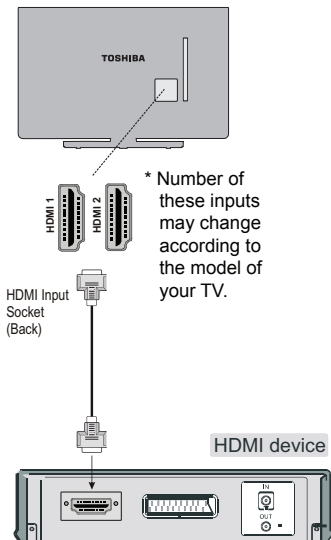

## CEC


CEC operation is available if a CEC device is present. This feature is limited to Toshiba disc players that support CEC.

The CEC osd menu is accessed through the **"QUICK"** button on the remote the osd CEC menu will only be displayed if a CEC product is connected.

## To Connect a DVI Device

Connect an HDMI-to-DVI cable (HDMI type A connector) to the HDMI input socket and audio cables to the RED and WHITE SIDE AV AUDIO inputs on the Audio/Video connection cable supplied (see illustration).

- The maximum recommended HDMI-to-DVI cable length is 6.6 ft (2m).
- An HDMI-to-DVI cable transfers video only. Separate analogue audio cables are required.

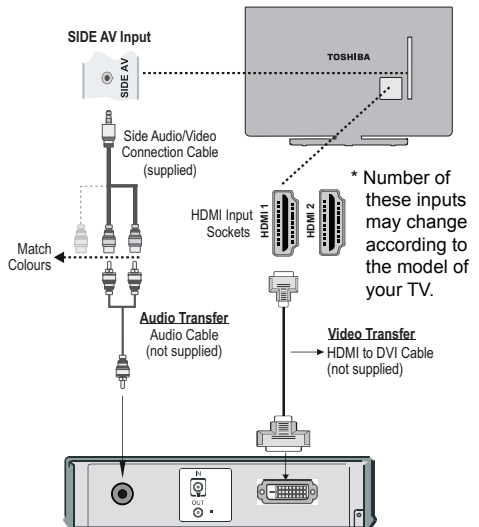

## NOTE:


To ensure that the HDMI or DVI device is reset properly, it is recommended that you follow these procedures:

- When turning on your electronic components, turn on the TV first, and then the HDMI or DVI device.
- When turning off your electronic components, turn off the HDMI or DVI device first, and then the TV.

## To Connect a Computer

With either an RGB/PC or an HDMI connection, you can watch your computer's display on the TV and hear the sound from the TV's speakers.

When connecting a PC to the RGB/PC input on TV, use an analogue RGB (15-pin) computer cable and use the SIDE AV socket with a PC audio cable (not supplied) for audio connection, using the supplied Side AV connection cable's RED and WHITE inputs (see illustration).

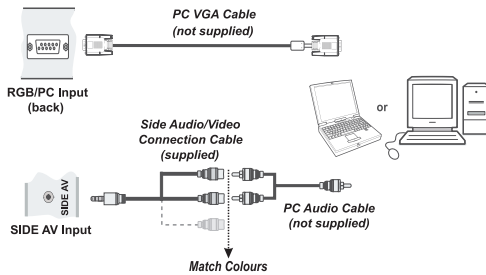

To use a PC, set the monitor output resolution on the PC before connecting it to the TV. To display the optimum picture, use the PC setting feature.

### NOTE:

 
- Some PC models cannot be connected to this TV. An adaptor is not needed for computers with a compatible mini D-sub15-pin terminal.
- Depending on the DVD's title and the specifications of the PC on which you are playing the DVD-Video, some scenes may be skipped or you may not be able to pause during multiangle scenes.

## Connecting to a DVD Player via YPbPr


Some DVD players are connected through COMPONENT SOCKETS (YPbPr). In this case, you must use the supplied Component YPbPr video connection cable for enabling connection. First, plug the single jack of the cable to the TV's YPbPr socket (side). Afterwards, insert your YPbPr cable's (not supplied) connectors into the plural part of the supplied YPbPr video connection cable (see illustration below). Colours of the connected jacks should match.

To enable audio connection, use the supplied Side AV connection cable. First, plug single jack of the cable to the Side AV Input of the TV. Afterwards, insert your DVD player's audio cable's connectors into the plural part of the supplied Side AV connection cable (see illustration below). Colours of the connected jacks should match.

### Video Connection



### Audio Connection

 

# Connecting a USB Memory

## To Connect a USB Flash Drive

- You can connect a USB Flash Drive to your TV by using the USB input/inputs on the TV. This feature allows you to display/play music, photo or video files stored in a USB stick.
- It is possible that certain types of USB devices (e.g. MP3 Players) may not be compatible with this TV.
- You may back up your files before making any connections to the TV set in order to avoid any possible data loss. Note that manufacturer will not be responsible for any file damage or data loss.
- Do not pull out USB module while playing a file.


**CAUTION:** Quickly plugging and unplugging USB devices may cause damage to the USB device.

# Connecting a home network

Connectivity feature allows the TV to connect to the home network wired or wirelessly. You can use this networking system to connect to the Toshiba Portal or to access photo, video and audio files that are stored on a media server connected to the network and play/display them on the TV.


## Wired connection

Connect the TV to the modem/router via a LAN cable (not supplied). Select **Network Type** as **Wired Device** in **Network Settings** menu and then highlight **Network**. Press Left or Right buttons and set as **Enabled** to connect.

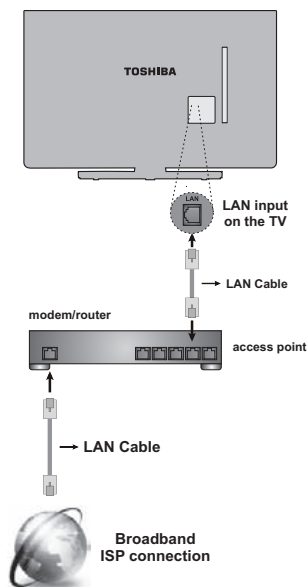

## Wireless connection

To connect the TV to the home network wirelessly just select **Network Type** as **Wireless Device** in **Network Settings** menu and then highlight **Network**. Press Left or Right buttons and set as **Enabled** to connect. The TV will search for available networks. Select the desired network and press **OK**. The TV has a built-in WLAN system and has no need for additional devices to connect to a wireless network.

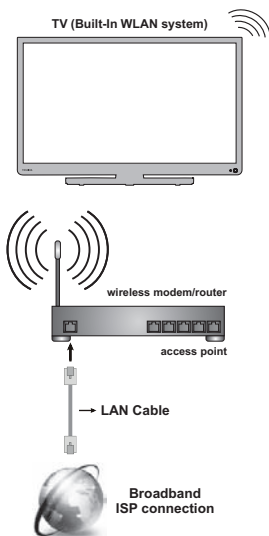

Performance depends on many factors, conditions and variables, including distance from access point(AP), volume of network traffic, building materials and construction, operating system used, mix of wireless products used, interference and other adverse conditions.

Please refer to **Network Settings** section to configure a wired or a wireless connection, if more detailed information is needed.

# Power Save Mode

## Environmental Information

This television is designed to be environment friendly. You not only help to save the environment but also you can save money by reducing electricity bills thanks to the energy efficiency feature of this TV. To reduce energy consumption, you should take the following steps:

You can use Power Save Mode setting, located in the Picture Settings menu. If you set Power Save Mode as **Eco**, the TV will switch to energy-saving mode and luminance level of TV set will be decreased to optimum level. Note that some picture settings will be unavailable to be changed when the TV is in Power Save Mode.

Power Save Mode

Eco

If pressed Right button, "**Screen will be off in 15 seconds.**" message will be displayed on the screen. Select **Proceed** and press **OK** to turn the screen off immediately. If you don't press any button, the screen will be off in 15 seconds. Press any button on the remote or on the TV to turn the screen on again. If you disable **Power Save Mode**, picture mode will be automatically set to **Dynamic**.


It is highly recommended to activate **Power Save Mode** to reduce your annual power consumption. And also it is recommended to disconnect the TV from the mains plug to save more energy when you are not going to use it for a long period of time.

### Repair Information

Please refer all servicing to qualified personnel. Only qualified personnel must repair the TV. Please contact your local dealer, where you have purchased this TV for further information.

# Controlling the TV

A wide variety of external equipment can be connected via the sockets located on the side and back of the TV. Whilst all the necessary adjustments and controls for the TV are made using the remote control, the buttons on the Back of the TV may be used for some functions.

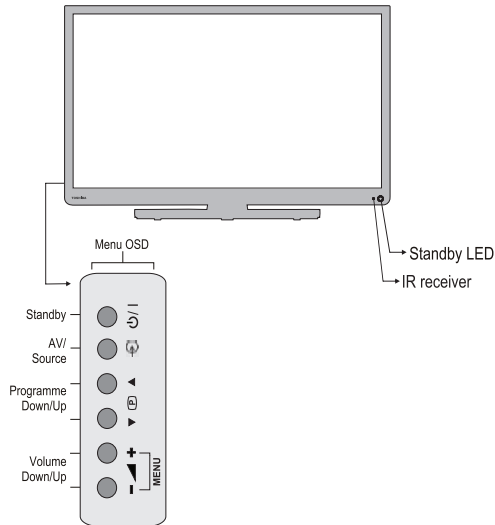

## Switching on

If the standby LED is unlit, check that the mains plug is connected to the power and press the button on the back side of the television or button on the remote control to switch the television on.

To put the television into Standby, press button on the remote control or button on the TV. To view the television, press again. The picture may take a few seconds to appear.

**Note:** The active Standby LED colour will turn to red in a few moments when the TV is switched into Standby.

## For energy saving:

Turning the TV off at its mains supply, or un-plugging it, will cut energy use to nearly zero for all TV's. This is recommended when the TV is not being used for a long time, e.g. when on holiday.

Reducing the brightness of the screen will reduce energy use.

**Note:** Putting the TV into standby mode, will reduce energy consumption, but will still draw some power.

## Using the Remote Control

Press the **MENU** button on the remote control to see the menus.

The main menu appears as a group of icons each for a menu option. Press the Left or Right button to select a topic.

In sub menu screen mode the menu appears as a list. Press the Up or Down button to select a topic.

To use the options press the Up and Down buttons on the remote control to move up and down through them and **OK**, Left or Right buttons to select the required choice. Follow the on screen instructions. The functions of each menu are described in detail throughout the manual.

## Using the Controls on the TV

Using the control buttons on the Back of the TV:

- To alter the volume press + or .
- To alter the programme position press buttons on the Back of the TV.
- Press + buttons at the same time to view main menu and use buttons to navigate and + to change value.



To select an external input, press button until the appropriate input source is selected.

Please always refer to the owner's manual of the equipment to be connected for full details.

# Initial Installation


Before switching on the TV, put your decoder and media recorder to **Standby** if they are connected and ensure the aerial/cable and/or Satellite dish is connected to your TV. To set up the TV, use the buttons on the remote control as detailed on **The Remote Control** page.

**IMPORTANT: Ensure that the aerial/cable and/or Satellite dish is connected and a Common Interface module is not inserted before switching on the TV for the first time installation.**

1. Connect the mains plug and switch the TV on using the  button. If the TV does not switch on, press any numbered or  button on the remote control, then the language selection menu will be displayed. This screen will appear the first time that the TV is switched on and each time the TV is reset.



2. By pressing **Up** or **Down** button, highlight the language you want to set and press **OK** button. The following screen will be displayed next:

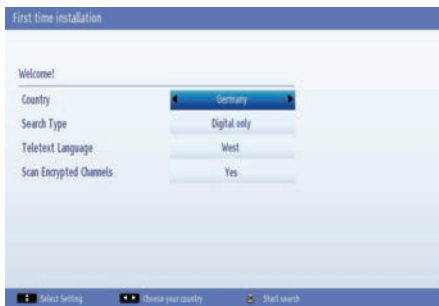


3. By pressing **Left** or **Right** button, select the **country** you want to set and press **Down** button to highlight the **Search Type** option. Use **Left** or **Right** to set the desired search type. Available search types are **Digital only**, **Analogue TV only** and **Full**.
4. When set, press **Down** button to highlight Teletext Language. Use **Left** or **Right** button to select desired language region. Highlight **Scan Encrypted Channels** and enable/disable this option by using **Left** or **Right** buttons. Press **OK**

to continue.

**Note:** Depending on the **Country** selection you may be asked to set and confirm a PIN at this point. The selected PIN cannot be **0000**. You have to enter it if you are asked to enter a PIN for any menu operation later.

 
5. The following message will be displayed next on the screen:



Select **Store mode** if the TV will be placed in a store to exhibit. This option will configure your TV's settings for best display quality and the supported features of the TV will be displayed on the top of the screen as a info banner. If **Store mode** is selected, a confirmation screen will be displayed. Select **YES** to proceed. For home use select **Home Mode**.

This option will be available in **Other Settings** menu and can be turned off/on later.

6. Press **OK** button on the remote control to continue and a message will be displayed asking whether you want to do network settings. Select **Yes** and the **Network Settings** menu will be displayed. Please refer to **Connecting a Home Network** and **Network Settings** sections to configure a wired or a wireless connection. After the settings are completed press **OK** button to continue.
7. Afterwards, the following OSD will be displayed on the screen:

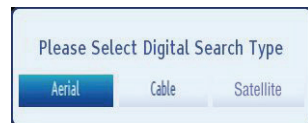


8. If you select **Cable** option, a confirmation screen will be displayed. If you want to search for available networks, select **YES** to proceed. The following screen will be displayed:



You can select **Network**, **Frequency**, **Network ID** and **Search Step** from this screen. For highlighting lines you see, use **Up** or **Down** button. You can set **Search Step** as 8000 kHz or 1000 kHz. If you select 1000 kHz, the TV will perform search process in a detailed way. Searching duration will thus increase accordingly. When finished, press **OK** button to start automatic search.

If you select **NO**, the following screen will be displayed:

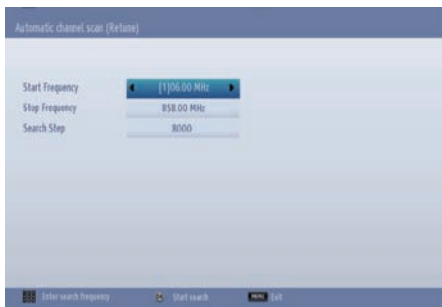

You can set Start - Stop Frequencies and Search Step as desired. When finished, press **OK** button to start the search.

9. If you select **Aerial** option from the Search Type screen, the television will search for broadcasts.
10. The Auto tuning screen will appear and the television will start to search for available stations. The progress bar will move along the line. You must allow the television to complete the search.



**Note:** You can press **MENU** button to cancel.

11. If you select **Satellite** option from the Search Type screen, **Antenna Type** menu will be displayed. There are three types of antenna selection. You can select **Antenna type** as **Direct**, **Unicable** or **DiSEqC**.

**Direct:** If you have a single receiver and a direct satellite dish, select this antenna type. After selecting **Direct**, another menu screen will be displayed. Select an available satellite and press **OK** to scan for services.

**Unicable:** If you have multiple receivers and a unicable system, select this antenna type. Press **OK** to continue. Configure settings by following instructions on the screen. Press **OK** to scan for services.

**DiSEqC switch:** If you have multiple satellite dishes and a **DiSEqC switch**, select this antenna type. After selecting **DiSEqC switch**, another menu screen will be displayed. You can set four **DiSEqC** options (if available). Press **GREEN** button to scan all satellites or press **YELLOW** button to scan only the highlighted satellite. To save and exit press **OK** button.

**SatcoDX Preset List:** When you start a search a message will appear asking whether you want to load preset list or not. This function is correct for countries Germany and Austria. For other countries select **No** and channel order will be applied if applicable.


SatcoDX allows the user to upload a preset list if supported by the broadcaster. See **Satellite Settings** section.



While the search continues a message will appear, asking whether you want to sort channels according to the LCN(\*). Select **Yes** and press **OK** to confirm.

(\*)*LCN is the Logical Channel Number system that organizes available broadcasts in accordance with a recognizable channel sequence (if available).*

After the available stations are stored, **Edit Channel List** will be displayed on the screen.

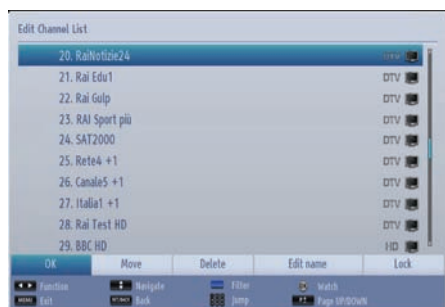

Press **OK** button to quit channel list and watch TV.


**Note:** Do not turn off the TV while initializing first time installation.

# Auto Tuning

## Auto Tuning

As new services are broadcast, it will be necessary to retune the television in order to view them.

- It is recommended to run Auto Tuning periodically to ensure that all new services are added. Please be aware that Auto Tuning will completely retune the television and all current channels and settings will be lost.
- Press **MENU** button on the remote control and select **Install and Retune** by using **Left** or **Right** button. Press **OK** button and the following menu screen will be displayed.

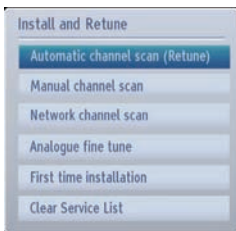

- Select **Automatic Channel Scan (Retune)** by using **Up** or **Down** button and press **OK** button. **Automatic Channel Scan** options will be displayed. You can select options by using **Up** or **Down** and **OK** buttons.

### Auto Channel Scan Menu Operation

**Digital Aerial:** Searches and stores aerial DVB stations.

**Digital Cable:** Searches and stores cable DVB stations.

**Analogue:** Searches and stores analogue stations.

**Digital Aerial & Analogue:** Searches and stores aerial DVB and analogue stations.

**Digital Cable & Analogue:** Searches and stores cable DVB and analogue stations.

**Satellite:** Searches and stores satellite channels.

- Whenever you select an automatic search type and press **OK** button, a confirmation screen will appear on the screen. To start installation process, select **Yes**, to cancel select **No** by using **Left** or **Right** and **OK** button.
- After auto channel scan type is set and selected and confirmed, installation process will start and progress bar will move along. The television will search for all available stations. You must allow the television to complete the search. Press **MENU**

button to cancel the process. In such a case, located channels are not stored.

**Note:** Menu list of available features may change depending on the model.


# Manual Tuning, Analogue Fine Tuning

The television can be tuned-in manually using Manual Search feature.

## Digital Aerial Manual Search

The feature is available for service engineers or can be used for direct channel entry if the multiplex channel is known.

- Select **Manual channel scan** from the **Install and Retune** menu and press **OK**.

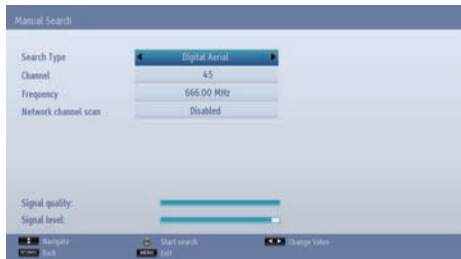

After selecting search type as **Digital Aerial**, you can enter the multiplex or frequency number using the numeric buttons and press **OK** button to search.

- Enter the multiplex number using the numeric buttons. The television will automatically search for that multiplex. When the multiplex is found any channels not currently on the programme list will be added and the programme information at the top of the screen will be updated.
- Repeat as necessary.

## Digital Cable Manual Search

- In cable manual scan, you can enter frequency, modulation, symbol rate and network channel scan options. After selecting search type as **Digital Cable**, you can set the desired options and press **OK** button to search.



## Analogue Manual Search

The television can be tuned-in manually. For example: if the television cannot be connected to a media recorder/decoder with a **SCART** lead or to tune-in a station on another System.

To allocate a programme position on the television for a decoder and media recorder: turn the decoder on, insert a pre-recorded film into the media recorder and press **PLAY**, then manually tune.



After selecting search type as **Analogue**, you can use **Up** or **Down** button to highlight an item and then press **Left** or **Right** button to set an option.

Enter the channel number or frequency using the numeric buttons. You can then press **OK** button to search. When the channel is located, any new channels that are not on the list will be stored.

## Digital Satellite Manual Search

**Note:** If the Satellite installation is not completed by the first time installation(FTI), you are not able to run manual satellite search. You will be directed with a warning message to do "Antenna Installation" first, which you can find under the Satellite Settings in Settings menu.



# Manual Tuning, Analogue Fine Tuning - continue

The television can be tuned-in manually using Manual Search feature.

- After selecting search type as **Satellite**, you can set the desired options and press **OK** button to search. In satellite manual scan, you can enter frequency, polarisation, symbol rate values and change network channel scan and satellite options by using left/right buttons or numeric buttons on the remote. You can then press **OK** button to search. If you enter invalid manual tune settings a warning message is displayed on the screen.

**Note:** *Frequency, polarization and symbol rate may change in accordance with the selected channels.*

## Analogue Fine Tune

- Select **Analogue Fine Tune** from the **Install and Retune** menu by using **Up** or **Down** and **OK** buttons. Analogue fine tune screen will be displayed. Analogue Fine Tune feature will not be available if there are no analogue channels stored.
- Use **Left** or **Right** button to set Fine Tune. When finished, press **OK** button.

## Clear Service List (\*)

*(\*) This setting is visible only when the Country option is set to Denmark, Sweden, Norway or Finland.*


- Select **Clear Service List** from the **Install and Retune** menu by using **Up** or **Down** and **OK** buttons. A confirmation message will be displayed. If you want to delete all channels, select **Yes** and press **OK**. Use this setting to clear channels stored.

# General Operation


## Stereo and Bilingual Transmissions

If stereo or dual language broadcasts are transmitted, the word **Stereo** or **Dual** will appear on the screen each time positions are changed, disappearing after a few seconds. If the broadcast is not in stereo, the word **Mono** will appear.

**Stereo...** Press "**LANG - /I**" to select **Stereo** or **Mono**.

**Bilingual...** Bilingual transmissions are rare. If they are transmitted, the word **Dual** will be displayed. Choose the required programme number, and if the word **Dual** appears, press "**LANG - /I**" to select **Dual I**, **Dual II** or **Mono**.

### For DTV broadcasts

To view current language and for changing to an alternative language (if available), press "**LANG - /I**" button. Available options will be listed.

## Displaying Subtitles

In digital broadcasts, this feature will show subtitles on the screen in the selected language provided they are being broadcast.

Press **SUBTITLE** button to turn the subtitles on. Press **SUBTITLE** button again to turn the subtitles off.

## Viewing Main Menu

Press **▲ +** or **▼ -** buttons on the TV at the same time to view main menu.


Press **MENU** button on the remote control to view main menu.

## Controlling Volume and Muting Sound

### Volume


Press **▲+** or **▼-** button on the remote control to adjust the volume.

### Sound Mute

Press "****" button once to turn the sound off and again to cancel.


## Selecting Programme Positions

To select a programme position use the numeric buttons on the remote control. Programme positions can also be selected using **P▼** or **P▲** buttons.


Press "**INFO - **" button to display the on-screen information i.e. programme position, stereo/mono signal and picture format.

## Standby Notifications


If the TV switches off while in No Signal mode, the following on-screen message will be displayed on the next switch-on:

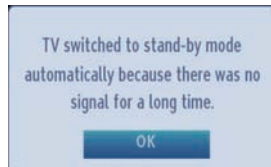

When the **Auto TV OFF** timeout is reached, the following message will be displayed on the screen. Select **Yes** to shut down the TV. Select **No** to cancel. The TV will switch off as well, if you do not make a selection on this screen.

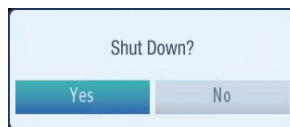

If the TV switches off owing to the auto power down feature, the following on-screen message will be displayed on the next switch-on:

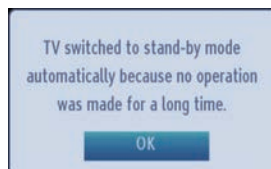


# Channel List, Sorting Programmes, Programme Locking

You can view stored channels and sort them by using the Channel List feature.


## Viewing Channel List

The channel order may be changed to suit your personal preference.

 - Select **Channel List** from the main menu and press **OK** button. The following menu will be displayed:



- Select **Edit Channel List** to manage all stored channels. Use **Up** or **Down** and **OK** buttons to select **Edit Channel List**.

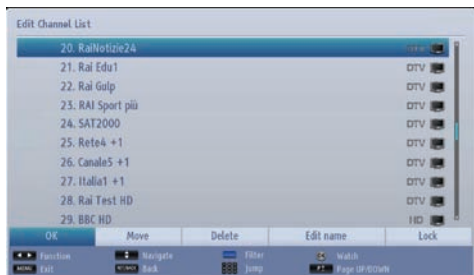

- Press **Up** or **Down** button for selecting a channel. You can press **P▼** or **P▲** button to move page up or page down.
- To watch a specific channel, highlight it by using **Up** or **Down** button. Afterwards press **OK** button.
- Press **BLUE** button to view filtering options.
- Press **MENU** or **EXIT** button to exit.

**Note:** The channels listed are mixed at the channel list. Channel types can be differentiated by the icons next to them: DTV (digital tv), HD (HD TV), ATV (Analogue TV), TV (TV), Radio symbol (Radio), encrypted, lock, and FAV symbols (for channels in the favourite list). Listed channels can also be sorted by using the active channel list filter.

## Moving a Channel

- Highlight the desired channel by using **Up** or **Down** button.
- Select **Move** option in the channel list by using **Left** or **Right** button and press **OK** button.
- **Edit Number** screen will be displayed. Enter the desired channel number by using the numeric buttons on the remote control and press **OK**. If there is a previously stored channel on that number, a warning screen will be displayed. Select **Yes** if you want to move the channel and press **OK**.
- Selected channel is now moved.

## Deleting a Channel

You can press **GREEN** button to tag/untag all channels; **YELLOW** button to tag/untag channel.

- Select the channel that you want to delete and select **Delete** option by using **Left** or **Right** button. Press **OK** button to continue.
- A warning screen will appear. Select **Yes** to delete, select **No** to cancel. Press **OK** button to continue.

## Renaming a Channel

- Select the channel that you want to rename and select **Edit Name** option by using **Left** or **Right** button. Press **OK** button to continue.
- Pressing **Left** or **Right** button moves to the previous/next character. Pressing **Up** or **Down** button changes the current character. Pressing the numeric buttons **'0...9'** replaces the highlighted character with the characters printed above the button one by one as the button is pressed.
- When finished, press **OK** button to save. Press **MENU** or **BACK** to cancel.

## Locking a Channel

You can press **GREEN** button to tag/untag all channels; **YELLOW** button to tag/untag a single channel.

- Select the channel that you want to lock by using **Up** or **Down** button.
- Select **Lock** option by using **Left** or **Right** button. Press **OK** button to continue.
- You will be asked to enter parental control PIN. Enter the PIN number.

**Note:** Default PIN can be set to **0000** or **1234**. If you have defined the PIN (is requested depending on the country selection) during the **First Time Installation** or changed the default PIN later from the **Set PIN** option under the **Parental Settings** menu, use the PIN that you have defined.

- Press **OK** button when the desired channel is highlighted to lock/unlock the channel. Lock symbol will be displayed next to the selected channel.

 
# Viewing Info Banner, Electronic Programme Guide

## Viewing Info Banner

- Press **INFO - I** button. The information screen will appear giving details of the channel and programme currently being viewed.



- Whenever you change channel, the TV displays the broadcast picture along with an information banner at the bottom of the screen. This will remain on the screen for a few seconds.
- If the selected channel is locked, you must enter the correct four numeric code to view the channel. "Enter PIN" will be displayed on the screen in such a case:



- Enter the 4-digit PIN number to continue.

**Note:** Default PIN can be set to **0000** or **1234**. If you have defined the PIN (is requested depending on the country selection) during the **First Time Installation** or changed the default PIN later from the **Set PIN** option under the **Parental Settings** menu, use the PIN that you have defined.

## Electronic Programme Guide

- Select the on-screen guide by pressing **GUIDE** button, the guide screen will appear highlighting details of the channel and programme currently being viewed. This may take a few moments to appear.



- For details of other programmes currently available, press navigation buttons to scroll up and down or scroll left/right through the list. As channels are selected, details of the programme currently being broadcast will appear.
- Press **RED** button to view the previous day.

- Press **GREEN** button to view the next day.
- Press **YELLOW** button for zooming to a programme.
- Press **BLUE** button to display filtering options.
- Press **SUBTITLE** button to sort channels by a genre.
- For information on a highlighted programme, press **INFO - I** button.
- Use **numeric buttons** for quickly selecting a broadcast.
- Use the navigation buttons to highlight a programme and press **OK** button to display **Event Options** menu. The following options are available.

**Select Channel:** Using this option, you can switch to the selected channel.

**Record / Delete Record Timer:** Select **Record** option and press the **OK** button. If the programme is going to be broadcasted at a future time, it will be added to **Timers** list to be recorded. If the selected programme is being broadcasted at the moment, recording will start immediately.

To cancel an already set recording, highlight that programme and press the **OK** button and select the option **Delete Rec. Timer**. The recording will be cancelled.

**Note:** You cannot switch to any other channel or source while there is an active recording on the current channel.

**Set Timer on Event / Delete Timer:** You can set a timer for future programmes using this option. To cancel an already set reminder, highlight that programme and press the **OK** button. Then select **Delete Timer** option. The timer will be cancelled.

**Note:** It is not possible to record or set timer for two or more individual events at the same time interval.

- Press **TEXT** button to display searching options.
- Press **"SWAP-↻"** button for displaying current programmes.
- Press **REC** button to start recording the selected programme. If the programme is going to be broadcasted at a future time, it will be marked with a red frame and added to **Timers** list to be recorded. If you select and press **REC** button again, the programme will be removed from the list.

# Language Selection

## Language Settings

Using this menu you can adjust the preferred language settings. Some features may not be available.

- Press **MENU** button and select **Settings** by using **Left** or **Right** button.
- Select **Language** and press **OK** to view this menu. Select the desired language by using **Left** or **Right** button. Press the **MENU** button on the remote control to exit.



## Preferred

These settings will be used if available. Otherwise the current settings will be used.

**Audio:** By pressing **Left** or **Right** button change the audio language.

**Subtitle:** Alter the subtitle language with **Left** or **Right** button. The chosen language will be seen in subtitles.

**Teletext:** Changes the preferred teletext language.

**Guide:** By pressing **Left** or **Right** button change the guide language.

## Current

**Audio:** If audio language is supported, change the audio language by pressing **Left** or **Right** button.

**Subtitle:** If subtitle is backed up, alter the subtitle language with **Left** or **Right** button. The chosen language will be seen in subtitles.

 


# Digital Settings - Parental Control, Menu Lock, Set PIN


You can view or set parental preferences of your TV.

## Viewing Parental Control Menu

Press **MENU** button and select the **Settings** by using **Left** or **Right** button. Press **OK** button to view Settings menu. Use **Up** or **Down** button to highlight **Parental** and press **OK** to continue:



- A dialogue box asking for the lock key will be displayed.
- If it is incorrect, "**Wrong PIN**" OSD will be displayed. If it is correct, the Parental Control menu will be displayed:

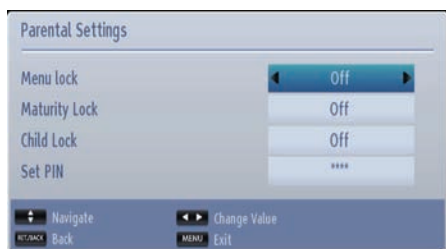

**Note:** Default PIN can be set to 0000 or 1234. If you have defined the PIN (is requested depending on the country selection) during the **First Time Installation** use the PIN that you have defined.

## Menu Lock

In Menu lock you can set locking for **All menus**, or the **Installation menu** to restrict access to these menus. If the menu lock is disabled, there will be free access to the menu system.

- Use **Up** or **Down** buttons to go to **Menu Lock** option. Use **Left** or **Right** buttons to choose Menu Lock Mode.

**OFF:** All menus are unlocked.

**ALL MENUS:** All Menus are accessible only with the correct lock key. So the user cannot add, delete, rename, channels or set timers.

**INSTALLATION MENU:** Installation menu is locked. So the user can't add channels.

## Maturity Lock

When set, this option gets the maturity information from the broadcast and if this maturity level is disabled, disables access to the broadcast.

**Note:** Maturity Lock is not available in all countries.

## Child Lock

Child Lock disables the buttons on the television. All buttons on the remote control can still be used.

## Set PIN

- Use **Up** or **Down** buttons to select **Set PIN** option. Press **OK** to display the **Set PIN** window.
- Use numeric buttons to enter new pin number. You will need to input your new pin a second time for verification purposes.
- After typing correct PIN numbers, PIN number will be changed.

**Note:** If you change the pin number make sure you write it down and keep it safe.


# Configuring Picture Settings

You can configure picture settings of your TV by using Picture Settings menu.

## Configuring Picture Settings

You can use different picture settings in detail. You can customize current picture mode settings as desired. For example, you can change items such as, Brightness, Contrast, Colour and Sharpness.

Press **MENU** button and select **Picture** by using **Left** or **Right** button. Press **OK** button to view **Picture Settings** menu.

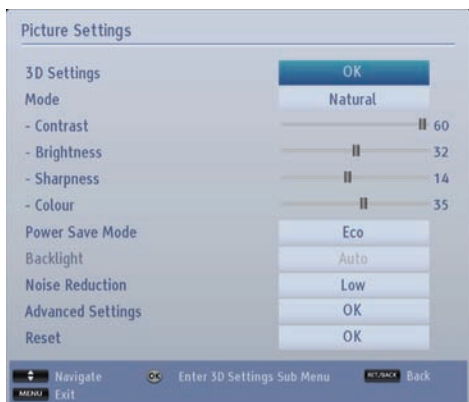

## Operating Picture Settings Menu Items

- Press **Up** or **Down** button to highlight a menu item.
- Use **Left** or **Right** button to set an item.
- Press **MENU** button to exit.

## 3D Settings

The 3D feature of your TV enables you to view 3D content.

Refer to the **Using 3D Feature** section in this manual for detailed explanations on how to use the 3D Settings menu items.

## Mode

This TV offers the choice of personalising the picture style. **Natural**, **Cinema**, **Game**, **Sports** and **Dynamic** are preset options and affect settings within the TV. Press **Left** or **Right** button to select the picture mode you prefer.

**Note:** Some options may be inactive depending on the selected mode.

## Contrast

Sets the lightness and darkness values of the screen. Press **Left** or **Right** button to adjust the contrast.

## Brightness

Sets the brightness value for the screen. Press **Left** or **Right** button to adjust the brightness.

## Sharpness

Sets the sharpness value for the objects displayed on the screen. Press **Left** or **Right** button to adjust the sharpness.

## Colour

Sets the colour value, adjusting the colours. Press **Left** or **Right** button to adjust the colour.

## Power Save Mode

Enables or disables the power save mode. Press **Left** or **Right** button to set as **Disabled**, **Eco** or to turn the screen off. See the section **Environmental Information** in this manual for further information on **Power Save Mode**.

**Note:** Picture mode will be set to **Dynamic** automatically if the **Power Save Mode** is set to **Disabled**.

## Backlight

This setting controls the backlight level and it can be set to **Auto**, **Low**, **Medium** and **High**.

**Note:** The backlight function will be inactive if **Power Save Mode** is set to **Eco** or picture mode is set to **Game**.

## Noise Reduction

Sometimes some words or picture elements may become distorted or pixelated. Using the **Noise Reduction** feature reduces this effect by smoothing out the edges. Press **Left** or **Right** button to set noise reduction level.

## Advanced Settings

Some additional controls in the picture menu are grouped under the title **Advanced Settings**. To view or change, first highlight **Advanced Settings** and press **OK** button to view. **Advanced Settings** menu controls are as the following:

**Dynamic Contrast:** You can change contrast rate by using dynamic contrast function. Dynamic contrast can be set to one of these options: **Low**, **Medium**, **High** or **Off**.

**Colour Temp:** Colour Temperature increases the 'warmth' or 'coolness' of the picture by increasing the red or blue tint. Colour temperature can be set to one of these options: **Normal**, **Warm** or **Cool**.

**Picture Zoom:** Sets the picture size to **Auto**, **Full**, **16:9**, **Subtitle**, **14:9**, **14:9 Zoom**, **4:3** or **Cinema**. Press **Left** or **Right** button to change the setting.

**Film Mode (optional):** Films are recorded at a different number of frames per second to normal television programmes. Press **Left** or **Right** button to set this feature to **Auto** or **Off**. Turn this feature to **Auto** when you are watching films to see the fast motion scenes clearly.

**Skin Tone:** Adjust the desired skin tone.

**Colour Shift:** Adjust the desired colour tone.

**RGB Gain:** Press **OK** button to edit RGB gain. You can configure the colour temperature values using the RGB Gain feature.

**HDMI True Black (optional):** While watching from HDMI source, this feature will be visible in the **Advanced Settings** menu.

You can use this feature to enhance blackness in the picture. Set this feature to **On** to activate.


*Note: HDMI True Black On/Off feature functions only when the HDMI device output is set to RGB.*

## Reset

This feature allows you to reset the current picture settings to the default values. Press **MENU** button and select **Picture** by using **Left** or **Right** button. Press **Up** or **Down** button to select **Reset** and press **OK** button.

*Note: The reset function does not reset the settings for **Mode**, **Noise Reduction**, **Colour Temp**, **Picture Zoom** and **HDMI True Black**.*

# Changing Picture Format

Press “**SCREEN** - ” button repeatedly to select between **Auto(\*)**, **Full(\*\*)**, **16:9**, **Subtitle**, **14:9**, **14:9 Zoom**, **4:3** or **Cinema**.

Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws.

You can shift to screen up or down by pressing “**▲**”/“**▼**” buttons while picture zoom is selected as 14:9 Zoom, Cinema or Subtitle.


(\*) When **Auto** is selected, the aspect ratio of the screen is adjusted by the information provided by the selected source (if available). The format being displayed in **Auto** mode is completely independent of WSS information which could be included in the broadcast signal or the signal from an external device.

Note: Auto mode will only be available in SCART, HDMI, YPbPr and DTV.

(\*\*) **Full** mode is only available on HD channels.


**16:9**

Use this setting when watching a widescreen DVD, widescreen video tape or a 16:9 broadcast (when available). Due to the range of widescreen formats (16:9, 14:9 etc.) black bars may be visible on the top and bottom of the screen.

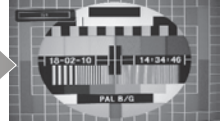


**Subtitle**

 When subtitles are included on a letterbox format broadcast, this setting will raise the picture to ensure that all the text is displayed.



**14:9**

This zooms up the wide picture (14:9 aspect ratio) to the upper and lower limits of the screen

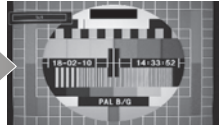


**14:9 Zoom**

This option zooms to the 14:9 picture.




**4:3**

Use this setting to view a true 4:3 broadcast.

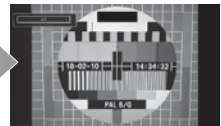

**Cinema**

This zooms up the wide picture (16:9 aspect ratio) to the full screen.

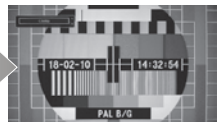

# Configuring PC Picture Settings

## PC Picture Settings (\*)


(\*) While in VGA/PC mode, some items in Picture menu will be unavailable. Instead, VGA mode settings will be added to the Picture Settings while in VGA/PC mode.

### PC Picture controls

**Contrast**, **Brightness** and **Colour** adjustments in this menu are identical to adjustments defined in TV picture menu.

Select **Reset** and press **OK** button to reset the adjustments.

#### Note:

For switching to **VGA/PC** source, press “**SOURCE -**  ” button on your remote control and select **VGA/PC** input.

Note that **VGA/PC** mode menu settings are available only while the TV is in **PC** source.

### PC Position

Select this to display PC position menu items.



### Autoposition

If you shift the picture horizontally or vertically to an unwanted position, use this item to put the picture into correct place automatically.

Highlight **Autoposition** and then press the **OK** button.

### H Position

**H (Horizontal) Position** shifts the image horizontally to right hand side or left hand side of the screen.

Press **Down** button until **H Position** is highlighted.

Press **Left** or **Right** button to adjust the value.

### V Position

**V (Vertical) Position** shifts the image vertically towards the top or bottom of the screen.

Press **Down** button until **V Position** is highlighted.

Press **Left** or **Right** button to adjust the value.

### Dot Clock

**Dot Clock** adjustment corrects the interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.

Press **Down** button until **Dot Clock** is highlighted.

Press **Left** or **Right** button to adjust the value.

### Phase

Depending on the resolution and scan frequency that you input to the TV Set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method.

Press **Down** button until **Phase** is highlighted.

Press **Left** or **Right** button to adjust the value.

# Configuring Sound Settings

You can configure sound settings of your TV by using Sound Settings menu.

## Configuring Sound Settings

Sound settings can be configured according to your personal preferences.

Press **MENU** button and select **Sound** by using **Left** or **Right** button. Press **OK** button to view Sound Settings menu.



## Operating Sound Settings Menu Items


- Press **Up** or **Down** button to highlight a menu item.
- Use **Left** or **Right** button to set an item.
- Press **MENU** button to exit.

## Volume

Select **Volume** using **Up** or **Down** button and then use **Left** or **Right** button to set volume level.

## Equalizer (Only for speaker)

You can customize current sound mode settings. Select the appropriate mode in accordance with the installation location of the TV and adjust the equalizer on-screen as desired. Press **OK** button to view equalizer submenu.

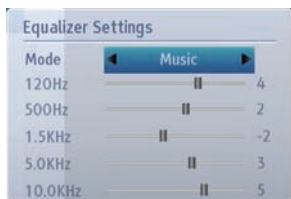

In equalizer menu, the preset can be changed to **Music**, **Movie**, **Speech**, **Flat**, **Classic** and **User**. Press the **MENU** button to return to the previous menu.

**Note:** Equalizer menu settings can be changed manually only when the **Equalizer Mode** is in **User**.

## Balance (Only for speaker)

This setting is used for emphasizing left or right speaker balance.

- Press **Left** or **Right** button to change the level of the balance. Balance level can be adjusted between **-31** and **+31**.

## Headphone

This setting is used to set the sound output when headphones are connected.

- Press **Up** or **Down** button to select **Headphone**.
- Press **Right** button to increase headphone volume level. Press **Left** button to decrease headphone volume level. Headphone volume level can be adjusted between 0 and 63.

## Sound Mode

This setting is used to set the **Sound Mode**. Highlight **Sound Mode** by using **Up** or **Down** button. Press **Left** or **Right** button to set.

You can select **Mono**, **Stereo**, **Dual I** or **Dual II** mode, only if the selected channel supports that mode.

## AVL

Sometimes there can be large changes in volume when switching from a DTV 5.1ch to a DTV 2ch, an ATV channel, or an external input. Using the AVL feature reduces these volume differences.

- Press **Up** or **Down** to highlight **AVL**. Press **Left** or **Right** button to set AVL as **On** or **Off**.

## Headphone/Lineout

Set this option as **Lineout**, when an external amplifier is connected to the TV using the headphone jack. If headphones are connected to the TV, set this option as **Headphone**.

## Dynamic Bass

**Dynamic Bass** is used to increase bass effect of the TV set. Select **Dynamic Bass** using **Up** or **Down** buttons and press **Left** or **Right** button to set.

## Surround Sound

In the **Sound** menu, press **Up** or **Down** to highlight **Surround Sound**. Press **Left** or **Right** button to set **Surround Sound** as **On** or **Off**.

## Digital Out

This setting enables you to set **Digital Out** preference as **Compressed** or **PCM**. You should set this feature in accordance with the received broadcast's content. Select **Digital Out** using **Up** or **Down** button and then use **Left** or **Right** button to set.


# Settings Menu Operation, Conditional Access

## Configuring Your TV's Settings

Detailed settings can be configured to suit your personal preferences.

### Viewing Settings Menu

Press **MENU** button and select **Settings** by using **Left** or **Right** button. Press **OK** button to view **Settings** menu.

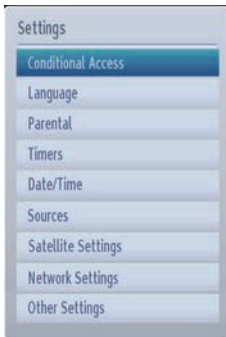

Press **Up** or **Down** button to highlight a menu item. Press **OK** button to select an item. Press **MENU** button to exit.

**Conditional Access:** This setting controls conditional access modules when available. Use **Up** or **Down** button to highlight **Conditional Access**. Press **OK** button to continue.

**Language:** Configures language settings.

**Parental:** Configures parental settings.

**Timers:** Sets timers for selected programmes.

**Date/Time:** You can configure date/time preferences by using this menu screen.

**Sources:** Enables or disables selected source options.

**Network Settings:** Configures network settings.

**Satellite Settings:** Configures satellite settings.

**Other Settings:** Displays other setting options of the TV set.

## Using a Conditional Access Module

The *Common Interface Slot*, situated on the side of the television, enables the insertion of a CAM (Conditional Access Module) and card. These are purchased from a service provider and allow additional subscription broadcasts to be viewed. For more information, see a service provider.

**IMPORTANT: Insert or remove the CAM only when the TV is SWITCHED OFF.**

- In order to watch certain digital channels, a conditional access module (CAM) is necessary. This module must be inserted in the CI slot of your TV.
  - Obtain the Conditional Access Module (CAM) and the viewing card by subscribing to a pay channel company, then insert those to the TV using the following procedure.
  - Insert the CAM and then the viewing card to the slot that is located in the terminal cover at the rear side of the TV.
  - The CAM should be correctly inserted, it is impossible to insert fully if reversed. The CAM or the TV terminal may be damaged if the CAM is forcefully inserted.
- Connect the TV to the mains supply, switch on and then wait for few moments until the card is activated.
- When no module is inserted, "**No common interface module detected.**" message appears on the screen.
  - Refer to the module instruction manual for details of the settings.

### Viewing Conditional Access Menu (\*)

(\*) These menu settings may change depending on the service provider.

Press **MENU** button and select **Settings** by using **Left** or **Right** button. Press **OK** button to view **Settings** menu. Use **Up** or **Down** button to highlight **Conditional Access** and press **OK** to view menu items.

# Setting Timers

## Timers

To view **Timers** menu, press **MENU** button and select **Settings** by using **Left** or **Right** button. Press **OK** button to view **Settings** menu. Use **Up** or **Down** button to highlight **Timers** and press **OK** to continue:

### Setting Sleep Timer

*The television can be set to turn itself off after a certain length of time.*

- Highlight **Sleep Timer** by using **Up** or **Down** button.
- Use **Left** or **Right** button to set. The timer can be set to **Off** or between 30 minutes and 2 hours (120 minutes) in steps of 30 minutes.

### Setting Programme Timers

*This feature will set the television to go to a specific channel at a certain time. It can be used to view a particular programme or can be used to view a series of programmes by setting the **Repeat** option to **Daily**, **Weekly** or **Weekdays**.*

Press **Down** button to highlight a timer on an event. Programme timer function buttons will be displayed on the screen.

**Note:** *This feature will be available only when a timer has been programmed.*

### Adding a Timer

Press **YELLOW** button on the remote control to add a timer. The **Add timer** menu appears on the screen:

**Network Type:** Set the network type to filter the channels that will be listed in the **Channel** option.

**Timer Type:** You can select timer type as **Record** or **Timer**.

**Channel:** Changes channel by using **Left** or **Right**.

**Record Type:** You can select timer type as **Record** or **Timer**.

**Date:** Enter a date using the numeric buttons.

**Start:** Enter a starting time using the numeric buttons.

**End:** Enter an ending time using the numeric buttons.

**Duration:** Displays duration between the starting and ending time.

**Repeat:** Sets a timer to be repeated as **Once**, **Daily**, **Weekly** or **Weekdays**.

**Change/Delete:** There are two options available, **Allowed** and **Disallowed**. If this option is set as **Disallowed**, a PIN(\*) is required to change or delete the programmed timer.

**Playback:** Controls the permission for the playback of the programme that will be recorded. There are three options available, **Use parental settings**, **Disallowed** and **Allowed**. To set this option as **Allowed**, user should enter a PIN(\*). This option is only available if the **Timer Type** is set to **Record**.

*(\*) Default PIN can be set to 0000 or 1234. If you have defined the PIN(is requested depending on the country selection) during the **First Time Installation** use the PIN that you have defined.*

Press **OK** button to save the timer. Press **RET/BACK** button to cancel.

### Editing a Timer

- Select the timer you want to edit by pressing **Up** or **Down** button.
- Press **GREEN** button to edit.
- When finished with editing, press **OK** button to save. You can press **RET/BACK** button to cancel.

### Deleting a Timer

- Select the timer you want to delete by pressing **Up** or **Down** button.
- Press **RED** button.
- Select **Yes** by using **Left** or **Right** button and press **OK** to delete the timer. Select **No** to cancel.



# Recording Configuration

This feature is not available in all countries. For the countries where this feature is available a USB connected storage device will be required.

## Recording Configuration

You can configure recording preferences using this menu. Press **MENU** button and select **Settings** by using **Left** or **Right** button. Then select **Recording Configuration** item in the sub-menu and press **OK** button. The following menu will be displayed.



**Start early:** You can set recording timer's starting time to start earlier by using this setting.

**End late:** You can set recording timer's end time to end later by using this settings.

**Max Timeshift:** This setting allows you to set the maximum time allowed for timeshifting. Duration options are approximate and can change accordingly, depending on the broadcast received.

**Auto Discard:** You can set the **Discard** type as **None**, **Oldest**, **Longest** or **Shortest**. If the **Discard** type is not set to **None**, you can set the **Unplayed** option as **Included** or **Excluded**.

**Hard disk information:** You can view detailed information about the USB storage device connected to your TV.

**Format Disk:** If you want to delete all files on the connected USB storage device and convert the disk format to FAT32, you can use this option.

Press **OK** button while the **Format Disk** option is highlighted. A menu will appear on the screen, requiring you to enter the PIN(\*). After you enter the PIN, a confirmation message will be displayed. Select **YES** and press **OK** to start formatting the USB storage device. Select **NO** and press **OK** to cancel.

(\*Default PIN can be set to **0000** or **1234**. If you have defined the PIN(is requested depending on the country selection)

during the **First Time Installation** use the PIN that you have defined.

### **IMPORTANT:**


**Note 1:** ALL the data stored on the USB storage device will be lost and then the disk format will be converted to FAT32 if you activate this feature. Ensure that you backed up important recordings or data in the device before you format it.

**Note 2:** The USB storage device will not work on other media players if formatted on the TV.

## Configuring Date/Time Settings

You can configure date/time preferences by using this menu screen.

- Select **Date/Time** in the Settings menu to configure Date/Time settings. Press **OK** button.

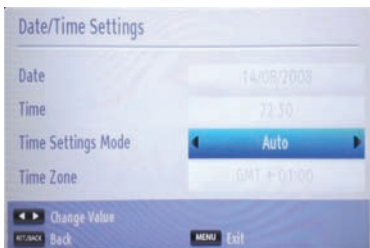

Use **Up** or **Down** button to highlight the **Time Settings Mode**. It can be set to **Auto** or **Manual**.

When **Auto** is selected, **Date**, **Time** and **Time Zone** options will not be available to be set. If **Manual** option is selected as the **Time Zone** can be altered:


Press **Up** or **Down** button to select **Time Zone**.

Use **Left** or **Right** button to change the **Time Zone** between GMT-12 or GMT+12. Date/Time on the top of the menu list will then change according to the selected Time Zone.

**Note:** For countries without Digital channels, only the Date and Time option will be displayed.

## Configuring Source Settings

You can enable or disable selected source options. The TV will not switch to the disabled source options when the **"SOURCE - [Source Icon]"** button is pressed.

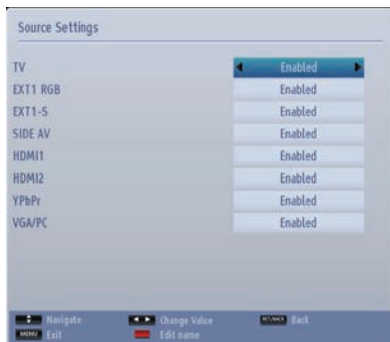

- Select **Sources** in the **Settings** menu and press **OK** button.
- Press **Up** or **Down** buttons to select a source.
- Use **Left** or **Right** button to enable or disable the selected source. Changes are automatically stored.

## Input Selection


Use the Input Selection window if the television does not switch over to a connected source automatically.

Press **"SOURCE - [Source Icon]"** button on your remote control for directly changing sources. Use the **Up** or **Down** button to highlight an input and press **Right** or **OK** button to select.

# Satellite Settings

## Configuring Satellite Settings


Select **Satellite settings** in the Settings menu to configure satellite settings. Press **OK** button.

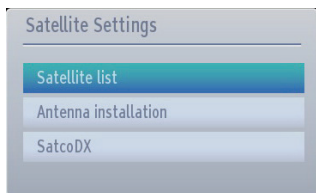

**Satellite List:** To view the list of available satellites select this option. You can add, delete or edit the satellites in the list.

**Antenna Installation:** You can change antenna settings and start a new satellite scan.

**SatcoDX (optional):** There are two options regarding SatcoDX feature.

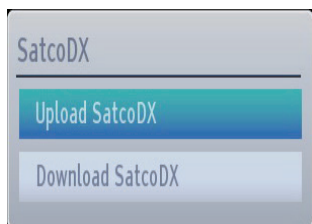

You can download or upload SatcoDX data. In order to perform these functions a USB device must be connected to the TV first.

You can upload current services and related satellites & transponders in TV, to a USB device (file extension will be "sdx").

In addition to the uploading feature you can download one of the SatcoDX files stored in USB device, to the TV.

When you select one of these SatcoDX files, all services and related satellites and transponders in the selected file will be stored in TV. If there are any installed terrestrial, cable and/or analog services, they will be kept and only satellite services will be removed.

Afterwards, check your antenna settings and make changes if necessary. An error message stating "No Signal" may be displayed if antenna settings are not configured properly.

# Other Controls

## Configuring Other Settings - General

You can configure the settings of your TV. Select **Settings** from main menu and press **OK** to view the **Settings** menu. Press the **MENU** button on the remote control to exit.

To view general configuration preferences, select **Other Settings** in the **Settings** menu and press **OK** button.



### Operation

- Press **Up** or **Down** button to select an item.
- Use **Left** or **Right** button to set an option or press **OK** button to view a sub-menu.

### Menu Timeout

To set a specific display timeout for menu screens, set a value for this option.

In the **Other Settings** menu, select **Menu Timeout** and choose **15 sec**, **30 sec**, **60 sec** or **Off** using **Left** or **Right** button.

### Scan Encrypted Channels

When this setting is set as **Yes**, search process will locate the encrypted channels as well. If it is set as **No** manually, encrypted channels will not be located while in automatic search or manual search. Scan Encrypted Channel feature will always be **Yes** after performing first time installation.

- In the **Other Settings** menu, use **Up** or **Down** button to select **Scan Encrypted Channels**.

- Press **Left** or **Right** button to set this function as **Yes** or **No**.

### Hbb TV

If you set this option to **On**, HbbTV services such as catch-up services, video-on-demand, EPG, games will be available if the broadcast supports. You can disable this feature by setting this option to **Off**.


### Blue Background

If the signal is weak or absent, the TV will automatically change to a blue screen. To enable this, set **Blue Background** to **On**.

- In the **Other Settings** menu, select **Blue Background** and choose **On** or **Off** using **Left** or **Right** button.

### Software Upgrade

This feature helps to keep your TV updated. It works automatically and searches for new information when available.

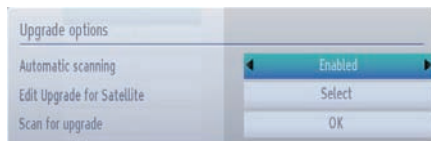

You can enable or disable automatic upgrade by setting the **Automatic Scanning** option.

You can select the satellite, which is used for updating process by setting **Edit Upgrade for Satellite** option.

You can manually start searching for new software by selecting **Scan for upgrade** and pressing **OK** button.

Press **RET/BACK** or **MENU** button to cancel the process.

### Application Version

Displays the current software version.

### Hard of Hearing

If the broadcaster enables any special signal concerning the audio, you can set this setting as **On** to receive such signals.

- Use **Up** or **Down** button to select **Hard of Hearing** and then press **Left** or **Right** button to set this setting as **On** or **Off**.

## Audio Description

*Audio description refers to an additional narration track for blind and visually impaired viewers of visual media, including television and movies. The description narrator talks through the presentation, describing what is happening on the screen during the natural pauses in the audio (and sometimes during dialogue, if deemed necessary). You can use this feature, only if the broadcaster supports that additional narration track.*

- Highlight **Audio Description** by pressing **Up** or **Down** button.
- Press **OK** button to enter Audio Description submenu.
- Use **Up** or **Down** button to select Audio Description setup and then press **Left** or **Right** button to set this setting.

## Auto TV Off

You can set the timeout value of auto off feature. After the timeout value is reached and the TV is not operated for selected time, the TV will go off. Press **MENU** button and select **Settings** by using **Left** or **Right** button. Press **OK** button to continue. Use **Up** or **Down** button to select **Other Settings** and then press **OK** button. Select **Auto TV Off** using **Up** or **Down** button.

## Standby Search (optional)

If the Standby Search is set to On and the TV is in standby mode, the TV will look for any changes in the saved channels. Press **MENU** button and select **Settings** by using **Left** or **Right** button. Press **OK** button to continue. Use **Up** or **Down** button to select **Other Settings** and then press **OK** button. Select **Standby Search** using **Up** or **Down** button and use **Left** or **Right** button to set.

## Bisskey

Biss is a satellite signal scrambling system that is used for some broadcasts. If you need to enter BISS key on a broadcast, you can use Biss Key setting. Highlight Biss Key and press **OK** to enter keys on the desired broadcast.

## Store Mode

If you set **Store Mode** to **Enabled**, your TV's features will be illustrated on the top of the screen. To deactivate this feature, set to **Disabled**.

## Media Renderer

This feature allows to share/play files stored in a compatible mobile device on the TV. Install an appropriate software on your device and read instructions of the sharing software for more

information. Highlight **Media Renderer** and press **Left** or **Right** button to enable or disable.

## Power Up Mode

This setting configures the power up mode preference.

**Standby:** The TV always powers up in Standby mode.

**Last State:** The TV always switches on with the last selected channel/source.

## Virtual Remote

This function allows to control the TV via a wireless handheld device. Enable the **Virtual Remote** feature by pressing **Left** or **Right** button.

- Download a virtual remote controller application from the server of your mobile device application provider.
- Connect the TV and the mobile device to the same network. Refer to the **Network Settings** section to make the connection properly.

*This feature may not be supported on all mobile devices.*

## CEC

This function allows to control the connected HDMI-CEC compatible devices with the remote control of the TV. Press **Left** or **Right** button to enable the feature. Select the HDMI input of the connected device from the source menu. The TV remote is automatically able to control most functions of the device (navigate menus, change channels, launch the disc etc.).

To terminate this operation and control the TV via the remote again, press **QUICK** button on the remote, highlight the CEC RC Passthrough and set as Off by pressing **Left** or **Right** button. To control the CEC device again set the CEC RC Passthrough option as On. It is also possible to disable this feature in the configuration menu of the connected HDMI device. Refer to the operating instructions of the related device.

CEC operation is available if a CEC device is present. The CEC osd menu is accessed through the **QUICK** button on the remote. The CEC osd menu will only be displayed if a CEC product is connected.

## CEC Auto Power On

This function allows the connected HDMI-CEC compatible device to turn on the TV and switch to its input source automatically.

Press **Left** or **Right** button to enable or disable the feature.

**Note:** *The audio device should support System Audio Control feature and CEC option should be set as **Enabled**.*


## Configuring Network Settings

Press the **MENU** button to open the main TV menu. Highlight **Settings** by pressing **Left** or **Right** buttons and press **OK** to enter. Highlight **Network Settings** and press **OK**. While **Network Type** is highlighted, press **Left** or **Right** buttons to select connection type. Then highlight **Network**. Press **Left** or **Right** buttons and set as **Enabled** to enable the connection.

If you are going to make a wireless connection for the first time, press **YELLOW** button to search for available networks. If there is no presaved wireless profile on the TV, the TV will also search for available networks when set as **Enabled**. Choose a network from the list and press **OK**. You may have to enter a password if the selected network is password-protected. Enter the password and choose **OK** on the virtual keyboard and press **OK**.

Wait a while and **Configuration Status** will change to **Connected**. **IP address** and **Network name** will appear, which means that the connection is done.

## First enter to Toshiba Portal

At first time the  button is pressed, the TV downloads and installs the latest version of the portal if available. Then the introduction page of the portal setup wizard will be displayed. Press **OK** to proceed.


Next step is **End User License Agreement(EULA)**. The user have to scroll the whole text down to the end and check the box next to **Agree** by highlighting it and pressing the **OK** button. This means that the user accepts the agreement. Now, the user can highlight **Next** and proceed by pressing **OK**.

The user can skip the rest and portal page will be displayed. Account and profile settings can be configured later from the **Settings** menu on the portal.

## Using the Toshiba Portal

*You need to configure a home network before using this feature.*

Toshiba Portal is a service, where content (web sites, applications, online services etc.) can be viewed across the web through a simple user interface.

Press  button on the remote. Select the desired application using the navigation buttons. Press **OK** to launch the application or go to related link. This can

take up to a minute or two to connect.

From the portal page, the user can also access to the media files stored on USB storage devices connected to the TV or on the media servers in the same network.



## NOTES:

- Some applications may require an always-on broadband internet connection, firmware update and/or additional bandwidth dedicated to this product.
- Third party internet services may change, be discontinued or restricted at any time.
- Use of third party internet services may require registration by a computer and if needed payment of charges and membership.
- Service content and the interface may be changed at any time without prior notice.


*Toshiba makes no warranties about the content, availability or functionality of third-party content or services.*


## Using the Internet Browser

To use the internet browser, enter the portal first. Then launch the **Internet** application on the portal.


Predefined web sites and logos will be displayed on the browser's opening page to provide quick access. The user can add desired websites to the quick access page. To add a new quick access item, point the cursor to  whilst on the website and press **OK**. A submenu will be opened. Then point the cursor to  and press **OK**. On the next window, point the cursor to one of the quick access items and press **OK** to replace it with the new one.

To visit a web site move the cursor to the address bar using the navigation buttons on the remote and press **OK**. The virtual keyboard will be opened in a new window.

Enter the URL in the address bar. Point the cursor to  button and press **OK**.

To make a search on internet, enter a keyword in the address bar. Point the cursor to  button and press **OK**.

Press the **BACK** button to close the virtual keyboard or to go to previous page in the browser.

Press the  button to turn back to portal home page.

Press the **EXIT** button to close the portal and watch TV again.



## NOTES:

- The virtual keyboard or numeric buttons on the remote, which are associated with the letters of the alphabet, can be used for entries.
- The browser does not support multiple tabs.
- Some internet pages include flash content. These are not supported by the browser.
- The TV does not support any download processes from the web browser.

## Using YouTube™

*You need to configure a home network before using this feature.*

This TV allows you to view Youtube content.

Press "**Mybutton1** - " to connect YouTube directly. You can also press "" button on the remote and launch the YouTube application on the portal to access YouTube.

## NOTES:

- Depending on the network environment and use case, you may experience difficulty viewing the content.
- It may take time for the TV to load and begin playing back the content.
- Service content and the interface may be changed at any time without prior notice.

# Using 3D Feature

**IMPORTANT:** Before using the 3D feature of your TV, read the **Cautions for 3D** section in the back of the manual.

## Operating the 3D Mode “3D”

Press the **MENU** button on the remote and select the **Picture** icon using the Left or Right buttons. Press **OK** button to view **Picture Settings** menu. Use Up or Down buttons to select **3D Settings** and press **OK** to view. For quick access to **3D Settings** menu just press the **3D** button on the remote.

### Notes:

- If you should select suitable **3D Mode** before viewing. If appropriate mode is not selected, 3D image can not be correctly displayed.
- The 3D picture may not be visible or become distorted when watching under intense light conditions.
- If you experience screen flickering when watching 3D images in poor light conditions, you should turn the lamp off or dim the light.
- To view 3D contents or programmes in 3D mode you should wear the active 3D shutter eyewear that supports Bluetooth™ wireless technology. Note that this TV's 3D feature works only with its specific 3D eyewear.
- Use the 3D eyewear where there is no interference from other Bluetooth™ or Wireless LAN devices.

## LITHIUM BATTERY CAUTION

Danger of explosion if battery is incorrectly replaced. Replace with the same or equivalent type.

## Using the 3D Eyewear

Refer to the manual of the 3D eyewear before use for detailed information and instructions on usage.

Before using you should pair the eyewear with your TV. Press the power button on the eyewear to turn it on. You can enjoy viewing 3D images now by wearing the 3D eyewear. Turn off the eyewear after using it. The 3D eyewear may not operate correctly at the outside of the viewing range. Use the 3D eyewear within the viewing range. The range may be shortened depending on the obstacles between the TV and the 3D eyewear, or the surrounding environment.

### Cleaning and maintenance of the 3D eyewear

- Do not apply spray cleaners directly onto the surface of the 3D eyewear. This may result in discoloration and cracks and may cause the screen display to peel off.
- Make sure the cleaning cloth is soft and does not contain any foreign material or dust. Using a dirty cloth will damage your 3D eyewear.
- Do not drop or bend the 3D eyewear.

## Viewing 3D images

Incoming video signals can either be in 2D or 3D format. A 2D signal can be viewed in either 2D or 3D, and 3D can be viewed in either 2D or 3D. If the **3D Mode** option in the **3D Settings** menu is set to **Auto**, the TV can detect the 3D signal and change to 3D mode automatically. Otherwise you can change the viewing mode from the **3D Settings** menu. Press the **3D** button on the remote for quick access to the **3D Settings** menu.

The format of the 3D signal can be either **Side By Side** (SBS) or **Top Bottom** (TB). You may have to choose the correct format using the **3D Settings** menu if the TV can not detect it automatically.

Moreover, when viewing in 2D, you can change 2D images to 3D images by enabling the **Virtual 3D** option in the **3D Settings** menu.

3D format	Description
Side By Side (SBS)	Images for the left and right eyes are positioned side-by-side.
Top Bottom (TB)	Images for the left and right eyes are positioned at the top and bottom of the screen.

## Changing 3D format from the Quick menu

Press the **QUICK** button on the remote to open the quick menu. Press Up or Down buttons to select **3D Mode** option. Press Left or Right buttons to set the **3D Mode**.

## Watching 3D images in 2D format

First off all the TV should be in 3D mode. This means the TV should receive 3D image and **3D Mode** shouldn't be set to **Off** or **Game**. Press the **3D** button on the remote to open **3D Settings** menu quickly. Select **2D Only** option using the Up or Down buttons. Press Left or Right buttons to set 2D mode as **Left**, **Right** or **Off**.

## Watching 2D images in 3D format

Press the **3D** button on the remote to open **3D Settings** menu quickly. Select **Virtual 3D** option using the Up or Down buttons. Press Left or Right buttons to set as **On** or **Off**.


## Switching left and right images

The left and right eye shutter timing of the glasses can be swapped. If 3D images look blurred, switch the left and right sides of the 3D image.

Press the **3D** button on the remote to open **3D Settings** menu quickly. Select **Left/Right Swap** option using the Up or Down buttons. Press Left or Right buttons to set as **Left/Right** or **Right/Left**.



## 3D Settings

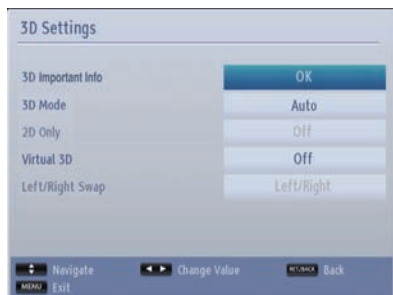

### 3D Important Info

Highlight **3D Important Info** and press **OK** button on the remote to display safety precautions for 3D viewing.

### 3D Mode

You can customize the 3D mode settings to provide the best viewing experience. Select one of the following modes to experience 3D image viewing:

**Auto:** Automatically switches to 3D mode if 3D information is detected from a digital broadcast or a HDMI source.

**Side by Side:** Displays 3D content which is originally in a form of side by side.

**Top bottom:** Displays 3D content which is originally in a form of top and bottom.

**Game:** When playing 1:1 games on your TV, each player can enjoy the game with a full screen using this feature. To do this, the game you want to play has to support Dual Play. And you need to put on the proper Dual Play glasses(sold separately). If a problem occurs by using **Game** mode, turn off/on the connected game console first and try again. Even if the game doesn't support dual play, in certain split-screen games it is possible to use dual play feature by setting the TV's **3D Mode** to **Side by Side** or **Top Bottom** according to the split screen type that the game includes.

**Off:** 3D function mode is turned off.

### 2D Only

If content is 3D but you want to watch it in 2D, you can switch to **2D Only** mode. There are 2 options (**LEFT** and **RIGHT**) to select which side of the content you want to watch in 2D.

### Virtual 3D

Conversion from 2D to 3D. You can enable or disable this feature by setting as On or Off.

### Left/Right Swap

You can use this setting to shift the phase of the 3D left/right broadcast.


## 3D Viewing Information

Refer to the size/distance guidelines below to experience 3D in the best possible way.

### Viewing Distance

Size (inch)	22	26	32	37	40	42	46	47	48	55
Viewing distance (m)	0,8	0,95	1,2	1,35	1,45	1,55	1,7	1,75	1,8	2

### Horizontal Viewing Angle

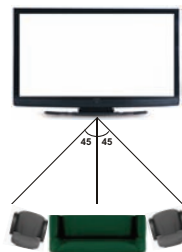

### Vertical Viewing Angle

It is strongly recommended that the eye level of the viewer should be same height as the center of the TV. In case that is not possible, tilt the TV accordingly in its stand or wall mount. The picture may not be visible or may look dark if you do not stay within the viewing angle.



## Supported 3D Content Resolutions

	HDMI, MBV	MBP, DTV	OTHER
1080p@24 FP	Supported	Not Supported	Not Supported
720p@50 FP	Supported	Not Supported	Not Supported
720p@60 FP	Supported	Not Supported	Not Supported
1080p FC	SBS, TB	SBS, TB	SBS, TB
720p FC	SBS, TB	SBS, TB	SBS, TB
1080i FC	SBS	SBS	SBS
OTHER	Not Supported	(*)	Not Supported

**Please note that if you apply 720p FC TB input; the picture will be scaled smaller than the original size in the middle of the screen.**

**SBS:** Side By Side

**TB:** Top Bottom

**MBP:** Media Browser Picture

**MBV:** Media Browser Video

**FC:** Frame Compatible

**FP:** Frame Pack

**in MBP: Supported only when,** the image's height is multiples of 2 and the image's width is multiples of 16 and if the image width is equal to the panel width or wider.

**in DTV: Supported only when,** the image's height is between 1700 and 1900 and the image's width is equal to 1280 or 720.

**(\*): Not supported** if the image provides 1080i resolution.

# USB Record Feature

This feature is not available in all countries. For the countries where this feature is available a USB connected storage device will be required.

This feature allows you to record and play back digital broadcast contents stored on a USB storage device. Before you use this function, connect a USB storage device to the TV first while the TV is switched off. You should then switch on the TV to enable the recording feature.

## Instant Recording

Press **REC** button to start recording an event instantly while watching a programme. When “**Press record to add more events**” message is displayed on the screen, you can press **REC** button on the remote control again to add the next event on the **Programme Guide to Timers** list to be recorded.

In this case, an OSD will be displayed, indicating the programmed events for recording. Press **Stop** button to cancel instant recording.

You can not switch broadcasts or view the **Media Browser** menu during the recording mode. While recording a programme or during the timeshifting, a warning message appears on the screen if your USB device speed is not sufficient.

## Timeshift Recording

Press **Pause** button while watching a broadcast to activate timeshifting mode. In timeshifting mode, the programme is paused and simultaneously recorded to the connected storage device.

Press **Play** button again to resume the paused programme from where you stopped. Press the **Stop** button to stop timeshift recording and return to the live broadcast.

Timeshift cannot be used while in radio mode.

## Watching Recorded Programmes

Select the **Recordings** from the **Media Browser** menu. Select an item from the list (if previously recorded). Press the **OK** button to view the **Play options** menu. Select an option then press **OK** button. Press the **Stop** button to stop a playback and return to the **Recordings** menu.

**Note:** Viewing main menu and menu items will not be available during the playback.

## Slow Forward

If you press **Pause** button while watching recorded programmes, the slow forward feature will be available. You can use “**Rapid advance - ►►**” button to slow forward. Pressing this button consecutively will change slow forwarding speed.


## About the USB Record Feature

- Recorded programmes are saved into the connected USB storage device. If desired, you can store/copy recordings onto a computer; however, these files will not be available to be played on a computer. You can play the recordings only via your TV.
- The TV supports only FAT32 formatted USB storage devices for recording functions. If this is not the case, the USB storage device should be formatted first using the **Format Disk** option in the **Settings/Recording Configuration** menu.
- To use recording feature your USB storage device should have at least 2 GB free space and be USB 2.0 compatible. If the USB storage device is not compatible an error message will be displayed.
- If the writing speed of the connected USB storage device is not sufficient, the recording may fail and the timeshifting feature may not be available.
- It is recommended to use USB storage devices for recording HD programmes.
- Lip Sync delay may occur during the timeshifting. Radio record is supported. The TV can record programmes up to ten hours.
- Recorded programmes are split into 4GB partitions.
- Do not plug out the USB storage device during a recording. This may harm the connected USB storage device.
- Multipartition support is available. A maximum of two different partitions are supported. The first partition of the USB storage device is used for PVR ready features. It also must be formatted as the primary partition to be used for the PVR ready features.
- Some stream packets may not be recorded because of signal problems, as a result sometimes the picture may freeze during playback.
- Record, Play, Pause, Display (for PlaylistDialog) keys can not be used when teletext is ON. If a recording starts from timer when teletext is ON, teletext is automatically turned off. Also teletext usage is disabled when there is an ongoing recording or playback.

# Using Media Browser

This TV allows you to enjoy photo, music or video files stored on a USB device or media server.

## Manual Start


To display **Media Browser** window, press the “” button on the remote control. The Media Browser menu is also accessible from the main menu. Press the **MENU** button on the remote. Select **Media Browser** by pressing **Left** or **Right** button and press **OK**.

Select the media type to be listed and press **OK**.

If there is more than one media source available, a list of devices and servers will be displayed. Highlight the device or server from the list and press **OK**.

## Auto Start

When you plug a USB storage device, the following menu will be displayed.

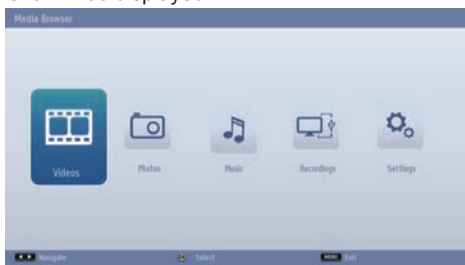

You can play or view music, video and picture files from an USB storage device connected to the USB port.

Moreover you can also play or view music, video and picture files from a media server on the same network.

To display the files with folders, select **Settings** tab and change **View Style** to **Folder**. So the selected type of files in the selected folder will be displayed. Additionally the **All** tab will be added to the main **Media Browser** menu. To list all available music, video and picture files in the selected folder at once, select **All** tab and press **OK** button.

If **View Style** is set to **Flat**, all selected type of files will be listed. If for instance, **Video** is selected in the main **Media Browser** menu, TV will search the source for all video files and list them.

### Note:

Some USB compliant devices may not be supported.

If the USB storage device is not recognized after power off/on or **First Time Installation**, plug the USB device out and power off/on the TV set. Then plug it in again.


- Do not use a USB Hub.
- You must obtain any required permission from copyright owners to use copyright content.  
*Toshiba cannot and does not grant such permission.*
- Depending on the file size and amount in your USB storage device or media server, it may take some time for loading to view. A message will be displayed on the screen when loading files from the USB device or media server.
- Only limited types of USB devices are supported. Therefore, it is suggested not to use USB for playing Media Player.
- Non-supported characters will be replaced with a square (□).

# Using Media Browser - continued

This TV allows you to enjoy photo, music or video files stored on a USB device or media server.

## Playing MP3 Files

To play mp3 files from a USB memory or media server, you can use this menu screen.

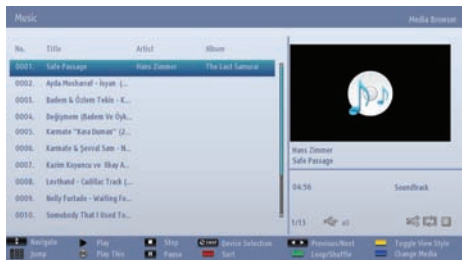


- **▼ / ▲:** Navigate menu.
- **Play (▶ button):** Start to play all files listed beginning with the selected one.
- **Stop (■ button):** Stop the playback.
- **Pause (⏸ button):** Pause/Resume the playback.
- **Red button:** Sort files by **Title**, **Artist** or **Album**.

**Note:** If the **Viewing Style** in **Media Browser Settings** menu is set to **Folder**, the files will be displayed as sorted and there is no need to sort files again by pressing the **RED** button. In that case the **RED** button will not function anyway.

- **Loop/Shuffle (Green button):** Press once to enable Loop. Press again to enable both Loop and Shuffle. Press once more to disable Loop. Press again to disable Shuffle. You can follow the disabled and enabled functions with the change of the icons.
- **Jump (Numeric buttons):** Type the file number using the numeric buttons on your remote to jump to a file directly. The file with the typed number will be only highlighted and will not be played.
- **Play This (OK button):** Play the selected file.
- **Previous/Next (Left/Right buttons):** Jump to previous or next file and play.
- **Yellow button:** Change viewing style.
- **Blue button:** Change media type.
- **Swap button:** Open the **Device Selection** menu. This option appears only when more than one media source is detected.

## Viewing JPEG Files

To view photo files from a USB Memory or media server, you can use this menu screen. When you select **Photos** in the main **Media Browser** menu, available image files will be filtered and listed on this screen.

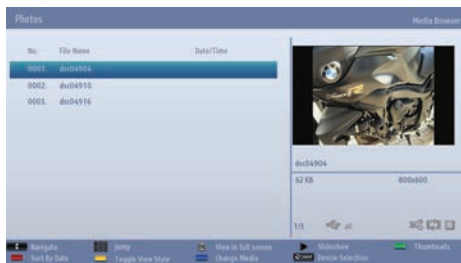


- **▼ / ▲:** Navigate menu.
- **Jump (Numeric buttons):** Type the file number using the numeric buttons on your remote to jump to a file directly.
- **OK:** View the selected image in full-screen.
- **Slideshow (▶ button):** Start the slideshow to view all the images automatically.
- **Green button:** View the images in thumbnails. Press again to turn back to previous layout.
- **Red button:** Sort files by date.
- **Yellow button:** Change viewing style.
- **Blue button:** Change media type.
- **Swap button:** Open the **Device Selection** menu. This option appears only when more than one media source is detected.

## Using Media Browser - continued

 This TV allows you to enjoy photo, music or video files stored on a USB device or media server.

### Slideshow Feature


You can use this feature to display all images automatically on your USB device or media server.



- **Pause (|| button):** Pause the slideshow.
- **Continue (▶ button):** Continue the slideshow.
- **Loop/Shuffle (Green button):** Press once to enable Loop. Press again to enable both Loop and Shuffle. Press once more to disable Loop. Press again to disable Shuffle. You can follow the disabled and enabled functions with the change of the icons.
- **Previous/Next (Left/Right buttons):** Jumps to previous or next file on slideshow. When pressed, the slideshow pauses.
- **Rotate (Up/Down buttons):** Rotate the image using up/down buttons. When pressed, the slideshow pauses.
- **Return/Back:** Back to file list.
- **Info button:** Display info bar.
- **3D Settings (3D button):** Press to view 3D Settings.

### Video Playback

When you select **Videos** from Media Browser menu, available video files will be filtered and listed on this screen. You can use **Up** or **Down** button to select a video file and press **OK** button to play a video.

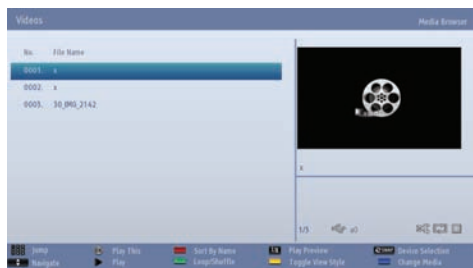

**Note:** If you select a subtitle file and press **OK** button, you can select or deselect that subtitle file.

**Jump (Numeric buttons):** Type the file number using the numeric buttons on your remote to jump to a file directly. The file with the typed number will be only highlighted and will not be played.

**Play This (OK button):** Play the selected file.

▼ / ▲: Navigate menu.

**LANG - (DI/II (Play Preview):** Display selected file in a small preview screen. Press again to stop preview.

**Red button:** Sort files by name.

**Play (▶ button):** Start to play all files listed beginning with the selected one.

**Yellow Button:** Change viewing style.

**Loop/Shuffle (Green button):** Press once to enable Loop. Press again to enable both Loop and Shuffle. Press once more to disable Loop. Press again to disable Shuffle. You can follow the disabled and enabled functions with the change of the icons.

**Blue:** Change media type.

**Swap button:** Open the **Device Selection** menu. This option appears only when more than one media source is detected.



**Play (▶ button):** Start the video playback.

**Stop (■ button):** Stop the video playback.

**Pause (|| button):** Pause the video playback.

**Rewind (◀◀ button):** Goes backward.

**Forward (▶▶ button):** Goes forward.

**3D Settings (3D button):** Press to view 3D Settings.


**Previous/Next (Left/Right buttons):** Plays the previous/next file.

**Subtitle/Audio (LANG - (DI/II button):** Set Subtitle/Audio.

**Green:** Jumps to the selected time.

**Ret/Back:** Back to file list.

**Yellow:** Open subtitle time correction menu.

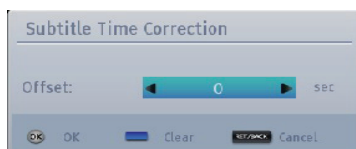

Press **OK** to confirm.

Press **BLUE** button to clear.

Press **RET/BACK** button to switch back to previous menu.

# Using Media Browser - continued

This TV allows you to enjoy photo, music or video files stored on a USB device or media server.

## Note:

You can set subtitles by using "**LANG - ON/OFF**" button during the playback. Selected subtitles may not be displayed correctly in some cases.


In order to display movie subtitles correctly, you should set a subtitle language. See the section, **Media Browser Settings** for selecting movie subtitle language.

## Recordings

You can play back, edit or delete previously recorded programmes stored on the USB storage device using **Recordings** menu.

To display **Recordings** menu, Press the **MENU** button on the remote. Select **Media Browser** by pressing **Left** or **Right** button and press **OK**. Select **Recordings** and press **OK**. Recordings menu will then be displayed with available recordings.

**IMPORTANT:** To view the previously recorded programmes in the **Recordings** window, you should first connect the USB storage device to your TV in which the programmes are stored.

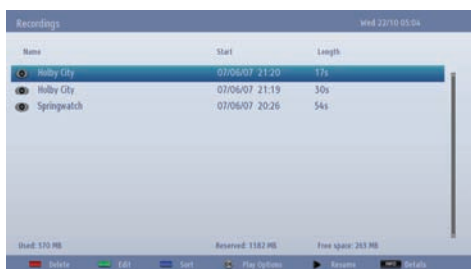


All the recordings are kept in a list. Select an item from the list by using **Up** or **Down** button.

**Red button:** Erases the selected recording.

**Green button:** Makes changes on the **Delete** and **Playback** options of the selected recording .

**Blue button:** Changes the order of the recordings. You can select from a wide range of sorting options.

**OK button:** Opens the **Play options** menu. Select an option by using **Up** or **Down** and press **OK**.

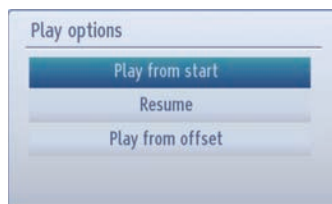


- **Play from start:** Plays the selected recording from the beginning.
- **Resume:** Recommences the selected recording.
- **Play from offset:** Specifies a playing point for the selected recording.

**Resume (▶ button):** Recommences the recording.

**Details (INFO - i button):** Displays information on the selected recording.

## Media Browser Settings

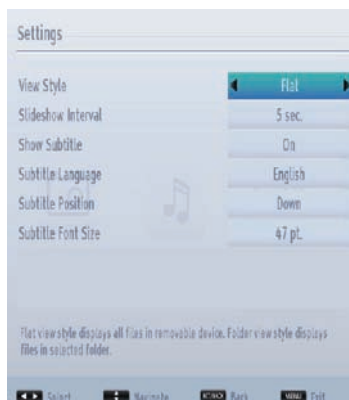

You can set your Media Browser preferences by using the **Settings** dialogue. Press **Up** or **Down** button to highlight an item and use **Left** or **Right** button to set.

**View Style:** Set default browsing mode. Set as **Flat** to list all selected type of files stored in the USB device or media server. Set as **Folder** to list all selected type of files in the selected folder.

**Slideshow Interval:** Set slide show interval time.

**Show Subtitle:** Set subtitle enabling preference.

**Subtitle Language:** Set supported subtitle language.

**Subtitle Position:** Set subtitle position as **Up** or **Down**.


**Subtitle Font Size:** Set subtitle font size.

## Using Media Browser - continued

This TV allows you to enjoy photo, music or video files stored on a USB device or media server.

### Using MENU button in Media Browser Mode

Pressing **MENU** button while in Media Browser mode displays the following menu screen:

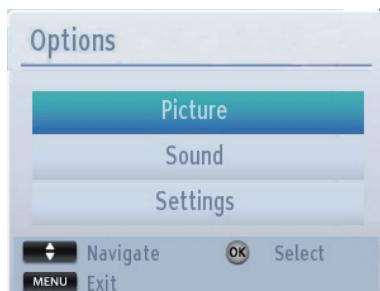

You can access **Picture**, **Sound** and **Settings** menu options using this screen. Press **MENU** again to exit from this screen.

### To Close the Media Player

- Press **EXIT** button on the remote control.



# Analogue Only Text Services

This television has a multi-page text memory, which takes a few moments to load.

## Analogue Text Services

*Before using the text services, the required language region must be chosen.*

- Select **Language** from the **Settings** menu.
- Highlight **Teletext** in the **Language Settings** menu and press **Left** or **Right** button to choose the required language region.

After the Teletext language is selected, press **MENU** button to exit.

## Using Text Button -TEXT

- To view text services press **TEXT**. Press **TEXT** again to superimpose text over a normal broadcast picture.
- Press **TEXT** again to return to normal viewing.
- Programmes cannot be changed until text is cancelled.
- The first text page shown will be the initial page.
- Any text page can be accessed by entering the 3 digit page number using the numbered buttons. Press **P▼/▲** or **Up/Down** buttons to go to the next/previous page.
- Four coloured titles will appear at the base of the screen. To access one of the four given subjects, press the relevant coloured button on the remote control.
- For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer.

Below is a guide to the functions of the remote control text buttons.

## Accessing Sub-Pages

If a text page has sub-pages, press Left/Right buttons or enter the sub-page number 0001, 0002, 0003 etc. to access.

## Revealing Concealed Text

To discover the solutions on quiz and joke pages press the "**INFO - i**" button.

## Holding a Page

At times it is convenient to hold a page of text. Press **OK** and "**HOLD**" will appear in the top left of the screen. The page will be held on screen until the button is pressed again.

## To display an initial page

Press **RET/BACK** to access an initial page. The one displayed is dependant on the broadcaster.

## Appendix A: PC Input Typical Display Modes

The following table is an illustration of some of the typical video display modes. Some, due to the display native resolution, are scaled automatically to enable correct image to be displayed.

Your TV may not support different resolutions. Supported resolution modes are listed below.

If you switch your PC to an unsupported mode, a warning OSD will appear on the screen.

Index	Resolution	Frequency
1	640x400	70Hz
2	640x350	85Hz
3	640x400	85Hz
4	640x480	60Hz
5	640x480	66Hz
6	640x480	72Hz
7	640x480	75Hz
8	640x480	85Hz
9	800x600	56Hz
10	800x600	60Hz
11	800x600	70Hz
12	800x600	72Hz
13	800x600	75Hz
14	800x600	85Hz
15	832x624	75Hz
16	1024x768	60Hz
17	1024x768	66Hz
18	1024x768	70Hz
19	1024x768	72Hz
20	1024x768	75Hz
21	1024x768	85Hz
22	1152x864	60Hz
23	1152x864	70Hz

Index	Resolution	Frequency
24	1152x864	75Hz
25	1152x864	85Hz
26	1152x870	75Hz
27	1280x768	60Hz
28	1360x768	60Hz
29	1280x768	75Hz
30	1280x768	85Hz
31	1280x960	60Hz
32	1280x960	75Hz
33	1280x960	85Hz
34	1280x1024	60Hz
35	1280x1024	75Hz
36	1280x1024	85Hz
37	1400x1050	60Hz
38	1400x1050	75Hz
39	1400x1050	85Hz
40	1440x900	60Hz
41	1440x900	75Hz
42	1600x1200	60Hz
43	1680x1050	60Hz
44	1920x1080	60Hz
45	1920x1200	60Hz

## Appendix B: AV and HDMI Signal Compatibility (Input Signal Types)

Source	Supported Signals		Available
EXT (SCART)	PAL		○
	NTSC 60		○
	RGB 50/60		○
	SECAM		○
Side AV	PAL 50/60		○
	NTSC 60		○
	SECAM		○
YPbPr	480I	60Hz	○
	480P	60Hz	○
	576I	50Hz	○
	576P	50Hz	○
	720P	50Hz	○
	720P	60Hz	○
	1080I	50Hz	○
	1080I	60Hz	○
HDMI	480I	60Hz	○
	480P	60Hz	○
	576I	50Hz	○
	576P	50Hz	○
	720P	50Hz	○
	720P	60Hz	○
	1080I	50Hz	○
	1080I	60Hz	○
	1080P	24Hz 25Hz 30Hz 50Hz 60Hz	○

**Note:** In some cases a signal on the LCD TV may not be displayed properly. The problem may be an inconsistency with standards from the source equipment (DVD, Set-top box, etc.). If you do experience such a problem please contact your dealer and also the manufacturer of the source equipment.

## Appendix C: PIN Information

Before connecting any external equipment, turn off all main power switches. If there is no switch, remove the mains plug from the wall socket.

Signal information for Mini D-sub 15 pin connector

Pin No.	Signal name	Pin No.	Signal name	Pin No.	Signal name
1	R	6	Ground	11	NC
2	G	7	Ground	12	NC
3	B	8	Ground	13	H-sync
4	NC*	9	NC	14	V-sync
5	NC	10	Ground	15	NC

\* NC = not connected

## Appendix D: Supported File Formats for USB Mode

Media	Extension	Format		Notes
		Video	Audio	
Movie	.dat, .mpg, .mpeg	Mpeg1,2	MPEG1/2 Layer 1/2/3, AAC/HEAAC, AC3/EAC3, LPCM/ADPCM	1080P@30fps 50Mbit/sec
	.ts, .trp, .tp, .m2ts	MPEG2, H.264, VC1, AVS, MVC	MPEG1/2 Layer 1/2/3, AAC/HEAAC, AC3/EAC3, LPCM/ADPCM	H.264:1080Px2@ 25fps 1080P@50fps MVC: 1080P@24fps Other: 1080P@30fps 50Mbit/sec
	.vob	MPEG2	MPEG1/2 Layer 1/2/3, AC3, LPCM	1080P@ 30fps 50Mbit/sec
	.mkv	MPEG1,2,4, XviD, H.264, VC1,WMV3,	MPEG1/2 Layer 1/2/3, AAC/HEAAC, AC3/EAC3, LPCM	H.264:1080Px2@25fps 1080P@50fps 1080P@30fps 50Mbit/sec
	.mp4, .mov	Motion JPEG	MPEG1/2 Layer 3, AAC/HEAAC, AC3/EAC3, LPCM/ADPCM	H.264: 1080Px2@25fps 1080P@ 50fps Other: 1080P@30fps 50Mbit/sec
	.avi	MPEG1,2,4 Xvid H.264, VC1,WMV3, Sorenson H.263 Motion JPEG	MPEG1/2 Layer 1/2/3, AAC/HEAAC, AC3/EAC3, LPCM/ADPCM, WMA	H.264: 1080Px2@25fps 1080P@50fps 1080P@30fps 50Mbit/sec
	.fla, .flv	H.264, Sorenson H.263	MPEG1/2 Layer 3, AAC/HEAAC, LPCM/ADPCM	H.264: 1080Px2@25fps 1080P@ 50fps 1080P@30fps 40Mbit/sec
	.3gp	MPEG4, H.264		1920x1080@30P 20Mbit/sec
	.asf, .wmv	MPEG2,4, XviD, H.264, VC1,WMV3	MPEG1/2 Layer 1/2/3, AAC/HEAAC, AC3/EAC3, LPCM, WMA	1080P@ 30fps 50Mbit/sec
Music	.mp3		MPEG1/2 Layer 1/2/3 (MP3)	
	.wav		LPCM	
	.WMA/ASF		WMA, WMA Pro	
	.m4a/ .aac		AAC, HEAAC	
Photo	.jpg, .jpeg	Baseline		MAX WxH = 14592x12288 Up to 8 MegaByte
		Progressive		
	.png	non-interlace		
		interlace		
.bmp				
Subtitle	.sub	-	-	Sub1, Sub2, Sub3
	.srt	-	-	

# Cautions for 3D

## Important information for 3D viewing

### CAUTION

- The 3D function has been designed for private use and entertainment in your home environment. Please note that any commercial use of the 3D function could lead to copyright infringement of authors' rights. Toshiba asks you to respect the intellectual property rights of third parties.

### About handling the 3D glasses

- **Do not leave the 3D glasses or the accessories within the reach of small children.** Inhaling or swallowing them may cause suffocation or lesions in the stomach wall. If swallowed, consult a doctor immediately.
- **Do not repair, modify, or disassemble the 3D glasses by yourself.** Doing so may cause you to become indisposed while viewing 3D images.
- **Do not expose the glasses to excessive heat such as sunshine, fire, or the like.**

### About the 3D glasses

- **Do not use the 3D glasses if they are not working properly or broken.** Continuing to use them in such a state may cause injury, eye strain, or indisposition. Do not use the 3D glasses if they are broken or have any cracks.
- **Do not stand or walk while wearing 3D glasses.** You may lose your balance which could result in falls or other accidents.
- **Do not wear the 3D glasses for any purpose other than viewing 3D programming.** 3D glasses do not function as sunglasses.
- **Do not drop, exert pressure on, or step on the 3D glasses.** Doing so may damage the glass section, which may result in injury. Exposing the 3D glasses to liquid or excessive heat may damage the function.
- **If your nose or temple turns red, or you feel pain or discomfort, stop using the 3D glasses.** Such symptoms as above may occur if you keep wearing them for a long time, which may also cause indisposition.

### Cautions on watching 3D images

- **Some viewers may experience a seizure or blackout when exposed to certain flashing images or lights contained in certain 3D television pictures or video games.** Anyone who has had a seizure, loss of awareness, or other

symptoms linked to an epileptic condition, or has a family history of epilepsy, should contact a health care provider before using the 3D function.

- **Avoid use of the 3D function when under the influence of alcohol.**
- **If you are ill or feel ill, you should refrain from viewing 3D images, and consult your health care provider as may be appropriate.**
- **If you experience any of the following symptoms when viewing 3D video images, stop viewing and contact your health care provider:** Convulsions, eye or muscle twitching, loss of awareness, altered vision, involuntary movements, disorientation, eye strain, nausea/vomiting, dizziness, headaches.
- **If you feel eye fatigue or other discomfort from viewing 3D video images, remove the 3D glasses and discontinue use until the condition is eliminated.**
- **Viewing in 3D may cause dizziness and/or disorientation for some viewers.** Therefore, to avoid injury do not place your TV near open stairwells, balconies, or wires. Also do not sit near objects that could be broken if accidentally hit.
- **When viewing 3D images, always wear 3D glasses.** Watching 3D images without 3D glasses may cause eye strain. Use specified 3D glasses.
- **Do not wear 3D glasses or watch 3D images from steep angles or while lying down.** The 3D effect is lost in these conditions and eye strain may result.
- **Use the 3D glasses at the proper viewing angle and distance.** It is recommended that the viewer's eyes and 3D glasses are level with the screen.
- **If you have prescription eye glasses or contact lenses, wear the 3D glasses over them.** Watching 3D images without appropriate eyewear may cause eye strain.
- **If 3D images often appear in double or if you cannot see the images in 3D, stop viewing.** Continuous viewing may cause eye strain.
- **Due to the possible impact on vision development, viewers of 3D video images should be age 6 or above.** Children and teenagers may be more susceptible to health effects from viewing 3D images and should be closely supervised.

- **For optimal 3D effect and to avoid eye fatigue it is important that you properly select your viewing position.** The best viewing position is with your eyes at the same level as the center of the display

**IMPORTANT:** If you see a double image, your eyes are either too high or too low in relation to the horizontal center of the screen.

Adjust your position so that it is closer to the center to avoid eye fatigue and to enjoy optimum 3D effects.

- **Watching TV while sitting too close to the screen for an extended period of time may cause eye strain.** The ideal viewing distance should be at least three times the screen height.
- **Switching left and right images.** The left and right eye shutter timing of the glasses can be swapped. If 3D images look blurred, switch the left and right sides of the 3D image.

## Notes on watching the TV

- **3D effect and image quality may vary depending upon content quality and display device capability/functionality/settings.**
- **If you use any device, such as a mobile phone or mobile wireless device, near the 3D glasses, the 3D glasses may not work correctly.**
- **Use the product in the following temperature range; otherwise, the quality of the 3D image or the reliability of the product cannot be guaranteed.**
  - **3D glasses:** 0 °C - 50 °C
  - **TV:** 5 °C - 35 °C (41 °F - 94 °F)
- **If you use a fluorescent light, it may flicker depending on the frequency of the light. In this case, reduce the brightness of the fluorescent light, or use another light. (It is not recommended to watch the TV in a dark room, especially for children.)**
- **Wear the 3D glasses properly, otherwise you may not see the correct 3D image.**
- **When not viewing 3D images on this unit, take off the 3D glasses; otherwise, it may be difficult to see the display on other products such as PC, digital clock or calculator, etc.**
- **To active the 2D to 3D conversion function set the Virtual 3D option in the 3D Settings menu as On.**
- **The 2D to 3D conversion function is meant for enjoyment of 2D home video, and other 2D content you create, in 3D according to your personal preferences.**

*Note: The effect you may see depends on Picture content.*

- **The 2D to 3D conversion function is not intended for use with pre-recorded 2D copyrighted content owned by a third-party unless the copyright owner has given direct or indirect permission, or unless applicable law permits such use.**

## About the connecting cable

- **Use a high-speed and high-quality HDMI cable when you connect a device such as 3D compatible BD player or PC to the TV. When you use a standard HDMI cable, 3D images may not be shown.**

## Specifications and Accessories

### Broadcast Systems/Channels

DVB-T MPEG2, DVB-T MPEG4 HD,  
DVB-C MPEG2, DVB-C MPEG4  
DVB-S / S2 MPEG2, DVB-S / S2 MPEG4 HD

### Video Input

Stereo PAL, SECAM, NTSC 4.43

Nicam

### External Connections

<b>1-SCART 1</b>	Input	21-pin SCART	RGB, A/V
<b>2-SCART-S (via SCART 1)</b>	Input	21-pin SCART	S-Video
<b>3-SIDE AV</b>	Input	Side AV Cable input	Video + Audio L + R
<b>4-HDMI 1/2</b>	Input	Type A	
<b>5-PC</b>	Input	Mini D-Sub 15-Pin Analogue	RGB Signal
<b>6-Digital Audio</b>	Output	S/PDIF	(Coaxial)
<b>7-YPbPr</b>	Input	YPbPr Connection Jack	
<b>8-LAN port</b>		RJ-45	
<b>USB Ports</b>		Media Browser Interface Version: USB 2.0	
		USB Class: Mass Storage	
		File System: FAT32	

For sets with built in wireless unit  
the Home network with a wireless  
router must be compatible with;

IEEE 80211 a/b/g/n  
Security Protocols WEP 64/128, WPA, WPA2, TKIP, AES, WAPI.  
3.5mm stereo

### Headphone Socket

### Operating Conditions

Temperature 5°C - 35°C (41°F - 94°F)  
Humidity 20 - 80% (non-condensing)

### Supplied Accessories

Remote Control  
2 batteries (AAA, IEC R03 1.5V)  
Four screws  
Side AV cable  
YPbPr Connection Cable  
Stand fixing cover  
P Clip  
2 Active Shutter 3D Glasses  
Active shutter 3D glasses – Toshiba FPT-AG04G are available from the  
retail outlet or Toshiba service company.


40L5445DG / 40L5441DG

40L5443DG Optional Accessories

	40" L
Energy Efficiency Class	A+
Visible Screen Size (approx.)	102 cm / 40"
On Mode Power Consumption (approx.) (*)	46 W
Annual Power Consumption (approx.) (**)	67 kWh
Standby Power Consumption (approx.)	< 0.50 W
Screen Resolution (pixels)	1920 x 1080
Display	16:9
Sound Output (at 10% distortion)	2 x 8
Power Consumption Model (approx.)	75 W
Weight TV with stand	14.0 kg
Gross weight	18.0 kg
TV without stand	11.0 kg

(\*) Tested in accordance with IEC 62087-BD in default settings.

(\*\*) Energy consumption 67 kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

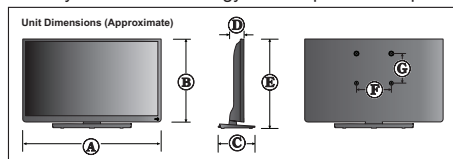

Specification is subject to change without notice.

	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)	F (mm)	G (mm)
40L544*DG	925.00	551.00	250.00	39.00	604.00	200.00	200.00



## License Information

- The terms HDMI and High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



- DVB is a registered trademark of the DVB Project.
- [1] EIA/CEA-861-D compliance covers the transmission of uncompressed digital video with high-bandwidth digital content protection, which is being standardized for reception of high-definition video signals. Because this is an evolving technology, it is possible that some devices may not operate properly with the television.
- YouTube and the YouTube logo are trademarks of Google Inc.

### MP3 licence letter

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

### MP4 licence letter

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (I) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD (MPEG-4 VIDEO) AND/OR (II) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

### AVC licence letter

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (I) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (II) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

### License Notification

#### TRADEMARK ACKNOWLEDGMENT

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



#### Disposal...

The following information is only for EU-member states:

#### Disposal of products

The crossed out wheeled dust bin symbol indicates that products must be collected and disposed of separately from household waste. Integrated batteries and accumulators can be disposed of with the product. They will be separated at the recycling centres.

The black bar indicates that the product was placed on the market after August 13, 2005.

By participating in separate collection of products and batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health.

For more detailed information about the collection and recycling programmes available in your country, please visit our website ([www.toshiba.eu/recycling](http://www.toshiba.eu/recycling)) or contact your local city office or the shop where you purchased the product.



#### Disposal of batteries and/or accumulators


The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste.

If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the European Battery Directive, then the chemical symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol.

By participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health. For more detailed information about the collection and recycling programmes available in your country, please visit our website ([www.toshiba.eu/recycling](http://www.toshiba.eu/recycling)) or contact your local city office or the shop where you purchased the product.



## Q & A Section

	Question	Answer
Sound	Why is there no sound or picture?	Check if the TV is not in standby mode Check the mains plug and all mains connections
	Why is there a picture but no sound?	Check if the volume has not been turned off or sound mute has not been selected
	Why does the sound come only from one speaker when stereo sound is selected?	Check the balance in the SOUND menu if it has been set to one side or not
	Why is the soundtrack in English when a different audio language has been selected?	The programme is currently being broadcast with an English soundtrack only
Picture	What can cause a poor picture?	Interference or a weak signal. Try a different TV station
	Why isn't the video / DVD being played shown on screen?	Make sure the Blu-ray or DVD player is connected to the TV as illustrated in the beginning chapters, then select the correct input by pressing the <b>SOURCE</b> -  button on the remote
	Why is the Blu-ray / DVD player in black and white?	Check if the correct input has been chosen or not
	Why are there horizontal stripes and/or blurred images on the screen when in PC mode?	The phase may need adjusting. Select PC settings and highlight Phase and adjust until the picture is clear
General	Why doesn't the remote control work?	Check if the batteries are exhausted or inserted incorrectly
	Why doesn't the Media browser feature operate?	Make sure the USB stick / HDD is connected correctly. Incorrect operation may occur from a USB Hub connection. Check your network setup if using a media server
	Why digital subtitles are not shown on screen when they are selected?	Subtitles are not currently being transmitted by the broadcaster
	Why is the digital channel locked?	Parental control is activated. Check parental settings
	Why are some encrypted digital channels unavailable?	Your subscription needs upgrading. Contact your service provider
	Why does the active standby LED sometimes take longer to go out?	When in active standby, the TV's active standby will automatically search all available channels for updates, provided automatic update is enabled. The required time to do this may vary. Led blinks as red and green in this mode
	Why don't the controls of the TV work?	Check if CHILD LOCK is selected or not
	What is DVB-T?	Digital Video Broadcast via an aerial / antenna
	What is DVB-C?	Digital Video Broadcast via a cable system
	What is DVB-S/S2?	Digital Video Broadcast via a Satellite dish
	How are radio channels selected?	You can select them via Channel list
	What can be done if the PIN is forgotten?	You can reset the TV and perform the <b>First Time Installation</b> again. Ensure that no one else is aware of this procedure by securely storing the Owner's Manual If you are asked to enter a PIN to perform the <b>First Time Installation</b> consult your authorized retailer
	Why don't the networked devices work?	Check the LAN cables if they are connected properly or not. If it is wireless connection, make sure the wireless network settings are done accordingly
Why doesn't the recording function work?	Try switching off the TV and then re-inserting the USB device while the TV is switched off	
Why "USB is too slow" message is displayed on the screen while starting a recording?	Try restarting the recording. If you still get the same error, it is possible that your USB disk does not meet the speed requirements. Try connecting another USB disk	

## REACH information

The European Union (EU) chemical regulation, REACH (Registration, Evaluation, Authorization and Restriction of Chemicals), entered into force on 1 June 2007, with phased deadlines to 2018.

Toshiba will meet all REACH requirements and is committed to provide our customers with information about the presence in our articles of substances included on the candidate list according to REACH regulation.

Please consult the following website [www.toshiba.eu/reach](http://www.toshiba.eu/reach) for information about the presence in our articles of substances included on the candidate list according to REACH in a concentration above 0.1 % weight by weight.

Toshiba hereby declares that this product with an integrated Wireless Function is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.



EU Conformity Statement



This product is carrying the CE-Mark in accordance with the related European Directives.

Responsible for CE-Marking is TOSHIBA, 23 Davy Road, Plymouth, PL6 8BY UK.

This product is labeled with the CE Mark in accordance with the related European Directives, notably Low Voltage Directive 2006/95/EC, Electromagnetic Compatibility Directive 2004/108/EC and RoHS Directive 2011/65/EU. Furthermore the product complies with the Ecodesign Directive 2005/32/EC (EuP) and 2009/125/EC (ErP) and its related implementing measures.

If this product has an integrated Wireless LAN feature, the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC is also applicable.

© **TOSHIBA** 23 Davy Road, Plymouth Devon PL6 8BY England  
All rights reserved.

Reproduction in whole or part without written permission is strictly prohibited.

This equipment corresponds to requirements of the Technical Regulation on limitation of usage of certain dangerous substances in electrical and electronic equipment.