


# Underfloor applicator gun ST

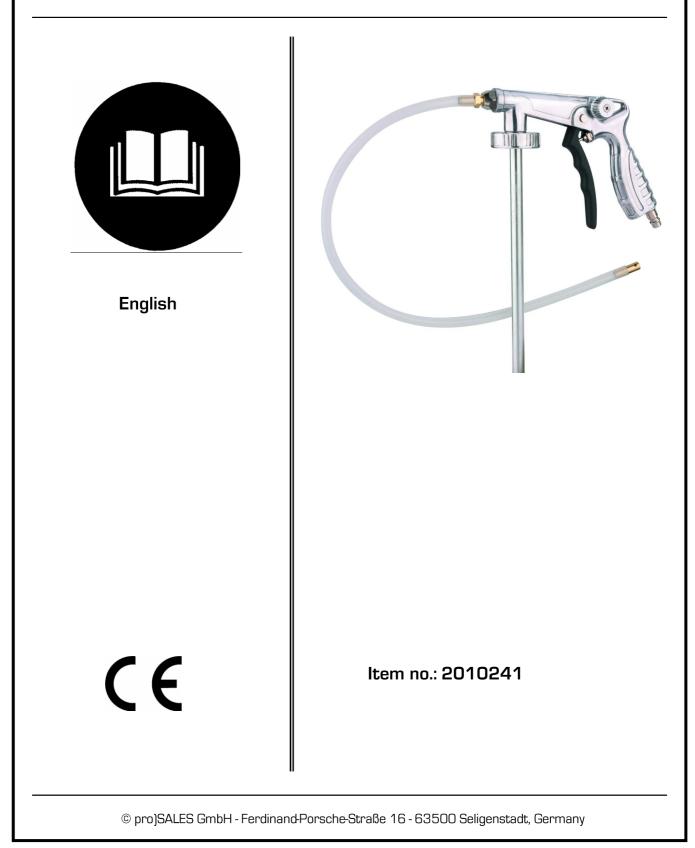

EN	Complaints and orders for replacement parts are processed quickly and efficiently. Please contact us using the information below.		
	Tel.: +49 6182 / 99387-0	Fax: +49 6182 / 99387-20	Email: info@aerotec.info

# Labelling:

### Product safety – prohibition signs:

CE	$\bigcirc$		
Complies with EU standards	Prohibition sign	No loose clothing!	No jewellery etc.

### Warning – mandatory action signs:

		0	
CAUTION/WA	Observe operating	Wear hearing	Wear eye protection
RNING	instructions	protection	

## **Environmental protection:**

Ĩ		
Dispose of properly	Cardboard packaging material can be recycled at designated collection points.	Electrical or electronic devices that are faulty or are ready for disposal must be recycled at designated collection points.

EC declaration of conformityWe the supplier, pro]SALES GmbH Ferdinand-Porsche-Straße 16 63500 Seligenstadt Germany hereby declare that the following designated devices, based on their design and type as well as the versions placed on the market by us, meet the relevant fundamental health and safety requirements set out in the EU Directives. Any modification to the devices not approved by us invalidates this declaration of conformity. Device designation: Underfloor applicator gun ST, item no.: 2010241

Judicit J.

Date/Signature of manufacturer: 22/01/2013 Information on the signatory: Mr Markert, Managing Director Relevant EU Directives: 2006/42/EC Applicable harmonised standards: EN 792; EN 50144

### Technical data:

Underfloor applicator gun ST	
Operating pressure:	6.3 bar
Air consumption:	120 l/ min
Threaded connection:	1/4"
internalRec. hose cross-section:	6 mm
Sound power level:	88 dB (A)
Weight:	0.6 kg
ltem no.	2010241

#### Included in delivery:

- 1 x underfloor silicone gun ST
- 1 x 50 cm material hose
- 1 x nozzle for surface spraying
- 1 x SK nipple 1/4" external
- 1 x operating instructions

Replacement hose available under item no.: 2010214-B

General safety instructions:

### Safety note! Failure to comply with the following instructions may lead to injuries.

Read all instructions very carefully

before using the air tool. All users must be fully aware and sufficiently informed of the safety requirements when using air tools. Any servicing or repair work must only be

performed by trained specialists. Always ensure that the work surface and working position of the tool and user are stable and secure before using the tool.

Ensure that all locking pieces are secure before use. Regularly inspect the pneumatic hose and all connections for wear or damage. Always carry the tool by its handle and not by the hose. Never exceed the recommended maximum operating pressure (6.3 bar).

The tool is not earthed or electrically insulated. Never use the tool where there is a risk of contact with electricity.

We recommend disconnecting the air supply when changing the drill bits. The

trigger switch must not be operated during this process. If the tool exhibits signs of irregular function and performance during use, stop using it immediately and have the device serviced or repaired.

Do not use unnecessarily long pressure hoses in order to prevent tripping.

Read the operating instructions for the compressor and follow the safety instructions for using the compressor.

ALWAYS wear certified eye protection and hearing protection. Take off watches, rings and other items that may be problematic. Loose clothing or jewellery may get caught in the air compressor or in the air tool and lead to injuries.

The trigger switch must not be operated when the device is connected to the air supply. Disconnect the device from the air supply when it is not in use. NEVER

change accessories or carry out ANY maintenance work as long as the device is connected to the air supply. Carry out proper maintenance on the device and follow all instructions for lubrication and tool maintenance. Do not carry the device by the hose or rip the hose from the air supply, as this may damage the hose and connection parts. Do not allow the hose to come into contact with heat or sharp edges. The hose should be replaced if it is damaged or worn. NEVER operate the device with an air pressure exceeding 6.3

bar. Use a pressure controller that reduces the air pressure to  $6.3\ \mathrm{bar}.$ 

ALWAYS operate the device a safe distance away from other people or animals.

#### Before starting:

The pneumatic underfloor applicator gun has been designed in accordance with the state of the art and recognised technical safety regulations. Improper use of the device, however, can pose a risk of injury or death to the user or others or lead to damage to the device itself and/or to other objects.

The underfloor applicator gun is

used predominately in the automotive sector for underfloor protection or applying sealing agent in hollow cavities, for example.

Pressing the trigger lever releases the material inside the cartridge out of the nozzle at the front of the gun and onto the corresponding surface.

This tool must only be powered by an air compressor. The pneumatic connection must be formed using a threaded plug nipple (included in delivery) and a quick coupling

Any other use that deviates or goes beyond this description is considered improper use. The user accepts responsibility for the associated risk.



Safety note! Wear eye protection! Wear hearing protection Ensure that only compressed air that is condensatefree is used for operation. It is sufficient to connect a filter water separator

upstream. Then start the air compressor. The maximum operating air pressure for the tool is 6.3 bar.The operating pressure can be set on your compressor using a pressure controller.

#### Maintenance and care

#### Cleaning:

- 1. Clean the gun after every use. Do not use an aggressive solvent. Silicone remover
- 2. The locking screw in particular should be cleaned thoroughly in order to prevent it getting stuck.

Troubleshooting

Problem	Possible cause	Solution
Trigger lever is	Insufficient	Check the
pressed but gun does not function	air pressure, hose diameter is	air pressure at the inlet. It
	too small	must be at least 6.3 bar.
	Check whether	Connect the tool.
	the tool is connected to the	
	compressor	
	Trigger lever is faulty	Replace the
		trigger lever.

Little or no material is dispensed from the underfloor applicator gun	Insufficient air pressure, hose diameter is too small	Check the air pressure at the inlet. It must be at least 6.3 bar.
	Nozzle is clogged	Clean the nozzle.
	Cartridge is empty	Insert a
		new cartridge
	Air hose is	Check all
	not leak-tight	hose fittings.



Figure 1:

- 1.50 cm material hose
- 2. Locking screw (standardised) for securing cartridges
- 3. Adjustment screw for controlling material flow
- 4. Trigger lever
- 5. Pneumatic connection SK6.
- Dispenser nozzle

Conventional 1-litre cartridges can be screwed in using the standardised internally threaded locking screw (2). The gun can be used with a hose for hollow cavities and without a hose for surface coatings. The hose can be easily unscrewed and replaced with the surface nozzle for coating surfaces.

#### Suitable for conventional cartridges with 40 mm diamond-knurled threading

Warranty:

We offer a 24-month warranty for this product on the basis of single-shift

operation, starting from the date of purchase. Under the warranty, any parts verified to be faulty due to production errors or material defects will be replaced or repaired as we see fit, free of charge.

The warranty period begins from the point of delivery of the product to

the customer. Further claims, particular those for compensation for damages, are excluded. Aerotec explicitly does not accept liability for subsequent damages.

Attention! Faults caused by failure to observe the operating instructions, improper use, unauthorised modifications by the customer or third parties, or by uncontrollable circumstances are not included in the warranty.

The warranty period is not extended or reset when parts are replaced repaired.

Warranty claims are executed exclusively by

Aerotec and handled by your retailer.