

STELIO
Eierkocher



Important safety information

- These appliances can be used by children older than eight years of age as well as by people with limited physical, sensory or mental capabilities and persons lacking experience and/or lacking knowledge, if they are supervised or have received instructions on how to use the appliance safely and have understood the resulting risks.
Children must not play with the appliance.
Children must not clean or maintain the appliance unless they are older than eight years of age and are supervised.
- Keep the appliance and its cable out of the reach of children under eight years of age.
- Do not immerse the appliance in water.
- If the appliance's connection cable is damaged it must be replaced by the manufacturer's central customer service department or by a similarly qualified person. Improper repairs may result in a serious risk to users.
- This appliance is designed for use in households and similar environments such as:
 - in kitchens – for employees in shops, offices and other commercial areas;
 - on agricultural property;
 - by customers in hotels, motels and other residential facilities;
 - in bed-and-breakfast establishments.The appliance is not intended for purely commercial use.
- **Caution** - Be careful when handling the egg piercing pin. Risk of injury!

Prior to use

Read the instructions for use carefully. They contain important information about the use, safety and care of the appliance.
They should be kept in a safe place and passed on to further users if necessary.
Observe the safety information when using the appliance.

Technical data

Rated voltage:	220–240 V ~ 50–60 Hz
Power consumption:	420 W
Protection class:	I

Additional safety instructions




- Only connect the appliance to earthed wall sockets that have been installed in accordance with the regulations. The cable and plug must be dry.
- Do not pull or clamp the connecting cable over sharp edges. Do not leave it dangling and protect it from heat and oil. You must not touch the hot heating bowl or the cover.
- Never pull the mains plug out of the socket by the cable or with wet hands.
- Do not place the appliance on hot surfaces such as on hotplates or similar areas, and do not operate near naked flames.
- Do not place the appliance on water-sensitive surfaces. Water spray may damage them.
- **Caution**, the appliance gets hot. Risk of scalding from escaping steam. Do not move the appliance during operation and do not pull on the mains cable.
- Only operate the appliance under supervision.
- Stop using the appliance and/or pull out the mains plug immediately if:
 - the appliance or mains cable is damaged;
 - the appliance is leaking;
 - you suspect the appliance is faulty after dropping it, for example. In such cases, arrange for the appliance to be repaired.
- Pull the mains plug:
 - if the appliance malfunctions during use;
 - before cleaning and care;
 - after use.
- Descale the appliance regularly.
- We accept no liability for any damages caused as a result of misuse, incorrect operation or improper repairs. Claims under warranty are likewise excluded in such cases.
- Packaging materials, such as plastic bags, must be kept out of the reach of children.

Putting into operation

Unwind the cable up to the desired length. The eggboiler has to be placed in horizontal position otherwise it might switch off early and the eggs would be too soft. Fill the measuring cup with cold water up to the mark and pour it into the heating plate, then put the egg tray on the appliance. Before placing the eggs, pierce them at the dull side by means of the egg pierce at the bottom of the cup. This prevents eggs from bursting. Afterwards put the cover on the appliance.

Adjusting the boiling degree

The adjustment of the desired boiling degree is made by rotating the control knob. The scale is subdivided into 3 areas, which are marked with different symbols:

-  for soft boiled
-  for medium boiled and
-  for hard boiled eggs

Please note that always a measuring cup filled up to the mark must be poured in the heating plate. The eggs become too hard with less water.

With one adjusted boiling degree the boiling period is always the same.

Due to much less power of the eggboiler compared to a conventional boiling in a pot, the boiling time is prolonged.

Adjusting within the range of a boiling degree

Within the range of the desired boiling degree, the adjustment is determined by the number and weight category (S, M, L, XL) of the eggs.



For small eggs having the weight category S (less than 53 g), the lowest adjustment must be chosen.



Seven small eggs need approximately the same adjustment as one big egg (XL, more than 73 g).



For seven big eggs having weight category XL, the highest adjustment within the selected range of the cooking degree must be chosen.

Once the boiling degree is adjusted, switch the appliance on by rocker switch. The control lamp indicates that the boiling procedure begins. When the buzzer sets in, the eggs are finished. **Switch off the appliance**, take out the eggs and put them under cold water in order to avoid fermentation. **Caution** when taking off the cap: hot steam. Only

touch the cap at the handle and let the condensation

drip by tilting the cap. Since the boiling degree is subject to very personal judgement, it might be necessary to deviate from above mentioned criterias. Personal experience with the appliance will lead very soon to the results desired by your personal taste.


Simultaneous boiling of eggs with different boiling degrees

One water filling is enough to boil soft, medium and hard eggs in one operation. In order to do so use eggs of the same size, if possible. Fill the eggboiler, as usual, with water and place the eggs in it.




Adjust the boiling degree for soft eggs first, as described above, according to weight category and number of eggs and switch on the appliance. As soon as the buzzer sets in, switch off the appliance and take out the desired number of soft boiled eggs.



Afterwards turn back the control knob to  and switch on the appliance again. When the buzzer sets in again, switch off the appliance and take out the medium boiled eggs.



For the remaining eggs to be boiled hard, turn the control knob to the symbol  and switch on the appliance again. Wait until the buzzer sets in. In case you do not wish any medium eggs, you can maintain the adjustment and continue the boiling in order to obtain hardboiled eggs, after you have taken out the soft eggs.

Cleaning and service

Pull the plug and cool the appliance. Do not immerse the appliance in water, but wipe with a damp cloth to which a dishwashing agent has been added and then wipe dry. Do not use sharp and abrasive cleaning agents. The cooking tray is made of stainless steel. If rust spots are seen regardless, these are initially only deposits adhering to the surface. They should be removed immediately with stainless steel cleaner.

Descaling

Limescale deposits lead to energy losses and have a negative effect upon the appliance service as well as the cooking results. The appliance switches off prematurely if the layer of limescale is too thick. The limescale is then very difficult to remove. Therefore descale the appliance regularly.

We recommend using **Cromargol**[®]. This product is highly effective, food safe and is neutral in taste and smell. Thanks to its special care formula with six high-quality and protective additives, **Cromargol**[®] is also very gentle on materials. You can usually purchase **Cromargol**[®] from the store where you have purchased your appliance or from your chosen dealer.



- Prior to descaling, unplug the appliance from the mains and allow it to cool down.
- Pour half a portion (50 ml) of **Cromargol**[®] into the heating bowl and leave the appliance to stand until the layer of limescale has detached from the base. Then fill the heating bowl with cold tap water to cover the limescale ring on the wall and leave to stand for 15 minutes.
- Then pour out and thoroughly rinse with cold tap water.
- Measure out and use other descaling agents according to the manufacturer's instructions.

Do not heat the solution during descaling.

Caution: the warranty does not cover damage caused by not observing the descaling instructions.

For UK use only


- This product is supplied with a 13 A plug conforming to BS 1363 fitted to the mains lead. If the plug is unsuitable for your socket outlets or needs to be replaced, please note the following. If the plug is a non-rewireable one, cut it from the mains lead and immediately dispose of it. Never insert it into a socket outlet as there is a very great risk of an electric shock.
- The replacement of the plug at the mains lead has to be done according to the following instructions:

Warning - This appliance must be earthed!

Important: The wires in this mains lead are coloured in accordance with the following code:

green/yellow	Earth
blue	Neutral
brown	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- the wire which is coloured green and yellow must be connected to the terminal which is marked with the letter E or by the earth symbol , or coloured green or green and yellow,
 - the wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black,
 - the wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.
- If a 13 A (BS 1363) plug is used it must be fitted with a 3 A fuse conforming to BS 1362 and be ASTA approved. If any other type of plug is used, the appliance must be protected by a 5 A fuse either in the plug or adapter or at the distribution board. If in doubt - consult a qualified electrician.
 - Never use the plug without closing the fuse cover.



The appliance complies with the European directives 2006/95/EC, 2004/108/EC and 2009/125/EC.



At the end of its lifetime this product must not be disposed of through the normal domestic waste, but it should be handed to an assembly point for the recycling of electrical and electronic appliances. You can inquire about details at the local administration.

Subject to technical changes.

Kundendienst-Adresse:

wmf consumer electric GmbH
Standort Trepesch
Steinstraße 19
D-90419 Nürnberg
Germany
Tel.: +49 (0) 7331 25-8677
eMail: service-wmf@wmf-ce.de

Hersteller:

wmf consumer electric GmbH
Messerschmittstraße 4
D-89343 Jettingen-Scheppach
Germany
www.wmf-ce.de