

# KORONA

English

Instruction Manual

## Sandwichmaker 2 in 1

47016



KORONA electric GmbH, Sundern/Germany  
[www.korona-electric.de](http://www.korona-electric.de)

## Intended Use

Before use, please read these instructions carefully and keep them in a safe place for future reference. When passing on the appliance to a third party, make sure to include these instructions for use.

This appliance is intended and suitable for toasting and reheating bread/toast or buns/croissants. All other use or modification of the appliance is not intended by the manufacturer and might entail a risk of damage or injury. This appliance is **not** intended for commercial use!

### Safety:



This symbol identifies hazards which may cause injuries!



This symbol warns of hot surfaces. Risk of burns!



This symbol identifies electric shock hazards!



### General Safety Instructions

- Manufacturer takes no responsibility for any damage caused by incorrect use.
- Incorrect or improper use can damage the appliance and cause injuries to the user.
- Before connecting this appliance to the mains, make sure your local voltage matches the technical data of the appliance. Otherwise the appliance may overheat and get damaged.



## Caution! Danger of electric shock!

- Never put the appliance, cord or plug into water or any other liquid.
- Do not use the appliance near a sink or wash basin.
- Do not use the appliance with wet hands.
- Do not use the appliance outdoors.

## An electric appliance is not a toy!

- Never leave the appliance unattended during use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance
- **Always unplug your appliance** when it is not in use, and before cleaning.
- Always pull the plug – not the cord.
- Keep the appliance and the cord well away from any hot surfaces to avoid any damage to the appliance.
- Make sure the cord may not inadvertently be pulled or cause anyone to trip when in use. Do not allow the cord to hang over sharp edges.
- Do not bend the cord or wind it round the appliance.

## Do not use the appliance,

- if the cord is damaged.
- in case of malfunction.
- if the appliance was dropped or is damaged otherwise.

Have it checked and, if necessary, repaired by a qualified person /Customer Service. Never attempt to make any modifications to or repair the appliance yourself.

- Only use accessories evaluated for use with this appliance.
- Never attempt to drive any objects into the appliance.


- Never attempt to open the housing yourself!
- The appliance is **not** intended to be operated by means of an external timer or separate remote-control system.

## Special Safety Instructions



**Warning! To avoid the possibility of injury/damage to the appliance, electric shock, risk of fire and burns!**

- **Only** use the appliance for its intended purpose and as described in this manual.
- Place the appliance on an even and heat-resistant surface.
- **Attention:** The temperature of accessible surfaces may be high during operation. Therefore, do **not** touch the appliance during and/or immediately after operation. Only use the handle. **Danger of serious burns!**
- Do **not** move the appliance during operation.
- Always use a flat wooden or plastic spatula to remove the sandwiches, waffles, etc. Never use any sharp or metal objects (e.g. knife, metal spatula, etc.) as they would damage the non-stick coating of the plates.
- Adhere to a safety distance around the appliance.
- Do not use the appliance close to or under inflammable objects, e.g. curtains, wall cabinets.
- Always unplug the appliance after use and let it completely cool down before cleaning.

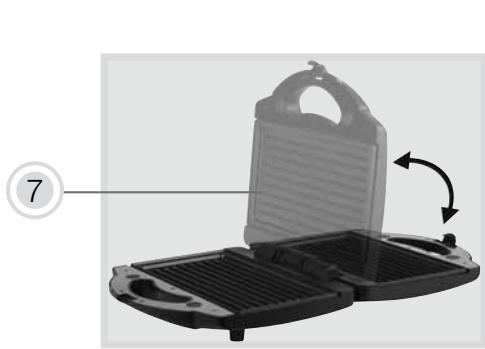

## Product Description

1. Lid
2. Indicator lights (red/green)
3. Handle
4. Fastener
5. Removable plates
  - a) Sandwich plates
  - b) Grill plates
6. Release button for the plates
7. Stand for 180° opening
8. Power cord and plug

## Before First Use

- Remove all packaging material and check whether the appliance is complete.
- Place the appliance on an even, non-slippery and heat resistant surface.
- Fully unwind the power cord (8) and connect the appliance to a properly installed wall socket.

Note: The cooking plates (5) have a protective coating. To remove the protective layers on the heating elements, heat up the cooking plates (without food) for a few minutes.

This could cause a slight build-up of smoke and odour. This doesn't cause any harm nor does it mean that your appliance does not work properly. Make sure that the room is well ventilated!

After this preheating process your sandwich maker 2 in 1 is ready for operation. Let it completely cool down and clean it as described under **Cleaning and Care**.



**Warning:** Plastic bags are a danger to toddlers and babies, therefore keep them away to avoid suffocation.

## Exchanging the cooking plates



**Always make sure that the appliance is unplugged and completely cooled down. Risk of burns!**

- To remove the cooking plates (5), press down the release button (6) and slide it forward.
- To insert the cooking plates (5), insert the prongs of the cooking plates into the drilling holes of the appliance and make sure they click into place.

## Operation

**Your sandwich maker 2 in 1 can toast sandwiches, bake waffles or broil foods. Always make sure to insert the respective cooking plates.**



**The temperature of accessible surfaces may be high during operation. Therefore, do not touch the appliance during and/or immediately after operation.**

**Tip:** Prepare all ingredients in advance before switching on the appliance.

### **Toasting Sandwiches**

1. Connect the appliance to a properly installed wall socket.
2. The red indicator light (2) lights up and the heating process starts.
3. As soon as the necessary temperature is reached the green indicator light (2) lights up as well. Your sandwich maker is now ready for operation.
4. Open the lid (1) of the appliance by pulling the fastener (4) at the handle (3) upwards.

5. Place your prepared sandwich into the sandwich maker.

**Tip:** To guarantee a even browning process grease either the toasting plates(5a) with some oil / butter or butter the outside of the resp. bread or toast slices.

6. Close the lid (1) carefully until the fastener (4) locks into place. You will hear a click sound. Your sandwich is now being toasted.

**Attention: Never** try to close your appliance forcefully. Remove some of the toppings in case that the appliance cannot be closed. The toast slices should not be bigger than the toasting plates.

7. After 2 – 3 minutes your sandwich will be ready. Open the appliance and check whether your sandwich is toasted according to your liking.
8. To remove your sandwiches use a wooden or plastic spatula to avoid damage to the non-stick coating of the plates.
9. If you wish to prepare more sandwiches follow steps 3 – 7.
10. After use, disconnect the appliance from the mains and let it completely cool down.

## Broiling

When broiling your food, you can either choose to have the lid closed or to open the appliance 180°.

### Broiling with closed lid

**Perfect for broiling steaks, chops, Panini, etc.**

1. Follow steps 1 – 4 as described under Toasting Sandwiches and make sure that you have applied some butter or oil to the grill plates (5b).
2. Place the foods to be grilled onto the grill plates (5b).
3. Close the lid (1), do **not** lock the fastener (4).
4. Grill the foods to your liking and follow steps 8 -10 as described under Toasting Sandwiches.

To turn the appliance properly off, the power plug (8) **must** be disconnected from the mains after each use.


### Broiling at 180°

**Perfect for broiling larger quantities of food or different foods at the same time.**

To open the appliance at 180°

-unfold the stand (7) on top of the lid (1).

-open the lid (1) of the appliance and pull the handle (3) upwards to unlock the hinge. Now the appliance can be opened up completely.

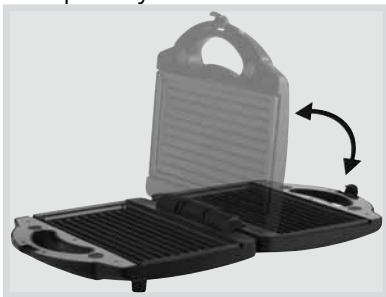

Now follow the steps as described under broiling with closed lid.

During operation, an integrated thermostat switches the appliance on and off to ensure a constant temperature. This is indicated by the green indicator light (2) cycling on and off.



## Cleaning and Care

**Due to hygienic reasons clean your sandwich maker 2 in 1 best after each use, and remove any food residues. Not doing so could possibly result in a hazardous situation.**



Before cleaning, **always** switch off the appliance and disconnect it from the mains. Let it completely cool down. **Never** immerse the appliance in water. **Danger! Electric Shock!**

Clean the appliance with a moistened soft cloth. Remove the cooled down cooking plates (5) as explained under Exchange Cooking Plates and clean them in warm water using some dishwashing detergent.

Do **not** use any aggressive cleaning agents and/or other hard objects to clean the appliance.

Dry the entire appliance and all parts well after cleaning.

## Storage

**Disconnect the appliance from the mains after each use and let it completely cool down.**

Keep the appliance away from children and store it in a clean and dry place.

## Disposal Instructions



Waste electrical devices marked with this sign must not be disposed of with your household waste, but – according to the EU directive on Waste Electric And Electronic Equipment of 24th March 2005 – are to be collected separately. Therefore, please return this device at the end of its life cycle to special collection points for disposal or your local dealer.

Your sandwich maker 47016 is packed in a retail box. Such boxes are recyclable waste, i.e. they are reusable or recyclable.

## Technical Data:

Voltage: 230 V ~ 50 Hz  
Rated Power: 1200 W  
Protection Class: I



**Subject to change without notice.**

## Guarantee:

This product is guaranteed against defects in materials and workmanship for a period of 2 years.

This guarantee is not valid:

- if the appliance has not been used in accordance to the instructions
- for damages due to wear and tear (batteries, etc.)
- for damages known by customer at time of purchase
- for damages caused by owner

This guarantee does not affect your statutory right, nor any legal right you may have as a customer under applicable national legislation governing the purchase of goods.

In order to assert his/her right in a guarantee case during the guaranteed period, the customer must provide evidence of the date of purchase (receipt).

**KORONA electric GmbH, Sundern/Germany.**

**Service Adresse:**

**KORONA Service, Am Steinbach 9, 59872 Meschede, Germany**

**Telefon Hotline: 02933 90284-80**

**Mail: [service@korona-electric.de](mailto:service@korona-electric.de)**

**web: [www.korona-electric.de](http://www.korona-electric.de)**

within 2 years after the date of purchase. In case of guarantee the customer is given the right to get the appliance repaired at our own or at an authorized shop. Further rights (due to guarantee case) are not given to the customer.

# KORONA

Ref: 47016/11-2012.10