




## EMPORIA EMERGENCY CALL FUNCTION

You can save up to five emergency numbers (family members, friends and official institutions).

- In an emergency press and hold the emergency button on the back of the phone. (This works even when the phone is closed.)
- The five preset numbers will be dialled automatically in the order you have saved them. If it is not possible to get through to anyone on the first number, the second number will automatically be dialled. If it is not possible to get through to anyone on the second number, the third number will automatically be dialled, and so on. (The phone will go through a list of five numbers a maximum of three times.)
- At the same time as each emergency call, a text message (SMS) will be sent to the contact, saying: **»You are about to receive an emergency call. An audible warning signal will sound when you answer the call. Please press the 0 key three times to establish the connection.«**

**Note:** The contact must press the 0 key within 60 seconds, or the call will be disconnected (to prevent your emergency call going through to a contact's mailbox).

- From the moment you make an emergency call, your emporia phone will automatically answer any incoming calls for one hour. To disable this function, press and hold  for 3 sec. or turn your device off completely using  and then turn it on again.





- To cancel the emergency call, press and hold .

- During the emergency call, a warning tone will sound continuously, to alert anyone nearby and the person being called.

- If you do not have any emergency numbers saved, have no credit on your prepaid phone card or are connected to a foreign network without permission (e.g. roaming is not activated), 112 will be dialled when you press the emergency button.

**Note:** If you want to add the number of an official institution such as the police or fire brigade as an emergency number, you must check that this is okay with the respective institution beforehand. We do not assume liability for any costs incurred through you calling such an institution by mistake.

### Adding/editing emergency numbers:

- In the **Settings** menu ⇒ **Emergency numbers**
- ⇒ **Add emergency number**
- ⇒ Select an entry (e.g. **EmNo. 1**) by pressing  
- ⇒ Select **OK** by pressing 
- ⇒ Select **Private** or **Help organisation** 
- ⇒ Select a contact

### Activating the emergency button:

- In the **Settings** menu ⇒ **Emergency numbers**
- ⇒ **Emergency button** ⇒ **On/Off**

### Pre alarm:

The pre alarm is a warning tone that sounds for ten seconds and alerts anyone nearby to the emergency. After this, the emergency call sequence starts.

- In the **Settings** menu ⇒ **Emergency numbers**
- ⇒ **Pre alarm** ⇒ **On/Off**

## SETTINGS

In the **Settings** menu ⇒

### Sound & alerts:

- You can personalise the settings for tones, signals and vibration or select a set of predefined settings (profile).
- Menu items: **Ringtone, Alarm melody, Ringer volume, Silent/Sleep mode, Meeting/Theater mode, Maximum/Bus mode, Increasing ring, Vibra for call, Vibra for alarm, Key tones, Message alert, Vibra for messages, Handset volume, Handsfree volume, Confirmation tone, Emergency tone**
- **Silent/Sleep mode** profile  
Visual notifications only (torch LED flashes, notifications on the external display), no ringtone, no vibration function
- **Meeting/Theater mode** profile  
Visual notifications (torch LED flashes, notifications on the external display), device vibrates, no ringtone
- **Maximum/Bus mode** profile  
Key tones, SMS tone and vibration function activated, ringtone volume is set on maximum

### Mailbox number:

Enter the number for your mailbox. You will find this number in the documents supplied by your network provider.

### Security settings:










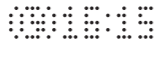
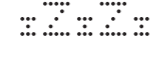

- **PIN:** PIN request on/off, change PIN
- **Phone code:** on/off, change (factory preset code: 1234)

### Master reset:

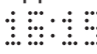You can restore all the factory settings on your phone (factory preset code: 1234).
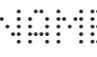
## SYMBOLS ON THE EXTERNAL DISPLAY





Symbols are only visible when the phone is closed and disappear when it is opened.

-  **Time:**  
Pressing  or  displays the time.
-  **Incoming call:**  
The number or name of the caller is displayed.
-  **Missed call:**  
Flashes when you miss a call
-  **New message:**  
Flashes when new messages are received
-  **Low battery:**  
Flashes when the battery is low
-  **Battery charging:**  
Fills up when the battery is being charged via the charging cable or charging unit
-  **Emergency call:**  
Appears when the emergency button is pressed
-  **Alarm clock:**  
Appears when the alarm clock goes off
-  **Snooze:**  
Appears when the alarm clock is set on snooze with the  key (the alarm clock goes off again five minutes later)


## TOOLS

In the **Tools** menu ⇒

### Alarm clock:

- **Setting the time:**  
Enable the alarm clock ⇒ Enter the time  
⇒ Confirm by pressing . The alarm clock will now go off at the time you have set every day.
- **Off:** Disable alarm clock  
Switch off the ringing alarm clock by pressing .  
Mute the alarm by pressing  or  (it will ring again after five minutes).



### Bluetooth:

- This function allows you to use Bluetooth-enabled handsfree kits wirelessly.
- **Bluetooth on/off:**  
Enable/disable Bluetooth
- **Connect** ⇒ **Search for new devices:**  
Search for devices you want to connect  
⇒ Select devices by pressing .  
The next time you enable Bluetooth, devices that have been connected before will be recognised and connected automatically.

## CAMERA AND PHOTO ALBUM

Your phone has a camera. You will find photos you have taken in the menu under **Photo album**.




### Taking a photo:

- In standby mode, enable the camera by pressing .
- ⇒ Press  to take a photo.

### Camera options:

In the **Settings** menu ⇒ **Camera settings** ⇒ **Auto timer, Effect, Size, Quality** and **Night mode**.
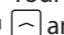
### Photo album:


- Your photos will be saved in the **Photo album** menu.
-  and/or  let you flick through the photo album.
- Pressing  opens **Options** for the selected picture.  
Available options: **View, Send, Wallpaper, Contact photo, Rename, Delete, Delete all** and **Memory**

**Note:** You can connect your phone to a PC using the USB data cable and transfer your photos.

**Note:** Using a micro SD card will increase the storage capacity of your phone. You can purchase these cards from electronics stores.

## FREQUENTLY ASKED QUESTIONS

### The display screen is just blank/black:

 
- The phone is either in energy-saving mode (press any key), or it is switched off.
- ⇒ In this case, press  for two seconds to turn it on.

### The phone is not responding:

- Take out the battery, reinsert it and switch on the phone.
- If the phone still doesn't respond, please contact our service centre.

### The phone won't charge:

 
- The phone can take a few minutes to start charging.
- If it doesn't appear to have started charging after more than 30 minutes, please contact our service centre.

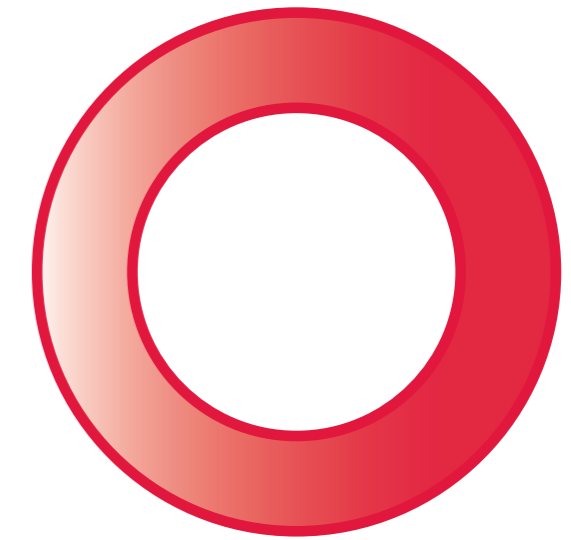

emporiaGLAM

Part no.: V34\_ShortManual-V2\_55376-ENG | 201504 | Subject to mistakes, printing errors and technical changes.

 
## INSERTING A SIM CARD

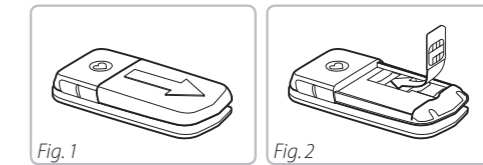

**Fig. 1:** Remove the battery cover.

**Fig. 2:** Slide the SIM card into the SIM card holder with the gold contacts facing down.

## INSERTING AND CHARGING THE BATTERY

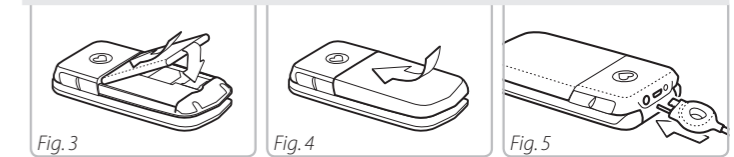 


**Fig. 3:** Insert the battery, making sure that the battery contacts touch the phone's gold contacts.

**Fig. 4:** Slide the battery cover into its position over the battery. You will know it is in the correct position when you hear it click into place.

**Fig. 5:** Plug the charging cable into the USB port on the top of the phone.

**Attention:** Charge the battery for at least four hours before using it the first time. Only use batteries and chargers that are permitted for use with this specific model.

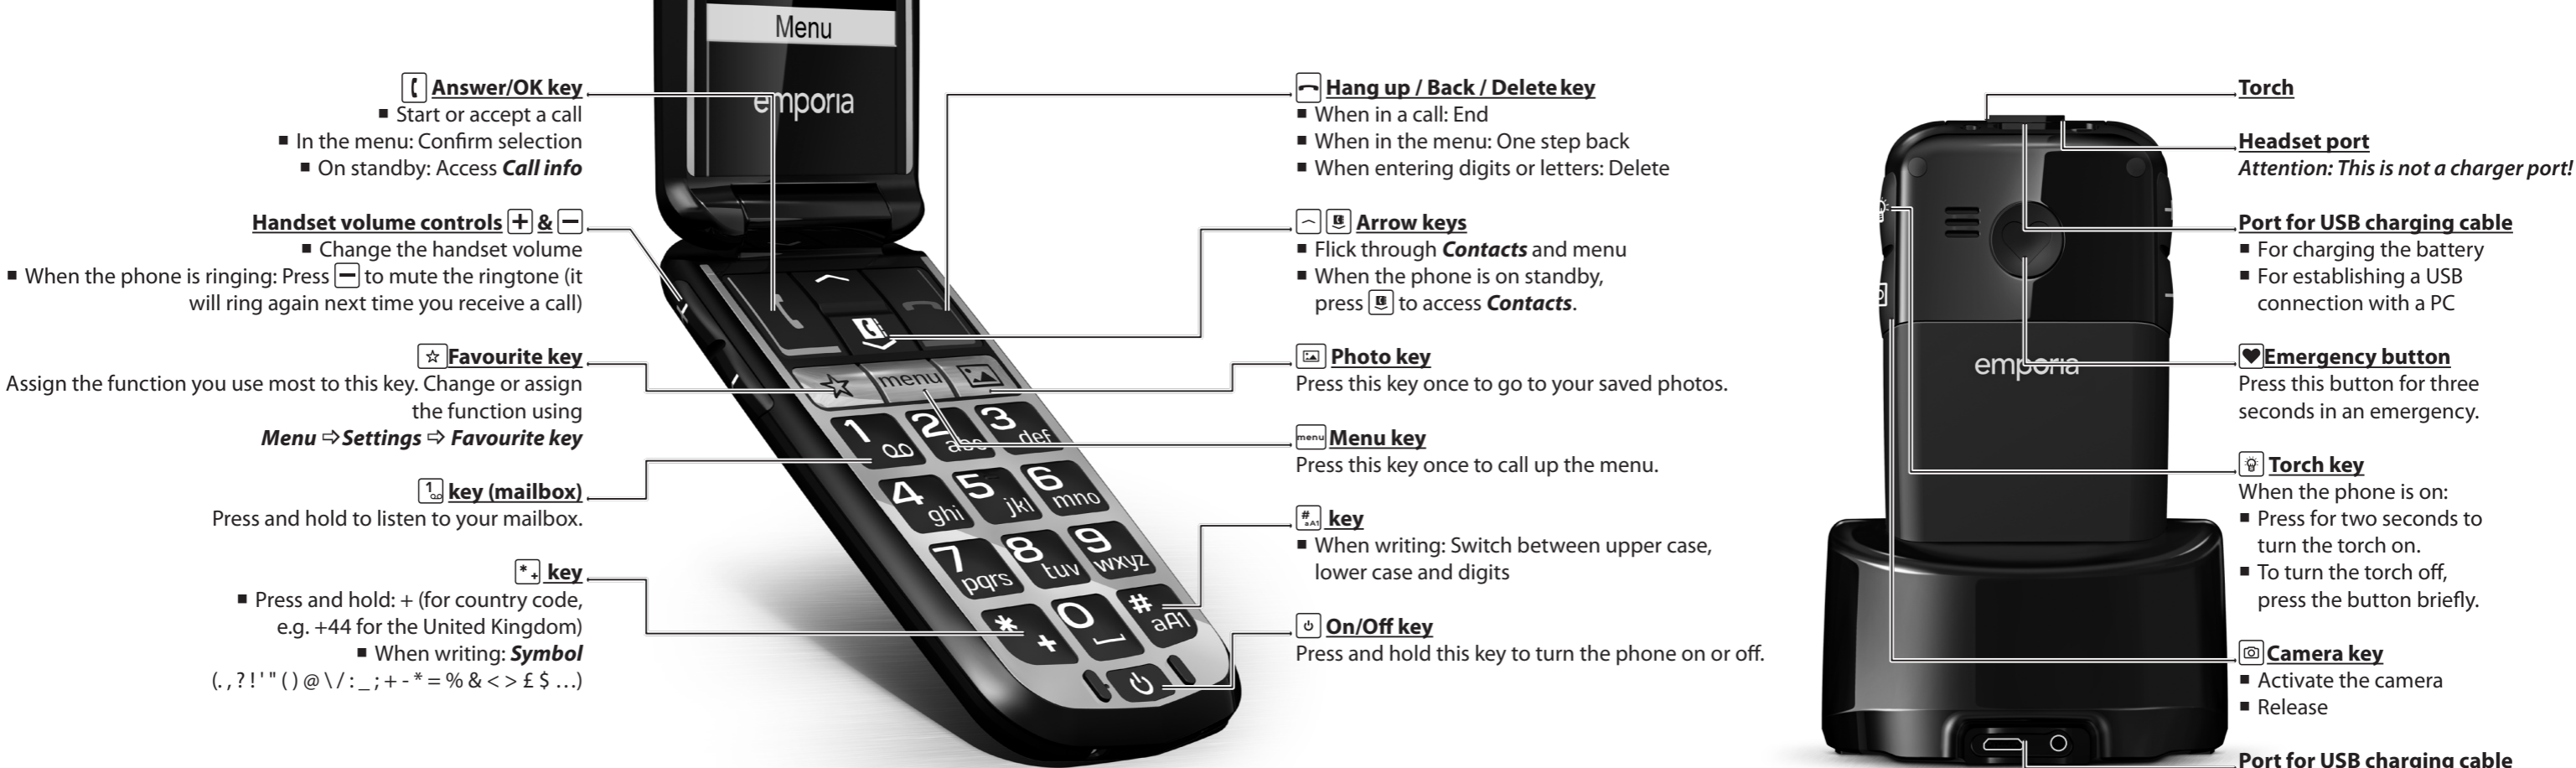

- [Enter] Answer/OK key**
  - Start or accept a call
  - In the menu: Confirm selection
  - On standby: Access **Call info**
- Handset volume controls [+ & -]**
  - Change the handset volume
  - When the phone is ringing: Press [-] to mute the ringtone (it will ring again next time you receive a call)
- [Star] Favourite key**
  - Assign the function you use most to this key. Change or assign the function using **Menu ⇒ Settings ⇒ Favourite key**
- [1] key (mailbox)**
  - Press and hold to listen to your mailbox.
- [\*] key**
  - Press and hold: + (for country code, e.g. +44 for the United Kingdom)
  - When writing: **Symbol** (. , ? ! ' " ( ) @ \ / : \_ ; + - \* = % & < > £ \$ % ...)

- [End call] Hang up / Back / Delete key**
  - When in a call: End
  - When in the menu: One step back
  - When entering digits or letters: Delete
- [Up/Down] Arrow keys**
  - Flick through **Contacts** and menu
  - When the phone is on standby, press [Up] to access **Contacts**.
- [Camera] Photo key**
  - Press this key once to go to your saved photos.
- [Menu] Menu key**
  - Press this key once to call up the menu.
- [#] key**
  - When writing: Switch between upper case, lower case and digits
- [Power] On/Off key**
  - Press and hold this key to turn the phone on or off.

- Torch**
- Headset port**  
*Attention: This is not a charger port!*
- Port for USB charging cable**
  - For charging the battery
  - For establishing a USB connection with a PC
- [Heart] Emergency button**
  - Press this button for three seconds in an emergency.
- [Torch] Torch key**
  - When the phone is on:
    - Press for two seconds to turn the torch on.
    - To turn the torch off, press the button briefly.
- [Camera] Camera key**
  - Activate the camera
  - Release
- Port for USB charging cable**

**SYMBOLS ON THE DISPLAY**

Network signal strength	Battery indicator	Missed call	Profile: Silent/Sleep mode	Profile: Meeting/Theater mode	Bluetooth activated	Alarm clock on
Roaming (abroad)	New message	Call forwarding	Profile: Maximum		Bluetooth connected	

### GETTING STARTED

- Pressing the [Power] key for at least two seconds switches the phone on.
- To turn the phone off, press the [Power] key for two seconds again.
- When using a new SIM card for the first time:**
  - Enter the four-digit PIN code (personal identification number) ⇒ Press [Enter] to confirm the code.
  - Note: The PIN code is a four-digit number that is intended to prevent somebody else from being able to switch on your mobile phone. You have a maximum of three attempts to enter the correct number. If you enter the wrong number three times in a row, you will only be able to unblock the SIM card with the PUK code. You will find the PIN code and PUK code in the documents supplied by your network operator.*
  - ⇒ Select a **Language** by pressing [Left] and [Right] ⇒ [Enter]
  - ⇒ **Set time** ⇒ [Enter] ⇒ **Set date** ⇒ [Enter]
  - ⇒ Select a **Text size** by pressing [Left] and [Right]:
  - You can choose **Small** or **Large** ⇒ [Enter]
- Incoming call:**
  - To answer: Open the phone and press [Enter] to accept the call.
  - To reject: Press [End call] or close the phone.
  - To mute the ringtone temporarily: Press the [Mute] button (on the side of the phone).
- To end a call:** Press [End call] or close the phone.
- Dialling:** Enter the number (incl. area code) you want to dial using the keypad ⇒ Start the call by pressing [Enter].

- Redialling:**
  - Press [Enter] to bring up the **call info**.
  - ⇒ Press [Left] and [Right] to select a number.
  - ⇒ Start the call by pressing [Enter].
- Handsfree:** Press [Enter] during a call to open the **Options** and turn the hands-free function on or off.
- Standby mode:**
  - In standby mode the phone is on, but is not running any applications (calls, SMS messages, etc.).
- Accessing the menu:**
  - Press [Menu] to open the menu.
  - Press [Up] and/or [Down] to flick through the menu items. At the top of the screen, the menu item currently highlighted will be displayed.
  - Menu items can be selected directly using the digits assigned to them.
  - Press [Up] or [Down] to select the option shown on the display screen (above the keys).
  - To return to standby mode, press [End call] several times or close the phone.
- Saving energy:**
  - If a few seconds pass without the phone receiving any input from you, the screen will go blank to save energy. In the event of an incoming call or you pressing any key, the screen will automatically light up again.

### CONTACTS

- Always save names and numbers with the international dialling code, e.g. +44 for the United Kingdom, +1 for the United States and +61 for Australia). Press [Menu] to open the menu ⇒ Go to **Contacts** by pressing [Up] and [Enter].
- ⇒ Menu items: **Search name, Add contact, Edit contact, Delete, Send contact via SMS, Copy contact, My number, Quick dial keys, Emergency numbers, Phone book settings** and **SMS in PhoneBK**.
- Adding a contact (name and number):**
  - Open the menu with [Menu]
  - ⇒ Press [Up] then [Enter] to go to **Contact**
  - ⇒ Go to **Add contact** by pressing [Up] and [Enter]
  - ⇒ Enter a name (see the section **Writing a message** for text input information) ⇒ [Enter] ⇒ Insert the number ⇒ [Enter]
  - ⇒ **Contact photo** yes/no [Up] ⇒ Press [Enter] to save.
- Searching for contacts:**
  - Press [Up] to open **Contacts** ⇒
  - Press [Left] and [Right] to flick through the entries
  - or enter the first few letters of the entry you're looking for using the keypad (and continue flicking with [Up] if necessary). ⇒
  - Once you've selected an entry, press [Enter] to start a call.
- Receiving a new contact via SMS:**
  - In the **Contacts** menu ⇒ Enable the **SMS in contacts** function to receive new entries via SMS.
  - Indicate whether you want to be able to receive new entries from anyone (**On**) or only from contacts already saved on the phone (**Only from PhoneBk**). The phone number will automatically be stored in your contacts when you receive an SMS with the following content:
  - #Name#Number#, e.g.: #Martin#+436641234567#

### SMS MESSAGES

- SMS (Short Message Service)** messages are short written messages.
  - Writing a message:**
    - Open the menu by pressing [Menu] ⇒ **Messages** [Enter] ⇒ **Write message** [Enter]. Enter text using the keypad.
    - Each key has several characters assigned to it, which can be selected by pressing the respective key several times. (E.g. 2x [4], 1x [2], 3x [5], 3x [6] and 3x [Menu] for **Hallo**)
- |                       |   |
|-----------------------|---|
| [1] . , ! ? ' " @ : 1 | [8] t u v 8 ü ù ú   |
| [2] a b c 2 ä æ å à   | [9] w x y z 9 ý þ   |
| [3] d e f 3 è é ê     | [0] Blank space; 0  |
| [4] g h i 4 í î ï     | [*] Special characters: . , ? ; : ! ' ' ' @ _ ~ & + - ( ) < > { } [ ] ... |
| [5] j k l 5 £         |   |
| [6] m n o 6 ö ø ó     |   |
| [7] p q r s 7 ß \$    |   |
- Press [#] to change the input method.
    - **abc** Lower case only
    - **ABC** Upper case only
    - **123** Digits
  - Delete all: press and hold [End call].
  - Sending an SMS:**
    - Select **Send to** by pressing [Enter] twice and then insert a number or press [Enter] to search in contacts before pressing [Enter] again to send.
  - Receiving a message:**
    - A brief tone signal and a flashing symbol on the external display alert you to new received messages.
    - Pressing [Enter] allows you to read the message immediately or view it in your received message list via the **Messages** menu ⇒ **Received**.