



**D-Link®**

WIRELESS AC1200 DUAL BAND ACCESS POINT  
DAP-1665

**QUICK  
INSTALLATION  
GUIDE**

GUIDE D'INSTALLATION

# CONTENTS OF PACKAGING



## **WIRELESS AC1200 DUAL BAND ACCESS POINT DAP-1665**

Note: With two detachable antennas.



## **12V 1A POWER ADAPTER (INCLUDING 2 ADAPTERS) SUPPLIES POWER TO THE DAP-1665**



## **ETHERNET CABLE (CAT5 UTP) USE TO CONNECT TO YOUR COMPUTER**



## **PRODUCT MANUAL ON CD**



## **WI-FI CONFIGURATION NOTE CONTAINS THE AP's DEFAULT WI-FI INFORMATION**



If any of the above items are missing, please contact your reseller.

 
# PRODUCT SETUP

## PRODUCT INSTALLATION




### POSITION THE ACCESS POINT (AP)

Place the access point in an open area of your intended work area for better wireless coverage. If you are using it as a repeater, you should ensure that the access point is within wireless range of the network which you wish to repeat.



### TURN ON THE POWER

Plug the supplied power adapter into the back of the DAP-1665 and connect it to a power outlet. Press the power switch at the back of the access point to turn on the power. Wait about 30 seconds for the device to complete startup processes.

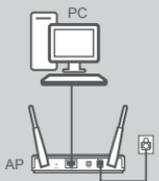

### CONNECT THE DAP-1665

Using the included Ethernet cable, plug one end into the LAN port on the back of the DAP-1665, and plug the other end into the Ethernet port on your computer. Alternatively, you can connect to the DAP-1665 using Wi-Fi. Go to your computer's Wi-Fi settings. Select the network name (SSID) that is printed on the included Wi-Fi Configuration Note (e.g. **dlink-A8FA**), then enter the Wi-Fi password also printed on the Wi-Fi Configuration Note (e.g. **akbdj19368**).

## PRODUCT CONFIGURATION (WEB-BASED UTILITY)

To configure, open a web browser (such as Internet Explorer) from a PC or Notebook, and enter **http://dlinkap.local** in the address bar. This will direct you to the web-based configuration utility. The default username is **Admin** and the password field should be left blank. Click **Log In** to continue. Once logged in, click **Launch Wireless Setup Wizard** to commence the setup process. For further information on configuring your access point, please refer to the included user manual.

LOGIN URL : <http://dlinkap.local>.

USERNAME: Admin

PASSWORD: (blank by default)

If you have more than one access point, enter **http://dlinkapxxxx**, or **http://dlinkapxxxx.local**, (where **xxxx** represents the last four digits of the access point's MAC address, which is located on the label on the bottom of the device).

# TROUBLESHOOTING

## SETUP AND CONFIGURATION PROBLEMS

### 1. WHY CAN'T I ACCESS THE WEB-BASED CONFIGURATION UTILITY?

- Check the physical connection between your computer and the access point. The LAN LED  on the access point should be illuminated, indicating that a connection is present. You should also ensure that your computer's Ethernet port is enabled and functioning correctly.
- If you are using Wi-Fi to connect to the access point, ensure that you are connected to the correct wireless network, and that there are no connectivity problems. If you are still unable to access the configuration utility, try connecting to the access point using the included Ethernet cable.



### 2. HOW DO I RESET MY DAP-1665 AP TO FACTORY DEFAULT SETTINGS?

- Ensure the access point is powered on.
  - Press and hold the reset button on the rear of the device for 10 seconds.
- Note: Resetting the AP to the factory default will erase the current configuration settings. You should repeat the setup process described in the installation guide above to reconfigure your access point.

### 3. HOW DO I ADD A NEW WIRELESS CLIENT OR PC IF I HAVE FORGOTTEN MY WIRELESS NETWORK NAME (SSID) OR WIRELESS ENCRYPTION KEY?

- If you have not changed your Wi-Fi settings from the factory defaults, you can use the information listed on the provided Wi-Fi Configuration Card to connect to the access point.
- If you have changed your Wi-Fi settings, you should access the web-based configuration utility as described on the previous page, and complete the setup wizard again to renew your wireless settings.
- Make sure you write down these settings so that you can enter them into each wirelessly connected device.

## TECHNICAL SUPPORT

**United Kingdom (Mon-Fri)** , Website: <http://www.dlink.com>

Home Wireless/Broadband 0871 873 3000 (9.00am–06.00pm, Sat 10.00am-02.00pm)

Managed, Smart, & Wireless Switches, or Firewalls 0871 873 0909 (09.00am- 05.30pm)

(BT 10ppm, other carriers may vary.)

**Ireland (Mon-Fri)**, Website: <http://www.dlink.com>

All Products 1890 886 899 (09.00am-06.00pm, Sat 10.00am-02.00pm)

Phone rates: €0.05ppm peak, €0.045ppm off peak times

# WIRELESS NETWORK REMINDER

Wireless Network Name (SSID)

Wireless Network Password

## TECHNICAL SUPPORT

UK	<a href="http://www.dlink.com">www.dlink.com</a>
IRELAND	<a href="http://www.dlink.com">www.dlink.com</a>
GERMANY	<a href="http://www.dlink.com">www.dlink.com</a>
FRANCE	<a href="http://www.dlink.com">www.dlink.com</a>
SPAIN	<a href="http://www.dlink.com">www.dlink.com</a>
ITALY	<a href="http://www.dlink.com">www.dlink.com</a>
NETHERLANDS	<a href="http://www.dlink.com">www.dlink.com</a>
BELGIUM	<a href="http://www.dlink.com">www.dlink.com</a>
LUXEMBURG	<a href="http://www.dlink.com">www.dlink.com</a>
POLAND	<a href="http://www.dlink.com">www.dlink.com</a>
CZECH	<a href="http://www.dlink.com">www.dlink.com</a>
HUNGARY	<a href="http://www.dlink.com">www.dlink.com</a>
NORWAY	<a href="http://www.dlink.com">www.dlink.com</a>
DENMARK	<a href="http://www.dlink.com">www.dlink.com</a>
FINLAND	<a href="http://www.dlink.com">www.dlink.com</a>
SWEDEN	<a href="http://www.dlink.com">www.dlink.com</a>
GREECE	<a href="http://www.dlink.com">www.dlink.com</a>
PORTUGAL	<a href="http://www.dlink.com">www.dlink.com</a>