



ENGLISH

URC 6810

 
ENGLISH SIMPLE SET UP GUIDE

Thank you for purchasing the One For All TV Zapper.

The remote features the most commonly used keys for control of your home entertainment devices, which can be customised using the handy learning feature to perform exactly the way you need them to.

You could for example just learn the volume, power and channels of your TV in the kitchen, or combine the control of your TV, Set Top Box and even Sound Bar in the living room. There are also 2 Power keys for combining more than one device together on a single remote.

KEY TABLE

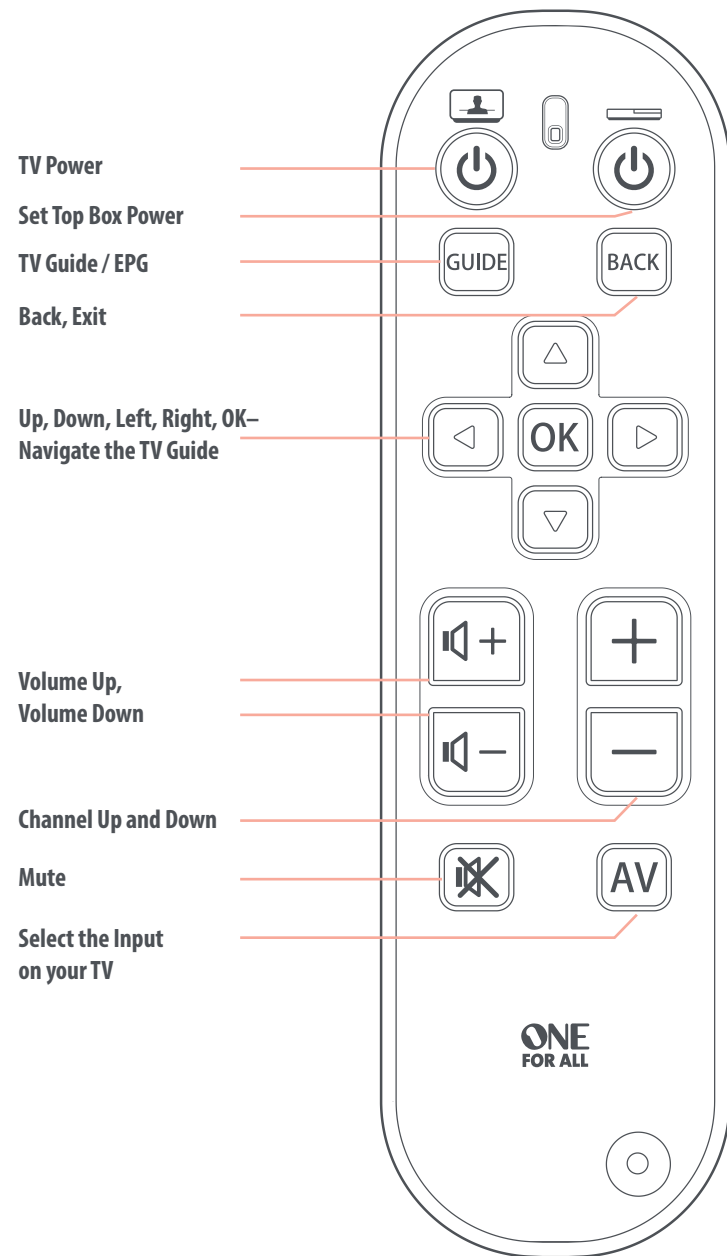

PRODUCT DISPOSAL
(EUROPEAN DIRECTIVE 2002/96/EC)
The crossed out wheeled bin symbol on this product ensures that this product is manufactured using high quality components that can be recycled and reused according European Directive 2002/96/EC. Please do not dispose this product with your normal household waste but inform yourself about the local separate collection for electrical and electronic products to dispose this product correctly. This will help preventing potential negative effects on the environment and/or human health.

BATTERY DISPOSAL
(EUROPEAN DIRECTIVE 2006/66/EC)
Please do not dispose your batteries with your normal household waste but inform yourself about the local separate collection for empty batteries to dispose them correctly. This will help preventing potential negative effects on the environment and/or human health.

UNIVERSAL ELECTRONICS INC/ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. Please notice that we need your purchase receipt so that we may establish your eligibility for service. If you have bought this product for purposes which are not related to your trade, business or profession, please remember that you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights.

UK
www.oneforall.com

New Zealand
0800 1425369
sales@amber.co.nz
www.amber.co.nz
www.oneforall.com

Ireland
www.oneforall.com

Australia
1 300 888 298
ofa.support@ambertech.com.au
www.ambertech.com.au
www.oneforall.com

South Africa
0861 100551
support@oneforall.co.za
www.connoisseur.co.za
www.oneforall.com

Universal Electronics BV - Europe & International
Europe & International
The Netherlands
BDN-1300415
710328
CE



 
www.ofa.com/urc6810

HOW TO SET UP YOUR REMOTE

A - LEARNING

Your One For All remote control can learn any function from any other working remote control. This is a quick and easy one-time setup that will allow you to control one or more of your home entertainment devices, and even combine multiple devices in one easy to use remote control. You could, for example teach the volume keys to control your Sound Bar, the TV Power and AV keys to control your TV, and the rest of the keys to control your Set Top Box (Satellite, Cable or Freeview Receiver).

To do this, firstly make sure you have all your original remote controls to hand, and that they have working batteries in. To learn functions, the original remote should be approximately 3cm from the OFA remote, pointing towards it as shown below:

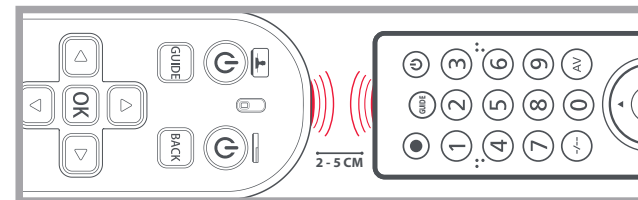

- Hold down TV Power and Mute until the red LED blinks twice.
- Press and release the key you want to learn a function onto (for example the Guide key) - The red LED will blink continuously.
- Press and release* the corresponding key on the original remote, for example Guide.
- The red LED will blink twice to indicate the key has been learned correctly.
- Repeat steps 2 and 3 for each key you want to learn - remember you can learn from multiple remotes, but only one function per key.
- When you learned all the functions you require, press and hold the TV Power key until the red LED blinks twice.

Hints

- If the red LED shows one long blink at step 4, the function was not learned correctly, please try again from step 2.
- If you find one or more keys don't work properly after set up, you can re-enter the learning mode at any time by repeating the procedure from step 1.
- To delete a learned function, hold down Set Top Box Power and AV until the red LED blinks twice, and press the key to delete twice. The red LED will blink twice.
- If one or more of your original remotes aren't working, you can still set up the One For All remote by Code Set Up (B).

* Some remotes send commands differently. If you find a function cannot be learned, try holding down the key on the original remote instead of pressing and releasing.


HOW TO SET UP YOUR REMOTE

B - HOW TO SET UP USING A CODE

In code list at the back of the manual (pages 77 to 94), you will see that each brand has a list of 5 digit codes per device. The codes all consist of numbers between 1 and 6. When you are asked to enter a code, you can do it using the keys below to represent the numbers.

Key	Name	Digit
	TV Power	1
	Set Top Box Power	2
	Volume Up	3
	Channel Up	4
	Volume Down	5
	Channel Down	6

 So for example to enter the code **21656** for a Sony TV you would press **Set Top Box Power (2), TV Power (1), Channel Down (6), Volume Down (5) and Channel Down (6).**

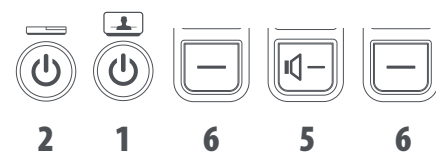

HOW TO SET UP YOUR REMOTE

 
If you cannot learn from your original remote controls, you can set up your device by trying codes individually. To do this:

- Turn on your device (not on standby) and point the OFA remote towards it.
- To set up:


TV -
hold down TV Power and STB Power until the red LED blinks twice.



STB (CABLE, SATELLITE, FREEVIEW, DVB-T) -
hold down Volume + and Volume - until the red LED blinks twice.

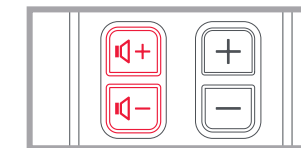

 AUDIO (RECEIVER, SOUND BAR) -
hold down Channel + and Channel - until the red LED blinks twice.

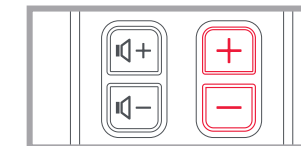

3. Enter the first 5 digit code listed for your brand using the Power, Channel and Volume Keys to represent the digits. (e.g. 21656 for Sony).

4. The red LED will blink twice

5. Now aim the remote towards your device and press the Power (or Mute*) key.
(TV) (STB or Audio)

6. If the device turns off (or mutes*), your remote is ready to use. If not, repeat steps 2-5 with the next code in the list.

* If you find one or more keys do work as you expect, start again at step 2.

* If you have already set up a Set Top Box and you are setting up Audio as well, please try the Mute key during step 5.

AFTER CODE SETUP

COMBI CONTROL

Your One For All Zapper can operate up to three devices. If you only set up one device, all keys will operate that device.

If you set up a TV and Set Top Box, most keys will operate the Set Top Box, with the exception of the TV Power Key, the Volume Up, Down and Mute, and the AV key. If you set up a TV, Set Top Box and an Audio device such as a sound bar, the Volume Up, Down and Mute keys will control your Audio device.

POWER MACRO

If you have set up a Set Top Box and an Audio Device, if you hold down the Set Top Box Power key for three seconds it will first send Power for the Set Top Box, and then for the Audio Device.

AV SHIFT

As the AV key is intended to select the input on your TV and most TVs use a menu to select from a list of inputs, when the AV key is pressed and a TV and STB are set up, the Menu Up, Down, Left, Right and OK keys temporarily control the TV. If the OK key is pressed, or no key is pressed for ten seconds, these keys will revert to controlling your Set Top Box.