

Outdoors

Battery Operated Decoration

Outdoor candles, set of 3

Item no. 1438214



Polarlite®



Operating instructions

Intended use

The battery operated Outdoor Candles are intended for indoor and outdoor decoration (IP44) and are controlled by the remote control. Each Outdoor Candle is operated with two AA batteries (not included).

For safety and approval purposes, you must not rebuild and/or modify this product. If you use the product for purposes other than those described above, the product may be damaged. In addition, improper use can cause hazards such as short circuiting, fire etc. Read the instructions carefully and keep them. Make this product available to third parties only together with its operating instructions.

This product complies with the statutory national and European requirements. All company names and product names are trademarks of their respective owners. All rights reserved.

Delivery content

- Outdoor candles, set of 3
- Remote control
- Button cell battery (CR2025)
- Operating instructions

Safety instructions

Read the operating instructions carefully and especially observe the safety information. If you do not follow the safety instructions and information on proper handling in this manual, we assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.



a) Persons / Product

- The device is not a toy. Keep it out of the reach of children and pets.
- Do not leave packaging material lying around carelessly. These may become dangerous playing material for children.
- Always check the product for damages before use. Should you discover any damage, cease use of the product.
- Protect the product from extreme temperatures, strong jolts, flammable gases, vapours and solvents.
- Do not place the product under any mechanical stress.
- If it is no longer possible to operate the product safely, take it out of operation and protect it from any accidental use. Safe operation can no longer be guaranteed if the product:
 - is visibly damaged,
 - is no longer working properly,
 - has been stored for extended periods in poor ambient conditions or
 - has been subjected to any serious transport-related stresses.
- Please handle the product carefully. Jolts, impacts or a fall even from a low height can damage the product.
- The outdoor candles are designed to be used indoors and outdoors. Keep the remote control in dry indoor area only.
- Attention, LED light:
 - Do not look directly into the LED light!
 - Do not look into the beam directly or with optical instruments!


b) Batteries

- Correct polarity must be observed while inserting the batteries.
- Remove the batteries if you are not using the product for a long period of time to prevent damage due to leaks. Leaking or damaged batteries might cause acid burns when in contact with skin, therefore use suitable protective gloves to handle corrupted batteries.
- Batteries must be kept out of reach of children. Do not leave batteries lying around, as there is risk, that children or pets swallow them.
- All batteries should be replaced at the same time. Mixing old and new batteries can cause the batteries to leak and the product to be damaged.
- Batteries must not be dismantled, short-circuited or thrown into fire. Never recharge non-rechargeable batteries. There is a risk of explosion!

c) Miscellaneous

- Maintenance, modifications and repairs are to be performed exclusively by an expert or at a qualified shop.
- If you have questions which remain unanswered by these operating instructions, contact our technical support service or other technical personnel.

Product overview

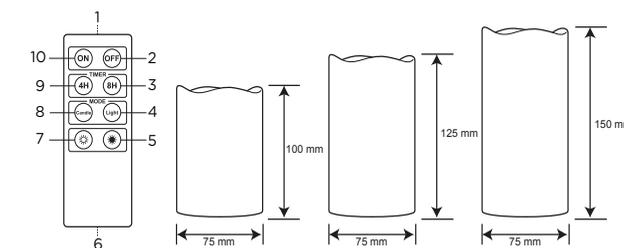

1	Infrared LED	4	Light button	7	⊕ button
2	OFF button	5	⊖ button	8	Candle button
3	8 H button	6	Battery compartment (backside)	9	4 H button
				10	ON button

Operation

The product must not be used in or under water.

Do not hang any objects from the product and do not cover the product.

Do not place the product near sources of heat such as chimneys or stoves.

 The LED is non-replaceable.

1. Remove the product from the packaging.
2. Place the product on a horizontal surface, e.g. a table, window ledge, etc.
3. Remove the battery compartment cover from the bottom by turning it in the direction of OPEN.



- Insert two AA batteries. We recommend using high quality batteries. Observe the correct polarity (“+” = positive, “-” = negative), as stated on the battery box.
 - Turn the product on or off using the switch on the bottom (**ON** = On, **OFF** = Off).
 - Replace the battery compartment cover by turning it in the direction of LOCK.
 - Turn off the product and remove the batteries for extended periods of disuse.
- Replace the batteries when the LED no longer lights up.

Remote control

- Make sure there are no obstacles located between the infrared LED (1) of the remote control and the Outdoor Candles.
- If you do not want to operate all the Outdoor Candles, move a bit closer towards the Outdoor Candle, thereby ensuring visual contact between remote control and Outdoor Candle.
- The operating range of the remote control depends on the ambient conditions and the battery capacity.
- Replacing the battery is required when the operating range of the remote control drops significantly or if the Outdoor Candles cannot be operated when pressing any button.
- Open the battery compartment as indicated on the backside of the remote control and remove the old battery.
- Insert a button cell battery of type CR2025 into the battery holder, making sure the positive terminal (“+” marking on the battery) faces up.
- Push the battery holder back into the battery compartment to close. Make sure the battery holder locks into place.

Description of buttons

ON button (10)	Turn on the Outdoor Candles
OFF button (2)	Turn off the Outdoor Candles
 button (5) /  button (7)	Dimmer function
Light button (4)	Steady lighting function
Candle button (8)	Flickering mode
4 H button (9) / 8 H button (3)	Timer function: The Outdoor Candles will automatically turn off after 4 or 8 hours. In order to turn them on again, press the ON button (10) on the remote control.

Maintenance and cleaning

- The product is maintenance-free, except for any change of batteries and occasional cleaning.
- Turn off the product before cleaning.
- To clean, use a clean, dry, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water. Allow the product to dry completely before continued use.

Disposal

a) Product



Electronic devices are recyclable waste and must not be disposed of in the household waste. At the end of its service life, dispose of the product according to the relevant statutory regulations.

Remove any inserted batteries and dispose of them separately from the product.

b) Batteries



You as the end user are required by law (Battery Ordinance) to return all used batteries. Disposing of them in the household waste is prohibited.

Contaminated batteries are labelled with this symbol to indicate that disposal in the domestic waste is forbidden. The designations for the heavy metals involved are: Cd = Cadmium, Hg = Mercury, Pb = Lead (name on batteries, e.g. below the trash icon on the left).

Used batteries can be returned to collection points in your municipality, our stores or wherever batteries are sold.

You thus fulfil your statutory obligations and contribute to the protection of the environment.

Technical data

a) Outdoor Candle

Item No.	1438214
Operating voltage	3 V (2 x 1.5 V batteries, type AA)
Protection type	IP44
Power consumption	0.06 W
Battery life	approx. 168 h
Number of lights	1
Luminous colour	Amber
Operating conditions	-20 to +60 °C / 0 - 100 % RH
Storage conditions	-20 to +60 °C / 0 - 100 % RH
Dimensions (H x W)	100/125/150 x 75 mm
Weight (set of 3)	approx. 485 g

b) Remote control

Operating voltage	3 V lithium battery, type CR2025
-------------------	----------------------------------

These operating instructions are published by CEI Conrad Electronic International (HK) Limited, 18th Floor, Tower 2, Nina Tower, No. 8 Yeung Uk Road, Tsuen Wan, New Territories, Hong Kong. All rights including translation reserved. Reproduction by any method, e.g. photocopy, microfilming, or the capture in electronic data processing systems require the prior written approval by the editor. Reprinting, also in part, is prohibited. The operating instructions reflect the current technical specifications at time of print.

© Copyright 2016 by CEI Conrad Electronic International (HK) Limited