



OUTDOOR TECH

KODIAK

PORTABLE

RUGGED

**POWER-
BANK**

Hi.



Good call on picking up the Outdoor Tech Kodiak Portable Powerbank. Your experience of the universe will soon be enhanced wirelessly. This manual exists to help make sure that you use them correctly, so you're definitely going to want to relax for a hot second and look through this.

Kisses,




OUTDOOR TECH.

■ CONTENTS

Anatomy	1
Power Up	2
Features	4
Care & Maintenance	5
Specs	7

www.outdoortechnology.com

ANATOMY

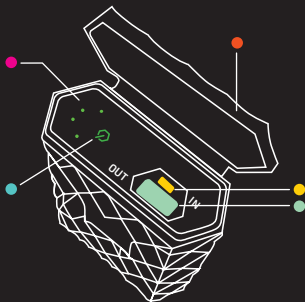

- Battery Level Indicator
- Power Key
- Micro USB Charge Port
- USB Output Port
- Power Seal

POWER UP



- Connect the micro USB port cable to the Kodiak input Port.
- Connect the USB Port to the computer or the 5V/1A USB Power Adapter.
- The LED Lights will start flashing when you charge the Kodiak. All four LEDs lights will be lighted, when charging is complete.

LED Indicator	Battery Level
● ● ● ●	Fully Charged
● ● ●	75% Remaining
● ●	50% Remaining
●	25% Remaining
(Flashing)	Less than 5% Remaining*


■ POWER UP (CHARGING STUFF)



Charging your devices:

1. Connect the USB Port cable to the Kodiak's output port.
2. Connect the other port to your device.
3. Press the power button for about 1 second, the LED battery indicator will display the battery level when the Kodiak is turned on.
4. When the your device is fully charged, disconnect the Kodiak.

**■ FEATURES: WATERPROOF
& SHOCK PROOF**

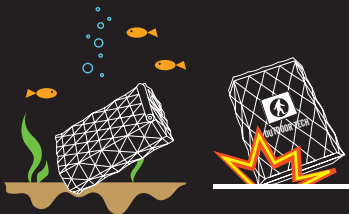

■ FEATURES: POWER SEAL

● Be sure the power seal is fully depressed all around the edges before exposure to different elements.



CARE & MAINTENANCE



- Do not access the input/output simultaneously. It may affect the product's performance and not charge properly.
- When not in use, please make sure the lid is tightly closed and kept away from extreme heat conditions.
- Keep the Kodiak away from direct sunlight or hot places. High temperatures will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Use a soft, dry cloth to wipe the surface. Do not use intensive chemical products or detergent to clean the product.
- Charge the product at least once every three months, to prevent the batteries from drying out.

■ CARE & MAINTENANCE (CONT.)



- For best performance, fully charge the Kodiak before charging other devices.
- Do not try to disassemble the Kodiak.
- Do not scratch the surface with sharp things.
- It is normal for the battery to heat up during its charge. The temperature should be below 45° & does not affect the Kodiak's performance.
- All products have passed the strict quality inspection, Do not use the battery if it gives off an odor, generates heat, becomes deformed, abrasion, damaged or appears abnormal in any way.

SPECS



Battery: High Quality Lithium Battery

Capacity: 6000 mAh

Transfer Efficiency: 80%

Input Voltage: 5V DC

Output Voltage: 5V DC

Input Current: 1 A

Output Current: 2.1 A

Operating Temperature: -4°F ~ 140°F

DON'T BE SO ANTISOCIAL



[Facebook.com/outdoortech](https://www.facebook.com/outdoortech)

Twitter & Instagram: @outdoortech

Questions, comments, complaints, secret desires,
or just to say what's up: email info@outdoortech.com

K bye.



[outdoortech.com](https://www.outdoortech.com)