

GLOWSTREAK™

LED BALL

IMPORTANT INFORMATION AND TIPS

TO ACTIVATE/DEACTIVATE:

1. TO TURN ON: THIS BALL IS MOTION ACTIVATED, SIMPLY BOUNCE THE BALL TO TURN IT ON.



2. AUTO SHUT-OFF: AFTER FIVE MINUTES OF INACTIVITY THE BALL WILL GO INTO FLASHING MODE. AFTER FIVE MINUTES OF FLASHING, IT WILL AUTOMATICALLY TURN OFF.


HELPFUL TIPS:

1. THE GLOWSTREAK IS WATERPROOF AND FLOATS
2. THE GLOWSTREAK IS NOT A CHEW TOY, IT IS INTENDED TO BE AN EXERCISE TOY USED FOR THROWING AND RETRIEVING IN A SUPERVISED SETTING.




BATTERY CHANGE INSTRUCTIONS:

1. USING A COIN, SCREWDRIVER, OR OTHER FLAT OBJECT, UNSCREW THE SWITCH PLUG.

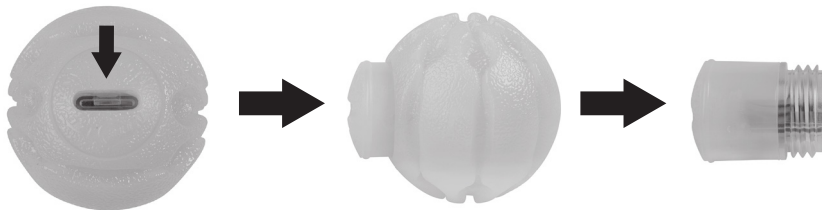

2. GENTLY PULL OUT THE BATTERY/LED MODULE AND REPLACE THE 2 CR2032 BATTERIES.

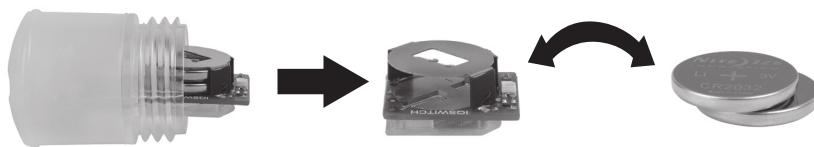

3. REPLACE THE MODULE AND RETURN THE PLUG.