 
 


AEG
perfekt in form und funktion


Insert SIM2 Card first

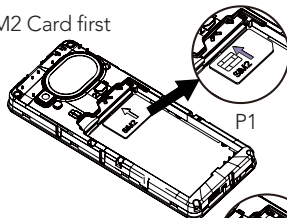

Insert SIM1 Card

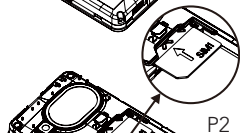

To remove SIM2, pull back this metal plate out

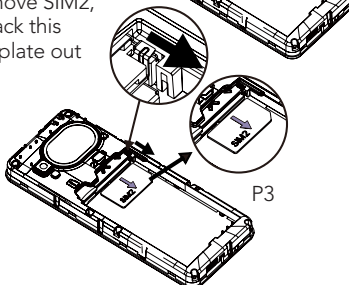

1 BECAUSE WE CARE

Thank you for purchasing this product. This product has been designed and assembled with utmost care for you and the environment. This is why we supply this product with a quick installation guide to reduce the number of paper (pages) and therefore save trees to be cut for making this paper. Thank you for supporting us to protect our environment. You can find the full user guide on www.aegtelephones.eu.

2 SAFETY AND PRECAUTIONS

When using your telephone, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Switch off the phone in the vicinity of chemical plants, gas stations and other locations containing explosive objects.
2. When driving, please use the hands free calling device (to be purchased separately) to ensure safety. Please park the car on the roadside for communication except in case of emergency.

3. Switch off the phone when boarding an airplane and do not switch the phone on during the flight.
4. Be careful when using the mobile phone in the vicinity of devices such as pacemakers, hearing aids and other electro-medical equipment, which may be interfered by the mobile phone.
5. Never attempt to disassemble the phone by yourself.
6. Do not recharge the phone without battery being installed.
7. Charge the phone in well-ventilated environment and keep away from inflammable and highly explosive elements.
8. To avoid demagnetization, keep the handset away from magnetic substances, such as magnetic discs or credit cards.
9. Keep the phone away from liquid. If soaking or erosion occurs, take the battery out and contact the supplier.
10. Avoid using the phone in extremely high or low temperature environments. Never leave the phone exposed under direct sunlight, in high humidity or in a dusty environment.
11. Do not use liquid or anything wet with strong detergents to clean the handset.

Important Safety Instructions

To prevent possible hearing damage, do not listen at high volume levels for long periods.

3 SET HANDSET LANGUAGE

- Press **Menu** and **OK** to select "Settings", then press **OK**.
- Press **OK** to select "Phone settings", then press **OK**.
- Press **OK** to select "Language", then press **OK**.
- Press **OK** to select your language, press **OK** to confirm.

4 GETTING TO KNOW YOUR PHONE

4.1 Keys and parts (see P1)

| # | Meaning |
|---|---|
| 1 | Earpiece |
| 2 | Left Soft Key Perform functions display text above. |
| 3 | Right Soft Key Perform functions display text above. |

2.1 Medical units

The use of equipment that transmits radio signals, e.g. mobile phones, can interfere with insufficiently protected medical apparatus. Consult a doctor or the manufacturer of the apparatus to determine if it has adequate protection against external radio signals, or if you have any questions. Wherever there are notices to forbid use of mobile phones, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

2.2 Pacemaker

Pacemaker manufacturers recommend a distance of at least 15 cm. between a mobile phone and a pacemaker to avoid the risk of interference with the pacemaker. These recommendations are in accordance with independent research and recommendations from Wireless Technology Research. People with pacemakers should:

- not carry the unit in a breast pocket
- hold the unit against the ear on the opposite side from the pacemaker to reduce the risk of interference

If you suspect that there is a risk of interference, turn off the unit and move it further away.

| | | |
|---|--------------------------------|--|
| 4 | Up/Down and Enter Key | <ul style="list-style-type: none"> • Press to adjust receiving volume in talk. • Press to step through names, phone numbers, menus and settings. • Press key to enter or confirm a selection. |
| 5 | Talk key | <ul style="list-style-type: none"> • Press to answer a phone call. • Press to enter the calls log. |
| 6 | End Call / Power On-Off button | <ul style="list-style-type: none"> • Press to end or reject a call. • Press to return to the Home Screen / Standby mode. • Press and hold to switch the phone on or off. |
| 7 | * Key | <ul style="list-style-type: none"> • When dialing : press to input "*" / "+" / "P" / "V". • In edit mode : press to input symbols. |
| 8 | # Key | <ul style="list-style-type: none"> • long press "#" to switch the user profiles. • In edit mode : press to change input method. |
| 9 | Torch key | <ul style="list-style-type: none"> • long press "0" to turn on/off the torch. |

2.3 Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion and follow all signs and instructions. An explosion risk exists in the places that include areas where you are normally requested to turn off your car engine. Within such an area, sparks can cause explosions or fire which can lead to personal injuries or even death. Turn off the unit at filling stations i.e. near petrol pumps and garages. Follow the restrictions that are in force on the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships: the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

2.4 Emergency calls

Important!

Mobile phones use radio signals and the mobile phone network. This means that connection in all circumstances cannot be guaranteed.

4.2 Display icons and symbols

The default idle screen shows the following information:

| | Meaning |
|--|--|
| | Vibrate only |
| | Ring + vibration |
| | First vibrate then ring |
| | New SMS Indicates you have new text. |
| | Missed call |
| | Radio link On with signal strength when linked. |
| | Battery charge level Internal segments cycle during |
| | Alarm On if alarm is set. |
| | Ring and vibrate off |

* The soft keys change to different functions in other modes.

5 INSTALLATION AND SETUP

5.1 Install the SIM/SD card and battery

- Switch off the phone, disconnect the power adaptor and remove the battery.
- Remove the backcover by lifting up from the left bottom side.
- Remove the battery by lifting the top in the middle.
- Carefully slide the SIM/SD card into the holder, as shown P1/P2/P3 on page 2.
- Replace the battery by aligning the gold connectors on the battery with those on the phone, and push the battery down until it clicks into place.
- Replace the back cover by placing it flat on the back of the handset and pushing down until it clicks into place.

5.2 Charge the battery

Warning:

Use only supplied/approved battery and charger. Using others may be dangerous and will invalidate approvals or warranty. A battery must be fitted. Do not charge with the back cover removed.

- Connect the charger lead firmly into the micro-USB socket at side of the handset, or place the handset directly in the charging cradle.

10

6.2 Last number redial

- In idle mode, press to see the **All calls** list – a list of the last 10 numbers for each of the dialled, received and missed calls.
- Press to go to the number you want.
- Press to dial the number.

6.3 To answer a call

- When the phone rings, press to answer it.

6.4 Earpiece volume

- Durinh a call, press to alter the volume.

The volume level displays and stays for future calls.

7 USING THE PHONEBOOK & SPEED DIAL KEYS

You can store names and phone numbers in the Internal phone book (up to 300) and in the SIM phone book (SIM dependant).

7.1 To access the phonebook

In idle mode:

- Press **Names** (Right Soft Key) **OR**
- Press **Menu**, select **Phonebook**, and **OK**.

13



UK

- Plug the mains power adapter into an AC mains socket. If the handset is turned on, "Charger connect" displays for a few seconds, and the battery symbol bars scroll to indicate that charging has started. If the handset is turned off, the display shows a battery symbol with the segments cycling to indicate charging has started.
 - Charging the battery may take up to 5 hours.
 - If "Charger connect" does not display, disconnect and retry.
- If charging still fails, contact the helpline.
- The battery is fully charged when the bars within the battery symbol are continuously on. Disconnect the charger from the phone and the AC outlet. "Charger removed" displays for a few seconds to indicate the charging has stopped.

5.3 Switching on and off

To switch the phone on and off:

- To switch on, press and hold until the display turns on.
- To switch off, press and hold until the display turns off.

11

Note:

- > Indicates entries in the SIM1 phone book.
- > Indicates entries in the SIM2 phone book.
- > Indicates entries in the Internal phone book.

7.2 To add a new phonebook entry

- Press **Options** and select **New** from Menu.
- Press **Up** select new from the menu list, and press Enter key.
- Select store **To Phone** or **To SIM1** or **SIM2** from the menu list, and press **OK**.
- Press **Enter** key and enter the name then press **Ok** then **Done** to confirm.
- press **Down** then enter key and then enter the digits for the number, then press **OK**.
- Press **Save** to save the new contact.

Note:

When writing the name, use # to switch cases, between Upper case (ABC), lower case (abc) or Numerals (123).

14

9 TECHNICAL DETAILS

| | |
|--|--|
| Standard | GSM Mobile |
| Frequency Band | GSM 850/900/1800/1900 |
| System | Phase 2+ |
| Operating Time (with fully charged battery) | Standby: > 200 hours Talking: > 4 hours |
| Charging Time | < 3 hours |
| Temperature range | Operating: 0°C to 40°C Storage: -20°C to 60°C |
| Electrical power Handset battery | BL-25C Li-ion 3.7V DC, 1000mAh Battery Pack |
| Travel charger | UK adaptor: CSGN-CSC01-500 EU adaptor: CSGN-PT001-500 Input 100-240V AC 50/60Hz MAX 0.15A Output 5.0V DC:500mA |
| SAR value | Maximum Head: 0.59W/Kg Body: 0.902W/Kg |

*Variation in operation times may occur depending on SIM card, network, and usage settings, usage style and environments.

17

Warning:

Do not switch on when mobile phone use is prohibited or if it may cause interference or danger.

5.4 To unlock handset keypad

- To unlocked, need to press **Uncock** then press " * " key.
- To locked, need to press **Menu** then press " * " key.

Note:

When the keypad is locked, you can dial the Emergency Services number 112, and operate the phone as usual during a call.

6 MAKING AND ANSWERING CALLS

6.1 To make a call

Ensure the phone is switched on and in service.

- Key in the telephone number including area code. (To add prefix "+" press the " * " key twice quickly).
- Press to dial the number on the display.
- To end calls press button.

12

8 GUARANTEE AND SERVICE

The phone is under warranty for 24 months from the date of purchase shown on your sales receipt. This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, lightning, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

Please keep your sales receipt; this is your proof of guarantee.

8.1 While the unit is under Guarantee

- Pack up all parts of your phone system, using the original package.
- Return the unit to the shop where you bought it, making sure you take your sales receipt.
- Remember to include the main adapter.

8.2 After the Guarantee has expired

If the unit is no longer under Guarantee, contact us via www.aegtelephones.eu

15

10 CE DECLARATION

This product is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC.

The Declaration of conformity can be found on: www.aegtelephones.eu

1313

11 DISPOSAL OF THE DEVICE (ENVIRONMENT)



At the end of the product lifecycle, you should not throw this product into the normal household garbage but bring the product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user guide and/or box indicates this. Some of the product materials can be re-used if you bring them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area.

Batteries must be removed before disposing of the device. Dispose of the batteries in an environmental manner according to your country regulations.

18