



GB Operating instructions
**RSL wireless remote control
12-channel**
Item no. 1574787



Latest operating instructions

Download the latest operating instructions via the link www.conrad.com/downloads or scan the QR code shown. Follow the instructions on the website.



Explanation of symbols



An exclamation mark in a triangle indicates important instructions in this operating manual that absolutely have to be observed.



The arrow symbol indicates specific tips and advice on operation.

Delivery content

- RSL wireless remote control
- Battery (CR2032)
- Operating instructions

Intended use

The product is used to turn separately available wireless outlets on and off by radio. The product supports wireless outlets with dimming function.

This product is intended for indoor use only. Do not use it outdoors. Contact with moisture (e.g. in bathrooms) must be avoided under all circumstances.

For safety and approval purposes, you must not rebuild and/or modify this product. Using the product for purposes other than those described above may damage the product. In addition, improper use can cause hazards such as a short circuit or fire. Read the instructions carefully and store them in a safe place. Only make this product available to third parties together with its operating instructions.

This product complies with statutory national and European regulations. All company and product names are trademarks of their respective owners. All rights reserved.

Safety instructions



Read the operating instructions carefully and especially observe the safety information. If you do not follow the safety instructions and information on proper handling in this manual, we assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.

a) General

- The device is not a toy. Keep it out of the reach of children and pets.
- Do not leave packaging material lying around carelessly. This may become dangerous playing material for children.

- Protect the product from extreme temperatures, direct sunlight, strong jolts, high humidity, moisture, flammable gases, vapours and solvents.
- Do not place the product under any mechanical stress.
- If it is no longer possible to operate the product safely, take it out of operation and protect it from any accidental use. Safe operation can no longer be guaranteed if the product:
 - is visibly damaged,
 - is no longer working properly,
 - has been stored for extended periods in poor ambient conditions or
 - has been subjected to any serious transport-related stresses.
- Please handle the product carefully. Jolts, impacts or a fall even from a low height can damage the product.
- Also observe the safety and operating instructions of any other devices which are connected to the product.
- Do not use this product in hospitals or medical institutions. Although the product only emits relatively weak radio signals, these may lead to the malfunction of life-support systems. The same may also apply to other areas.
- Consult an expert when in doubt about operation, safety or connection of the device.
- Maintenance, modifications and repairs are to be performed exclusively by an expert or at a qualified shop.
- If you have questions which remain unanswered by these operating instructions, contact our technical support service or other technical personnel.

b) Batteries

- Correct polarity must be observed while inserting the battery.
- The battery should be removed from the device if it is not used for a long period of time to avoid damage through leaking. Leaking or damaged batteries might cause acid burns when in contact with skin, therefore use suitable protective gloves to handle corrupted batteries.
- Batteries must be kept out of reach of children. Do not leave batteries lying around, as there is risk, that children or pets swallow them.
- Batteries must not be dismantled, short-circuited or thrown into fire. Never recharge non-rechargeable batteries. There is a risk of explosion!


Inserting/changing the battery

- Remove the battery compartment cover **(4)** on the back of the remote control.
- Insert a new CR2032 button cell into the battery holder. The plus pole has to point upwards (see imprint “+” on the coin cell). Slide the coin cell into the battery holder until it reaches the end.
- Close the battery compartment.



The battery needs to be replaced if the range of the remote control is significantly reduced or the control lamp **(1)** no longer lights up when the keys are used.

Operating elements

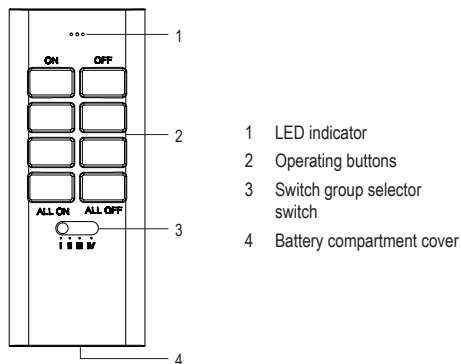

- 1 LED indicator
- 2 Operating buttons
- 3 Switch group selector switch
- 4 Battery compartment cover

Explanation of keys

- One of the four switch groups can be selected using the switch group selector switch (3). For each of the four switch groups, three respective channels are available. Accordingly, the remote control features twelve channels.
- The operating keys (2) are divided into two columns: Left column = **ON** / right column = **OFF**
- Using the three top keys of the left column, you can activate channels 1 to 3 individually.
- Using the three top keys of the right column, you can deactivate channels 1 to 3 individually.

- Using the key **ALL ON** at the bottom of the left column, you can activate channels 1 to 3 simultaneously.
- Using the key **ALL OFF** at the bottom of the right column, you can deactivate channels 1 to 3 simultaneously.

→ The control lamp (1) lights up with every key stroke.

Operation

The learning process and the dimming function are dependent on the wireless outlet. For detailed information, refer to the operating instructions for the wireless outlet.

→ The remote control can control an unlimited number of compatible radio-controlled outlets.

Care and cleaning

- Do not immerse the product in water.
- Never use aggressive detergents, rubbing alcohol or other chemical solutions, as these may damage the housing or cause the product to malfunction.
- Use a dry, lint-free cloth to clean the product.

Declaration of Conformity (DOC)

Conrad Electronic SE, Klaus-Conrad-Straße 1, D-92240 Hirschau hereby declares that this product conforms to the 2014/53/EU directive.

→ Click on the following link to read the full text of the EU declaration of conformity: www.conrad.com/downloads
Select a language by clicking on a flag symbol and enter the product order number in the search box. You can then download the EU declaration of conformity in PDF format.

Disposal

a) Product



Electronic devices are recyclable waste and must not be disposed of in the household waste. At the end of its service life, dispose of the product according to the relevant statutory regulations.

Remove any inserted batteries and dispose of them separately from the product.

b) Batteries



You as the end user are required by law (Battery Ordinance) to return all used batteries. Disposing of them in the household waste is prohibited.

Contaminated batteries are labelled with this symbol to indicate that disposal in the domestic waste is forbidden. The designations for the heavy metals involved are: Cd = Cadmium, Hg = Mercury, Pb = Lead (name on batteries, e.g. below the trash icon on the left).

Used batteries can be returned to collection points in your municipality, our stores or wherever batteries are sold.

You thus fulfil your statutory obligations and contribute to the protection of the environment.

Technical data

Compatible with item no. 640306 / 640453 / 640454 / 640462 / 640466 / 640552 / 1761733 / 1761734 / 1761736 / 1761738 / 1761739 / 1761741 / 1761743 / 1761746 / 1761751 / 1762767 / 1762768 / 1762772 / 1762773 / 1762776

Battery type CR2032

Number of channels 12

Transmission frequency..... 433.05 - 434.79 MHz

Transmission power..... <10 dBm

Transmission range max. 30 m (in open area)

Operating conditions..... -10 to +55 °C, 10 – 90 % RH

Storage conditions..... 0 to +45 °C, 10 – 90 % RH

Dimensions (L x W x H)..... 87 x 35 x 15 mm

Weight 27 g

This is a publication by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau (www.conrad.com).

All rights including translation reserved. Reproduction by any method, e.g. photocopy, microfilming, or the capture in electronic data processing systems require the prior written approval by the editor. Reprinting, also in part, is prohibited. This publication represents the technical status at the time of printing.

Copyright 2019 by Conrad Electronic SE. *1574787_V3_0419_02_mxs_m_en