# **VOLTCRAFT**<sub>®</sub>

GB Operating Instructions Multifunctional charger "V-Charge Field 60" Item No. 1597950

		Page
1.	. Introduction	4
2.	. Explanation of symbols	4
3.	. Intended use	5
4.	. Package contents	5
5.	. Safety information	6
	a) General information	6
	b) Setup location	6
	c) Operation	7
6.	. Battery information	9
	a) General information	9
	b) Additional information about lithium rechargeable batteries	10
7.	Compatible battery types	12
8.	Product overview	13
9.	Operation	14
	a) Connecting the charger to the power supply	14
	b) Connecting a battery to the charger	15
	c) General information on the control menu	16
	d) Charging and discharge power	17
10.	0. Menu structure	
11.	1. Lithium batteries (LiPo, Li-ion, LiFe, LiHV)	19
	a) General information	19
	b) Charging a battery without a balancer connection ("CHARGE")	20
	c) Charging a battery with a balancer connection ("BALANCE")	21
	d) Fast charge ("FAST CHG")	
	e) Storage mode ("STORAGE")	22
	f) Discharging a battery ("DISCHARGE")	23

			Page
12.	Ni	/IH and NiCd batteries	24
	a)	General information	24
	b)	Charging a battery ("CHARGE")	24
	c)	Automatic charging mode ("Auto CHARGE")	25
	d)	Recharging a battery ("RE-PEAK)	26
	e)	Discharging a battery ("DISCHARGE")	27
	f)	Cycle program ("CYCLE")	28
13.	Le	ad-acid batteries (Pb)	29
	a)	General information	29
	b)	Charging a battery ("CHARGE")	29
	c)	Discharging a battery ("DISCHARGE")	30
14.	DJ	I Mavic batteries	31
15.	Sa	ving/loading battery data	32
	a)	Saving battery data	32
	b)	Saving battery data	35
	c)	Loading battery data	36
16.	Dis	playing the voltage for lithium batteries	37
17.	Me	asuring the internal resistance	38
18.	Со	nnecting the charger to a PC	38
19.	Sy	stem settings	39
20.	Wa	arning messages on the display	43
21.	Ch	arger status information	44
22.	Са	re and cleaning	45
23.	Dis	sposal	45
	a)	Product	45
	b)	Batteries	45
24.	Teo	chnical data	46

# 1. Introduction

Dear customer,

Thank you for making the excellent decision to purchase a Voltcraft® product.

Voltcraft<sup>®</sup> - This name stands for above-average quality products in the areas of measuring, charging and grid technology, characterised by technical competence, extraordinary performance and permanent innovation.

Whether you are an ambitious hobby electronics or a professional user - a product of the Voltcraft<sup>®</sup> brand family will provide you with the best solution for even the most sophisticated of tasks. Special features: We offer the sophisticated technology and reliable quality of our Voltcraft<sup>®</sup> products at a near-unbeatable price/performance ratio. We lay the groundwork for long, good and successful cooperation.

Enjoy your new Voltcraft® product!

All company and product names are trademarks of their respective owners. All rights reserved.

If there are any technical questions, please contact:

International: <u>www.conrad.com/contact</u>

United Kingdom: www.conrad-electronic.co.uk/contact

# 2. Explanation of symbols

The symbol with an exclamation mark in a triangle is used to highlight important information in these operating instructions. Always read this information carefully.



The arrow symbol indicates special information and advice on how to use the product.

This product must only be used in dry, enclosed areas; it must not become damp or wet.



Always follow the instructions in this manual.

# 3. Intended use

The charger features a charging/discharging channel with an XT60 connection. It also comes with a built-in balancer for multi-cell lithium batteries. It can be controlled via a two-line backlit display and four control buttons.

The charger is designed to charge and discharge NiMH/NiCd batteries (1 - 15 cells), LiPo/LiIon/LiFe/LiHV batteries (2 - 6 cells) and lead-acid batteries (1 - 10 cells, 2 - 20 V).

The charging current can be adjusted from 0.1 A to 6.0 A (depending on the number of cells/battery voltage). The maximum total charging power is 60 W.

The discharge current can be adjusted from 0.1 A to 2.0 A (depending on the number of cells/battery voltage). The maximum total charging power is 5 W.

The charger features a connection for a temperature sensor (not included, available separately), which can be used to monitor the charging process.

The charger is powered by a 11 - 18 V/DC stabilized direct voltage (e.g. an external car lead battery or a suitable power adapter).

Always observe the safety information and all other information in these operating instructions!

Read the operating instructions carefully and keep them in a safe place for future reference. Always provide these operating instructions when giving the product to a third party.

Using this product for any purposes other than those described above may damage the product and result in a short circuit, fire or electric shock. This product must not be modified or reassembled. Do not attempt to open the device housing.

This product complies with statutory national and European regulations.

# 4. Package contents

- · Multi-functional charger
- · Connection cable with crocodile clips
- · CD with operating instructions
- · Information sheet with safety instructions

# Up-to-date operating instructions

To download the latest operating instructions, visit <u>www.conrad.com/downloads</u> or scan the QR code on this page. Follow the instructions on the website.



# 5. Safety information



Read the operating instructions and safety information carefully. If you do not follow the safety instructions and information on proper handling in this manual, we will assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.

### a) General information

- The unauthorized conversion and/or modification of the product is prohibited for safety and approval reasons. Never dismantle the product.
- Maintenance, modifications and repair work must be done by a technician or a specialist repair centre. This product does not contain any components that require maintenance.
- This product is not a toy and must be kept out of the reach of children.

The product must be installed, used and stored in areas that are inaccessible to children. The same applies to rechargeable batteries.

Exercise particular caution when children are present. Children may accidentally short-circuit the rechargeable battery/batteries, which can cause a fire or explosion. Fatal hazard!

- In schools, educational facilities, hobby and DIY workshops, the product must be operated under the supervision of qualified personnel.
- Always comply with the accident prevention regulations for electrical equipment when using the product in industrial facilities.
- Do not leave packaging material lying around carelessly, as it may become dangerous playing material for children.
- · Handle the product with care. Impacts or falls (even from a low height) may damage the product.
- If you are not sure how to operate the product correctly, or if you have any questions that are not answered in these operating instructions, contact us or another specialist.

### b) Setup location

- The charger must only be used in dry, enclosed indoor areas. It must not become damp or wet. Never
  place the product next to a bathtub, shower or other sources of moisture.
- Avoid direct sunlight, intense heat and cold temperatures. Keep the product away from dust and dirt. The same applies to connected batteries.
- Do not use the product in rooms or areas where flammable gas, vapours or dust may be present, as this
  may cause an explosion!
- Place the charger on a clean, level surface. Do not place the charger on flammable materials (e.g. a carpet or tablecloth). Always use a non-flammable, heatproof surface.
- · Keep the charger away from flammable or combustible materials (e.g. curtains).
- Never cover the product, as this may cause it to overheat and catch fire. Do not insert any objects into the ventilation slots on the charger. Never interfere with the built-in fan.

- Always use suitable protection when placing the charger on valuable furniture, otherwise it may cause scratch/pressure marks or discolour the furniture. The same applies to connected batteries.
- · Do not use the charger inside vehicles.
- The charger must be installed, used and stored in areas that are inaccessible to children. Children may
  accidentally short-circuit the rechargeable batteries, which can cause a fire or explosion. Fatal hazard!
- Do not use the charger in the immediate vicinity of strong magnetic/electromagnetic fields, transmitter aerials or HF generators. These may affect the electronic control system.
- Make sure that the cables are not pinched or damaged by sharp edges. Do not place any objects on the cables.
- Do not place any objects that contain liquid (e.g. vases or plants) on or next to the charger, battery or cable.

Liquids that get into the interior of the charger (or inside the connection sockets) may destroy the charger and cause a fire.

If liquid does get inside the device or the connection sockets, disconnect the charger from the power supply. Remove the battery from the charger. Discontinue use and take the charger to a specialist repair centre.

# c) Operation

- The charger is powered by a 11 18 V/DC stabilized direct voltage (e.g. an external car lead-acid battery or a suitable mains adapter).
- Never wear metal or conductive objects (e.g. jewellery such as necklaces, bracelets or rings) when handling the charger or rechargeable batteries. This may cause a short circuit in the rechargeable battery or charging cable, which can lead to a fire or explosion.
- Never leave the product unattended during use. The charger comes with a range of safety mechanisms to ensure safe use. However, malfunctions may still occur from time to time.
- Ensure there is sufficient ventilation during use; never cover the charger. Ensure that there is a sufficient distance (min. 20 cm) between the charger and other objects, otherwise the charger may overheat and cause a fire!
- The charger is only designed to charge (and discharge) NiMH, NiCd, Li-ion/LiPo/LiFe/LiHV and lead-acid batteries. Never charge other types of batteries or non-rechargeable batteries, as this may cause a fire or explosion!
- Always connect the cable to the charger before connecting a battery.

When disconnecting, proceed in the reverse order – disconnect the rechargeable battery from the charging cable, and then unplug the cable from the charger.

Disconnecting the battery in the wrong order may result in a short circuit in the charging cable, which can cause a fire or explosion!

- Do not connect several chargers together.
- · Only connect a single battery/battery pack to the charger.
- Only use the product in temperate climates. It is not suitable for use in tropical climates. Refer to the "Technical data" section for information on the permitted ambient conditions.



Never use the product immediately after it has been brought from a cold room into a warm one. This may
generate condensation, which can cause the charger to malfunction or damage the interior components.

Allow the product to reach room temperature before using it. This may take several hours.

- Do not use the charger in the immediate vicinity of strong magnetic or electromagnetic fields, transmitter aerials or HF generators. These may affect the electronic control system.
- If you suspect that safe operation is no longer possible, discontinue use immediately and prevent unauthorized use.

Disconnect the charger from the power supply. Discontinue use immediately and take the product to a specialist repair shop, or dispose of it in an environmentally friendly manner.

- Safe operation is no longer possible if the product is visibly damaged or stops working, or if the product was stored in unfavourable conditions for an extended period or mishandled during transport.
- · Keep the product in a cool, dry place out of the reach of children.

# 6. Battery information



There are numerous hazards associated with the use of rechargeable batteries. Compared with conventional NiCd or NiMH rechargeable batteries, LiPo/Li-ion-/LiFe-/LiHV rechargeable batteries have a high energy content. For this reason, it is essential to comply with safety regulations to prevent the risk of a fire or explosion.

Always observe the following safety information when handling rechargeable batteries.

In addition, ensure that you observe any additional safety information provided by the battery manufacturer.

### a) General information

- · Rechargeable batteries are not toys. Keep batteries out of the reach of children.
- Do not leave batteries lying around, as they constitute a choking hazard for children and pets. Seek immediate medical advice if a battery is swallowed.
- Rechargeable batteries must never be short-circuited, dismantled or thrown into fire. This may cause a fire or explosion!
- When handling leaking or damaged batteries, always use suitable protective gloves to avoid burning your skin.
- Do not attempt to recharge disposable, non-rechargeable batteries. This may cause a fire or explosion!

Non-rechargeable batteries are only designed to be used once and must be disposed of properly when they are empty.

Only recharge compatible rechargeable batteries and ensure that you use a suitable battery charger.

- · Batteries must not become damp or wet.
- Place the charger and rechargeable battery on a non-flammable, heat-resistant surface (e.g. stone tiles).
   Keep the charger and battery away from flammable objects. Maintain a sufficient distance between the charger and the battery. Never place the battery on top of the charger.
- The charger and battery may heat up during the charging process. Always ensure that there is sufficient ventilation. Never cover the charger or the battery!
- · Never use battery packs that are made of different types of cells.
- · Never charge/discharge a battery when the charger is unattended.
- Never charge/discharge a rechargeable battery when it is inside a model. Remove the battery from the model before charging it.
- Always ensure that the battery is connected in the correct polarity (observe the plus/+ and minus/symbols). Connecting the battery incorrectly may damage the model and the battery and cause a fire or explosion!

The charger features a safety mechanism to prevent the battery from being connected in the wrong polarity. However, connecting the battery in the wrong polarity may still cause damage in certain scenarios.

· Only connect a single battery/battery pack to the charger.



 If you do not plan to use the charger for an extended period, disconnect any connected batteries from the charger, and then disconnect the charger from the power supply.

- Do not charge a battery when it is still hot (e.g. due to a high discharge current in your model). Allow the battery to cool down to room temperature before charging or discharging it.
- Never damage the casing of a rechargeable battery. This may cause a fire or explosion!
- Never charge or discharge damaged, leaking or deformed batteries. This may cause a fire or explosion! Discontinue use immediately and dispose of the battery in an environmentally friendly manner.
- Disconnect the battery from the charger when the battery is fully charged.
- Rechargeable batteries should be charged at least once every 3 months to prevent damage due to overdischarge.
- Store rechargeable batteries in a suitable location. Install a smoke detector in the room. Batteries present a fire hazard and may generate toxic fumes. This applies in particular to batteries for model toys, which are subjected to high charging/discharge currents and vibrations.

# b) Additional information about lithium rechargeable batteries

Modern lithium rechargeable batteries have a significantly higher capacity than NiMH and NiCd batteries and are more lightweight. This makes lithium batteries (especially lithium polymer batteries) particularly suitable for use in model making.

However, lithium batteries require particular care to ensure safe charging/discharging, operation and handling.

The following section provides an overview of the potential hazards associated with lithium batteries and explains how these hazards can be avoided to ensure a long lifespan.

Please also refer to the battery safety information in section 6a.

· The casing of many lithium batteries is made of a thick film, which is very sensitive.

Do not dismantle, drop or insert any objects into lithium batteries. Do not apply mechanical loads or pull on the battery's connection cables. This may cause a fire or explosion!

Always observe these instructions when inserting or removing a battery from your model.

Ensure that the battery does not overheat during use, recharging, discharging, transport or storage. Do
not place rechargeable batteries next to sources of heat (e.g. a speed controller or motor) or expose
them to direct sunlight. This may cause the battery to overheat, which can cause a fire or explosion!

The temperature of the battery must not exceed 60  $^{\circ}$ C (or the maximum temperature stated in the manufacturer's instructions).

 If there are any signs of damage (e.g. if your model is subjected to an impact), or the battery casing is swollen, discontinue use immediately. Do not attempt to recharge the battery, as this may cause a fire or explosion!

Exercise caution when handling the damaged battery and use suitable protective gloves. Dispose of the battery in an environmentally friendly manner.

Never store damaged batteries in an apartment or in a house/garage. Damaged or swollen lithium batteries may catch fire.



Always use a compatible charger to charge lithium batteries and ensure that the charging specifications are correct. Do not use NiCd, NiMH or lead-acid battery chargers, as these may cause a fire or explosion.

Always select the correct charging specifications for your rechargeable battery.

- Always use a balancer when charging a lithium battery with more than one cell (the charger comes with a built-in balancer).
- The charge rate for LiPo batteries must not exceed 1 C (or the value stated in the battery specifications). This means that the charging current must not exceed the battery capacity (e.g. battery capacity = 1000 mAh, max. charging current = 1000 mA = 1 A).

Always refer to the manufacturer's specifications when using LiFe, Li-ion and LiHV batteries.

· The discharge current must not exceed the value stated on the battery.

For example, if "20C" is printed on the LiPo battery, the maximum discharge current is 20 times the battery's capacity (e.g. battery capacity = 1000 mAh, max. discharge current = 20C = 20 x 1000 mA = 20 A).

Exceeding the maximum current may cause the battery to overheat or become deformed, which can lead to a fire or explosion!

The printed value (e.g. 20C) indicates the maximum current that the battery can deliver for a short period. The continuous current should not be higher than one half of the stated value.

• Do not allow the individual cells of a lithium battery to become fully discharged. This may destroy the battery or cause permanent damage.

If your model does not have overdischarge protection or a low battery indicator, stop using it before the battery becomes empty.

# 7. Compatible battery types

Battery type	LiPo	Li-ion	LiFe	LiHV	NiCd	NiMH	Pb
Rated voltage (V/cell)	3.7	3.6	3.3	3.7	1.2	1.2	2.0
Max. charging voltage (V/cell)	4.2	4.1	3.6	4.35	1.5	1.5	2.46
Voltage for storage (V/cell)	3.8	3.7	3.3	3.85	-	-	-
Charging current for fast charging	<= 1C	<= 1C	<= 4C	<= 1C	1C - 2C	1C - 2C	<= 0.4C
Min. voltage after discharge (V/cell)	3.03.3	2.93.2	2.62.9	3.13.4	>= 1.0	>= 1.0	>= 1.8

The voltages in the above table are for one cell. The values may vary depending on the manufacturer (refer to the manufacturer's instructions for details).

The maximum charging and discharge currents are marked with the letter "C" (capacity).

A charging current of 1C corresponds to the capacity value printed on the battery (e.g. if the stated battery capacity is 1000 mAh, the max. charging current is 1000 mA = 1A).



When using multi-cell battery packs, check that the voltage setting is correct. For example, if you use a two-cell battery pack, the individual cells can be connected in parallel and series.

Exceeding the maximum permitted charging current or selecting the wrong cell number/voltage setting may destroy the battery. It may also cause a fire or explosion!

For more information on the maximum charging current and the cell number/voltage, refer to the data sheets or the battery label. This data takes precedence over the information in the table above.

#### Important!

- · Never charge battery packs with different types of cells (e.g. cells from different manufacturers).
- Never charge non-rechargeable batteries.
- · Never charge batteries that are not listed in the table above.
- · Never charge batteries with integrated electronic components.
- · Never charge batteries that are connected to other devices (e.g. a speed controller).
- · Never charge damaged or deformed batteries.

# 8. Product overview



- 1 Illuminated LC display
- 2 Balancer port for connecting the balancer cable on a lithium battery or an external balancer board (not included)
- 3 XT60 battery connection
- 4 "ENTER/START" button: Start/resume charging, confirm a setting
- 5 "INC" button: Select a battery program in the main menu, increase a value, menu selection (forwards), display the voltage of the individual cells when charging a lithium battery with a balancer connection
- 6 "DEC" button: Select a battery program in the main menu, decrease a value, menu selection (back), display charging data during the charging/discharge process
- 7 "BATT./STOP" button: Go to a sub-menu, pause the charging process, stop
- 8 Socket for external temperature sensor (not included, available separately)
- 9 DC input (11 18 V/DC stabilised voltage), e.g. for connecting to an external car lead-acid battery
- 10 Fan
- 11 Socket for connection to a USB port on a computer (connection cable and software not included, available separately)

# 9. Operation

# a) Connecting the charger to the power supply

### Important!

Always connect the charger to the power supply before connecting a battery.

The charger can be powered with a suitable mains adapter or a car lead-acid battery via the direct voltage input (11 - 18 V/DC).

The charger has a maximum total charging power of 60 W. The power supply must be chosen accordingly.



When the charger delivers the maximum charging power of 60 W, the power consumption will be approximately 20 - 30 % higher due to conversion losses.

If the charger is powered with a fixed voltage mains adapter (rather than a 12 V car lead-acid battery), it must be able to deliver a sufficiently high current.

Ensure that the charger is inserted in the correct polarity (observe the plus/+ and minus/- symbols). The connection cable has two crocodile clips (red = positive/+, black = negative/-).

The charger turns on automatically when it is connected to the power supply. The display will turn on and display a startup message. The charger will play a short beep.

The charger is now ready for use.

# b) Connecting a battery to the charger

### Please read the following section carefully before connecting or charging/discharging a battery:



- If you have not already done so, read the information in sections 5, 6 and 7.
- Do you know the battery's specifications? Do not connect, charge or discharge a battery if the specifications are not printed on the casing!
- Have you selected the correct charging/discharge mode for the type of battery you are using? Selecting the wrong mode may damage the charger and the battery and cause a fire or explosion!
- · Have you selected the correct charging/discharge current?
- Have you selected the correct voltage (e.g. for multi-cell LiPo batteries)? In certain scenarios, a dual-cell LiPo battery can be connected in parallel (3.7 V) or series (7.4 V).
- Are all cables and plugs intact? Do the plugs fit securely into the sockets? Worn-out plugs and damaged cables must be replaced.
- Only connect a single battery/battery pack to the charger. Never connect several batteries/battery packs at the same time.
- Always connect the cable to the charger before connecting a battery. When disconnecting, proceed in the reverse order – disconnect the rechargeable battery from the charging cable, and then unplug the cable from the charger.

Disconnecting in the wrong order may lead to a short circuit, which can cause a fire or explosion!

• If you wish to charge a self-assembled battery pack, the cells must be identical (same type, capacity and manufacturer).

The cells must also be charged to the same level (lithium batteries can be balanced out using the balancer, but this is not possible with other battery packs such as NiMH or NiCd).

Before connecting a battery/battery pack to the charger, disconnect the battery from your device (e.g speed controller).

#### Important information on charging/discharging a lithium battery pack with a balancer connection:

Multi-cell lithium battery packs normally have a balancer connection. This enables the charger to monitor the voltage of each individual cell.

The charger balances the voltages of the cells in the event that the voltage is different. This prevents the cells from over or undercharging. The balancer therefore prevents individual battery cells from overcharging (which could cause a fire or explosion) and overdischarging and ensures that the battery pack provides optimal performance.

#### Connecting a battery pack to the charger:

- 1. Connect the charger to the power supply.
- Connect the charging cable to the XT60 socket on the charger. Ensure that the cable is inserted in the correct polarity; this is indicated on the XT60 socket on the charger.



Do not connect the charging cable to the battery at this stage. This may result in a short circuit in the charging cable, which can cause a fire or explosion!

- Connect the charging cable to the battery, ensuring that it is connected in the correct polarity (red cable = positive/+, black cable = negative/-).
- 4. If you wish to connect a multi-cell lithium battery with a balancer cable to the charger, connect it to the balancer socket on the charger. If the plug does not fit, use a suitable adapter cable or an external balance board (not included).

Ensure that the cable is inserted in the correct polarity; this is indicated on the charger next to the balancer connection.

#### To disconnect a battery, proceed as follows:

- 1. If you have connected a lithium battery with a balancer cable to the charger, disconnect the balancer cable from the charger.
- 2. Disconnect the charging cable from the battery
- 3. Finally, disconnect the charging cable from the charger.
- 4. If there is no battery connected to the charger, you can now disconnect the charger from the power supply.

### c) General information on the control menu

- From the main menu, use the "INC." or "DEC." buttons to select the desired sub-menu, and then press the "ENTER/ START" button to confirm.
- · Use the "INC." and "DEC." buttons to select the desired setting from the sub-menu.
- Press the "ENTER/START" button to change a setting. The selected setting will flash on the display. Use the "INC." and "DEC." buttons to change the setting (e.g. charging current). Hold down the "INC." or "DEC." buttons to move through the values more quickly.
- · Press the "ENTER/START" button to save the modified setting.
- · Press the "BATT./STOP" button to exit the settings menu. The charger will revert to the main menu.

Press the "DEC." button repeatedly when the battery is charging/discharging to display a range of different information. The charger reverts to the home screen if no button is pressed for a few seconds.

When a lithium battery with a balancer plug is connected to the charger, you can press the "INC." button during the charging/discharge cycle to display the voltage of the individual cells. Press the "ENTER/ START" button to go back to the home screen.

## d) Charging and discharge power

The charger has a maximum charging capacity of 60 W and a discharge capacity of max. 5 W.

#### → Important:

The charging capacity limits the possible charging current (depending on the battery type) and number of cells. The same applies to the discharge capacity.

Example for charging a battery:

The charger provides a maximum charging current of 6.0 A. However, when you use a LiPo battery with more than two cells, the actual charging current is lower, otherwise the 60 W charging capacity would be exceeded. (End of charge voltage for a 3-cell LiPo battery =  $3 \times 4.2 \text{ V} = 12.6 \text{ V}$ , 60 W / 12.6 V = 4.78 A).If you select a higher current, the charger automatically decreases the current to protect against overload.

Example for discharging a battery:

The charger provides a maximum discharge current of 2.0 A. With a 2-cell LiPo battery (7.4 V rated voltage, 8.4 V when fully charged) and a maximum discharge capacity of 5 W, the maximum possible discharge current at the start of the discharge cycle is 5 W / 8.4 V = 0.6 A. If you set a higher discharge current, the charger automatically reduces the current to protect against overload.

# 10. Menu structure

→

The menu structure and screenshots shown on the following pages may differ for newer firmware versions.



# 11. Lithium batteries (LiPo, Li-ion, LiFe, LiHV)

## a) General information

The battery programs for LiPo, Li-ion, LiFe and LiHV batteries only differ in terms of the voltage and maximum charging current (see table in section 7).

The charging process for LiPo batteries consists of two stages. During the first stage, the battery is charged with a constant current. When the maximum permitted cell voltage is reached (e.g. 4.2 V for a LiPo battery), the voltage is kept constant, which causes the charging current to drop. When the charging current drops below a certain threshold, the battery stops charging and the charging process is complete.



If the battery has a balancer connection (this is the case for nearly all lithium batteries with more than one cell), the balancer connection must also be connected to the charger during the charging/discharge cycle (in addition to the battery connection cable).

There are different types of balancer plug. Do not attempt to force the plug into the charger if it does not fit! If necessary, purchase a suitable adapter to connect the balancer plug to the charger.

Occasionally, some batteries with more than one cell have separate connections for each cell. These batteries are not strictly speaking 'multi-cell' batteries. Always refer to the design and voltage specifications provided by the battery manufacturer.

When you use a multi-cell battery pack, a balancer (built into the charger) is the only way to ensure that all cells have the same voltage after the charging cycle is complete and prevent the cells from overcharging (risk of fire or explosion) or overdischarging (damages the battery).

The charging current depends on the battery capacity and type (see section 7). Always refer to the specifications in the manufacturer's instructions.

#### Follow the steps below:

The charger must display the main menu.

Use the "INC." or "DEC." buttons to select the battery type (LiPo, Li-ion, LiFe or LiHV, see right-hand screenshots).

Press the "ENTER/START" button to confirm your selection.

Use the "INC." and "DEC." buttons to select the desired battery program:

- "BALANCE": Charge lithium battery with balancer connection
- · "CHARGE": Charge lithium battery without balancer connection
- "FAST CHG": Charge a battery quickly
- "STORAGE": Charge/discharge a lithium battery to a certain voltage (e.g. for storage)
- "DISCHARGE": Discharge a lithium battery

BATT/PROGRAM
LiPo BATT
BATT/PROGRAM
LiFe BATT
BATT/PROGRAM
LiIo BATT
r
BATT/PROGRAM

### b) Charging a battery without a balancer connection ("CHARGE")



In theory, you could also use the "CHARGE" program to charge multi-cell lithium batteries with a balancer connection.

In this mode, however, the cell voltages are not balanced and the cells may overcharge, which could cause a fire or explosion!

For this reason, always charge multi-cell lithium batteries with a balancer connection using the "BALANCE" program. Do not use the "CHARGE" program!

- From the main menu, use the "INC." and "DEC." buttons to select the battery type (LiPo, Li-ion, LiFe or LiHV, see section 11. a), and then press the "ENTER/START" button.
- · Use the "INC." and "DEC." buttons to select the "CHARGE" program.

LiPo CHARGE 0.4A 11.1 V (3 S)

The number on the left of the bottom line indicates the charging current; the right-hand number indicates the number of cells in the battery pack (in this example, a 3-cell LiPo battery pack is used with a rated voltage of 11.1 V).



Use the "INC." and "DEC." buttons to select another battery program; press the "BATT./STOP" button to go back to the main menu.

- To change the settings, press the "ENTER/START" button. The charging current will flash. Press the "INC." and "DEC." buttons to change the charging current. Hold down the button to move through the values more quickly.
- Press the "ENTER/START" button to confirm the charging current.

The maximum possible charging current depends on the battery type, number of cells and the maximum charging power.

• The voltage setting will start to flash. Use the "INC." and "DEC." buttons to change the setting.

The voltage should be changed based on the number of cells (e.g. one cell = 3.7 V, two cells = 7.4 V). The indicated voltage is the rated voltage of the battery (see section 7). The actual battery voltage is higher when the battery is fully charged.

· Press the "ENTER/START" button to confirm the setting.

Hold down the "ENTER/START" button for approximately 3 seconds to start the charging cycle.

The charger will check specifications of the connected battery.

If the settings are wrong, or if the charger detects a problem, the charger will beep and a message will be shown on the display. Press the "BATT./STOP" button to silence the charger and go back to the previous settings menu.

If no error was detected, the right-hand screenshot will be displayed (example screenshot).

The "R:" value indicates the number of cells detected by the charger (in this example, a 3-cell battery).

The "S:" value indicates the number of cells that you configured in the menu (in this example, a 3-cell battery).

If these two numbers do not match, check the settings on the charger and the battery. The LiPo battery may be overdischarged, or one of the cells may be defective. If this occurs, do not charge the battery, as this may cause a fire or explosion!

Press the "BATT./STOP" button to return to the previous settings menu.



BATTERY CHECK

- · If the two numbers match, press the "ENTER/START" button to start the charging cycle.
- The display shows a range of information about the charging status when the battery is charging.

LP3s 1.2A 12.59V CHG 022:43 00682

Example:

The battery type and number of cells are shown in the top-left of the display ("LP3s" - LiPo battery with 3 cells). The charging current is shown in the middle of the top line, and the current battery voltage is shown in the top-right corner

The current battery program is shown in the bottom-left of the display ("CHG" = "CHARGE"). The elapsed time is shown in the middle of the bottom line, and the charged capacity (in mAh) is shown in the bottom-right corner.

 Press the "DEC." button during the charging/discharge cycle to display a range of information about the charging status (see section 21). The display reverts to the home screen if no button is pressed for a few seconds.

• The charger beeps when charging is complete (provided that this feature has not been disabled).



 $\rightarrow$  To stop the charging cycle, press the "BATT./STOP" button.

# c) Charging a battery with a balancer connection ("BALANCE")

In contrast to the simple "CHARGE" battery program (see section 11. b), the "BALANCE" program monitors the voltage of each cell in a multi-cell battery and corrects differences in voltage accordingly.

In addition to the two conventional battery connections (positive/+ and negative/-), the balancer connection on the battery must be connected to the charger.

The balancer connection can be directly connected to the charger. If the connector does not fit, purchase an adapter cable or a balancer board.



When using self-assembled batteries, always ensure that the balancer plug is connected correctly.

Example: The first pin is the negative pole for the first cell. The next connection pin is the positive pole for the first cell; the subsequent connection pins are the positive poles for the second, third, fourth, fifth and sixth cells (depending on the number of cells).

The last connection pin on the balancer plug is the positive pole of the last cell. This means that the voltage between the two outer pins on the balancer plug is the same as the voltage on the two battery connections.

The remaining charging procedure is described in section 11. b).



When a lithium battery with a balancer plug is connected to the charger, you can press the "INC." button to display the voltage of the individual cells. Press the "ENTER/START" button to go back to the home screen.



### Important!

Only a battery pack with exactly the same voltage per cell can deliver the maximum power and battery life for a model aeroplane/vehicle.

Variations in the quality of the materials used and the internal structure of multi-cell lithium battery packs mean that the cells may have different voltages at the end of the discharge cycle.

If you charge a multi-cell lithium battery without a balancer, there may be very big differences in the voltage of each cell. This shortens the battery life (as one cell stops working) and causes deep discharge, which damages the battery.

In addition, charging a lithium battery with different cell voltages without a balancer may cause one of the cells to overcharge, which can cause a fire or explosion.

### Example:

A dual-cell LiPo battery pack charged without a balancer has a voltage of 8.4 V and thus appears to be fully charged. However, the two cells have a respective voltage of 4.5 V and 3.9 V (one cell is dangerously overcharged, the other is half-empty).

Overcharged cells may leak, expand or even catch fire or explode!

If this LiPo battery was inserted into a model aeroplane, the battery life would be very short, because the voltage of the half empty cell would drop very quickly and the battery would stop delivering a current.



If the lithium battery has a balancer connection, it must always be connected to the charger (in addition to the two conventional positive/+ and negative/- terminals). Select the "BALANCE" program for this type of battery.

# d) Fast charge ("FAST CHG")

When you charge a lithium battery, the charging current drops continuously as the battery charges (when the battery reaches its maximum voltage and the charger switches from constant current to constant voltage mode). This increases the charging time.

Quick charge mode delivers a higher charging current when the voltage is constant. However, this reduces the charging capacity, as the charging cycle is stopped earlier by the charger's built-in safety mechanism.

This means that the battery (e.g. LiPo battery) cannot be fully charged in quick start mode. The battery is only charged to 90 % capacity compared with the standard charge mode.

→ Quick charge mode should only be used when you need to charge a battery as quickly as possible.

The charging current and voltage/number of cells can be configured in the same way as the "CHARGE" program (see section 11. b).

# e) Storage mode ("STORAGE")

Use this program when you need to store a battery for an extended period. Depending on the battery type, the battery will be charged/discharged to a certain voltage (LiPo = 3.8 V, Li-ion = 3.7 V, LiFe = 3.3 V, LiHV = 3.9 V per cell).

Depending on the cell voltage, the battery will be charged or discharged. If you are using a multi-cell battery pack, the battery should have a balancer connection that is connected to the charger.

When storing a lithium battery for an extended period (e.g. when storing a model aeroplane battery during the winter), the battery must be checked every 3 months and complete the "STORAGE" program to avoid damaging the battery due to deep discharge.

The charging current and voltage/number of cells can be configured in the same way as the "CHARGE" program (see section 11. b).



# f) Discharging a battery ("DISCHARGE")

It is not normally necessary to discharge a lithium battery before starting a charge cycle (in contrast to NiCd batteries). The battery can be charged at any time, regardless of the remaining charge. However, if you do wish to discharge the battery, you can configure the discharge current accordingly.



The maximum possible discharge current depends on the battery type, battery capacity and number of cells. The charger has a maximum discharge capacity of 5 W. This limits the maximum possible discharge current for batteries with more than one cell.



Do not discharge a lithium battery below the minimum permitted cell voltage (refer to the table in section 7 and the manufacturer's specifications). This will result in deep discharge, which will damage the battery and render it useless!

The discharge current and voltage/number of cells can be configured in the same way as standard charge mode (see section 11. b). The only difference is that the battery is discharged rather than charged.

The display shows a range of information about the charging status when the battery is discharging.



The battery type and number of cells are shown in the top-left of the display ("LP3s" - LiPo battery with 3 cells). The discharge current is shown in the middle of the top line, and the current battery voltage is shown in the top-right corner.

The current battery program is shown in the bottom-left of the display ("DCH" = "DISCHARGE"). The elapsed time is shown in the middle of the bottom line, and the discharged capacity (in mAh) is shown in the bottom-right corner.

The voltage at the end of the discharge cycle varies depending on the battery type and is preset by the charger.

- · LiPo: 3.0 V per cell
- · Li-on: 2.9 V per cell
- · LiFe: 2.6 V per cell
- · LiHV: 3.2 V per cell

When a multi-cell battery is connected to the balancer connections, you can press the "INC." button during the discharge cycle to display the individual cell voltages. Press the "ENTER/START" button to go back to the home screen.

# 12. NiMH and NiCd batteries

# a) General information

The programs for NiMH and NiCd batteries have the same menu settings. The only difference is the internal charging specifications.

The charger must display the main menu.

Use the "INC." or "DEC." buttons to select the battery type (NiMH or NiCd, see right-hand screenshots).

Press the "ENTER/START" button to confirm your selection.

Use the "INC." and "DEC." buttons to select the desired battery program:

- · "CHARGE": Charge the battery
- "Auto CHARGE": Charge the battery, the charging current is selected automatically
- "DISCHARGE": Discharge the battery
- "RE-PEAK": Recharge a full battery
- · "CYCLE": Multiple charge/discharge or discharge/charge cycles
  - $\rightarrow$  Press the "BATT./STOP" button to return to the main menu.

# b) Charging a battery ("CHARGE")

The charging current depends on the battery capacity and should normally be 1C (see section 7). High-quality batteries can also tolerate a charging current of up to 2C. Always refer to the battery specifications.

"1C" means that the charging current is equivalent to the battery's capacity. For example, this equates to a current of 3 A for a 3000 mAh NiMH battery.

A value of 0.5C means that the charging current is half of the battery's capacity. This equates to a charging current of 1.5 A for a 3000 mAh NiMH battery.

In general, smaller batteries (individual cells) have a lower maximum charging current.

For example, conventional NiMH AA cells with a capacity of 2000 mAh do not permit a charging current of 1C (equivalent to 2 A). To charge these types of cells quickly (e.g. In receiver batteries), the charging current must not exceed 0.5C.

#### To charge a NiMH or NiCd battery, proceed as follows:

- From the main menu, use the "INC." and "DEC." buttons to select the battery type (NiMH or NiCd, see section 12a), and then press the "ENTER/START" button.
- Use the "INC." and "DEC." buttons to select the "CHARGE" program.

NIMH CHARGE CURRENT 2.0A

The number on the bottom-right of the display indicates the selected charging current.

Use the "INC." and "DEC." buttons to select another battery program; press the "BATT./STOP" button to go back to the main menu.



- · To change the charging current, press the "ENTER/START" button. The charging current will start to flash. Press the "INC." and "DEC." buttons to change the current. Hold down the button to move through the values more quickly.
- Press the "ENTER/START" button to confirm the charging current.

The maximum possible charging current depends on the battery type, number of cells and the maximum charging capacity of the charger.

· Hold down the "ENTER/START" button for approximately 3 seconds to start the charging cycle.

The charger will check the specifications of the connected battery.

- If the settings are wrong, or if the charger detects a problem, the charger will beep and a message will be shown on the display. Press the "BATT./STOP" button to silence the charger and go back to the previous settings menu.
- The display shows the following data during the charging cycle:

The battery type is shown in the top-left of the display ("NiMH" = NiMH battery). The charging current is shown in the middle of the top line, and the current battery voltage is shown in the top-right corner.

The current battery program is shown in the bottom-left of the display ("CHG" = "CHARGE"). The elapsed time is shown in the middle of the bottom line, and the charged capacity (in mAh) is shown in the bottom-right corner.

• The charger beeps when charging is complete (provided that this feature has not been disabled).

→ To stop the charging cycle, press the "BATT./STOP" button.

# c) Automatic charging mode ("Auto CHARGE")

In automatic mode, the charger checks the status of the battery (e.g. the internal resistance) and calculates the charging current accordingly. An upper limit for the charging current must be set to avoid damaging the battery.

Depending on the battery and its internal resistance, the charging time for "Auto CHARGE" mode may be shorter than "CHARGE" mode (see section 12. b).

Configure the settings in the same way as "CHARGE" mode (see section 12. b).

The only difference is that you do not need to select the actual charging current. You only need to set a limit for the maximum charging current.







# d) Recharging a battery ("RE-PEAK)

When you charge a NiMh or NiCd battery, the charger stops charging automatically when the battery is fully charged. The charger uses Delta-V control to detect when the battery is fully charged.

The "RE-PEAK" program detects the voltage of the battery several times to verify that the battery is fully charged and check how well the battery can handle quick charge mode.

Ensure that the battery is fully charged (see sections 12. b) and 12. c) before starting the "RE-PEAK" program.

### Follow the steps below:

 Select the battery type (NiMH or NiCd, see section 12. a), and then select the "RE-PEAK" program.

The value on the bottom-right of the display indicates the number of detection cycles.

- Use the "INC." and "DEC." buttons to select another battery program; press the "BATT./STOP" button to go back to the main menu.
- To change the number of detection cycles for the Delta-V control, press the "ENTER/START" button. The number will flash on the display.
- Use the "INC." or "DEC." buttons to change the number.
- Press the "ENTER/START" button to confirm the setting. The number will stop flashing.
- To start the "RE-PEAK" program, press and hold the "ENTER/START" button for 3 seconds.

The charger will check the specifications of the connected battery.

If the settings are wrong, or if the charger detects a problem, the charger will beep and a message will be shown on the display. Press the "BATT./STOP" button to silence the charger and go back to the previous settings menu.

The display shows the following data during the charging cycle:

The battery type is shown in the top-left of the display ("NiMH" = NiMH battery). The charging current is shown in the middle of the top line, and the current battery voltage is shown in the top-right corner.

The current battery program is shown in the bottom-left of the display ("RPC" = "RE-PEAK"). The elapsed time is shown in the middle of the bottom line, and the charged capacity (in mAh) is shown in the bottom-right corner.

• The charger beeps when charging is complete (provided that this feature has not been disabled).

To stop the charging cycle, press the "BATT./STOP" button.



TEBY.

RAT

CHECK



# e) Discharging a battery ("DISCHARGE")

Use this mode to discharge partly-charged NiMH/NiCd batteries to a preset level. Special NiCd batteries should not be charged when they are partly-charged, as this can reduce their capacity (memory effect).

This program can also be used to measure a battery's capacity.

 $\rightarrow$ 

The maximum possible discharge current depends on the battery type, battery capacity and number of cells. The charger has a maximum discharge capacity of 5 W. This limits the maximum possible discharge current for batteries with more than one cell.

#### To discharge a NiMH or NiCd battery, proceed as follows:

 Select the battery type (NiMH or NiCd, see section 12a), and then select the "DISCHARGE" program.

NIMH	DISCHARGE
0.1A	CUT: 6.0V

The selected battery type is shown on the top-left of the display next to the battery program. The selected discharge current is shown in the bottom-left corner, and the bottom-right corner displays the power-off voltage.



Use the "INC." and "DEC." buttons to select another battery program; press the "BATT./STOP" button to go back to the main menu.

- To change the discharge current and shut-off voltage, press the "ENTER/START" button. The discharge current will flash on the display.
- Press the "INC." and "DEC." buttons to change the discharge current. Hold down the button to move through the values more quickly.
- · Press the "ENTER/START" button. The power-off voltage will flash on the display.
- Press the "INC." and "DEC." buttons to change the setting. Hold down the button to move through the values more quickly.
- · Press the "ENTER/START" button to confirm the setting. The number will stop flashing.

→ If necessary, follow the steps above to change the discharge current/power-off voltage again.

· Hold down the "ENTER/START" button for approximately 3 seconds to start the discharge cycle.

If the settings are wrong, or if the charger detects a problem, the charger will beep and a message will be shown on the display. Press the "BATT./STOP" button to silence the charger and go back to the previous settings menu.

The display shows the following data during the discharge cycle:

The battery type is shown in the top-left of the display ("NiMH" = NiMH battery). The discharge current is shown in the middle of the top line, and the current battery voltage is shown in the top-right corner.



The current battery program is shown in the bottom-left of the display ("DCH" = "DISCHARGE"). The elapsed time is shown in the middle of the bottom line, and the discharged capacity (in mAh) is shown in the bottom-right corner.

• The charger beeps when the discharge cycle is complete (provided that this feature has not been disabled).

→ To stop the discharge cycle, press the "BATT./STOP" button.

# f) Cycle program ("CYCLE")

The charger can automatically complete up to 5 cycles to test batteries, charge new batteries and refresh old batteries. You can choose between charge/discharge ("CHG>DCHG") and discharge/charge ("DCHG>CHG").

This mode uses the charging/discharge current that you configured in charge ("CHARGE") and discharge ("DISCHARGE") mode.

#### Follow the steps below:

 Select the battery type (NiMH or NiCd, see section 12. a), and then select the "CYCLE" program.

NTMU OVOLE	
DOHGSOHG	1
	-

The battery type is shown in top-left corner of the display, next to the battery program.

The bottom-left corner displays the selected combination (charge/discharge, "CHG>DCHG" or discharge/charge, "DCHG>CHG"). The number of cells is displayed in the bottom-right corner.



Use the "INC." and "DEC." buttons to select another battery program; press the "BATT./STOP" button to go back to the main menu.

- To select another cycle mode or change the number of cycles, press the "ENTER/START" button. "CHG>DCHG"/"DCHG>CHG" will flash on the display.
- · Use the "INC." and "DEC." buttons to select the desired order:

"CHG> DCHG" = Charge + discharge

"DCHG> CHG" = Discharge + charge

- Press the "ENTER/START" button. The number of cycles will flash on the display (the number of cycles indicates how many times the charger will complete the selected cycle).
- · Use the "INC." and "DEC." buttons to set the number of cycles (1 5).
- · Press the "ENTER/START" button to confirm the setting. The number will stop flashing.
- · Hold down the "ENTER/START" button for approximately 3 seconds to start the cycle.
  - If the settings are wrong, or if the charger detects a problem, the charger will beep and a message will be shown on the display. Press the "BATT./STOP" button to silence the charger and go back to the previous settings menu.

The display shows the following data during the charge/discharge cycle:

The battery type is shown in the top-left of the display ("NiMH" = NiMH battery). The charging/discharge current is shown in the middle of the top line, and the current battery voltage is shown in the top-right corner.



The selected cycle is shown in the bottom-left corner of the display ("C>D" = charge/discharge, "D>C" = discharge charge). The elapsed charge/discharge time is shown in the middle of the bottom line, next to the charged/ discharged capacity (in mAh).

• The charger beeps when the cycle is complete (provided that this feature has not been disabled).

 $\rightarrow$ 

→ To stop the cycle, press the "BATT./STOP" button.

# 13. Lead-acid batteries (Pb)

# a) General information

Lead acid batteries are completely different to lithium, NiMH or NiCd batteries. Despite their high capacity, they only deliver a low current. The charging specifications are also different.

The charging current for modern lead-acid batteries must not exceed 0.4C. The optimal charging current is 1/10C.

A higher charging current must not be used, as this can overload the battery and cause a fire or explosion. In addition, the acids in the battery may cause an injury.

Always observe the specifications printed on the battery and the manufacturer's specifications regarding the charging current.

The charger must display the main menu.

Use the "INC." or "DEC." buttons to select the battery type ("Pb BATT", see right-hand screenshot).

Press the "ENTER/START" button to confirm your selection.

Use the "INC." and "DEC." buttons to select the desired battery program:

- "CHARGE": Charge the battery
- "DISCHARGE": Discharge the battery

# b) Charging a battery ("CHARGE")

The charging current depends on the battery capacity and should normally be 0.1C (see section 7). High-quality leadacid batteries can also tolerate a charging current of up to 0.4C. Always refer to the battery specifications.

"0.1C" means that the charging current is equivalent to 1/10 of the battery's capacity. This equates to a charging current of 0.5 A for a 5000 mAh (= 5 Ah) lead-acid battery.

#### To charge a lead-acid battery, proceed as follows:

- From the main menu, use the "INC." and "DEC." buttons to select the battery type ("Pb BATT", see section 13. a). and then press the "ENTER/START" button.
- Use the "INC." and "DEC." buttons to select the "CHARGE" program.

The battery type is shown in top-left corner of the display, next to the battery program.

The selected charging current is displayed in the bottom-left corner. The voltage/number of cells is shown in the bottom-right corner (in this example, a 6-cell lead-acid battery (6 x 2.0 V = 12.0 V)).

Use the "INC." and "DEC." buttons to select another battery program; press the "BATT./STOP" button to go back to the main menu.



ЙÂ

12.0K6P)



HARGE

12.0UC6PD

- To change the charging current, press the "ENTER/START" button. The charging current will start to flash. Press the "INC." and "DEC." buttons to change the current. Hold down the button to move through the values more quickly.
- · Press the "ENTER/START" button to confirm the charging current.

The maximum possible charging current depends on the number of cells and the maximum charging power.

· Hold down the "ENTER/START" button for approximately 3 seconds to start the charging cycle.

If the settings are wrong, or if the charger detects a problem, the charger will beep and a message will be shown on the display. Press the "BATT/STOP" button to silence the charger and go back to the previous settings menu.

The display shows the following data during the charging cycle:

The battery type is shown in the top-left of the display ("P" = lead-acid battery). The charging current is shown in the middle of the top line, and the current battery voltage is shown in the top-right corner.



The current battery program is shown in the bottom-left of the display ("CHG" = "CHARGE"). The elapsed time is shown in the middle of the bottom line, and the charged capacity (in mAh) is shown in the bottom-right corner.

• The charger beeps when charging is complete (provided that this feature has not been disabled).

 $\rightarrow$ 

> To stop the charging cycle, press the "BATT./STOP" button.

# c) Discharging a battery ("DISCHARGE")

Use this mode to discharge partly-charged lead-acid batteries to a preset level.

This program can also be used to measure a battery's capacity.

The maximum possible discharge current depends on the battery type, battery capacity and number of cells. The charger has a maximum discharge capacity of 5 W. This limits the maximum possible discharge current for batteries with more than one cell.

#### To discharge a lead-acid battery, proceed as follows:

- From the main menu, use the "INC." and "DEC." buttons to select the battery type ("Pb BATT", see section 13. a), and then press the "ENTER/START" button.
- Use the "INC." and "DEC." buttons to select the "DISCHARGE" program.

The battery type is shown in top-left corner of the display, next to the battery program.

P6 DISCHARGE 0.1A 12.00(6P)

The selected discharge current is displayed in the bottom-left corner. The voltage/number of cells is shown in the bottom-right corner (in this example, a 6-cell lead-acid battery ( $6 \times 2.0 \text{ V} = 12.0 \text{ V}$ )).

Use the "INC." and "DEC." buttons to select another battery program; press the "BATT./STOP" button to go back to the main menu.

- To change the discharge current, press the "ENTER/START" button. The discharge current will start to flash. Press
  the "INC." and "DEC." buttons to change the current. Hold down the button to move through the values more quickly.
- · Press the "ENTER/START" button to confirm the discharge current.
- · Hold down the "ENTER/START" button for approximately 3 seconds to start the discharge cycle.
  - If the settings are wrong, or if the charger detects a problem, the charger will beep and a message will be shown on the display. Press the "BATT./STOP" button to silence the charger and go back to the previous settings menu.

The display shows the following data during the discharge cycle:

The battery type is shown in the top-left of the display ("P" = lead-acid battery). The discharge current is shown in the middle of the top line, and the current battery voltage is shown in the top-right corner.

P-6 0.4A 12.59V DCH 022:45 00132

The current battery program is shown in the bottom-left of the display ("DCH" = "DICCHARGE"). The elapsed time is shown in the middle of the bottom line, and the discharged capacity (in mAh) is shown in the bottom-right corner.

• The charger beeps when the discharge cycle is complete (provided that this feature has not been disabled).

To stop the discharge cycle, press the "BATT./STOP" button.

# 14. DJI Mavic batteries

This feature is designed to charge DJI Mavic batteries. It is similar to the specifications used for charging LiHV batteries. A suitable charging cable is required to connect the battery (not included).

The charger must display the main menu.

Use the "INC." or "DEC." buttons to select the battery type ("DJI Mavic BATT", see right-hand screenshot).

See section 11 for more information on the available battery programs.

 $\rightarrow$ 

After you have connected the battery and enabled the battery program, switch on the battery when "TURN ON BATTERY BEFORE CHARGING" is displayed.



# 15. Saving/loading battery data

The charger has 10 memory slots that you can use to save frequently used settings. For example, you can save the charging specifications for different LiPo model aeroplane batteries (number of cells, charging settings, charging current) so that you do not need to reset them each time.

# a) Saving battery data

- From the main menu, use the "INC." or "DEC." buttons to select "BATT MEMORY".
- Press the "ENTER/START" button to confirm your selection. The memory slot will flash on the display.
- Use the "INC." and "DEC." buttons to select one of the 10 memory slots.
  - If the memory slot already contains battery data, the display will show the battery type and number of cells as well the charging and discharge current.

If the memory slot is empty, "ENTER SET ->" will be displayed.

- Press the "ENTER/START" button to confirm your selection. The battery type will be displayed (see right-hand picture).
- Use the "INC." or "DEC." buttons to select the desired setting (e.g. battery type, number of cells, charging current). A description of the various settings is provided on the following pages.
  - To exit settings mode (the previous settings will not be saved), keep pressing the "BATT./STOP" button until the main menu is displayed.
- To change a setting, press the "ENTER/START" button. The corresponding setting will flash on the display.
- Press the "INC." and "DEC." buttons to change the setting. Hold down the button to move through the values more quickly.
- Press the "ENTER/START" button to confirm the setting. The configured setting will stop flashing. To configure
  another setting, repeat the steps above.
- To save the settings to the selected memory slot, use the "INC." or "DEC." buttons to select "SAVE PROGRAM", and then press the "ENTER/START" button.



→ If you do not select "SAVE PROGRAM", the settings will not be saved!

· The display will revert to the screen with the flashing memory slot. You can now program another memory slot.

To exit programming mode, press the "BATT./STOP" button. The charger will revert to the main menu.



BATT TYPE

LiPo



#### The following settings are available:



The available settings depend on the selected battery type (LiPo, Li-on, LiFe, LiHV, NiMH, NiCd, Pb). For example, you can only configure the end charging voltage per cell for lithium batteries.

Select the battery type first, and then configure the other settings to ensure that the charger displays the correct settings options.

#### Battery type



Select the battery type ("LiPo", "LiIo", "LiFe", "LiHV", "NiMH", "NiCd" or "Pb").

As stated above, the battery type must be selected first to ensure that the charger displays the correct settings options.

#### Battery voltage



This setting allows you to configure the battery voltage for the selected battery type.

The available voltage settings depend on the rated voltage of an individual cell (see section 7).

For example, if the rated voltage of a cell in a LiPo battery is 3.7 V, the voltage can only be adjusted in increments of 3.7 V (3.7 V, 7.4 V, 11.1 V etc.).

### **Charging current**



Configure the desired charging current. This must be selected according to the battery type.

The charging capacity of the charger (max. 60 W) limits the maximum possible charging current (see section 9d).

#### **Discharge current**



Configure the desired discharge current. This must be selected according to the battery type.

The discharge capacity of the charger (max. 5 W) limits the maximum possible discharge current (see section 9d).

### Discharge voltage per cell at the end of the discharge cycle



Use this setting to configure the voltage per cell at the end of the discharge cycle.



### Important!

Never select a voltage that is too low. This can cause lithium batteries to overdischarge and result in permanent damage to the battery.

Refer to the table in section 7 or the manufacturer's specifications.

#### End-of-charge voltage per cell



Use this setting to configure the voltage per cell for lithium batteries at the end of the charging cycle.



### Important!

Never select a voltage that is too high. In the case of lithium batteries, the battery may explode or cause a fire!

Refer to the table in section 7 or the manufacturer's specifications.

### Over-temperature protection



The charger can be set to automatically stop the charging/discharge cycle when the battery exceeds a preset temperature.



An external temperature sensor is required to use this feature (not included). This must be connected to the corresponding socket on the charger.

#### Trickle charge current (only for NiMH and NiCd batteries)

TRICKLE 100m

Use this feature to set the trickle charge current. When a NiMH or NiCd battery is fully charged, it loses some of its capacity due to self-discharge. The trickle charge feature (short charge impulses, the charger does not deliver a continuous current!) ensures that the battery stays fully charged and prevents crystals from forming inside the battery.

Delay time for delta-V detection (only for NiMH and NiCd batteries)



The charger stops the charging cycle for NiMH and NiCd batteries using Delta-V control.

Use this setting to configure how long the charger should continue charging after the Delta-V detection.

### Save the settings



See the next section (section 15. b) for details.

# b) Saving battery data

To save the settings, select "SAVE PROGRAM", and then press the "ENTER/ START" button, otherwise the settings will be deleted.

The charger will display a message ("SAVE...") and beep to indicate that the settings have been saved.



SAVE PROGRAM

When you select "BATT MEMORY" mode from the main menu followed by a preconfigured memory slot, the charger will display the most important data (see right-hand screenshot).

This gives you an overview of which data is stored in the memory.

If the memory slot is empty, "ENTER SET ->" will be displayed.

Γ	BATT	MEMORY	1]	
L	iPo	7.40029	0	

C:2.0A D:1.0A

# c) Loading battery data

- From the main menu, use the "INC." or "DEC." buttons to select "BATT MEMORY".
- Press the "ENTER/START" button to confirm your selection. The memory slot will flash on the display.
- Use the "INC." and "DEC." buttons to select one of the 10 memory slots.
  - If the memory slot already contains battery data, the display will show the battery type and number of cells as well the charging and discharge current.

If the memory slot is empty, "ENTER SET ->" will be displayed.

 To load the battery data in a memory slot, press and hold the "ENTER/ START" button until the charger beeps and the corresponding battery program is shown on the display. BATT/PROGRAM BATT MEMORY 1J LiPo 7.4V(2S) C BATT MEMORY 2J ENTER SET->

ENTER CHARGE LOAD....

When you press the "ENTER/START" button for an empty memory slot, the charger enables selection/ settings mode (see section 15a).

# 16. Displaying the voltage for lithium batteries

The charger can display the voltages of cells in a lithium battery (LiPo, Li-ion, LiFe, LiHV).

To display the cell voltages, the lithium battery must have a balancer connection that is connected to the corresponding socket on the charger.

#### Follow the steps below:

- From the main menu, use the "INC." or "DEC." buttons to select "BATT METER".
- · Press the "ENTER/START" button to confirm your selection.

The voltage will be displayed.

Press the "INC." or "DEC." buttons to switch between the individual cell voltages/total voltage and the maximum/minimum cell voltage.

The number of cell voltages displayed depends on the number of battery cells. The right-hand screenshot may indicate a 3-cell LiPo battery (or a multi-cell LiPo battery with defective cells/defective balancer sockets).

After you press the "INC."/"DEC." button to switch to voltage display mode, the total voltage of the connected battery pack will be displayed on the top line.

The maximum cell voltage ("H") will be displayed in the bottom-left corner. The minimum cell voltage ("L") will be displayed in the bottom-right corner. This enables you to view the difference in voltage between the cells.

→ Press the "BATT./STOP" button to return to the main menu.

BATT/F	ROGRA	<b>1</b> 1
	BATT	METER

4.19	4.15	4.18	Ų
0.00	0.00	0.00	Ų

MAIN:	12.52V
HH.190V	L4.150V

# 17. Measuring the internal resistance

The charger can display the internal resistance of the connected battery.

When a lithium battery is connected, the charger can also display the internal resistance of each cell, provided that the battery has a balancer terminal that is connected to the charger.

#### Follow the steps below:

- From the main menu, use the "INC." or "DEC." buttons to select "BATT RESISTANCE".
- · Press the "ENTER/START" button to confirm your selection.
- · The charger will measure the internal resistance of the connected battery.
- The internal resistance will appear on the display after a few seconds.
- If a lithium battery with a balancer terminal is connected to the battery, "Total" will appear on the display rather than "Main". To view the internal resistance of the individual cells, press the "INC." or "DEC." buttons.
- The right-hand picture indicates a 4-cell lithium battery ("0" appears when no cells are detected).
- To measure the internal resistance of another battery, press the "BATT./ STOP" button to exit measuring mode and return to the main menu, and then repeat the above steps.
- BATT RESISTANCE

   Main: 86mΩ

   Total: 76mΩ

   19
   20
   17 mΩ

   20
   0
   0 mΩ

BATT/PBOGBAM

If the internal resistance of the connected battery is too high, the measuring function will not work and no measurements will be displayed. This may occur with old or defective batteries or excessive contact resistances in the battery connector.

# 18. Connecting the charger to a PC

The USB connection cable and Windows software is not included with the product and is available separately.

For instructions on how to use the software, refer to the information on the software CD or the help feature.

# 19. System settings

The system settings cover a range of basic settings for the charger. By default, these settings are set to the most frequently used values.

You may need to change the settings depending on the batteries that you wish to charge/discharge.

#### Follow the steps below:

- From the main menu, use the "INC." or "DEC." buttons to select "SYSTEM SETTING ->".
- · Press the "ENTER/START" button to confirm your selection.

The feature for monitoring the input voltage will be displayed first (see righthand picture).



Input

Lou

11.0V



→ Use the "INC." or "DEC." buttons to select the desired setting.

To change a setting, press the "ENTER/START" button. The corresponding setting will flash on the display.

Press the "INC." and "DEC." buttons to change the setting. Hold down the button to move through the values more quickly.

Press the "ENTER/START" button to exit the settings. The selected setting will stop flashing. To configure another setting, repeat the above steps.

Press the "BATT./STOP" button to return to the main menu.

The following section describes the different settings.

#### Input voltage monitoring



This function monitors the voltage at the charger input. This is useful when a 12 V car lead-acid battery is used to power the charger. If the voltage drops below the preset value, the charging cycle will stop to prevent the car battery from overdischarging.

 $\rightarrow$ 

When using a mains adapter to power the charger, select a voltage that is lower than the voltage delivered by the mains adapter. The charger cannot detect whether it is powered by a car lead-acid battery or a mains adapter.

For example, if you use a mains adapter with an output voltage of 12 V/DC to power the charger, configure a voltage of 11 V/DC in the charger settings. The charger will not charge if you select the same or a higher voltage.

Safety timer

Safety	Timer
ON	120Min

The safety timer starts automatically when a charging cycle beings. If the charger cannot detect whether the battery is fully charged (e.g. with Delta-V control), the charging cycle is stopped automatically after the preset time has elapsed. This stops the battery from overcharging.

The safety timer can be switched on or off. You can also change the preset time.

> Do not select a time that is too short, otherwise the battery will not charge fully before the time has elapsed.

Calculate the time for the safety timer as follows:

Example:

Battery capacity	Charging current	Time
2000 mAh	2.0 A	2000 / 2.0 = 1000 / 11.9 = 84 minutes
3300 mAh	3.0 A	3300 / 3.0 = 1100 / 11.9 = 92 minutes
1000 mAh	1.2 A	1000 / 1.2 = 833 / 11.9 = 70 minutes

→ Factor 11.9 is used to ensure that the battery can be charged to 140 % capacity before the preset time elapses (i.e. guarantee that the battery will be fully charged).

### Automatic power-off at a preset capacity

Capacity	Cut-Off
ON	5000mAh

This feature stops the charging process when the battery has been charged by a certain amount (capacity).

This feature can be switched on or off. You can also configure the preset capacity.

\_\_\_\_\_

> Do not select a capacity that is too low, otherwise the battery will not be fully charged.

#### Enabling/disabling over-temperature protection and temperature limit

Temp	Cut-Off	
ON	50°C/122°	F

The charger features a socket for a temperature sensor (not included, available separately).

When over-temperature protection is enabled ("ON"), the charger stops the charging/discharge cycle when the preset temperature is reached.

Set the desired power-off temperature.

> Disable over-temperature protection ("OFF") if no temperature sensor is connected.

#### Setting the temperature unit

Temperature Unit
Celsius

The temperatures measured by the internal and external sensor can be displayed in Celsius (°C, degrees Celsius) or Fahrenheit (°F, degrees Fahrenheit).

#### Displaying the battery and charger temperature

Ext.Temp:	
Int.Temp:	28ªC

This feature displays the external battery temperature and the internal charger temperature.

The external temperature can only be displayed when an external temperature sensor is connected to the charger (not included, available as an accessory).

#### Setting the pause duration between charge/discharge cycles



The battery will warm up during the charging process (depending on the charging current). In cycle mode, you can set the charger to pause between charging and discharging to allow the charger to cool down.

#### Setting the voltage for Delta-V detection (only for NiMH or NiCd batteries)

NiMH Sensitivity	NiCd Sensitivity
D.Peak 4mV	D.Peak 4mV

The charger uses Delta-V control for NiMH and NiCd batteries to detect when the battery is fully charged. The voltage setting can be changed (in mV per cell).

If the voltage setting is too high, the charger may not detect that the battery is fully charged. In this case, the
protective circuit for the charging time or maximum capacity is normally activated (if configured correctly).

If the voltage setting is too low, the charger will turn off before the battery is fully charged.

Change the voltage step-by-step and monitor the charging process. Due to the large variety of different batteries, it is not possible to recommend an optimal setting.

### Enabling/disabling button confirmation/notification tones

Key Beep	ON
Buzzen	ON

Use the "Key Beep" function to enable ("ON") or disable ("OFF") button confirmation tones.

Use the "Buzzer" function to enable ("ON") or disable ("OFF") notification/warning tones.

#### Displaying the firmware version



The hardware version is displayed in the bottom-left of the display (1.00 in this example). The current firmware version is displayed in the bottom-right corner (2.00 in this example).

#### **Restoring factory settings**



This feature enables you to restore factory settings.

When the above screen is displayed, press and hold the "ENTER/START" button for 3 seconds. "COMPLETE" will appear on the bottom line of the display. The charger will restart and load the main menu.



All previously configured settings will be restored to the factory defaults. The data in the 10 memory slots (see section 15) will also be deleted.

# 20. Warning messages on the display

REVERSE POLARITY	The polarity of the battery connections is incorrect.
CONNECTION BREAK	The battery is not connected (e.g. the battery was disconnected during the charging cycle).
CONNECT ERROR CHECK MAIN PORT	The battery was connected in the reverse polarity.
BALANCE CONNECT ERROR	The balancer terminal on the battery was not connected properly or was con- nected in the reverse polarity.
DC IN TOO LOW	The input voltage (on the direct voltage input) for the charger is too low (<11 V).
DC IN TOO HIGH	The input voltage (on the direct voltage input) for the charger is too high (>18 V).
CELL ERROR LOW VOLTAGE	The voltage of one of the lithium battery cells is too low.
CELL ERROR HIGH VOLTAGE	The voltage of one of the lithium battery cells is too high.
CELL ERROR VOLTAGE-INVALID	The voltage of one of the lithium battery cells cannot be measured.
CELL NUMBER INCORRECT	The selected number of cells is incorrect.
INT.TEMP.TOO HI	The internal charger temperature is too high.
EXT.TEMP.TOO HI	The temperature measured by the external temperature sensor (not included, available separately) is too high.
OVER CHARGE CAPACITY LIMIT	The preset capacity limit (see section 19) was exceeded.
OVER TIME LIMIT	The preset time limit for the charging cycle (see section 19) was exceeded.
BATTERY WAS FULL	The connected battery is fully charged. If necessary, check the setting for the number of cells.

# 21. Charger status information

Press the "DEC." button repeatedly when the battery is charging/discharging to display a range of different information. The charger reverts to the home screen if no button is pressed for a few seconds.

### Battery voltage at the end of the charge/discharge cycle

End	Voltage
	12.60V(3s)

Input voltage

IN	Power	Voltage
		12.56V

Temperature measured by the external and internal temperature sensor

Ext.Temp:	
Int.Temp:	37°C

Temperature limit for over-temperature protection

Temp	Cut-Off
_	50°C/122°F

Safety timer duration

SAFETY	TIMER
ON	20011in

Battery capacity for power-off safety feature

Capacity	Cut-Off
ON	5000mAh

# 22. Care and cleaning

This product does not require any maintenance. Never attempt to dismantle the charger. Maintenance and repair work must be completed by a technician or a specialist repair centre.



If there is a battery connected, remove it before cleaning the charger.

After removing the battery, disconnect the charger from the power supply.

Never use aggressive detergents, rubbing alcohol or other chemical solutions, as these may damage the housing or cause the product to malfunction.

Use a dry, lint-free cloth to clean the product.

Dust can be removed using a clean, soft brush and a vacuum cleaner.

# 23. Disposal

# a) Product



Electronic devices are recyclable waste and must not be placed in household waste. At the end of its service life, dispose of the product according to the relevant statutory regulations.

### b) Batteries

You are required by law to return all used batteries (Battery Directive). They must not be placed in household waste.



Batteries containing harmful chemicals are labelled with this symbol to indicate that disposal in household waste is forbidden. The abbreviations for heavy metals in batteries are: Cd = Cadmium, Hg = Mercury, Pb = Lead (indicated on the battery, e.g. below the trash icon on the left).

Used batteries can be returned to local collection points, our stores or battery retailers.

You thus fulfil your statutory obligations and contribute to the protection of the environment.

# 24. Technical data

Operating voltage	. 11 - 18 V/DC
Charging/discharge channels	1
Charging current	0.1 - 6.0 A (depending on the number of cells and the battery type)
Charging power	Max. 60 W
Discharge current	0.1 - 2.0 A (depending on the number of cells and the battery type)
Discharge power	Max. 5 W
Compatible recharge batteries	NiMH/NiCd, 1 - 15 cells
	LiPo/Li-ion/LiFe/LiHV, 1 - 6 cells
	Pb, 1 - 10 cells (2 - 20 V rated voltage)
Balancer discharge current	200 mA per cell
Delta-V detection	Yes (for NiMH/NiCd batteries, adjustable)
Trickle charging current	Yes (for NiMH/NiCd batteries, adjustable, can be switched off)
Safety timer	Yes (can be disabled)
Memory slots	10
Integrated fan	Yes
Ambient conditions	Temperature 0 °C to 40 °C; Relative air humidity 0% to 90 % (non-condensing)
Weight	Approx. 170 g
Dimensions	103 x 80 x 34 mm (W x D x H)

B This is a publication by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau (www.conrad.com).

All rights including translation reserved. Reproduction by any method, e.g. photocopy, microfilming, or the capture in electronic data processing systems require the prior written approval by the editor. Reprinting, also in part, is prohibited. This publication represent the technical status at the time of printing.

Copyright 2019 by Conrad Electronic SE.