



# SET UP AND PLAY INSTRUCTIONS



**ALWAYS** read, understand and follow all warnings and instructions for your iFetch before use. Keep for future reference.

# IMPORTANT SAFETY INFORMATION

The user must read and understand these Instructions Sheets and the Warranty before using the iFetch.

Set up is the end user's responsibility and beyond the control of iFetch, LLC. Therefore, iFetch exclusively limits its Warranty to the repair or replacement of a defective product. Damage to your home, your property, or any person or pet is excluded.

- ⚠ Your iFetch must be inspected for signs of wear, damage and fatigue before each use. If damaged, do not use.
- ⚠ This product is only intended for recreational use to throw ifetch ball sized (diameter approximately 1.6"/40mm) iFetch (or similar) balls for your pets. **Your iFetch is NOT a child's toy.**
- ⚠ Do not attempt to modify your iFetch or any of the system components.

Review all Warnings, Instructions, and Warranty information carefully. Failure to follow these warnings and instructions will void the Warranty.

Call iFetch at **(512) 219-3271** or visit **goifetch.com**, if you have any questions regarding the use of your iFetch.

## PARTS LIST



A



B



C

Part	Description
A	One (1) iFetch
B	One (1) Power Cord.
C	Three (3) Balls (40 mm diameter)

### NOTE:

Your iFetch will keep throwing balls for approximately 250 launches on 6 C cell batteries.

# SET UP

## WARNING

To prevent **SERIOUS INJURY**:

- **INSPECT** for signs of wear, corrosion, and fatigue **BEFORE** each use. **DO NOT** use if damaged.
- **DO NOT** operate when any part of the machine is wet or standing in water. **DO NOT** use when raining. An electric shock hazard may exist if the unit is plugged in while or after it has been exposed to water.
- **DO NOT** attempt to modify your iFetch or any of the system components

1. **Plug** the power cord into the back of the iFetch and then into the wall. **Or, for battery operation:** open the compartment on the bottom of the iFetch and install 6 C batteries.
2. Press the button on the back of the iFetch and drop ball in. Your iFetch is now ready for use.

# BEFORE PLAY

## WARNING

To prevent **SERIOUS INJURY** or **PROPERTY DAMAGE**:

- **INSPECT** for signs of wear, corrosion, and fatigue **BEFORE** each use. **DO NOT** use if damaged.
- **NEVER** stand or allow your pet to stand directly in front of the iFetch.
- **DO NOT** point toward breakable objects, including windows, light fixtures, and picture frames.

1. **Press the button on the rear of your iFetch to turn the unit ON.**
  - You can use your iFetch while plugged in or on battery power
  - **DO NOT** use rechargeable batteries. They will not charge from the power cord.
2. **To increase launch distance, press the button to cycle through settings:**
  - **One Light**—Approximately 10 ft (3 m)
  - **Two Lights**—Approximately 20 ft (6 m)
  - **Three Lights**—Approximately 30 ft (9m)

Launch distance may be effected by the condition of the ball (e.g., wet or dirty). **DO NOT** use damaged balls with your iFetch.

### NOTE:

The light(s) will turn off after about 30 seconds, but the iFetch will remain on (in standby mode) until you or your pet drops another ball into the funnel.

## BEFORE PLAY CON'T



1. Your iFetch has a battery compartment on the bottom side of the unit.

The iFetch takes 6 C Cell batteries.



2. Use a standard phillips or flat head screwdriver to access the battery cavity.



3. Follow the embossed directions on how to load the 6 batteries.



4. Your iFetch is now ready to use with or without the power cord. (iFetch will not charge rechargeable batteries).

## TO PLAY

### WARNING

To prevent **SERIOUS INJURY** or **PROPERTY DAMAGE**:

- **NEVER** put hands or fingers inside the iFetch or look down the barrel when the unit is **ON** or in **STAND-BY** mode.
- Make sure all persons and pets are clear of the iFetch and the path of the ball before powering on.
- **ONLY** use iFetch balls or balls of the same diameter (approx. 1.6"/40mm) with your iFetch. **NEVER** attempt to use your iFetch with any other type of ball or any foreign objects.
- Make sure the iFetch is aimed and functioning properly before each use.

1. When the iFetch is powered ON, only insert one (1) ball into the iFetch funnel at a time.

Your iFetch launch mechanism will quickly start spinning. Once the launch mechanism has reached its operating speed, the ball will drop into the chute and will continue spinning until the ball is ejected from the iFetch. After the ball is launched the launch mechanism will quickly slow and stop spinning.

2. Readjust the position of your iFetch as needed.
3. Use with supervision. Watch to ensure your iFetch is upright and functioning properly.

### WARNING

To prevent **SERIOUS INJURY** to your pet:

- **NEVER** allow your pet to place any part of their body inside the iFetch or look down the barrel when the unit is **ON** or in **STAND-BY** mode.
- **ALWAYS** consider your pet's health during use.
- **NEVER** exercise your pet to the point of exhaustion. Turn the iFetch **OFF** when your pet needs to rest and recover.

## AFTER PLAY

1. **ALWAYS** turn your iFetch **OFF** after use. Press button to cycle through the 3 blue lights until all lights turn off. iFetch should now be off.
2. Store your iFetch indoors at night and after play in a clean, dry location.

## MAINTENANCE & CLEANING

Your iFetch requires no regular maintenance.

If your iFetch needs to be cleaned, use a slightly damp cloth. **DO NOT** use chemicals or abrasive cleaners.

▲ **ALWAYS** turn your iFetch **OFF** prior to cleaning.

▲ **DO NOT** attempt to clean the launch mechanism.

# FREQUENTLY ASKED QUESTIONS

## **Do I have to use only the iFetch balls?**

The iFetch is optimized to launch the iFetch balls, however most other balls that are approximately the same size and weight should launch.

## **What happens if I put other things into the funnel (e.g. coins, rocks, etc)?**

**NEVER** put anything into the iFetch other than iFetch balls (or other similarly-sized balls) as that is not the intended use of the iFetch.

## **My dog slobbers a lot. Is that a problem?**

Some dogs slobber more than others. If your dog is a heavy slobberer, you may need to wipe off the balls from time to time or swap over to a dry ball.

**For more FAQs, visit  
[goifetch.com](http://goifetch.com).**

# WARRANTY

---

iFetch will not be liable under this limited warranty if its testing and examination disclose that the alleged defect or malfunction in the product does not exist or resulted from:

- Failure to follow iFetch's operation and maintenance instructions;
  - Unauthorized product alteration;
  - Weather conditions;
  - Damage to the product caused by any animal;
  - Abuse, misuse, negligent acts or omissions of Customer and/or persons under Customer's control; or
  - Acts of third parties, acts of God, accident, fire, or other hazards.

## **CALIFORNIA PROPOSITION 65**

**▲ WARNING:** This product contains chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.

iFetch, LLC  
Austin, TX  
512-219-3271  
[goifetch.com](http://goifetch.com)



We'd love to hear from you.

[support@goifetch.com](mailto:support@goifetch.com)

512.219.3271

[www.goiFetch.com](http://www.goiFetch.com)

**JOIN THE PACK:**

