

Operating instructions

Portable Charger 10000 T

Model no. 1003LTF

Item no. 1003LTF

Intended use

The product is used as an additional battery for mobile devices (e.g. smartphone, tablet) with 5 V/DC voltage. The battery charge status and functions are displayed via the built-in LED display at the top of the product. To charge the portable charger, a USB charger (not included in delivery) is required. The product is protected against short-circuit and overcharging.

This product is intended for indoor use only. Do not use it outdoors. Contact with moisture (e.g. in bathrooms) must be avoided under all circumstances.

For safety and approval purposes, you must not rebuild and/or modify this product. Using the product for purposes other than those described above may damage the product. In addition, improper use can cause hazards such as a short circuit, fire or electric shock. Read the instructions carefully and store them in a safe place. Only make this product available to third parties together with its operating instructions.

This product complies with statutory national and European regulations. All company and product names are trademarks of their respective owners. All rights reserved.

Package contents

- Portable charger
- USB charging cable
- Operating instructions



Up-to-date operating instructions

To download the latest operating instructions, visit www.conrad.com/downloads or scan the QR code on this page. Follow the instructions on the website.

Explanation of symbols



The symbol with the lightning in a triangle indicates that there is a risk to your health, e.g. due to an electric shock.



The symbol with an exclamation mark in a triangle is used to highlight important information in these operating instructions. Always read this information carefully.



The arrow symbol indicates special information and advice on how to use the product.

Safety information



Read the operating instructions and safety information carefully. If you do not follow the safety information and information on proper handling in these operating instructions, we will assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.



a) General information

- The device is not a toy. Keep it out of the reach of children and pets.
- Do not leave packaging material lying around carelessly. It may become a dangerous toy for children.
- Protect the product from extreme temperatures, direct sunlight, strong jolts, high humidity, moisture, flammable gases, vapours and solvents.
- Do not place the product under any mechanical stress.
- If it is no longer possible to operate the product safely, stop using it and prevent unauthorised use. Safe operation can no longer be guaranteed if the product:
 - is visibly damaged,
 - is no longer working properly,
 - has been stored for extended periods in poor ambient conditions or
 - has been subjected to any serious transport-related stress.
- Always handle the product carefully. Jolts, impacts or a fall even from a low height may damage the product.
- Always observe the safety and operating instructions of any other devices which are connected to the product.




- When setting up the product, make sure that the cables are not pinched, kinked or damaged by sharp edges.
- Always lay the cables so that nobody can trip over or become entangled in them. This poses a risk of injury.
- Never use the product immediately after it has been brought from a cold room into a warm one. The condensation generated may destroy the product. Allow the product to reach room temperature before connecting it and putting it to use. This may take several hours.
- Never leave the product unattended during use.
- The housing warms up during use. Ensure that there is sufficient ventilation. Do not cover the housing!
- Do not short-circuit the USB ports.
- Do not charge the product via a USB port of a computer or other device as the current provided is not sufficient. This can result in damage to the connected device.
- Consult a technician if you are not sure how to use or connect the product.
- Maintenance, modifications and repairs must be done by a technician or a specialist repair centre.
- If you have questions which remain unanswered by these operating instructions, contact our technical support service or other technical personnel.

b) Rechargeable batteries

- The rechargeable battery is built into the product and cannot be replaced.
- Never damage the rechargeable battery. Damaging the casing of rechargeable batteries may cause an explosion or a fire! Unlike conventional batteries (e.g. AA or AAA batteries), the casing of the LiPo rechargeable battery is made of a sensitive plastic film.
- Never short-circuit the contacts of the rechargeable battery. Do not throw the battery or the product into open flames. This may cause a fire or explosion!
- Charge the battery regularly, even when you are not using the product. You do not need to discharge the battery before recharging it.
- Never leave the battery unattended when it is charging.
- Place the product on a heat-resistant surface before charging the battery. The product may become warm when the battery is charging.

Product overview

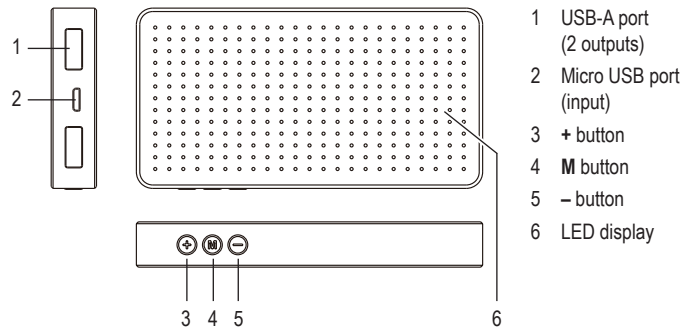

Operation




Check the battery level of the internal battery before each use.

Ensure that the connection specifications for your mobile device comply with the connection data for the product (see technical data).

The USB cable is not designed for data transfer.

a) LED display

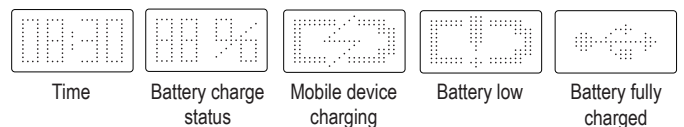

The LED display (6) shows the time, battery charge status and functions of the portable charger.

b) Setting the time and charging the battery

- Press and hold the **M** button (4) for approx. 3 seconds to switch on the portable charger.
- The time will be displayed. Press and hold the **M** button again for approx. 3 seconds to set the time. Set the time using the **+** (3) and **-** (5) buttons.
- Press the **M** button again to switch from hours to minutes. The hours and minutes must be entered within 3 - 4 seconds. Then the display switches back to the time of day.
- Before first operation, it is recommended to fully charge the portable charger once. Press the **+** or **-** button to display the battery charge status. The battery charge status is shown as a percentage. The display shows 99% when the portable charger's battery is fully charged. After about 8 seconds, the display shows the time again.
- Charge the portable charger as soon as the symbol for the low battery level appears (see section a) LED display). The display with the icon for low battery status cannot be switched off to ensure you are reminded to charge the portable charger.
- Connect the Micro USB plug to the Micro USB port (2). Connect the USB-A plug of the USB charging cable to a USB-A port of a USB charger (not included in the delivery). Observe the technical data.

→ A USB charger with 2 A is recommended for the input current of the portable charger. If a lower input current is used, charging takes longer. However, an input current higher than 2 A does not reduce the charging time, since the input current is limited.

- The charging time of the portable charger with a 2 A USB charger and a remaining battery capacity of approx. 10% can be approx. 6 hours.
- As soon as the battery is fully charged, the corresponding icon appears (see section a) LED display).
- Disconnect all the cables.
- To turn off the LED display, double-click the **M** button.

c) Charging a mobile device

- You can charge the portable charger while charging your mobile devices.
- Connect the USB-A plug of the USB charging cable to one of the USB-A ports (1). The maximum charging current is distributed to the USB-A ports if both ports are used. Therefore, check how much charging current your mobile device requires.

→ If the charging current of the connected devices exceeds the maximum output current of the portable charger, the product switches off. The portable charger must be recharged before continued use.

- Connect the Micro USB plug to your mobile device.
- The charging icon (mobile device charging) is displayed when a mobile device is connected via USB. Press the **+** or **-** button to show the battery charge status of the portable charger as a percentage for approx. 8 seconds. The LED display then switches back to the charging icon.
- Press and hold the **+** button for about 3 seconds to turn off the display during charging.
- If the display is off, press the **+**, **-** or **M** buttons to turn on the display during charging.
- Double-click the **M** button to display the charging icon or the time.
- Disconnect the USB charging cable from the portable charger and from the connected device to pause or stop charging. When the connected mobile device is fully charged or the USB charging cable is disconnected, the display shows the time.
- Switch off the display by double-clicking the **M** button, otherwise the time is displayed until the internal rechargeable battery of the portable charger is empty.
- The USB output of the portable charger will turn off automatically after 15 seconds if no button is pressed or no device is connected.

Care and cleaning

- Before cleaning, disconnect the product from the connected devices and from the power supply. Switch off the LED display.
- Never use aggressive detergents, rubbing alcohol or other chemical solutions, as these may damage the casing or cause the product to malfunction.
- Use a dry, lint-free cloth to clean the product.
- Avoid contact with water or other liquids when cleaning.

Disposal



Electronic devices are recyclable waste and must not be placed in household waste. Always dispose of the product according to the relevant statutory regulations.

You thus fulfil your statutory obligations and contribute to protection of the environment.

Technical data

| | |
|------------------------------------|---|
| Input voltage/current..... | 5 V/DC, 0.5 to 2 A |
| Output voltage/current..... | 5 V/DC, 0.5 to 2 A (per USB output) max. 2.1 A combined for both USB outputs |
| Internal rechargeable battery..... | Lithium-polymer (Li-Po) 3.7 V / 10000 mAh |
| Operating conditions..... | 10 to +45 °C, 10 – 90 % RH |
| Storage conditions..... | -20 to +45 °C, 10 – 90 % RH |
| Dimensions (L x W x H)..... | 129 x 67 x 17 mm |
| Weight | 253 g |

Distributed by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau

These operating instructions are published by CEI Conrad Electronic International (HK) Limited, 18th floor, Tower 2, Nina Tower, no. 8 Yeung Uk Road, Tsuen Wan, New Territories, Hong Kong. All rights including translation reserved. Reproduction by any method (e.g. photocopying, microfilming or capture in electronic data processing systems) requires prior written approval from the editor. Reprinting, also in part, is prohibited. The operating instructions reflect the current technical specifications at time of print.

Copyright 2018 by CEI Conrad Electronic International (HK) Limited

*1003LTF_1620602_v1_0418_02_hk_m_en