

Indoors

# Battery Operated Decoration

LED real wax candle,  
set of 3

Item no. 1676604



Polarlite®



Operating instructions

## Intended use

The battery-operated LED candles are intended for decorative purposes in indoor areas. Each is operated by two AA batteries (not included in the delivery scope). The product generates a flickering effect.

For safety and approval purposes, you must not rebuild and/or modify this product. If you use the product for purposes other than those described above, the product may be damaged. In addition, improper use can cause hazards such as short circuiting, fire etc. Read the instructions carefully and keep them. Make this product available to third parties only together with its operating instructions.

This product complies with the statutory national and European requirements. All company names and product names are trademarks of their respective owners. All rights reserved.

## Delivery content

- Battery operated decoration
- Operating instructions

## Safety instructions

**Read the operating instructions carefully and especially observe the safety information. If you do not follow the safety instructions and information on proper handling in this manual, we assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.**



## a) Persons / Product

- The device is not a toy. Keep it out of the reach of children and pets.
- Do not leave packaging material lying around carelessly. These may become dangerous playing material for children.
- Always check the product for damages before use. Should you discover any damage, cease use of the product.
- Protect the product from extreme temperatures, direct sunlight, strong jolts, high humidity, moisture, flammable gases, vapours and solvents.
- Do not place the product under any mechanical stress.
- If it is no longer possible to operate the product safely, take it out of operation and protect it from any accidental use. Safe operation can no longer be guaranteed if the product:
  - is visibly damaged,
  - is no longer working properly,
  - has been stored for extended periods in poor ambient conditions or
  - has been subjected to any serious transport-related stresses.
- Please handle the product carefully. Jolts, impacts or a fall even from a low height can damage the product.
- The LED heats up during use. Keep the product away from highly combustible materials while operating.
- This product is designed to be used indoors only.
- Attention, LED light:
  - Do not look directly into the LED light!
  - Do not look into the beam directly or with optical instruments!
- The product consists of real wax and is flammable. Protect it from direct sunlight, naked flames and other heat sources. Do not light the wick.


## b) Batteries

- Correct polarity must be observed while inserting the batteries.
- Remove the batteries if you are not using the product for a long period of time to prevent damage due to leaks. Leaking or damaged batteries might cause acid burns when in contact with skin, therefore use suitable protective gloves to handle corrupted batteries.
- Batteries must be kept out of reach of children. Do not leave batteries lying around, as there is risk, that children or pets swallow them.
- All batteries should be replaced at the same time. Mixing old and new batteries can cause the batteries to leak and the product to be damaged.
- Batteries must not be dismantled, short-circuited or thrown into fire. Never recharge non-rechargeable batteries. There is a risk of explosion!

## c) Miscellaneous

- Maintenance, modifications and repairs are to be performed exclusively by an expert or at a qualified shop.
- If you have questions which remain unanswered by these operating instructions, contact our technical support service or other technical personnel.

## Product overview

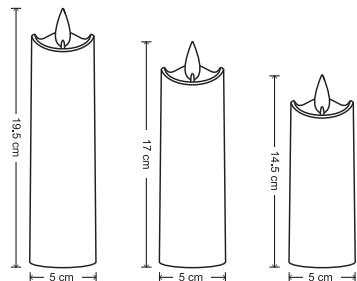


## Operation

**The product must not be used in or under water.**

**Do not operate the product if it is still in its packaging.**

**Do not hang any objects from the product and do not cover the product.**

 **Do not place the product near sources of heat such as chimneys or stoves.**



The LED is non-dimmable and non-replaceable.

1. Remove the product from the packaging. Remove the protective foil.
2. Place the product on a horizontal surface such as a garden table.
3. Remove the battery compartment cover.
4. Insert two AA batteries. We recommend using high-quality batteries. Ensure that the batteries are inserted in the correct polarity ( "+" = positive; "-" = negative), as indicated in the battery compartment.
5. Replace the battery compartment cover.

6. To turn the light on and off, move the switch on the bottom of the product to the **On** or **Off** position.
7. If you do not plan to use the product for an extended period, turn it off and remove the batteries.

## Inserting/replacing the batteries

Replace the batteries if the LED stops working. Ensure that no liquids get into the interior of the battery compartment when changing the batteries.

- Ensure that the on/off switch is set to the **Off** position before opening the battery compartment.
- Remove the battery compartment cover.
- Remove the used batteries.
- Insert two new AA-batteries. We recommend using high-quality batteries. Ensure that the batteries are inserted in the correct polarity ( "+" = positive; "-" = negative), as indicated in the battery compartment.
- Close the battery compartment. The battery compartment cover must audibly click into place.

## Care and cleaning

- Turn off the product and let it cool down sufficiently before cleaning.
- Remove the batteries before cleaning.
- Do not use abrasive detergents, rubbing alcohol or other chemical solutions, as these may damage the casing or stop the product from functioning properly.
- Use a clean, dry, lint-free cloth to clean the product. Do not pinch the real wax too hard, as this can lead to scratch marks or damage.

## Disposal

### a) Product



Electronic devices are recyclable waste and must not be disposed of in the household waste. At the end of its service life, dispose of the product according to the relevant statutory regulations.

Remove any inserted batteries and dispose of them separately from the product.

### b) Batteries



You as the end user are required by law (Battery Ordinance) to return all used batteries. Disposing of them in the household waste is prohibited.

Contaminated batteries are labelled with this symbol to indicate that disposal in the domestic waste is forbidden. The designations for the heavy metals involved are: Cd = Cadmium, Hg = Mercury, Pb = Lead (name on batteries, e.g. below the trash icon on the left).

Used batteries can be returned to collection points in your municipality, our stores or wherever batteries are sold.

You thus fulfil your statutory obligations and contribute to the protection of the environment.

## Technical data

Operating voltage	3 V (2 x 1.5 V batteries, type AA)
Power consumption	0.06 W
Light ON time (continuous operation)	approx. 200 hours
Number of LEDs	1
Luminous colour	Warm White
LED life	30,000 hours
Operating conditions	-5 to +40 °C
Storage conditions	-5 to +40 °C
Dimensions (H x Ø)	195 x 50 mm 170 x 50 mm 145 x 50 mm
Weight	168 g 157 g 126 g

These operating instructions are published by CEI Conrad Electronic International (HK) Limited, 18th Floor, Tower 2, Nina Tower, No. 8 Yeung Uk Road, Tsuen Wan, New Territories, Hong Kong. All rights including translation reserved. Reproduction by any method, e.g. photocopy, microfilming, or the capture in electronic data processing systems require the prior written approval by the editor. Reprinting, also in part, is prohibited. These operating instructions represent the technical status at the time of printing.

© Copyright 2018 by CEI Conrad Electronic International (HK) Limited