

Outdoors

Battery Operated Decoration

LED Christmas candles with
remote control, set of 20

Item no. 1678567



Polarlite®



Operating Instructions

Intended use

The 20 battery-operated LED candles are designed to provide decorative lighting in indoor and outdoor areas (IP44). Each is operated by one AA battery. You can use the remote control to select a number of different modes (e.g. constant, dim or flicker mode).

For safety and approval purposes, you must not rebuild and/or modify this product. Using the product for purposes other than those described above may damage the product. In addition, improper use can cause hazards such as a short circuit or fire. Read the instructions carefully and store them in a safe place. Make this product available to third parties only together with its operating instructions.

This product complies with statutory national and European regulations. All company and product names are trademarks of their respective owners. All rights reserved.

Delivery content

- Christmas candles, set of 20
- Remote control (incl. CR2025 button cell)
- Operating Instructions

Safety instructions

Read the operating instructions and safety information carefully. If you do not follow the safety instructions and information on proper handling in this manual, we assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.



a) Persons / Product

- This product is not a toy. Keep it out of the reach of children and pets.
- Do not leave packaging material lying around carelessly, as it may become dangerous playing material for children.
- Always check the product for damages before use. Should you discover any damage, cease use of the product.
- Protect the product from extreme temperatures, direct sunlight, strong jolts, high humidity, moisture, flammable gases, vapours and solvents.
- Do not place the product under any mechanical stress.
- If it is no longer possible to operate the product safely, stop using it and prevent unauthorized use. Safe operation can no longer be guaranteed if the product:
 - is visibly damaged,
 - is no longer working properly,
 - has been stored for extended periods in poor ambient conditions or
 - has been subjected to any serious transport-related stress.
- Always handle the product carefully. Jolts, impacts or a fall even from a low height may damage the product.
- The LED heats up during use. Keep the product away from highly combustible materials while operating.
- The product can be used outdoors and is splashproof. However, it must not be used in or under water.
- Do not expose the remote control to high humidity or moisture.
- Warning, LED light:
 - Do not look directly at the LED light!
 - Do not look into the beam directly or with optical instruments!


b) Batteries

- Correct polarity must be observed while inserting the batteries.
- Remove the batteries if you are not using the product for a long period of time to prevent damage due to leaks. Leaking or damaged batteries might cause acid burns when in contact with skin, therefore use suitable protective gloves to handle corrupted batteries.
- Batteries must be kept out of reach of children. Do not leave batteries lying around, as there is risk, that children or pets swallow them.
- Batteries must not be dismantled, short-circuited or thrown into fire. Never recharge non-rechargeable batteries. There is a risk of explosion!

c) Miscellaneous

- Maintenance, modifications and repairs must be done by a technician or an authorized repair center.
- If you have questions which remain unanswered by these operating instructions, contact our technical support service or other technical personnel.

Product overview

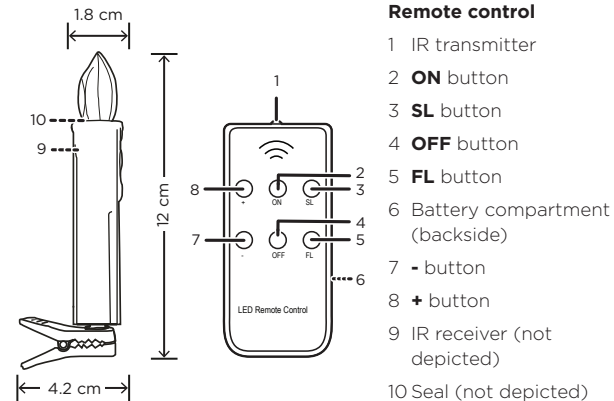

Remote control

- 1 IR transmitter
- 2 **ON** button
- 3 **SL** button
- 4 **OFF** button
- 5 **FL** button
- 6 Battery compartment (backside)
- 7 - button
- 8 + button
- 9 IR receiver (not depicted)
- 10 Seal (not depicted)

Operation

The product must not be used in or under water.

Do not operate the product if it is still in its packaging.

Do not hang any objects from the product and do not cover the product.



The LEDs are not replaceable.

1. Remove the product from the packaging.
2. Hold the candle and turn the candle head anticlockwise to open the battery compartment.
3. Insert one AA battery into the candle, ensuring that you insert the negative pole (-) first. We recommend using high-quality batteries.
4. Check that the seal (10) is in the correct position on the screw cap of the candle head.

5. Turn the candle head clockwise as far as it will go to close the battery compartment.
6. Ensure that the candle is in a secure position in the candle holder.
7. Follow steps 2 to 5 to put all the other candles into operation.
8. Attach the candles, for example, to your Christmas tree. Ensure stability when clamping the candles onto branches of the tree.
9. Use the remote control to control the candles (see "Remote control").
10. Turn off the candles using the remote control and then remove the batteries when not using the candles for a longer period of time.

Replace the battery if the LED does not turn on.

Remote control

Pull the safety strip from the battery compartment (6) of the remote control before first time use.

- Ensure that there are no objects between the IR transmitter (1) and the candles.
- If the candles do not turn on at the same time, move closer to the candles and ensure that the remote control is pointing in the right direction.
- The operating range of the remote control depends on the ambient conditions and the battery capacity.
- Replacing the battery is required when the operating range of the remote control drops significantly or if the candles cannot be operated when pressing any button.
- Remove the battery holder from the battery compartment (6) as shown on the back of the remote control, and then remove the old battery.

- Insert a coin cell battery of type CR2025 into the battery holder, making sure the positive terminal ("+" marking on the battery) faces up.
- Slide the battery holder back into the battery compartment until it clicks into place.

Description of buttons

ON button (2)	Turn on candles / constant lighting function
OFF button (4)	Turn off candles
+ (8) / - button (7)	Increases / decreases the brightness
SL (3) / FL button (5)	Slow / fast flickering mode

Care and cleaning

- Turn off the product and let it cool down sufficiently before cleaning. Remove the batteries before cleaning.
- Under no circumstances use aggressive cleaning agents, cleaning alcohol or other chemical solutions, as the material can be attacked as a result, or the function can even be impaired.
- To clean, use a clean, dry, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water. Allow the product to dry completely before continued use.

Technical data

a) Per candle

Protection type..... IP44

Power supply..... 1 x 1.5 V battery, type AA

LED power..... 0.06 W

Luminous colour..... Warm White

Operating conditions -20 to +40 °C / 0 - 100 % RH

Storage conditions..... -20 to +40 °C / 0 - 100 % RH

Weight..... 13 g



b) Remote control

Power supply..... 1 x 3 V lithium battery, type CR2025


Range..... max. 5 m

Disposal

a) Product

-  Electronic devices are recyclable waste and must not be placed in household waste. Always dispose of the product according to the relevant statutory regulations.
-  Remove any inserted batteries and dispose of them separately from the product.

b) Batteries

-  You as the end user are required by law (Battery Ordinance) to return all used batteries. Disposing of them in the household waste is prohibited.

Batteries that contain hazardous substances are labelled with this symbol to indicate that disposal in household waste is forbidden. The abbreviations for heavy metals in batteries are: Cd = Cadmium, Hg = Mercury, Pb = Lead (indicated on the battery, e.g. below the waste icon on the left).

Used batteries can be returned to local collection points, our stores or battery retailers.

You thus fulfil your statutory obligations and contribute to the protection of the environment.

These operating instructions are published by CEI Conrad Electronic International (HK) Limited, 18th Floor, Tower 2, Nina Tower, No. 8 Yeung Uk Road, Tsuen Wan, New Territories, Hong Kong. All rights including translation reserved. Reproduction by any method (e.g. photocopying, microfilming, or the capture in electronic data processing systems) requires prior written approval from the editor. Reprinting, also in part, is prohibited. These operating instructions reflect the current technical specifications at the time of printing.
© Copyright 2018 by CEI Conrad Electronic International (HK) Limited