Indoors

Battery Operated Lightchain

LED chain of lights with 10 LEDs, WW

Item no. 1678775

LED chain of lights with 20 LEDs, WW

Item no. 1678776







Intended use

The product is battery-operated and intended for use as indoor decoration (batteries not included).

For safety and approval purposes, you must not rebuild and/or modify this product. Using the product for purposes other than those described above may damage the product. In addition, improper use can cause hazards such as a short circuit or fire. Read the instructions carefully and store them in a safe place. Make this product available to third parties only together with its operating instructions.

This product complies with statutory national and European regulations. All company and product names are trademarks of their respective owners. All rights reserved.

Delivery content

- · LED chain of lights with 10 or 20 LEDs, WW
- Operating Instructions

Safety instructions

Read the operating instructions and safety information carefully. If you do not follow the safety instructions and information on proper handling in this manual, we assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.



a) Persons / Product

- This product is not a toy. Keep it out of the reach of children and pets.
- Do not leave packaging material lying around carelessly, as it may become dangerous playing material for children.
- Do not electrically attach this light chain to another light chain.
- Check the product for damage before each use. If there are any signs of damage, discontinue use immediately.
- Protect the product from extreme temperatures, direct sunlight, strong jolts, high humidity, moisture, flammable gases, vapours and solvents.
- Do not place the product under any mechanical stress.
- If it is no longer possible to operate the product safely, stop using it and prevent unauthorized use. Safe operation can no longer be guaranteed if the product:
- is visibly damaged,
- is no longer working properly,
- has been stored for extended periods in poor ambient conditions or
- has been subjected to any serious transport-related stress.
- Always handle the product carefully. Jolts, impacts or a fall even from a low height may damage the product.
- The LED becomes warm during use. Keep the product away from flammable materials
- When setting up the product, make sure that the cable is not pinched, kinked or damaged by sharp edges.
- Always lay the cables so that nobody can trip over or become entangled in them. This poses a risk of injury.
- This product is intended for indoor use only.

- Warning, LED light:
- Do not look directly at the LED light!
- Do not look into the beam directly or with optical instruments!


b) Battery

- Ensure that the battery is inserted in the correct polarity.
- To prevent battery leakage, remove the battery when you do not plan to use the product for an extended period. Leaking or damaged batteries may cause acid burns when they come into contact with skin. Always use protective gloves when handling damaged batteries.
- Keep batteries out of the reach of children. Do not leave batteries lying around, as they constitute a choking hazard for children and pets.
- Replace all batteries at the same time. Mixing old and new batteries may cause the batteries to leak and damage the lantern
- Batteries must not be dismantled, short-circuited or thrown into fire. Never recharge non-rechargeable batteries, as this may cause an explosion.

c) Miscellaneous

- Maintenance, modifications and repairs must be done by a technician or an authorized repair center.
- If you have questions which remain unanswered by these operating instructions, contact our technical support service or other technical personnel.


Product overview

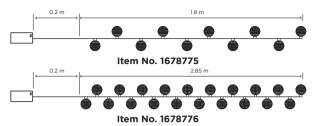

Operation

Do not set up or operate the product under water.

 Make sure that the cables hang loosely and are not stretched too tightly. Failure to heed this warning may cause the cables to tear.



Do not hang any objects from the product and do not cover the product.



The LEDs are neither dimmable nor replaceable.

- Lay the product out entirely and arrange the cables so that they lie freely and are not tangled.
- 2. Remove the cover of the battery box.
- Insert two new AA batteries. We recommend using high-quality batteries. Observe the correct polarity ("+" = positive, "-" = negative), as stated on the battery box.
- 4. Reattach the cover.
- Mount the product in a suitable place (e.g. on furniture).
 Where necessary use plastic cable ties to secure the product.
- You can switch the product on/off by the on/off switch on the battery box (ON = on; OFF = off).
- 7. If you are not using the product for an extended period, switch it off and remove the batteries from the battery box.



A change of batteries is necessary if the LEDs of the light chain are no longer coming on.

Care and cleaning

- The product is maintenance-free, except for any change of batteries and occasional cleaning.
- Swtich off the product and remove the batteries before cleaning and let the LEDs cool down completely.
- To clean, use a clean, dry, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water. Allow the product to dry completely before continued use.

Disposal

a) Product



 Electronic devices are recyclable waste and must not be placed in household waste. Always dispose of the product according to the relevant statutory regulations.

Remove any inserted batteries and dispose of them separately from the product.

b) Batteries



You as the end user are required by law (Battery Ordinance) to return all used batteries. Disposing of them in the household waste is prohibited.

Batteries that contain hazardous substances are labelled with this symbol to indicate that disposal in household waste is forbidden. The abbreviations for heavy metals in batteries are: Cd = Cadmium, Hg = Mercury, Pb = Lead (indicated on the battery, e.g. below the waste icon on the left).

Used batteries can be returned to local collection points, our stores or battery retailers.

You thus fulfil your statutory obligations and contribute to the protection of the environment.

Technical data

Item No.	1678775	1678776
Protection type	IP20	
Operating voltage	3 V (2 x 1.5 V batteries, type AA)	
Power consumption	0.06 W	
Number of lights	10	20
Battery life	approx. 218 hours	approx. 168 hours
Luminous colour	warm white	
Power cable length	20 cm	
Total length	2 m	3.05 m
Distance between lights	20 cm	15 cm
Operating conditions	0 to +40 °C, 0 - 90 % RH	
Storage conditions	0 to +40 °C, 0 - 90 % RH	
Weight	110 g	166 g

These operating instructions are published by CEI Conrad Electronic International (Hk) Limited, 18th Floor, Tower 2 Nina Tower, No. 8 Yeung luk Road, Tsuen Wan, New Territories, Hong Kong, all rights including translation reserved. Reproduction by any method (e.g. photocopying, microfilming, or the capture in electronic data processing systems) requires prior written approval from the editor. Reprinting, also in part, is prohibited. These operating instructions reflect the current technical specifications at the time of printing.

© Copyright 2018 by CEI Conrad Electronic International (HK) Limited

Distributed by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau 1678775_1678776_V2_1018_02_mxs_m_en