Indoors

Decorative Chain

Fairy lights with 80 LEDs, WW

Item no. 1762807

Fairy lights with 150 LEDs, WW

Item no 1762808







Operating Instructions

Intended use

The product is intended for use as indoor decoration. It can be attached to appropriate furniture or along windows.

For safety and approval purposes, you must not rebuild and/or modify this product. Using the product for purposes other than those described above may damage the product. In addition, improper use can cause hazards such as short circuit fire electric shock, etc. Read the instructions carefully and store them in a safe place. Make this product available to third parties only together with its operating instructions.

This product complies with statutory national and European regulations. All company and product names are trademarks of their respective owners. All rights reserved.

Delivery content

- Main unit
- Spare bulbs x 3pcs (item no. 1762807), or Spare bulbs x 5pcs (item no. 1762808)
- Operating Instructions

Safety instructions

Read the operating instructions and safety information carefully. If you do not follow the safety instructions and information on proper handling in this manual, we assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.



a) Persons / Product


- The device is not a toy. Keep it out of the reach of children and
- Do not leave packaging material lying around carelessly. These may become dangerous playing material for children.
- Always check the product for damages before use. Should you discover any damage, cease use of the product. If you discover damages while the product is in use (i.e. damaged cable or plug), do not touch the product, risk of fatal injury due to electric shock! First disconnect the mains outlet to which the product is connected from the power supply (flip off the fuse and/or automatic circuit breaker and then turn off the residual current-operated circuit breaker to disconnect the power outlet at all phases). Now unplug from the power outlet. Discontinue use of the product immediately, dispose of it in an environmentally friendly fashion.
- Protect the product from extreme temperatures, strong jolts. flammable gases, vapours and solvents.
- Do not place the product under any mechanical stress.
- If it is no longer possible to operate the product safely, take it out of operation and protect it from any accidental use. Safe operation can no longer be guaranteed if the product:
- is visibly damaged,
- is no longer working properly,
- has been stored for extended periods in poor ambient conditions or
- has been subjected to any serious transport-related stresses.
- Please handle the product carefully, Jolts, impacts or a fall even from a low height can damage the product.
- The LEDs get hot during use. Keep the product away from easily flammable materials when in use.
- The product generates heat during use. Do not cover the product during use.

- The mains outlet must be located near to the device and be easily accessible.
- The transformer may be supplied with power only via a properly installed power outlet connected to the public supply mains. Before plugging in the transformer, verify that the product's nominal voltage complies with the voltage of your power supply company.
- Never plug in or unplug with wet hands.
- Do not unplug the transformer by tugging on the cord, grasp and pull the power plug using the provided gripping surface.
- When setting up the product, make sure that the cables are not pinched, kinked or damaged by sharp edges.
- Always lay the cables so that nobody can trip over or become entangled in them. This poses a risk of injury.
- Unplug the product in case of a thunder storm for safety reasons.
- The product is intended for use in indoor areas only.
- Attention, LED light:
- Do not look directly into the LED light!
- Do not look into the beam directly or with optical instruments.

b) Miscellaneous

- Consult an expert when in doubt about operation, safety or connection of the device.
- Maintenance, modifications and repairs are to be performed exclusively by an expert or at a qualified shop.
- If you have questions which remain unanswered by these operating instructions, contact our technical support service or other technical personnel.

Product overview

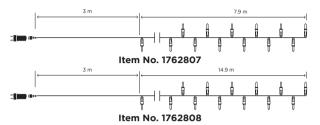

Operation

Do not install or operate the product under water.

 
Make sure the cable hangs loosely and is not overly tensioned. Failure to heed this warning may cause the cable to tear.



Do not connect the product to the power supply while it is still in the packaging. Lay the product out entirely before connecting it to the power supply.

Do not hang any objects from the product and do not cover the product.

Disconnect the product from the mains power outlet if any of the LEDs are not working properly.



- Lay the product out entirely and arrange the cables so that they lie freely and are not tangled.
- Attach the product to a suitable mounting site (e.g. on a piece of furniture). Where necessary use plastic cable ties to secure the product.
- Connect the plug of the power cable to the socket on the transformer. It is only possible to connect in one way. Secure the connection by turning the plug's screw cap onto the transformer's thread.
- 4. Connect the transformer to a power outlet.
- Disconnect the transformer from the power outlet for extended periods of disuse.
- The product has no power switch and is always on as long as it is connected to the power supply.

Replacing the broken bulbs

- The product is supplied with 3 pcs spare bulbs for item no. 1762807 (5 pcs for item no. 1762808). If any of the LED bulbs is broken, replace with the supplied spare bulb.
- 1. First disconnect the product from the power supply.
- Unplug the broken bulb from the bulb holder and insert a new one. It is only possible to insert in one way. Ensure the bulb is securely inserted in the bulb holder.

Care and cleaning

- The product is maintenance-free apart from occasional cleaning.
- Disconnect the transformer from the power supply before cleaning and allow the LEDs to cool down sufficiently.
- To clean, use a clean, dry, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water.
- Allow the product to dry completely before continued use.

Disposal



Electronic devices are recyclable waste and must not be placed in household waste. At the end of its service life, dispose of the product in accordance with applicable regulatory guidelines.

You thus fulfil your statutory obligations and contribute to the protection of the environment.

Technical data

a) Light chain

Item No.	1762807	1762808	
Protection type	IP20		
Operating voltage	3 V/DC		
Power consumption	0.06 W		
Number of LEDs	80	150	
Product life	approx. 20,000 hours		
Luminous colour	warm white		
Power cable length	3 m		
Total length	10.9 m	17.9 m	
Distance between lights	10 cm		
Operating conditions	0 to +40 °C, 0 - 90 % RH		
Storage conditions	0 to +40 °C, 0 - 90 % RH		
Weight	393 g	685 g	

b) Transformer

Item No.	1762807	1762808	
Input voltage	100 - 240 V/AC, 50/60 Hz		
Output voltage	3 V/DC		
Output current	1200 mA		
Output power	max. 3.6 W		

These operating instructions are published by CEI Conrad Electronic International (Hk) Limited, IBth Floor, Tower 2 Nina Tower, No. 8 Yeung Uk Road, Tsuen Wan, New Territories, Hong Kong, All rights including translation reserved. Reproduction by any method (e.g. photocopying, microfilming, or the capture in electronic data processing systems) requires prior written approval from the editor. Reprinting, also in part, is prohibited. These operating instructions reflect the current technical specifications at the time of printing.

© Copyright 2018 by CEI Conrad Electronic International (HK) Limited

Distributed by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau 1762807 1762808 V1 0818 02 mxs m en