

GLO-TOOB™


Pat.No.US7218241

3
MODES

User Guide

AAA

www.glo-toob.com

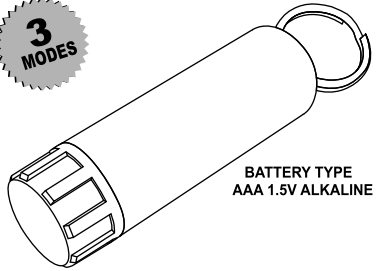

BATTERY TYPE
AAA 1.5V ALKALINE

CE

High intensity waterproof light source

KEY FEATURES

- Waterproof to 60 meters (200 feet)
- 3 Modes to choose from
- Powered by inexpensive AAA alkaline battery
- Removable Lanyard
- Battery life 4-15 hours (dependent on mode selection)

Twist Waterproof Cap

AAA 1.5V Alkaline Battery

GLO-TOOB Body

SPECIFICATIONS

Weight	34g (1.2 oz)
Shape	Cylindrical
Viewing Angle	360°
Light Source	High Bright LED's
LED Life	Approx. 100,000 hrs
Battery Life	4 to 15 hours (Dependent on mode)
Dimensions	75mm x 19mm (2.95in x 0.75in)
Durability	Medium-impact resistant
Working Temperature	-15°C to +55°C (5°F to 131°F)
Buoyancy	Negative
Colors available	Red, Amber, Blue, Green, White

SELECTING A MODE

The GLO-TOOB AAA allows you to select one of its 3 modes. In order to select your mode, follow these simple steps.

- STEP 1: Switch the GLO-TOOB ON by twisting the battery removal tail-cap. This will always default to 100% power mode.
- STEP 2: Now, by twisting the tail-cap ON and OFF you will cycle through the 3 different modes.
- STEP 3: Leave on the desired mode for use.



Care and Maintenance

In order to prolong the life of your GLO-TOOB, it is recommended that preventive maintenance is performed on a periodic basis as follows:

1. Exposure to Saltwater

After saltwater exposure it is highly recommended that the GLO-TOOB is rinsed in fresh water and then dried before opening. This will reduce the possibility of corrosion and extend the life of your GLO-TOOB.

2. Contact surfaces

All GLO-TOOB caps have conductive aluminum threads to hold the caps in place as well as to conduct power. Should the threads come into contact with water, an aluminum oxide layer will be formed around the threads possibly rendering the contact area faulty. For this reason please make sure the threads stay dry and clean.

3. Washer (seal)

The *washer* on the inside of the caps must be checked each time before the GLO-TOOB is submersed in water. If the *washer* is cracked or cut, replace the *washer* immediately. Also check for general cleanliness of the *washer* to ensure that particles do not affect the watertight seal.

4. Battery

Leaking batteries can corrode the inside of your GLO-TOOB. It is therefore recommended that you open your GLO-TOOB once a month and check the battery for signs of leakage and / or corrosion. It is also recommended that you remove the batteries from your GLO-TOOB and store them separately if you use your GLO-TOOB infrequently.

LIMITED LIFETIME WARRANTY

The manufactures of GLO-TOOB warrants each GLO-TOOB to be free from defects in material and workmanship. Under this warranty the manufactures of GLO-TOOB obligation is limited to replacing or repairing any GLO-TOOB returned to us and found to be defective in either material or workmanship.

This warranty excludes the following: 1. Battery Leakage (determine the brand of the battery and follow that battery manufacture's instructions on how to make a damage claim). 2. LED Burnout. 3. Failure of or damage to GLO-TOOB due to misuse and/or lack of maintenance. 4. Accidental flooding of the GLO-TOOB by exposing the battery chamber to moisture/water.

For WARRANTY INFORMATION or REPAIR INSTRUCTIONS, please visit out our website at:
www.glo-toob.com