

sygonix®

© App Instruction Manual

Built-in Wi-Fi switch

Item no. 1911206

Content

Intended use

General information

Important Information

Up-to-date operating instructions

System requirements

Legal Notice

Mobile Application (App)

Installing the app

Configuring the app

Create an account

Logging in

Creating a family

Functions on the home page of the app

Configuration and operation

Adding a new device

Operating the built-in Wi-Fi switch

Further device settings

Creating a group

Creating a scene

Functions on the profile and settings page of the app

Profile of the current user (C1)

Family management (C2)

Settings (C6)

Intended use

The software application (hereinafter - “app”) enables wireless operation of the built-in Wi-Fi switch.

This guide serves to explain the app installation, operation and handling.

All company and product names are trademarks of their respective owners. All rights reserved.

Android™ is a registered trademark of Google LLC.

General information

 
Important Information

Pay special attention to information in an orange frame.

The blue frame provides tips for use and product features.

Up-to-date operating instructions

To download the latest operating instructions, visit www.conrad.com/downloads or scan the QR code on this page. Follow the instructions on the website.

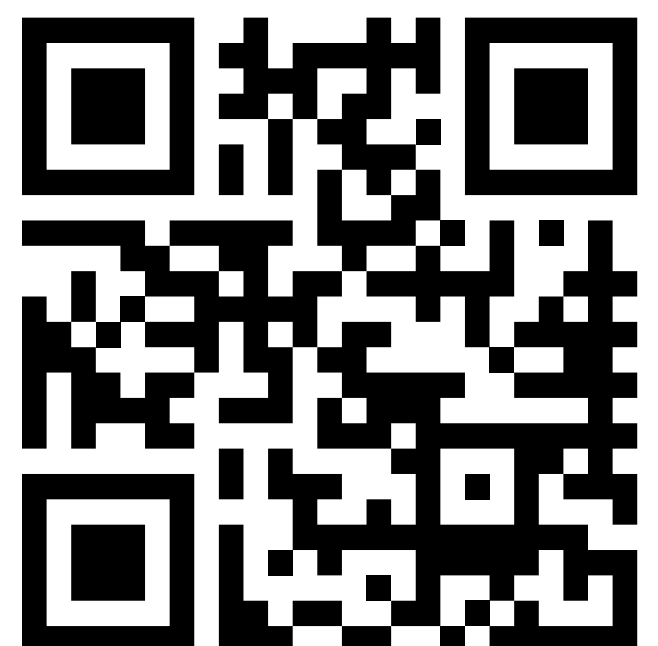

System requirements

- Smartphone/tablet with 2.4 GHz Wi-Fi (5 GHz is not supported)
- Wi-Fi router or access point with 2.4 GHz Wi-Fi (5 GHz is not supported)
- Operating system: Android™ 4.4 or higher; Apple iOS 8.0 or higher

Legal Notice

This is a publication by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau (www.conrad.com).

All rights including translation reserved. Reproduction by any method (e.g. photocopying, microfilming or capturing in electronic data processing systems) requires prior written approval from the publisher. Reprinting, also in part, is prohibited. This publication reflects the technical status at the time of printing.

© Copyright 2021 by Conrad Electronic SE.

Mobile Application (App)

These instructions refer to a smartphone. In this case, an Android™ smartphone or tablet or iPhone or iPad is always meant.

Installing the app

- Open the respective App Store on your smartphone . If you are using Android™, open “Google Play”. If you're using an Apple device, open Apple's "iTunes Store".
- Search for the “**Smart Life - Smart Living**” app (house icon with blue background) and install it.
- Alternatively, scan the QR code on this page. You will be directed to the page of the appropriate store. The QR-code works on Android™ and iOS devices.



 
Refer to the system requirements specified in the technical data section and the app store description. Please note that the following instructions may change for future app versions.

Configuring the app


- Open the previously installed “**Smart Life - Smart Living**” app.
- If you have not yet created a free account, tap the

button indicated with an arrow in the figure below.

If you have already created an account, skip the chapter “Creating an account” and go to the You continue with the chapter “Loggin in”.

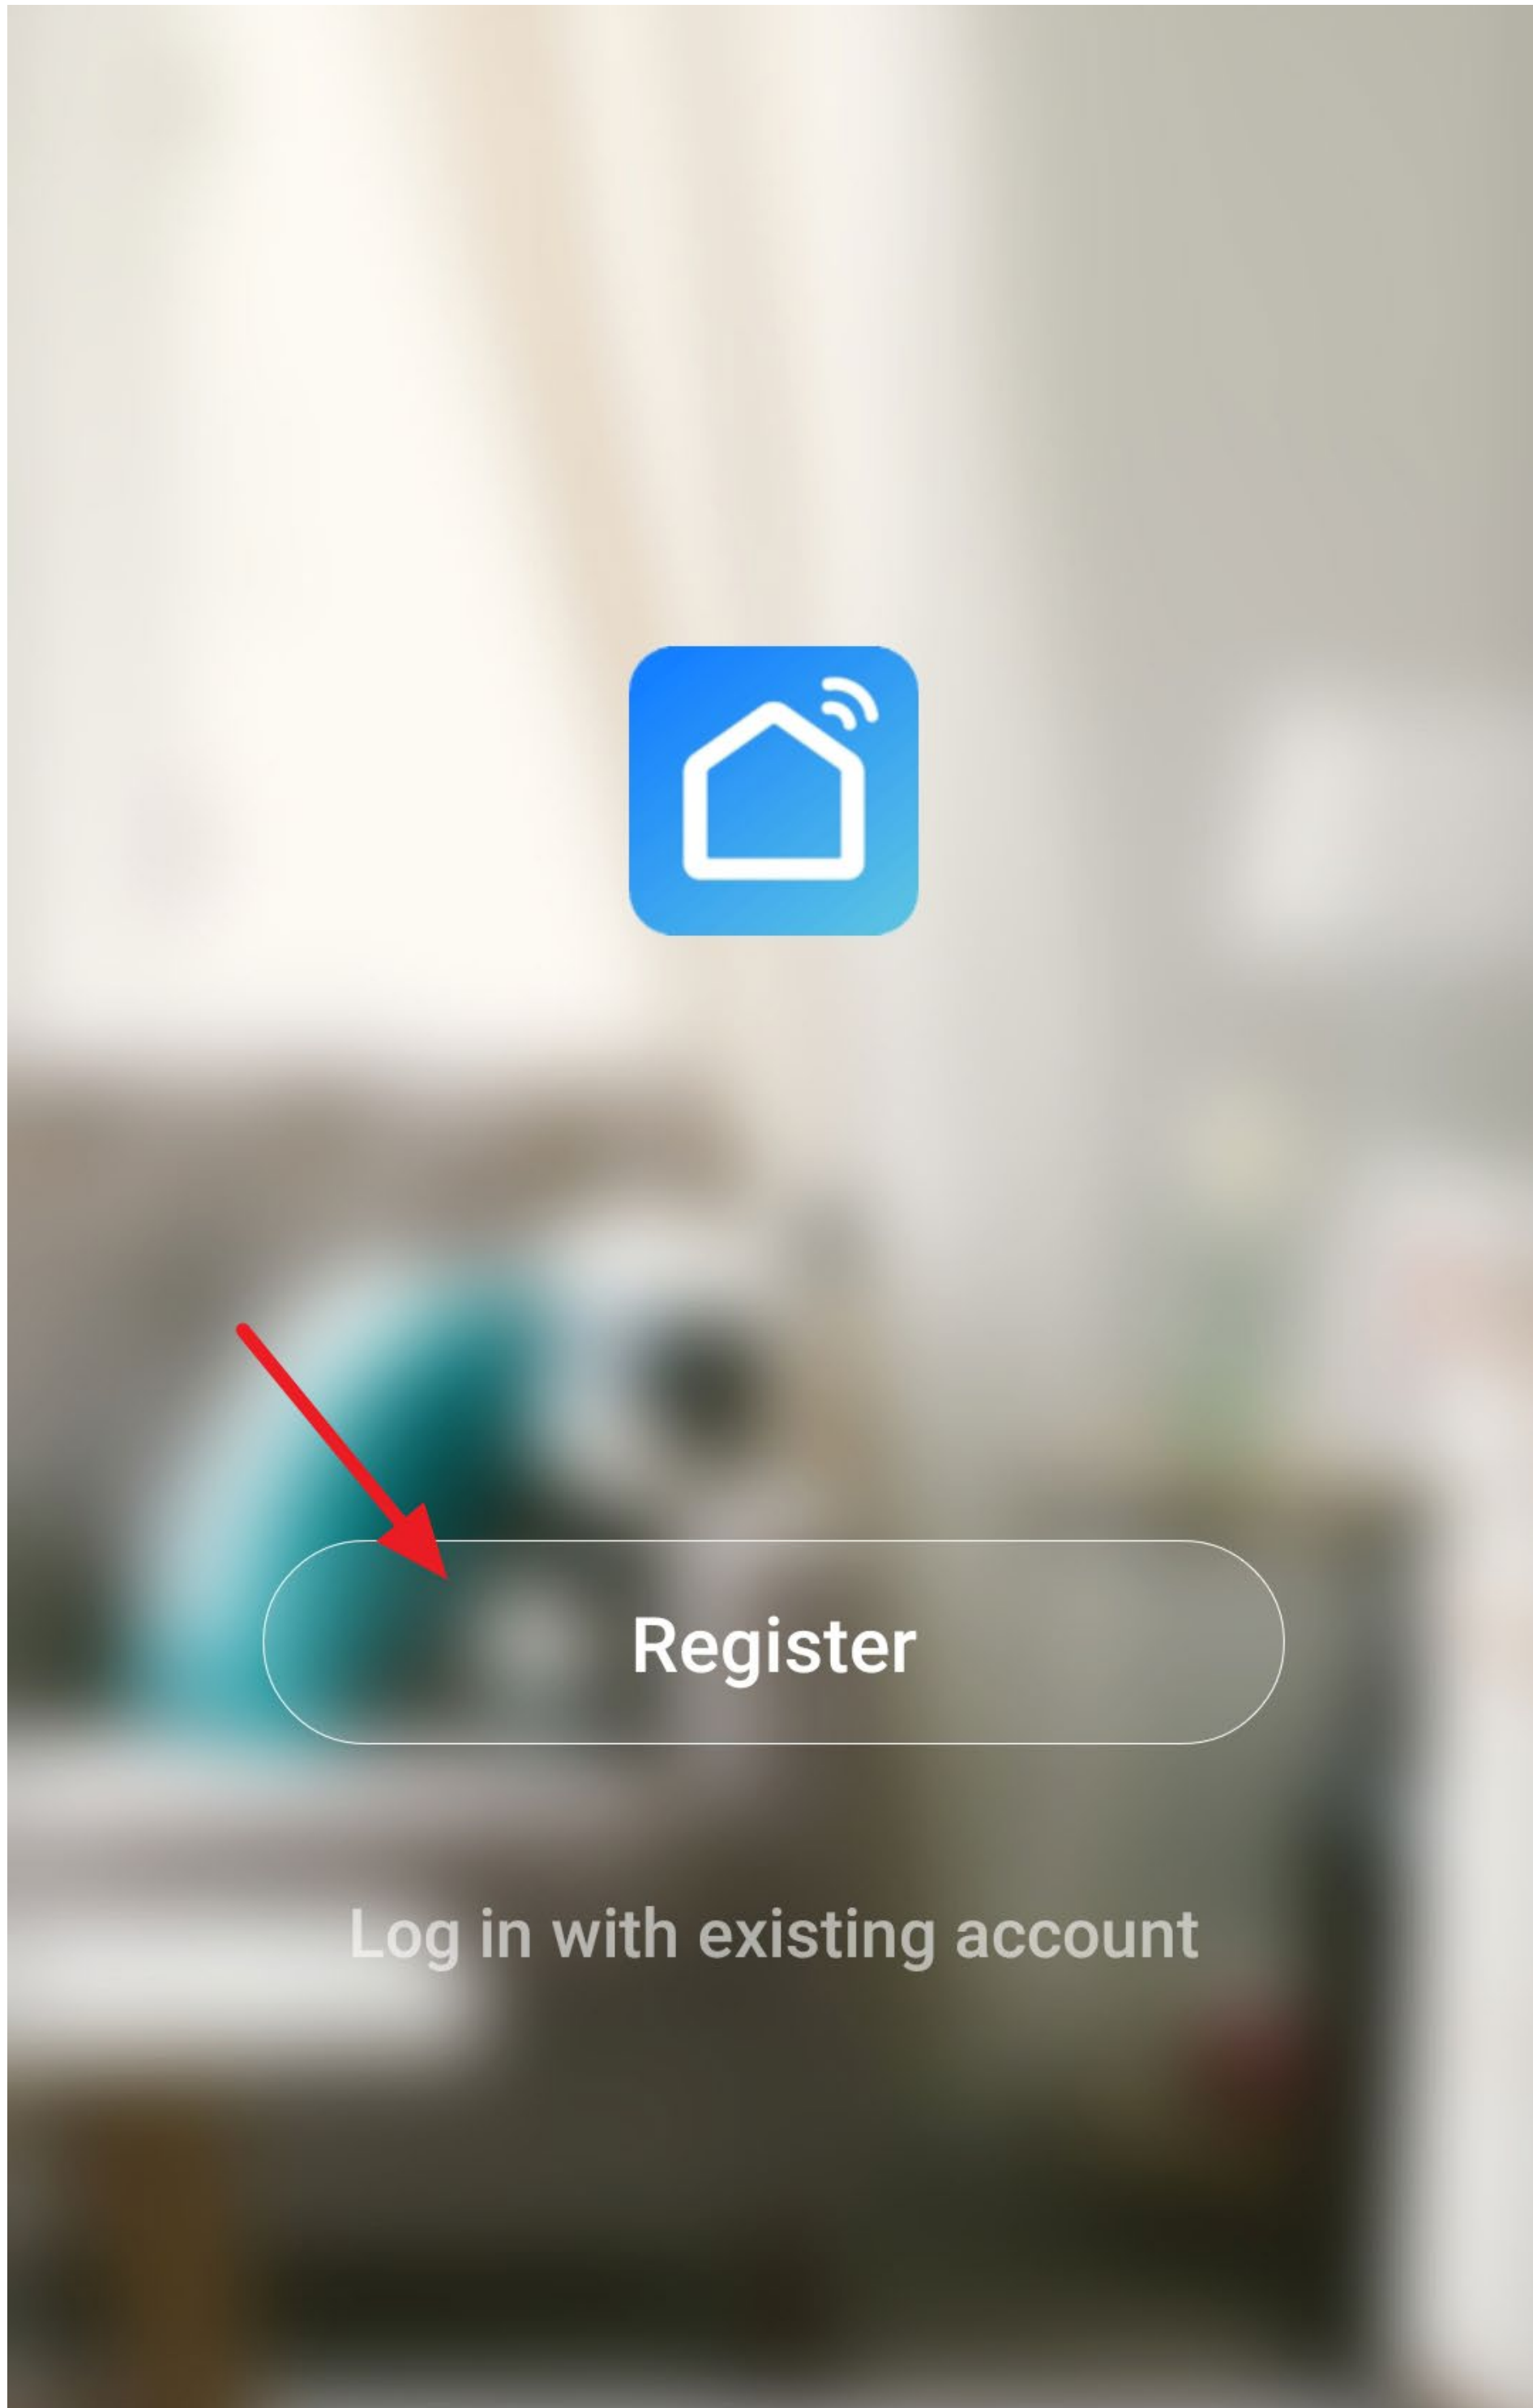


 - Tap the right button to accept the privacy policy.

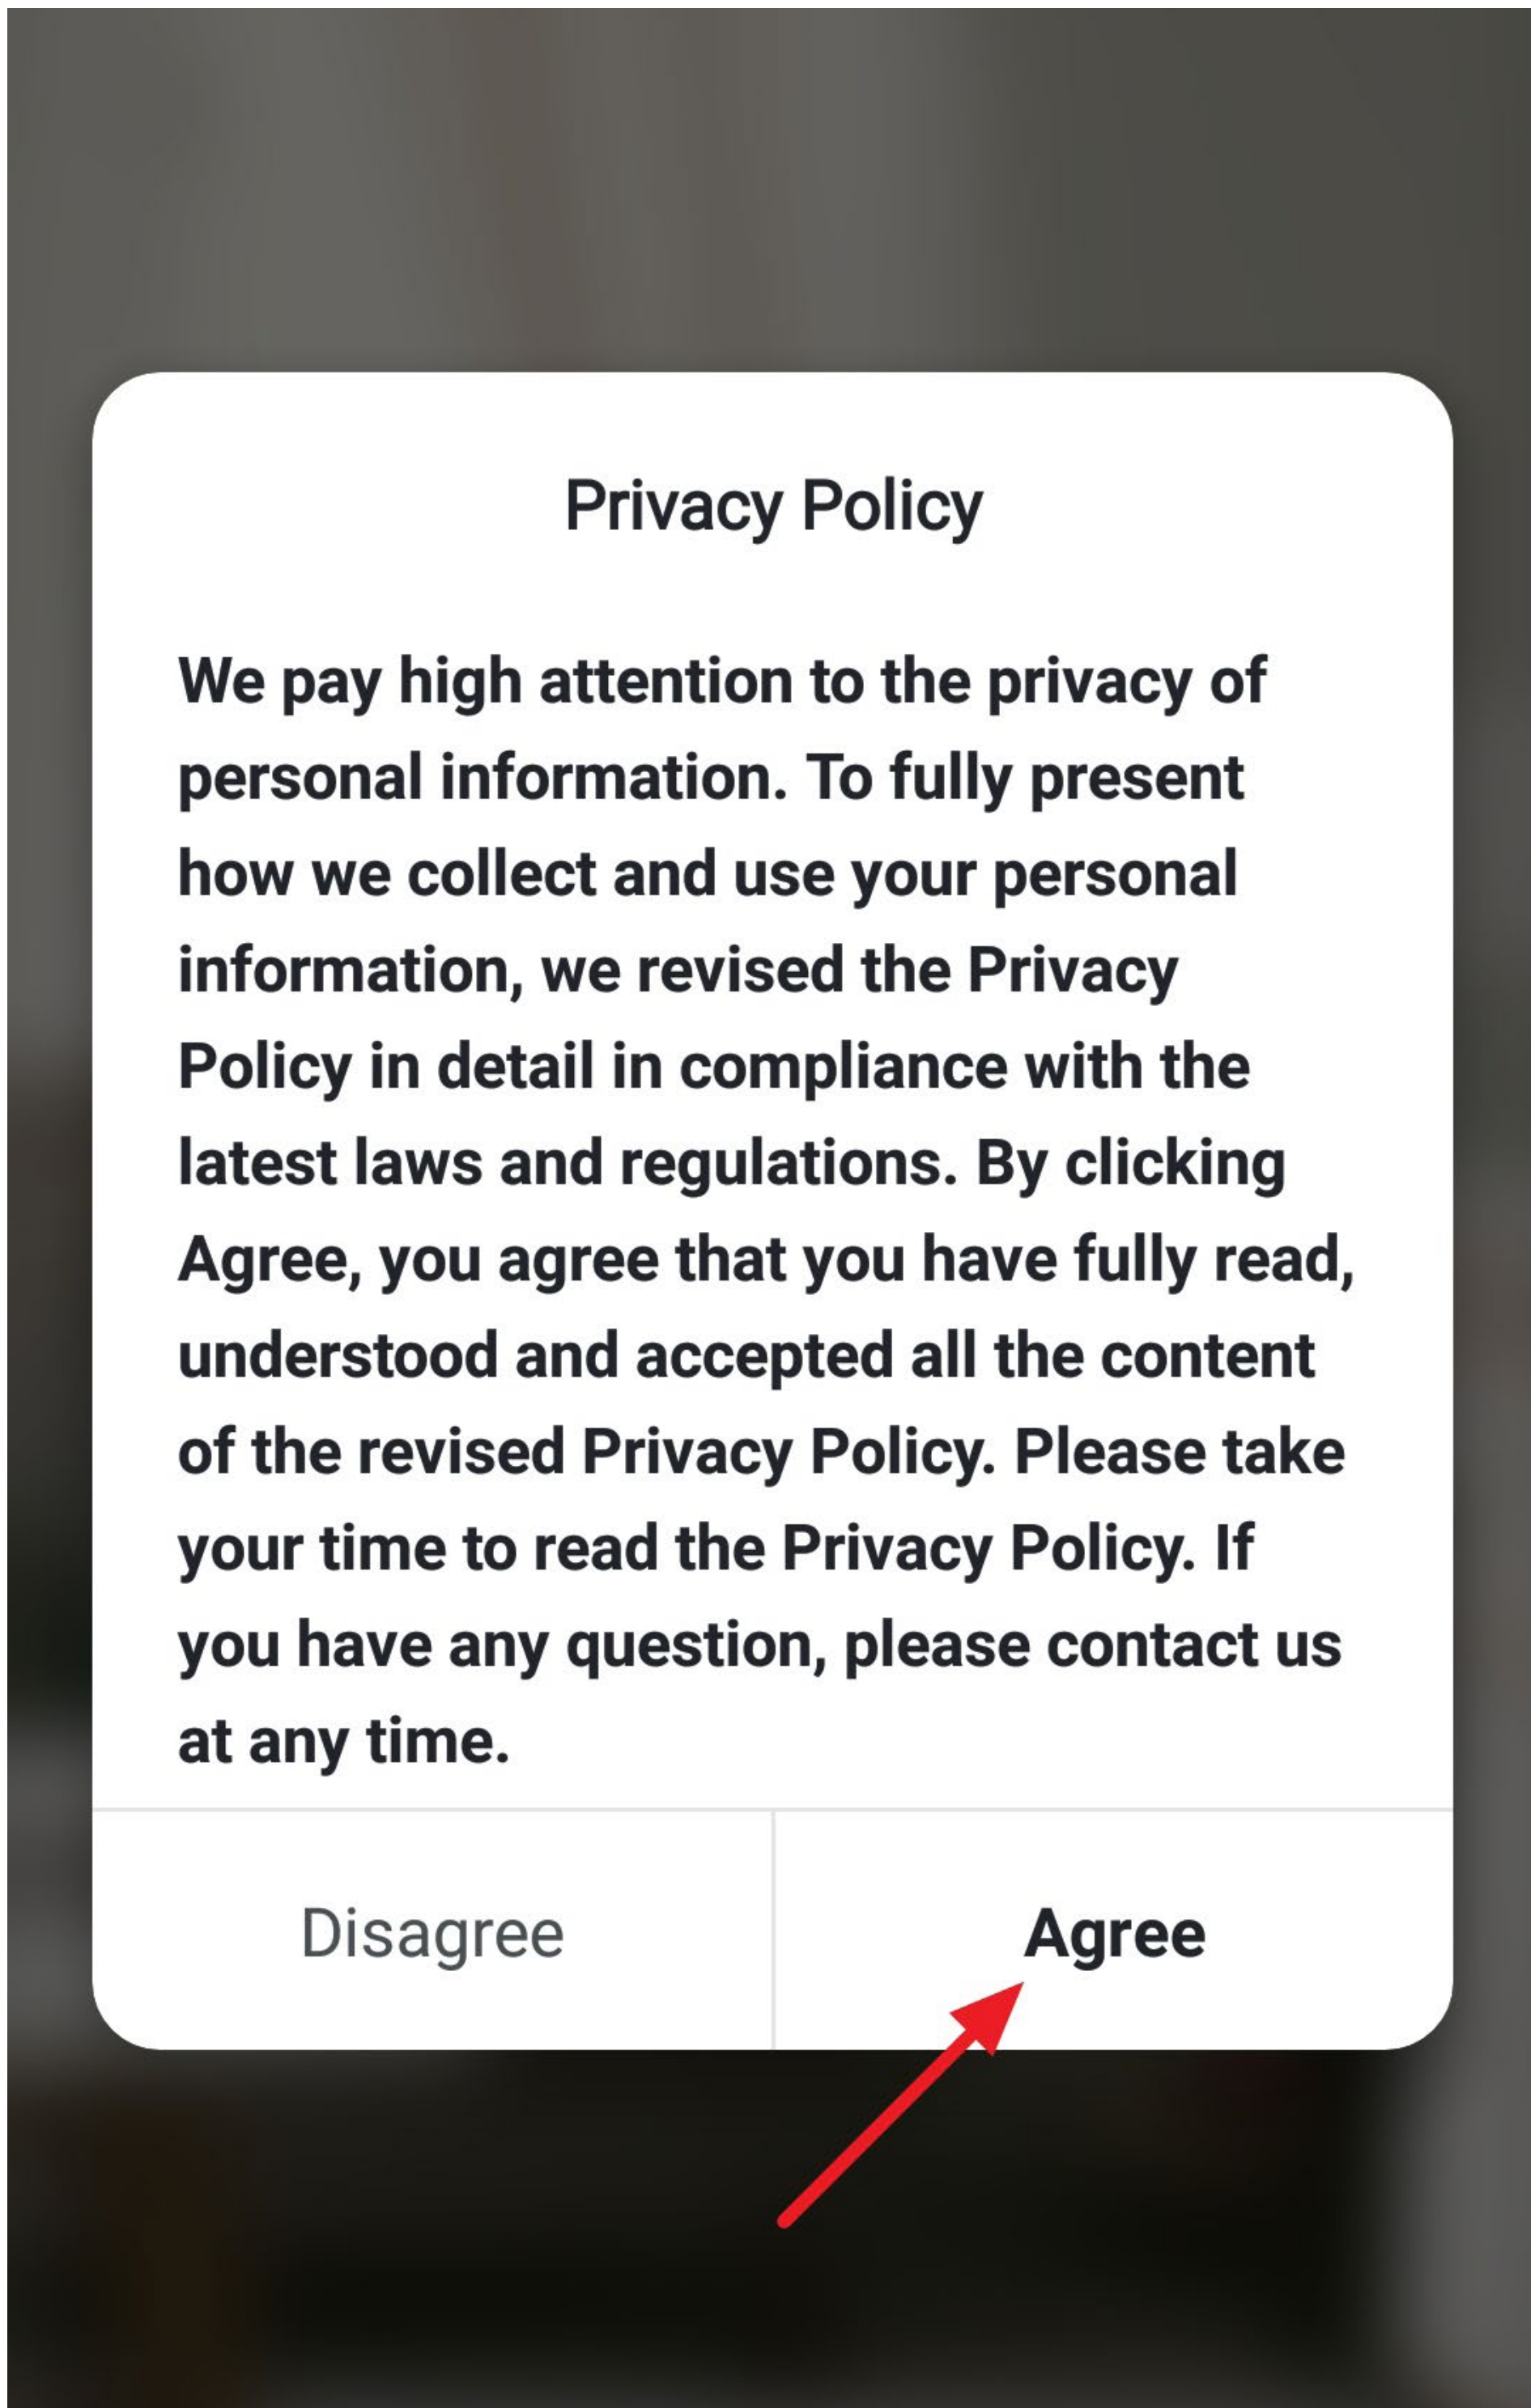

Create an account

- To create an account, you can use either an e-mail address or a mobile number.
- If you want to create an account with a mobile number, tap the “**Phone**” button at the top right.

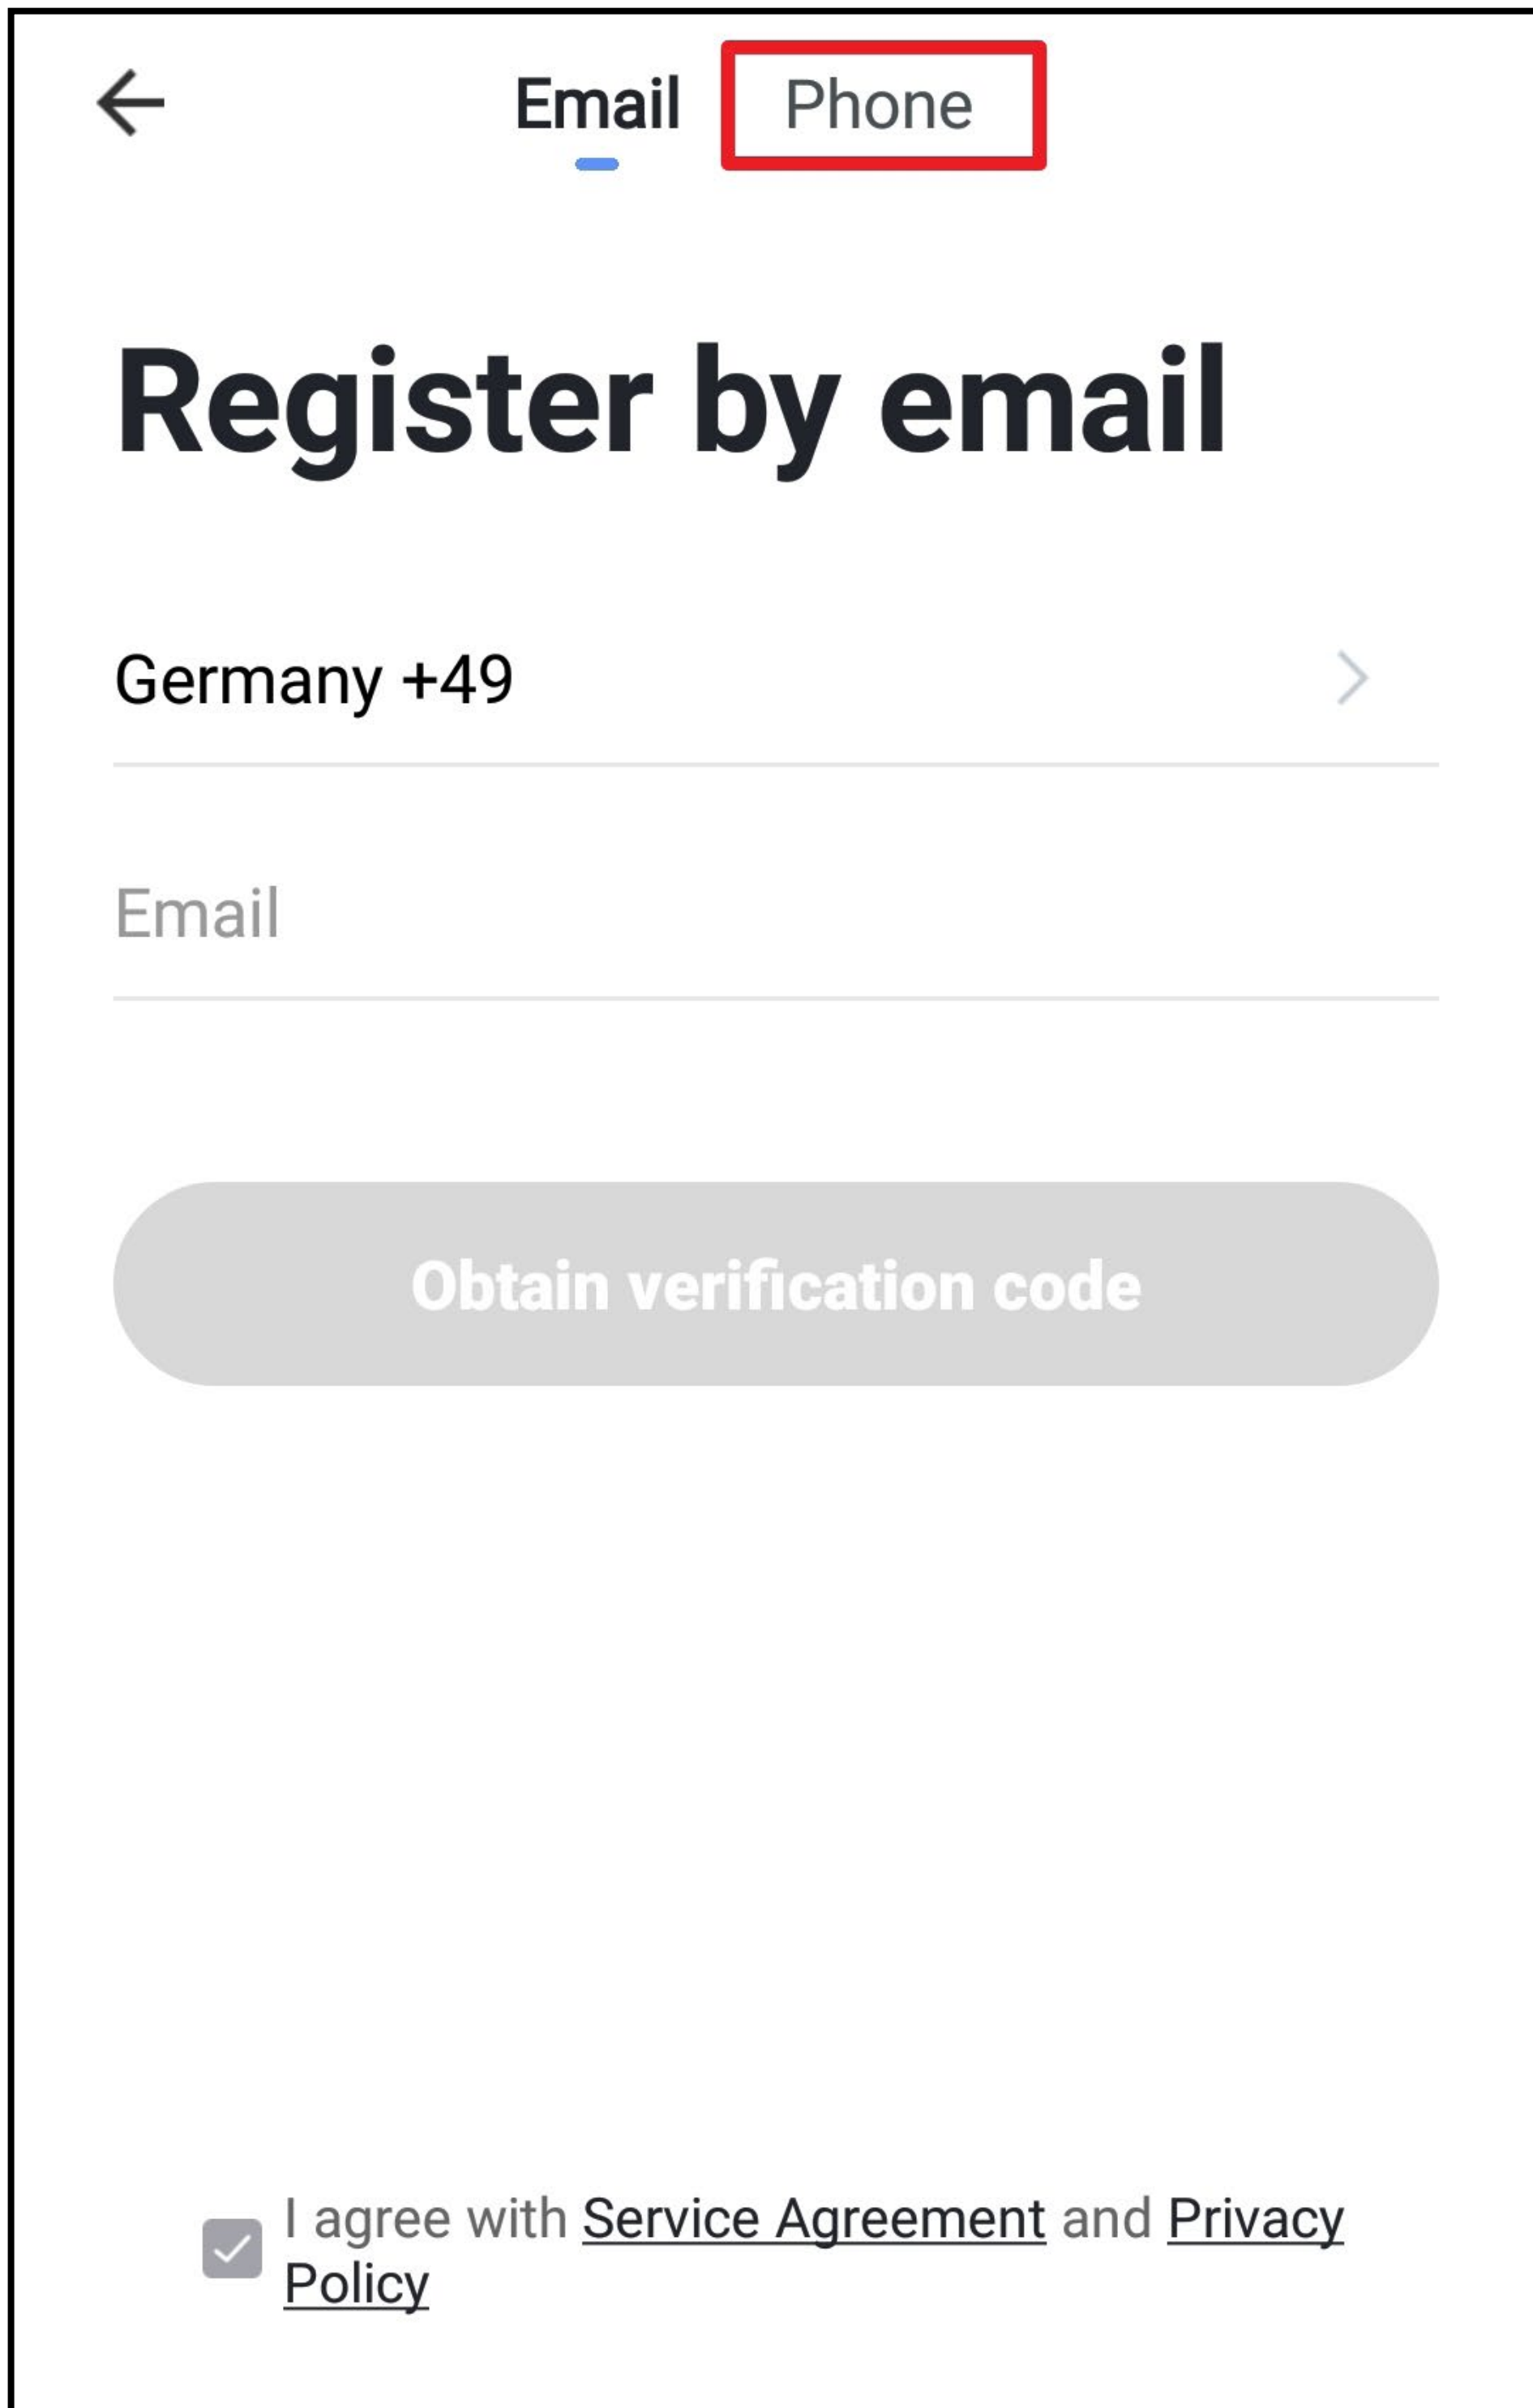

The screenshot shows a mobile application interface for account registration. At the top, there is a navigation bar with a back arrow on the left and two tabs: 'Email' and 'Phone'. The 'Phone' tab is selected and highlighted with a red rectangular border. Below the navigation bar, the main heading reads 'Register by email'. Underneath, there is a dropdown menu for country codes, currently showing 'Germany +49' with a right-pointing chevron. Below the country selection is a text input field labeled 'Email'. A large, rounded rectangular button with the text 'Obtain verification code' is positioned below the input fields. At the bottom of the screen, there is a checkbox that is checked, followed by the text 'I agree with [Service Agreement](#) and [Privacy Policy](#)'.

- Firstly, tap the right arrow (square in the figure) and select your country. The country code is then accepted automatically.
- Then enter your mobile number in the corresponding field (without country code and without 0 at the beginning).
- Tap the button to confirm the entry and request the verification code.

The checkbox at the bottom must be checked. You can see the corresponding explanations by tapping.

- Proceed with entering the verification code.

← Email Phone

Register by Phone

Germany +49 ▶

Mobile ←

Obtain verification code

- To create an account using your e-mail address, tap the “**Email**” button at the top left.
- Enter the e-mail address with which you want to register.
- Tap the button to confirm the entry and request the verification code.

The checkbox at the bottom must be checked. You can see the corresponding explanations by tapping.

← **Email** Phone

Register by email

Germany +49 >

sygonix@[REDACTED].com ← ×

Obtain verification code

I agree with [Service Agreement](#) and [Privacy Policy](#)

- Once you have requested the verification code, you will receive either an SMS or an email with the verification code, depending on which registration method you have chosen.
- Enter the 6-digit verification code in the field.

As soon as the timer at the bottom right has run down, a new code will be sent.

If you do not receive the code, please check your input, and if you register via email, also the spam folder of your e-mail inbox.

<

 
Enter verification code

A verification code has been sent to your email:
sygonix@outlook.com, Resend(55s)

- Enter a secure password consisting of at least 8 characters.


We recommend a password consisting of uppercase and lowercase letters as well as numbers and special characters.

- Tap the blue button below to complete the registration.

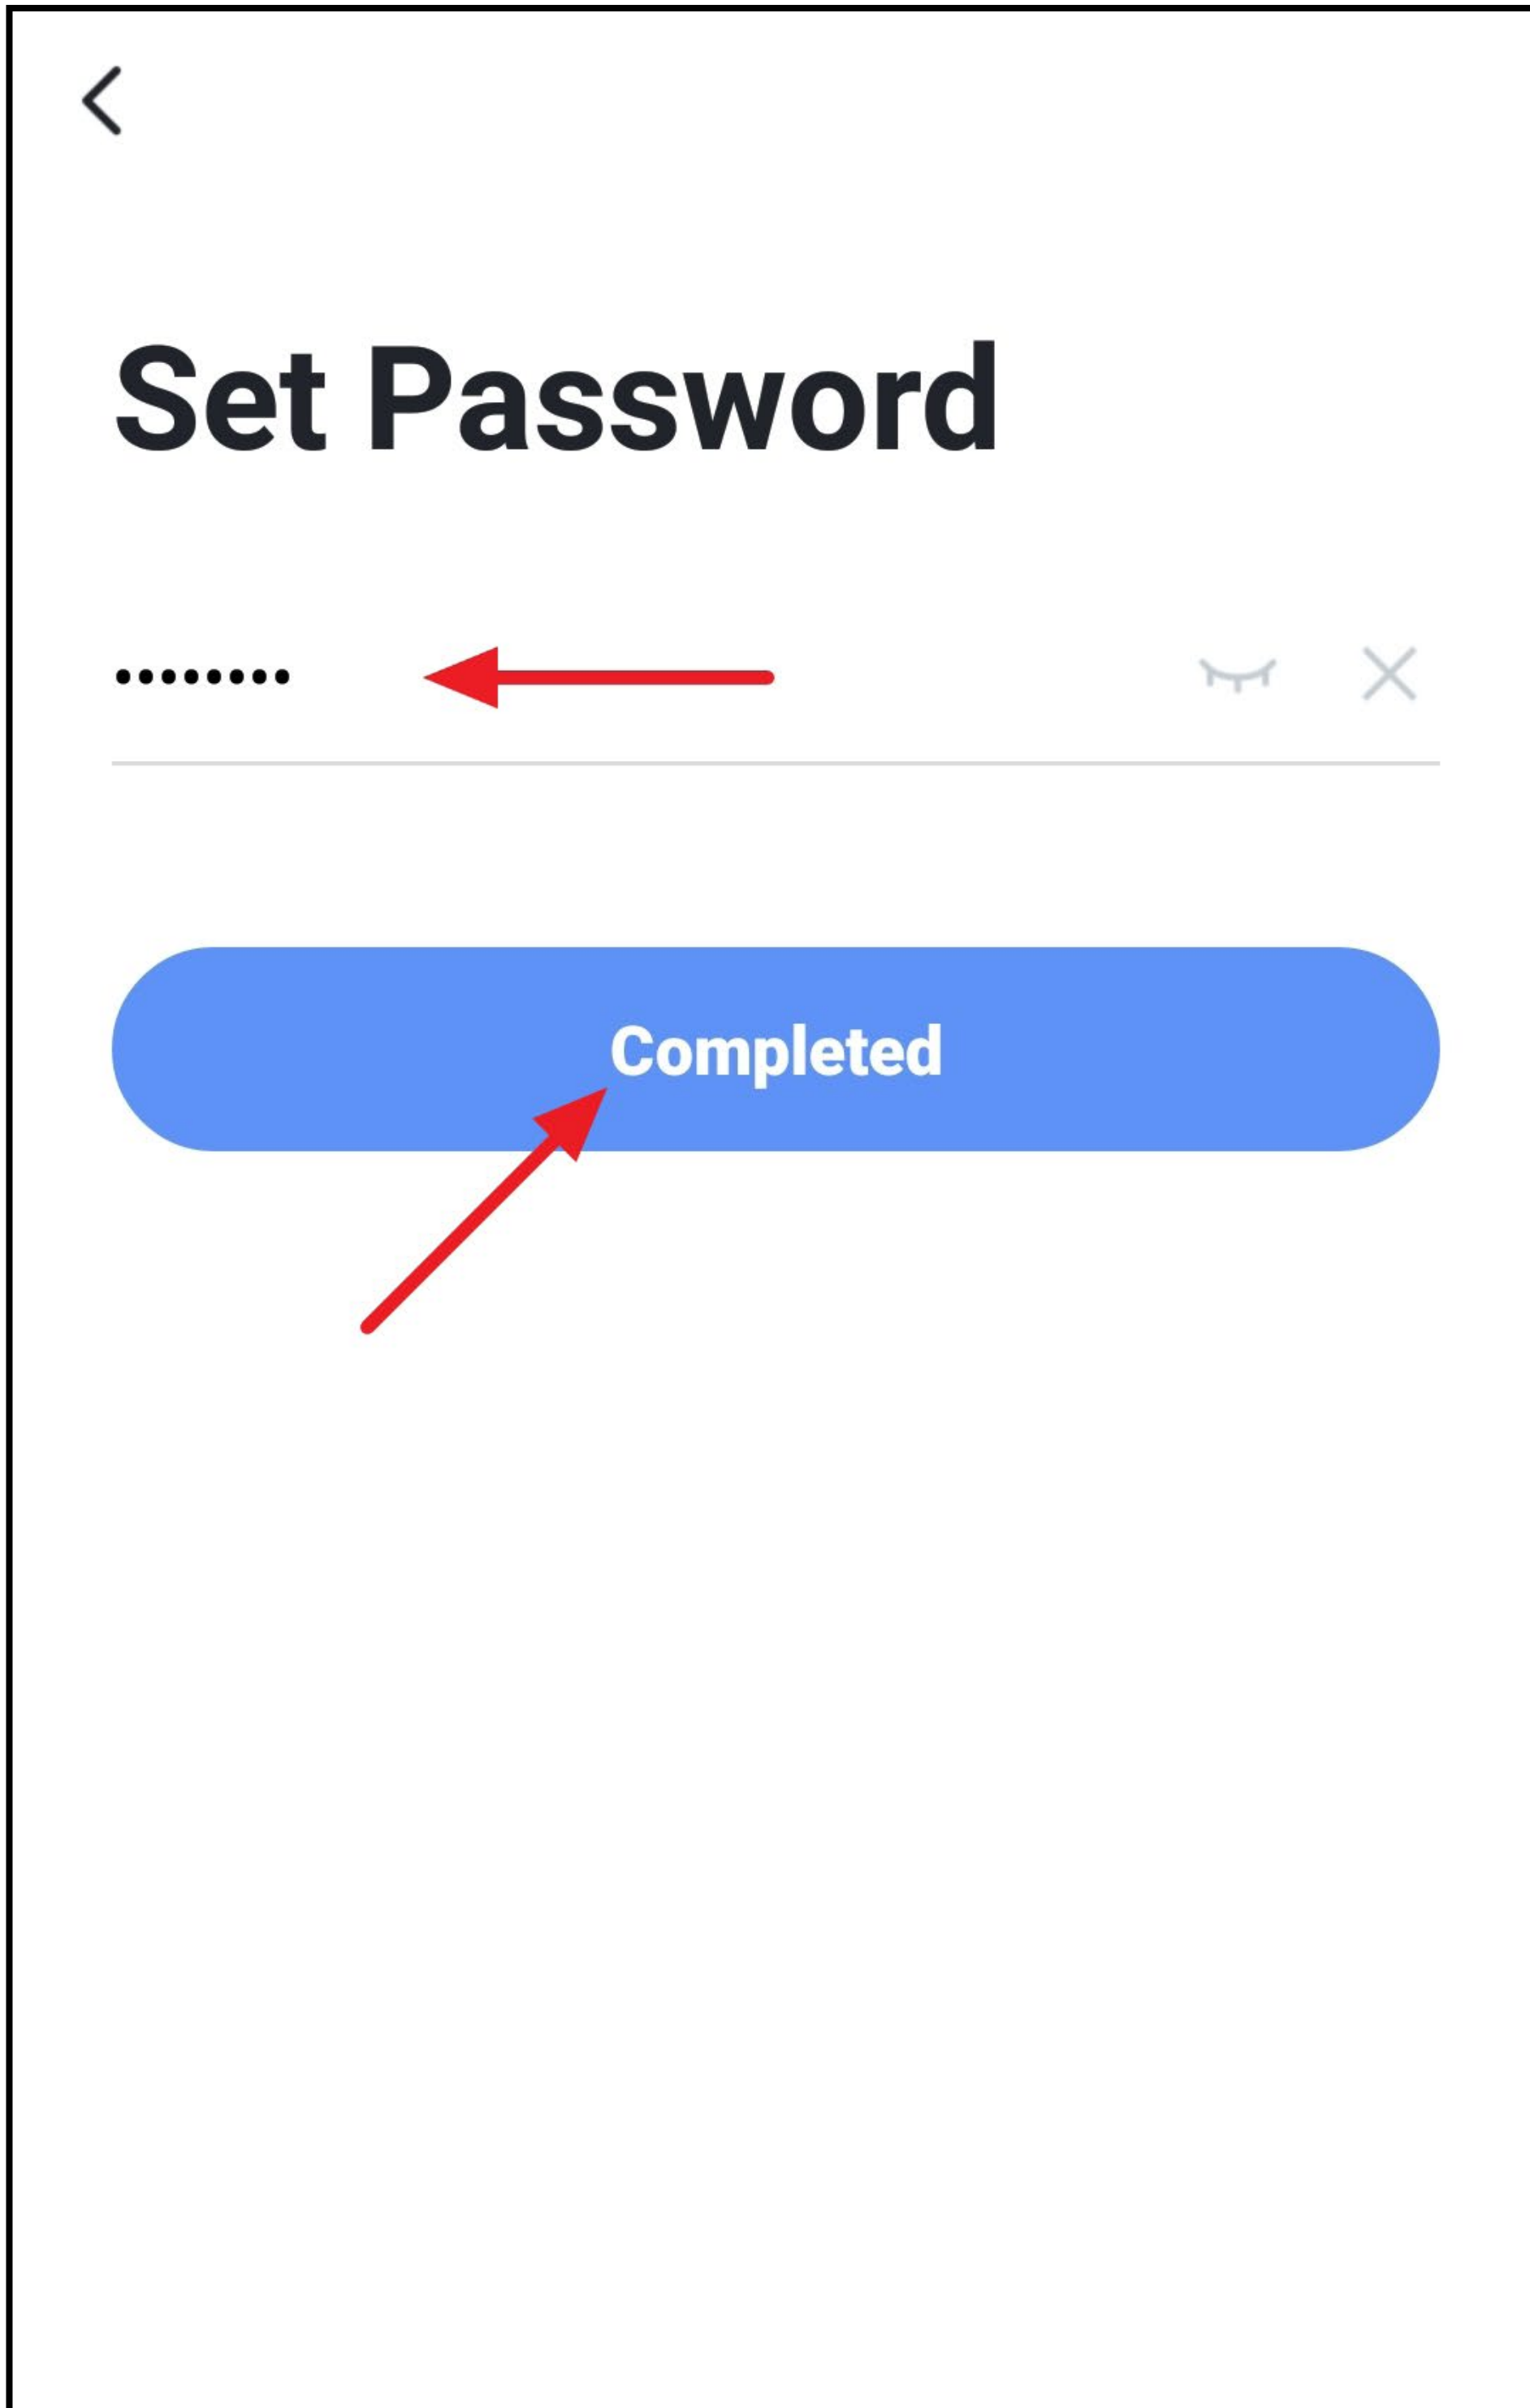

Logging in

 - If you are not automatically logged in after registering, or if you already have an account, log in to the app now.
- To do this, tap the button below (see arrow in the figure).

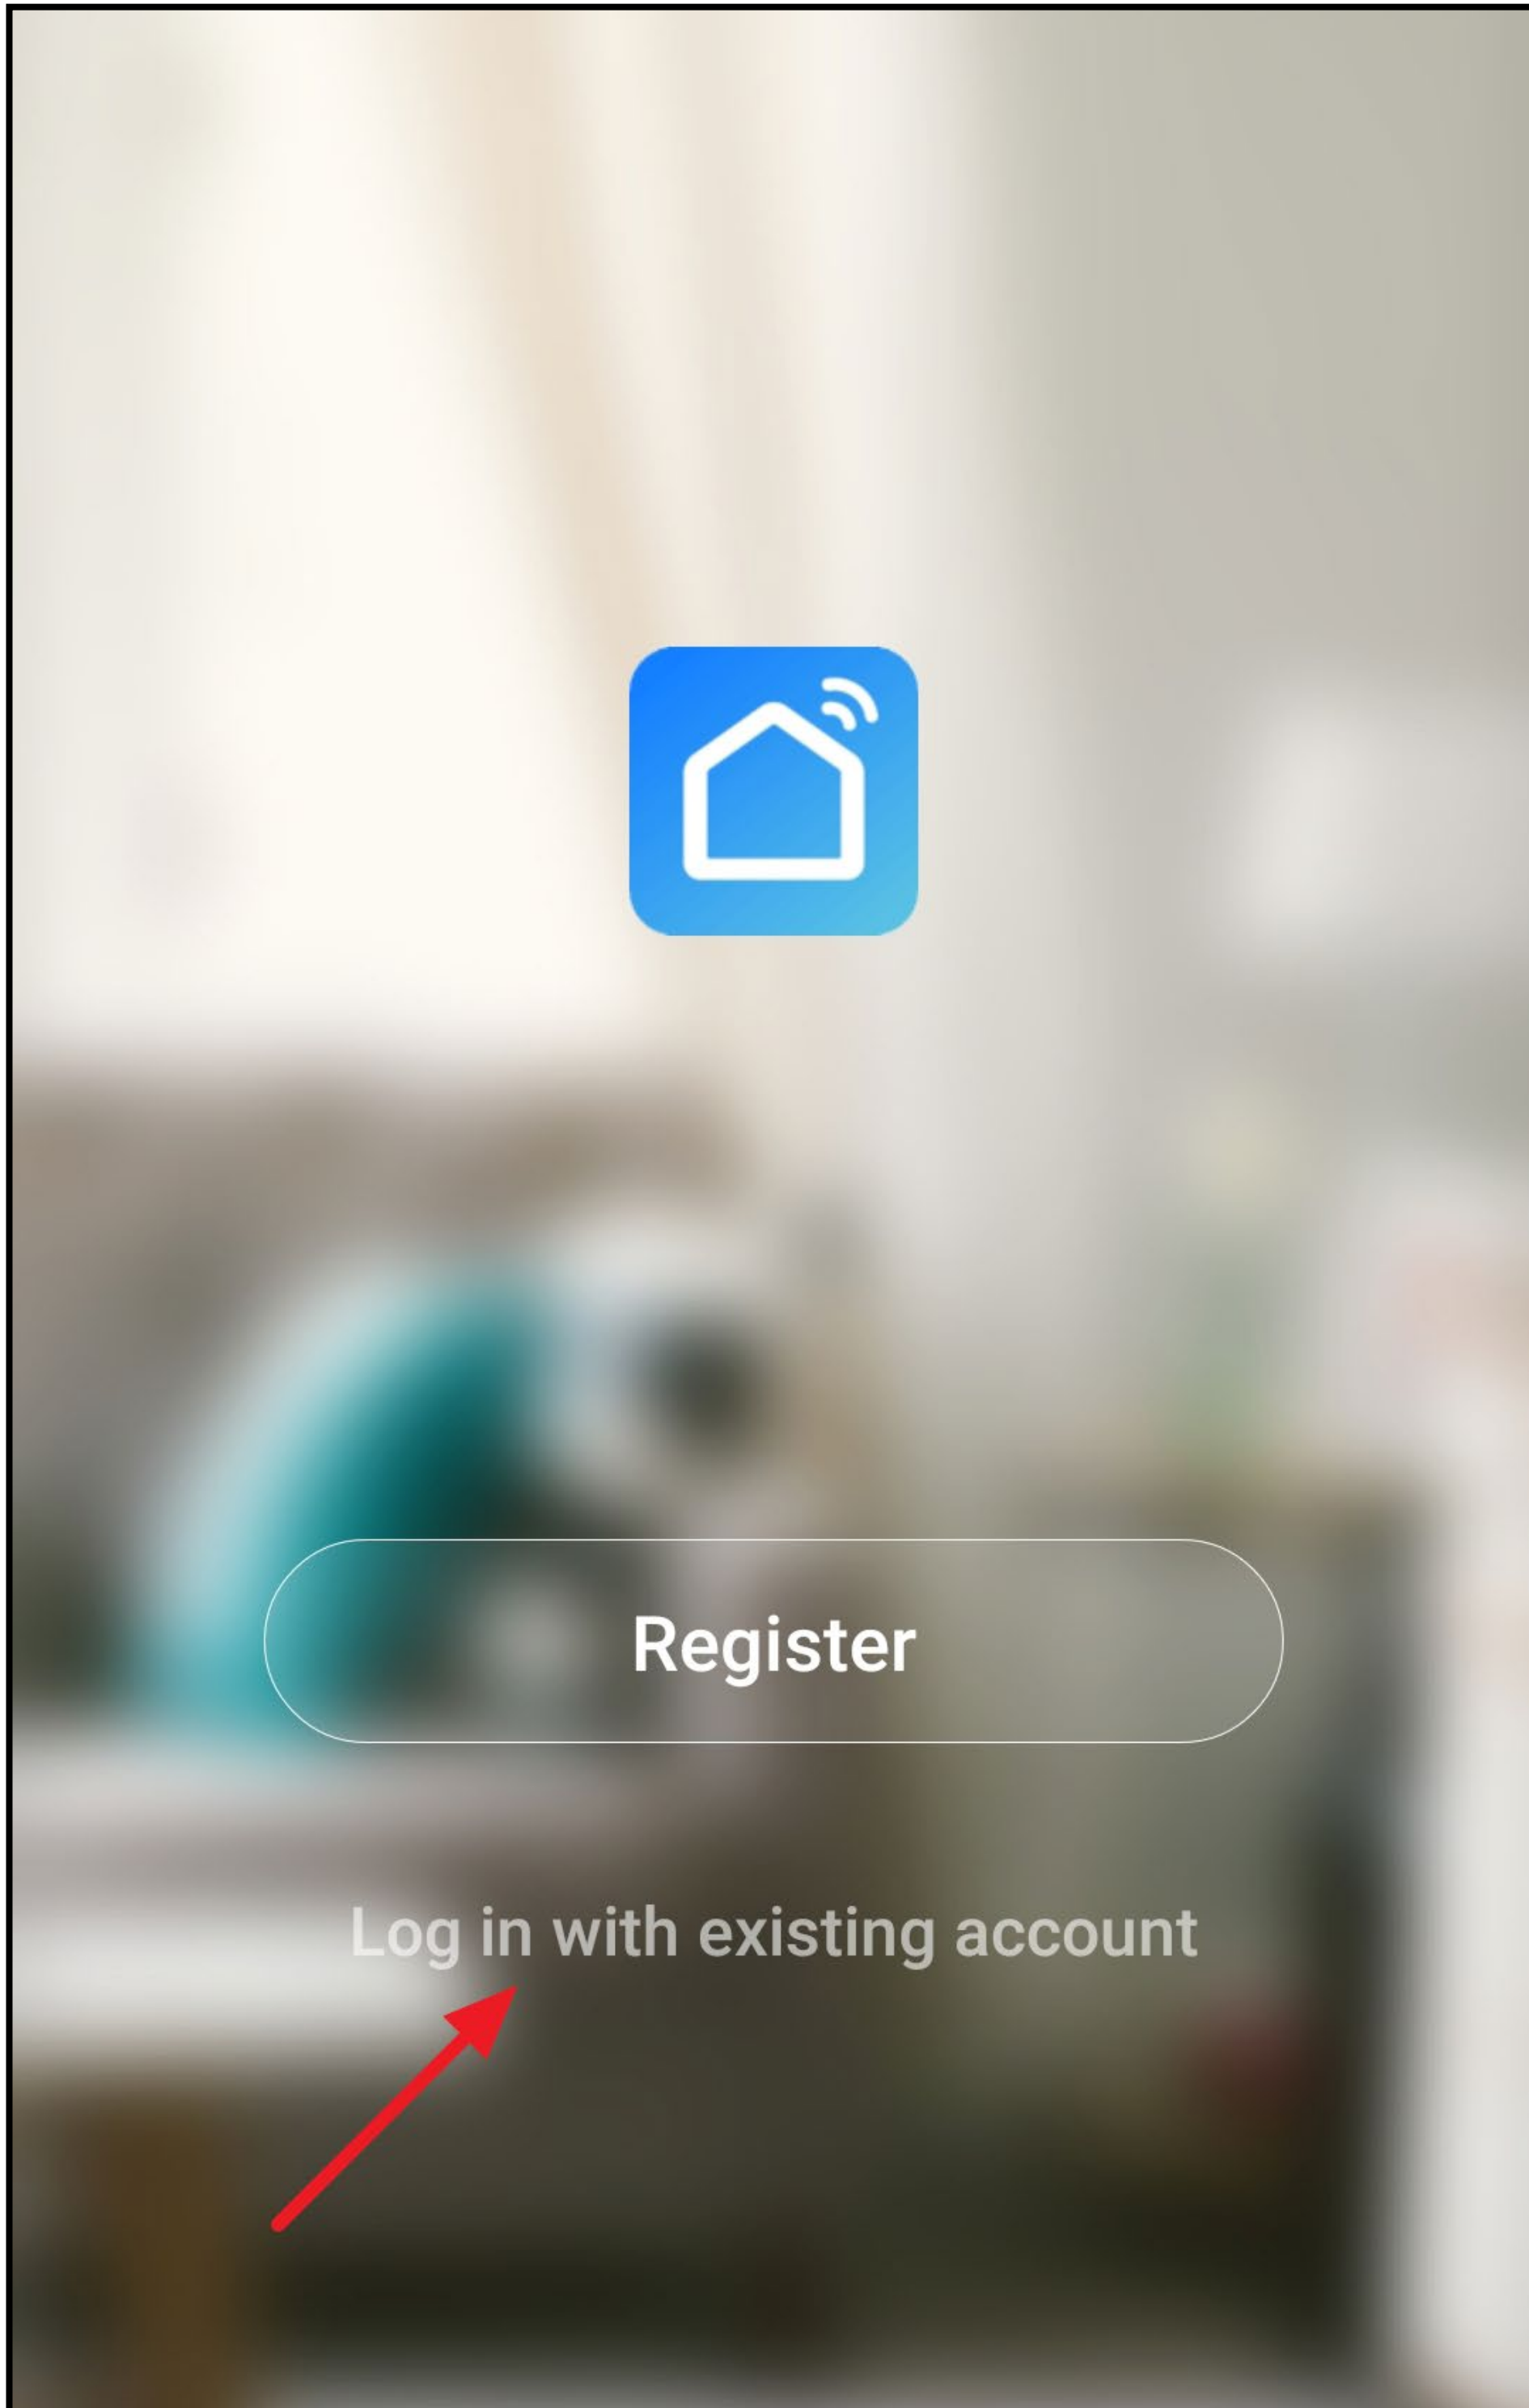


- If you have created your account using your mobile number, first tap the right arrow (square in the figure) and select your country. The country code is then accepted automatically.
- Enter either your mobile number or e-mail address in the corresponding field.
- Now enter your password and tap **“Log in”**.

If you have forgotten your password, tap the **“Forgot password”** on the right-hand side under the login button. Then follow the instructions.

The screenshot shows a mobile app login screen. At the top left is a back arrow. Below it is the title "Log in". The first input field is labeled "Germany +49" and has a right arrow icon in a red square to its right. Below this is a horizontal line. The second input field is labeled "Mobile number/e-mail address" and has a red arrow pointing to it from the right. Below this is another horizontal line. The third input field is labeled "Password" and has a red arrow pointing to it from the right. Below this is a third horizontal line. At the bottom is a large grey rounded button labeled "Log in" with a red arrow pointing to it from the left. Below the button are two links: "Verification code login" on the left and "Forgot password" on the right.

Creating a family

 - To create a family, tap the blue button.

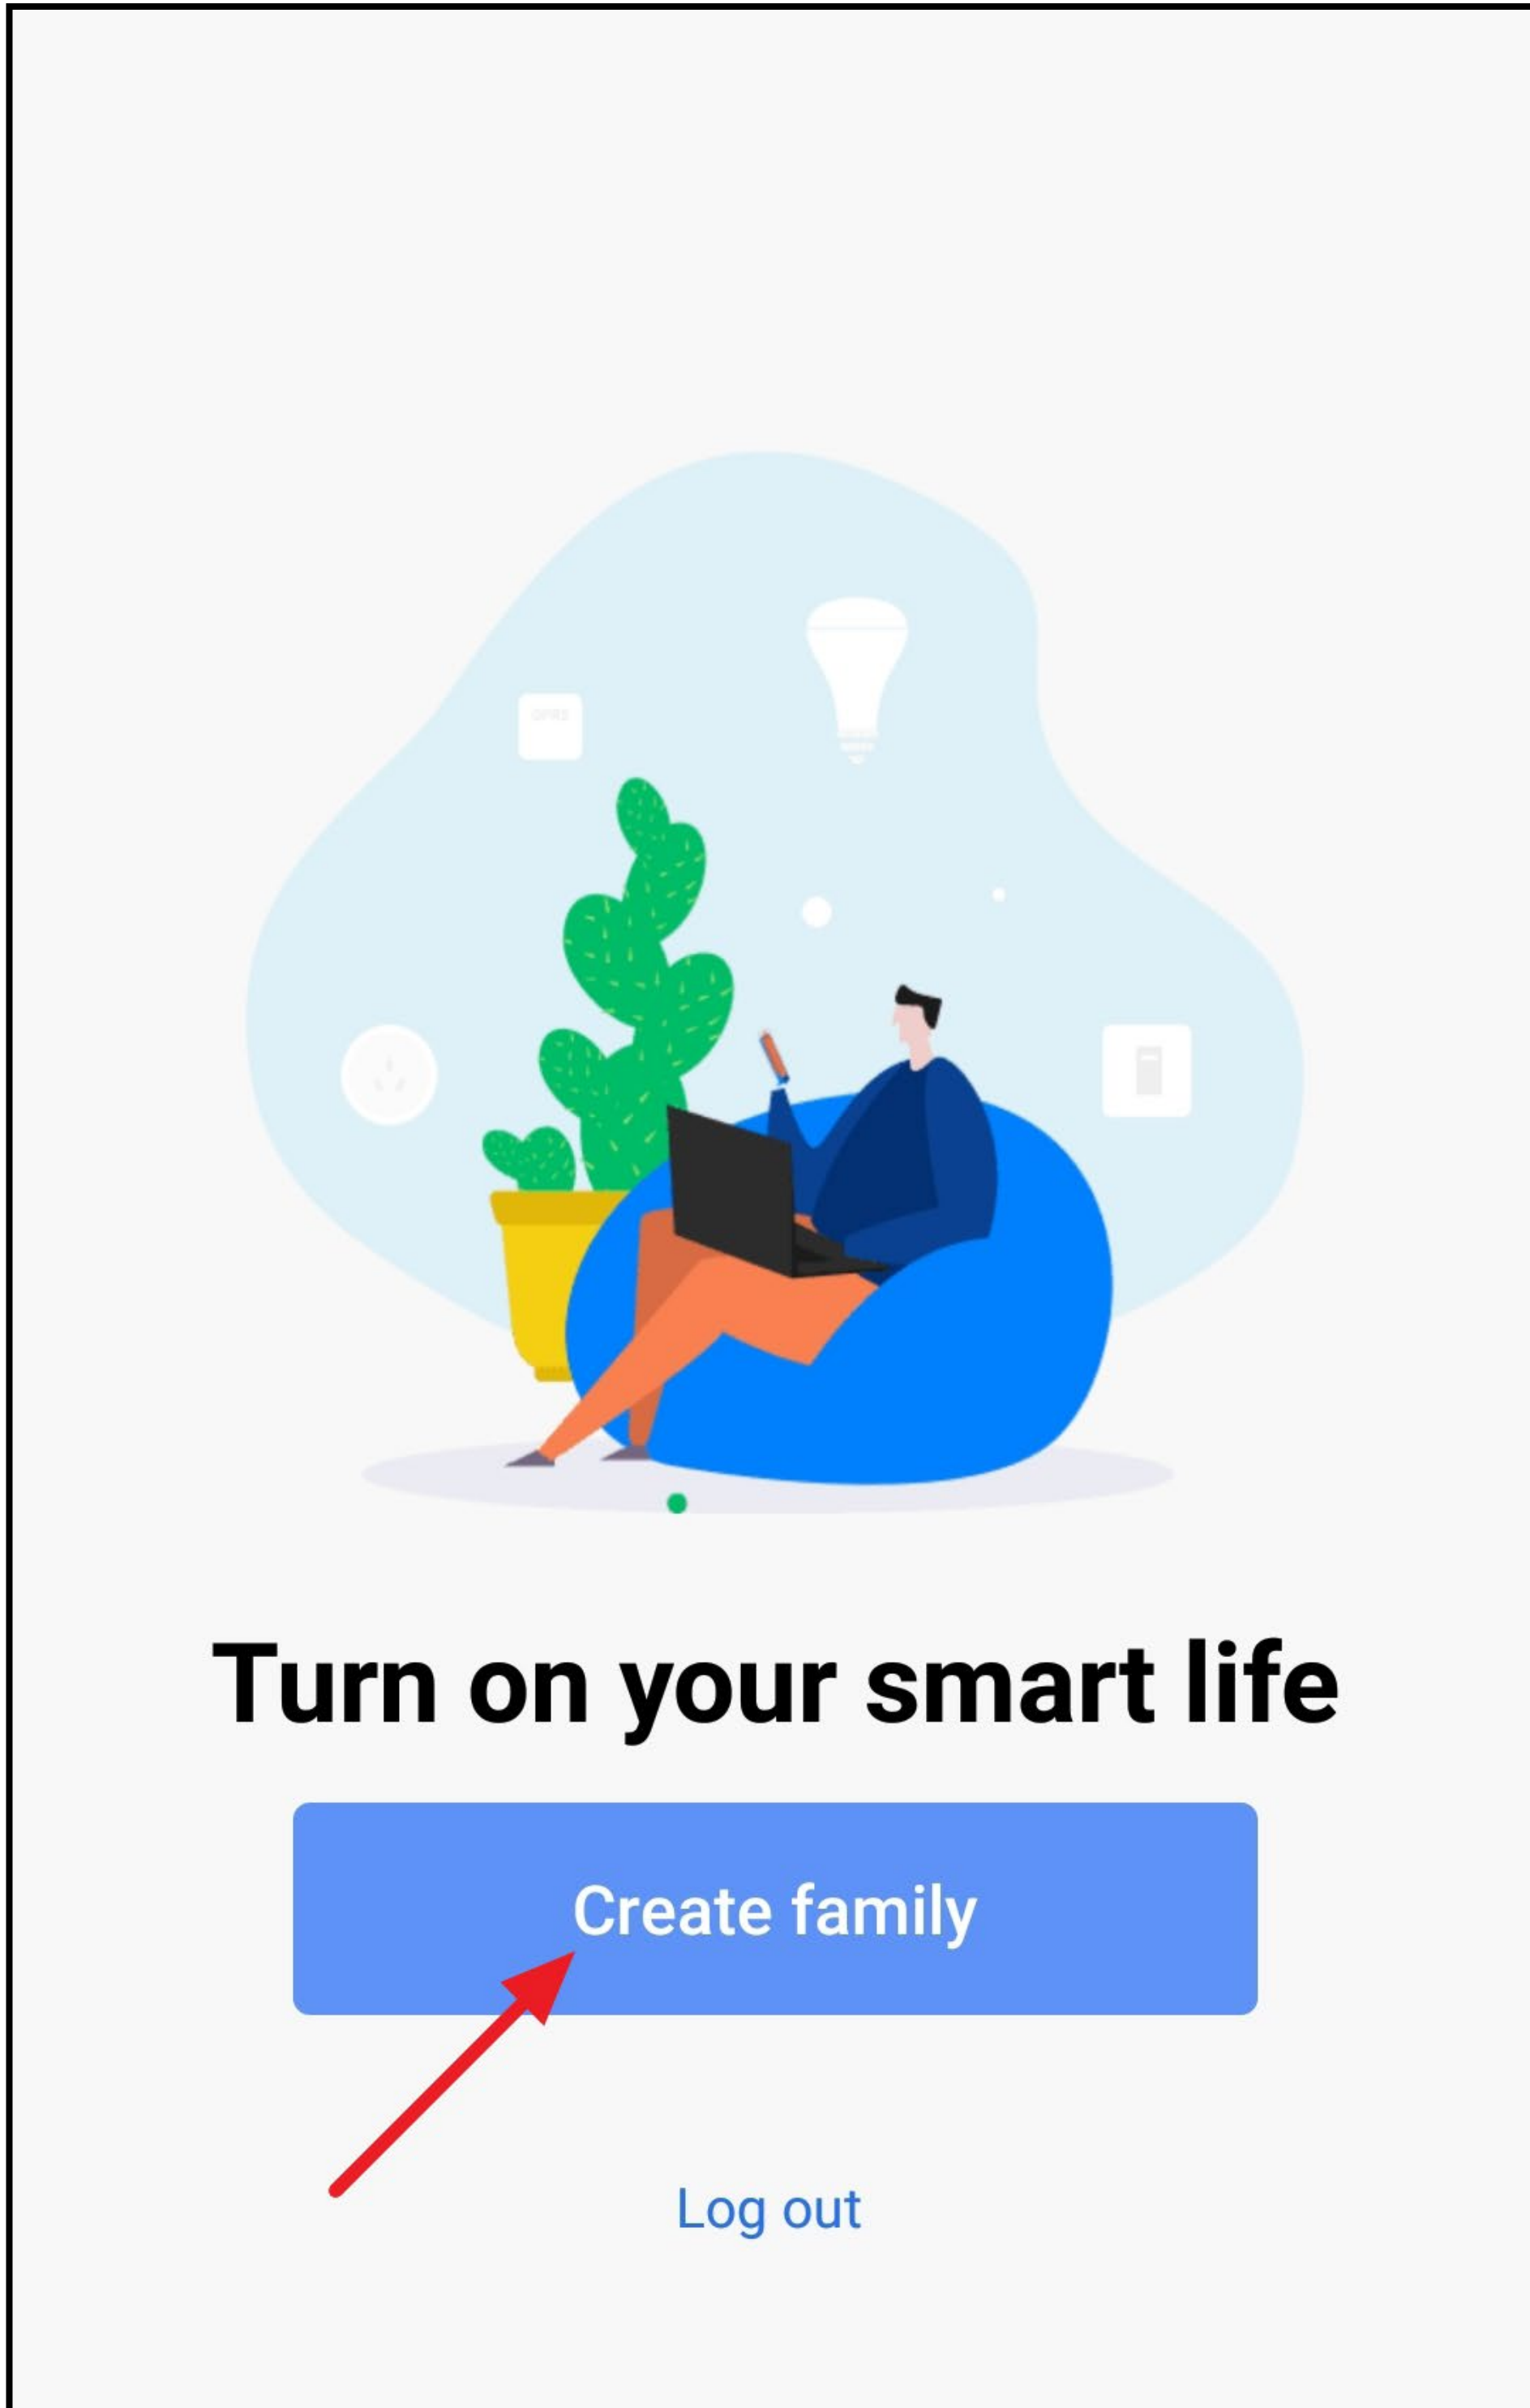


- Enter the desired name in the field at the top.
- To add a location, tap the right arrow (square in the figure).
- Then select one or more rooms, depending on where you have Smarthome devices installed.


The screenshot shows the 'Add family' screen in a smart home app. At the top, there is a back arrow, the title 'Add family', and a 'Done' button. Below the title bar, there are two input fields: 'Family Name' with the value 'Sygonix' and 'Family Location' with the value 'Set location'. A red arrow points to the 'Family Name' field, and a red box highlights the right arrow button next to the 'Family Location' field. Below the input fields, there is a section titled 'Smart devices in rooms:' followed by a list of rooms: 'Living Room', 'Master Bedroom', 'Second Bedroom', 'Dining Room', 'Kitchen', and 'Study Room'. Each room has a corresponding radio button. The 'Living Room' radio button is checked, and a red box highlights the entire column of radio buttons.

- If you swipe the display all the way down, you can also add rooms yourself (lower arrow in the figure).
- Finally, tap the button at the top right to save the settings and create the family.

 You can also edit the family later in the app and, for example, add or remove rooms.

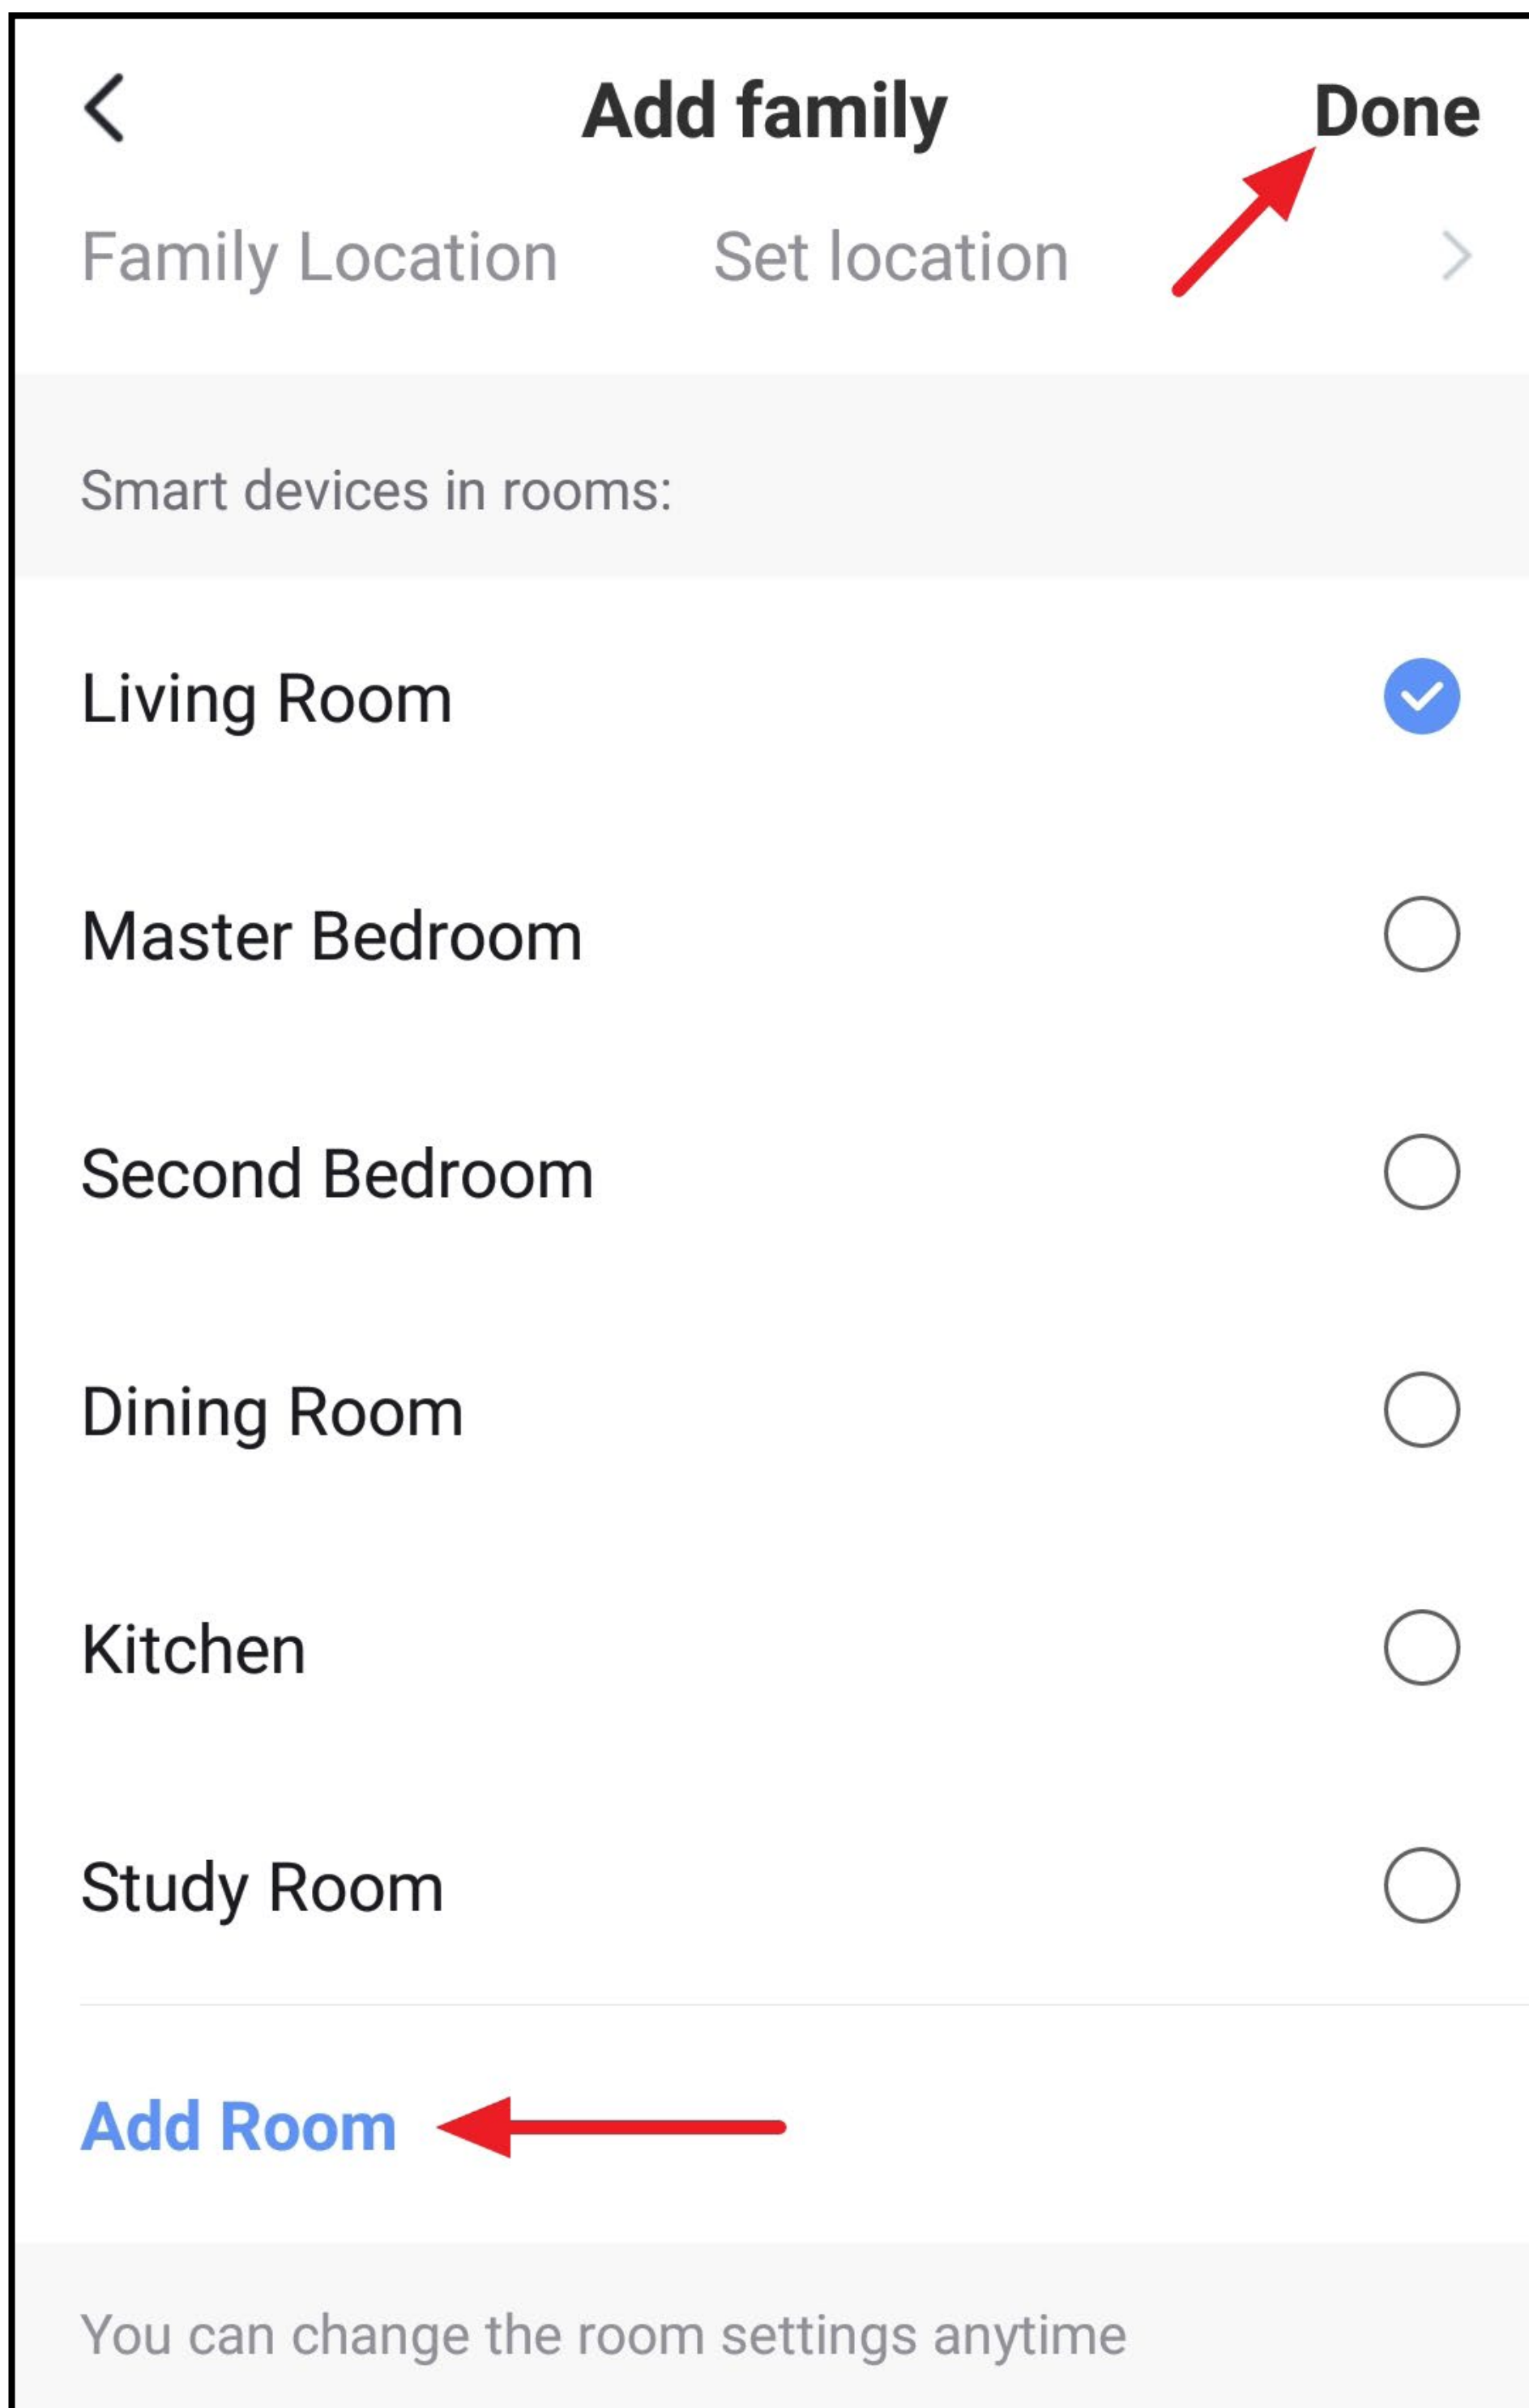

 
- Tap the right button (arrow in the figure).

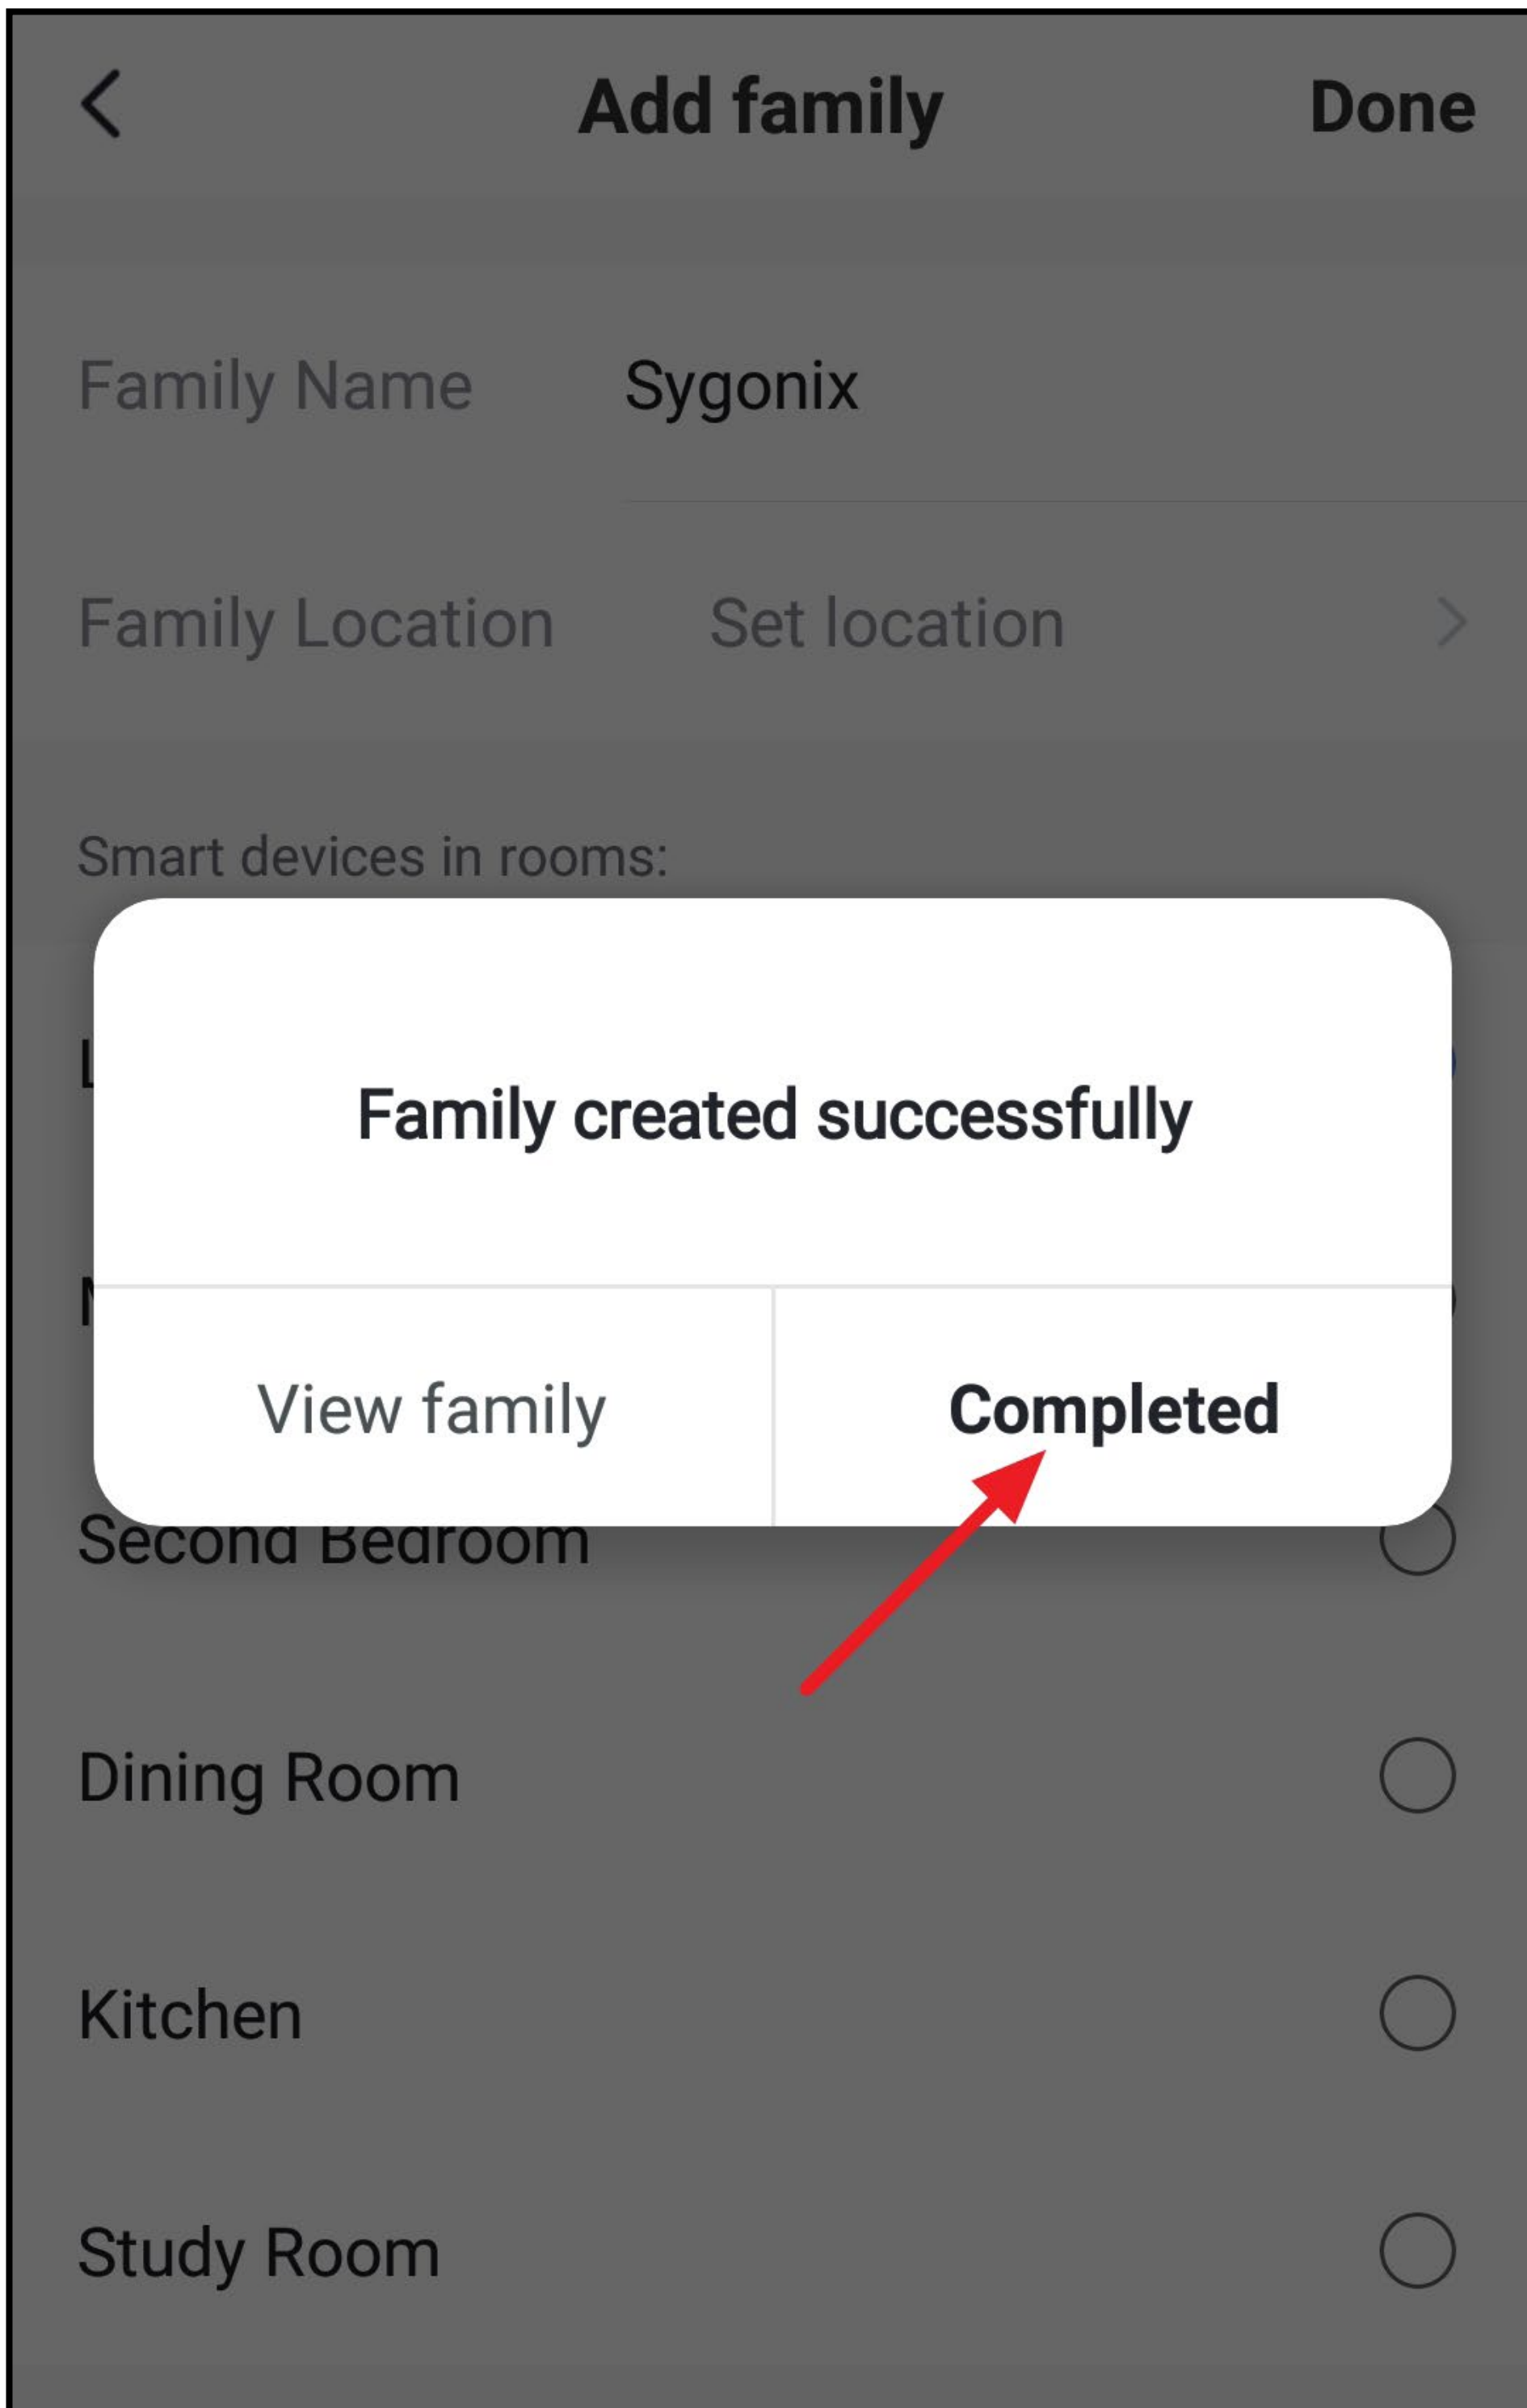


- You are now in the family settings.

Here you can change the family and, for example, add more members (with their own accounts).

 - To exit the family settings, tap the top left arrow (square in the figure).

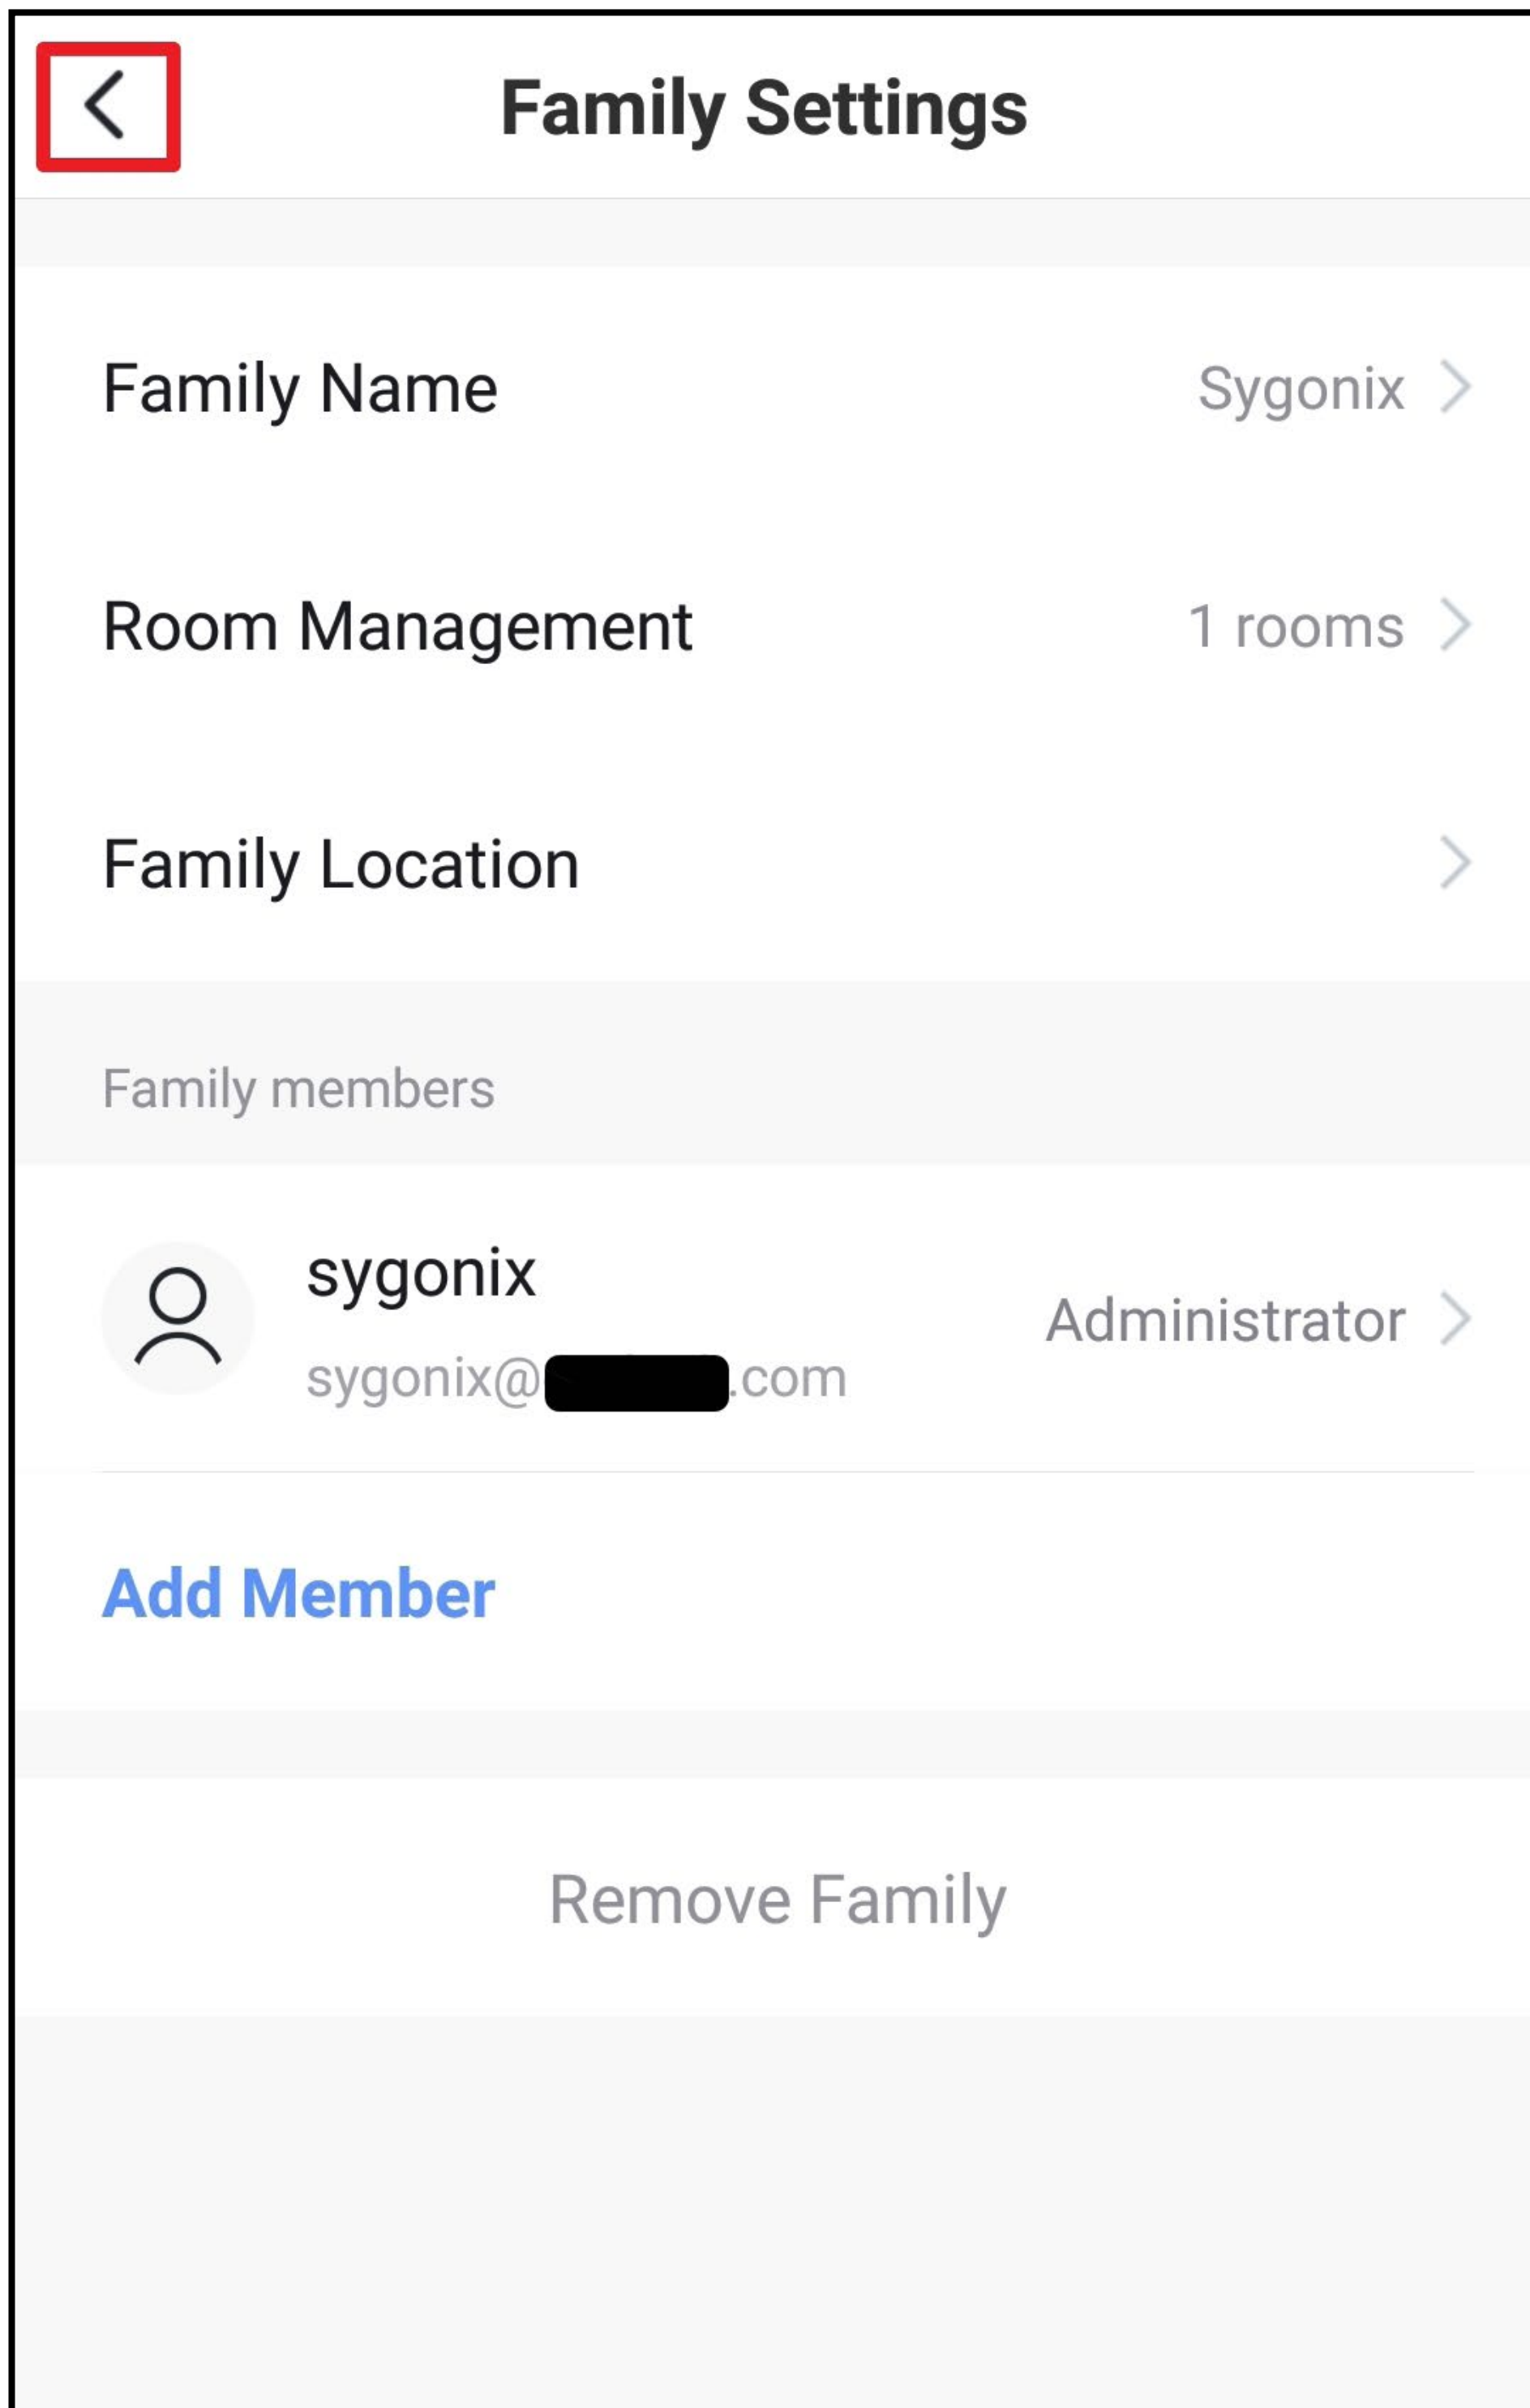

 - After exiting the family settings, you will see the main display of the app.

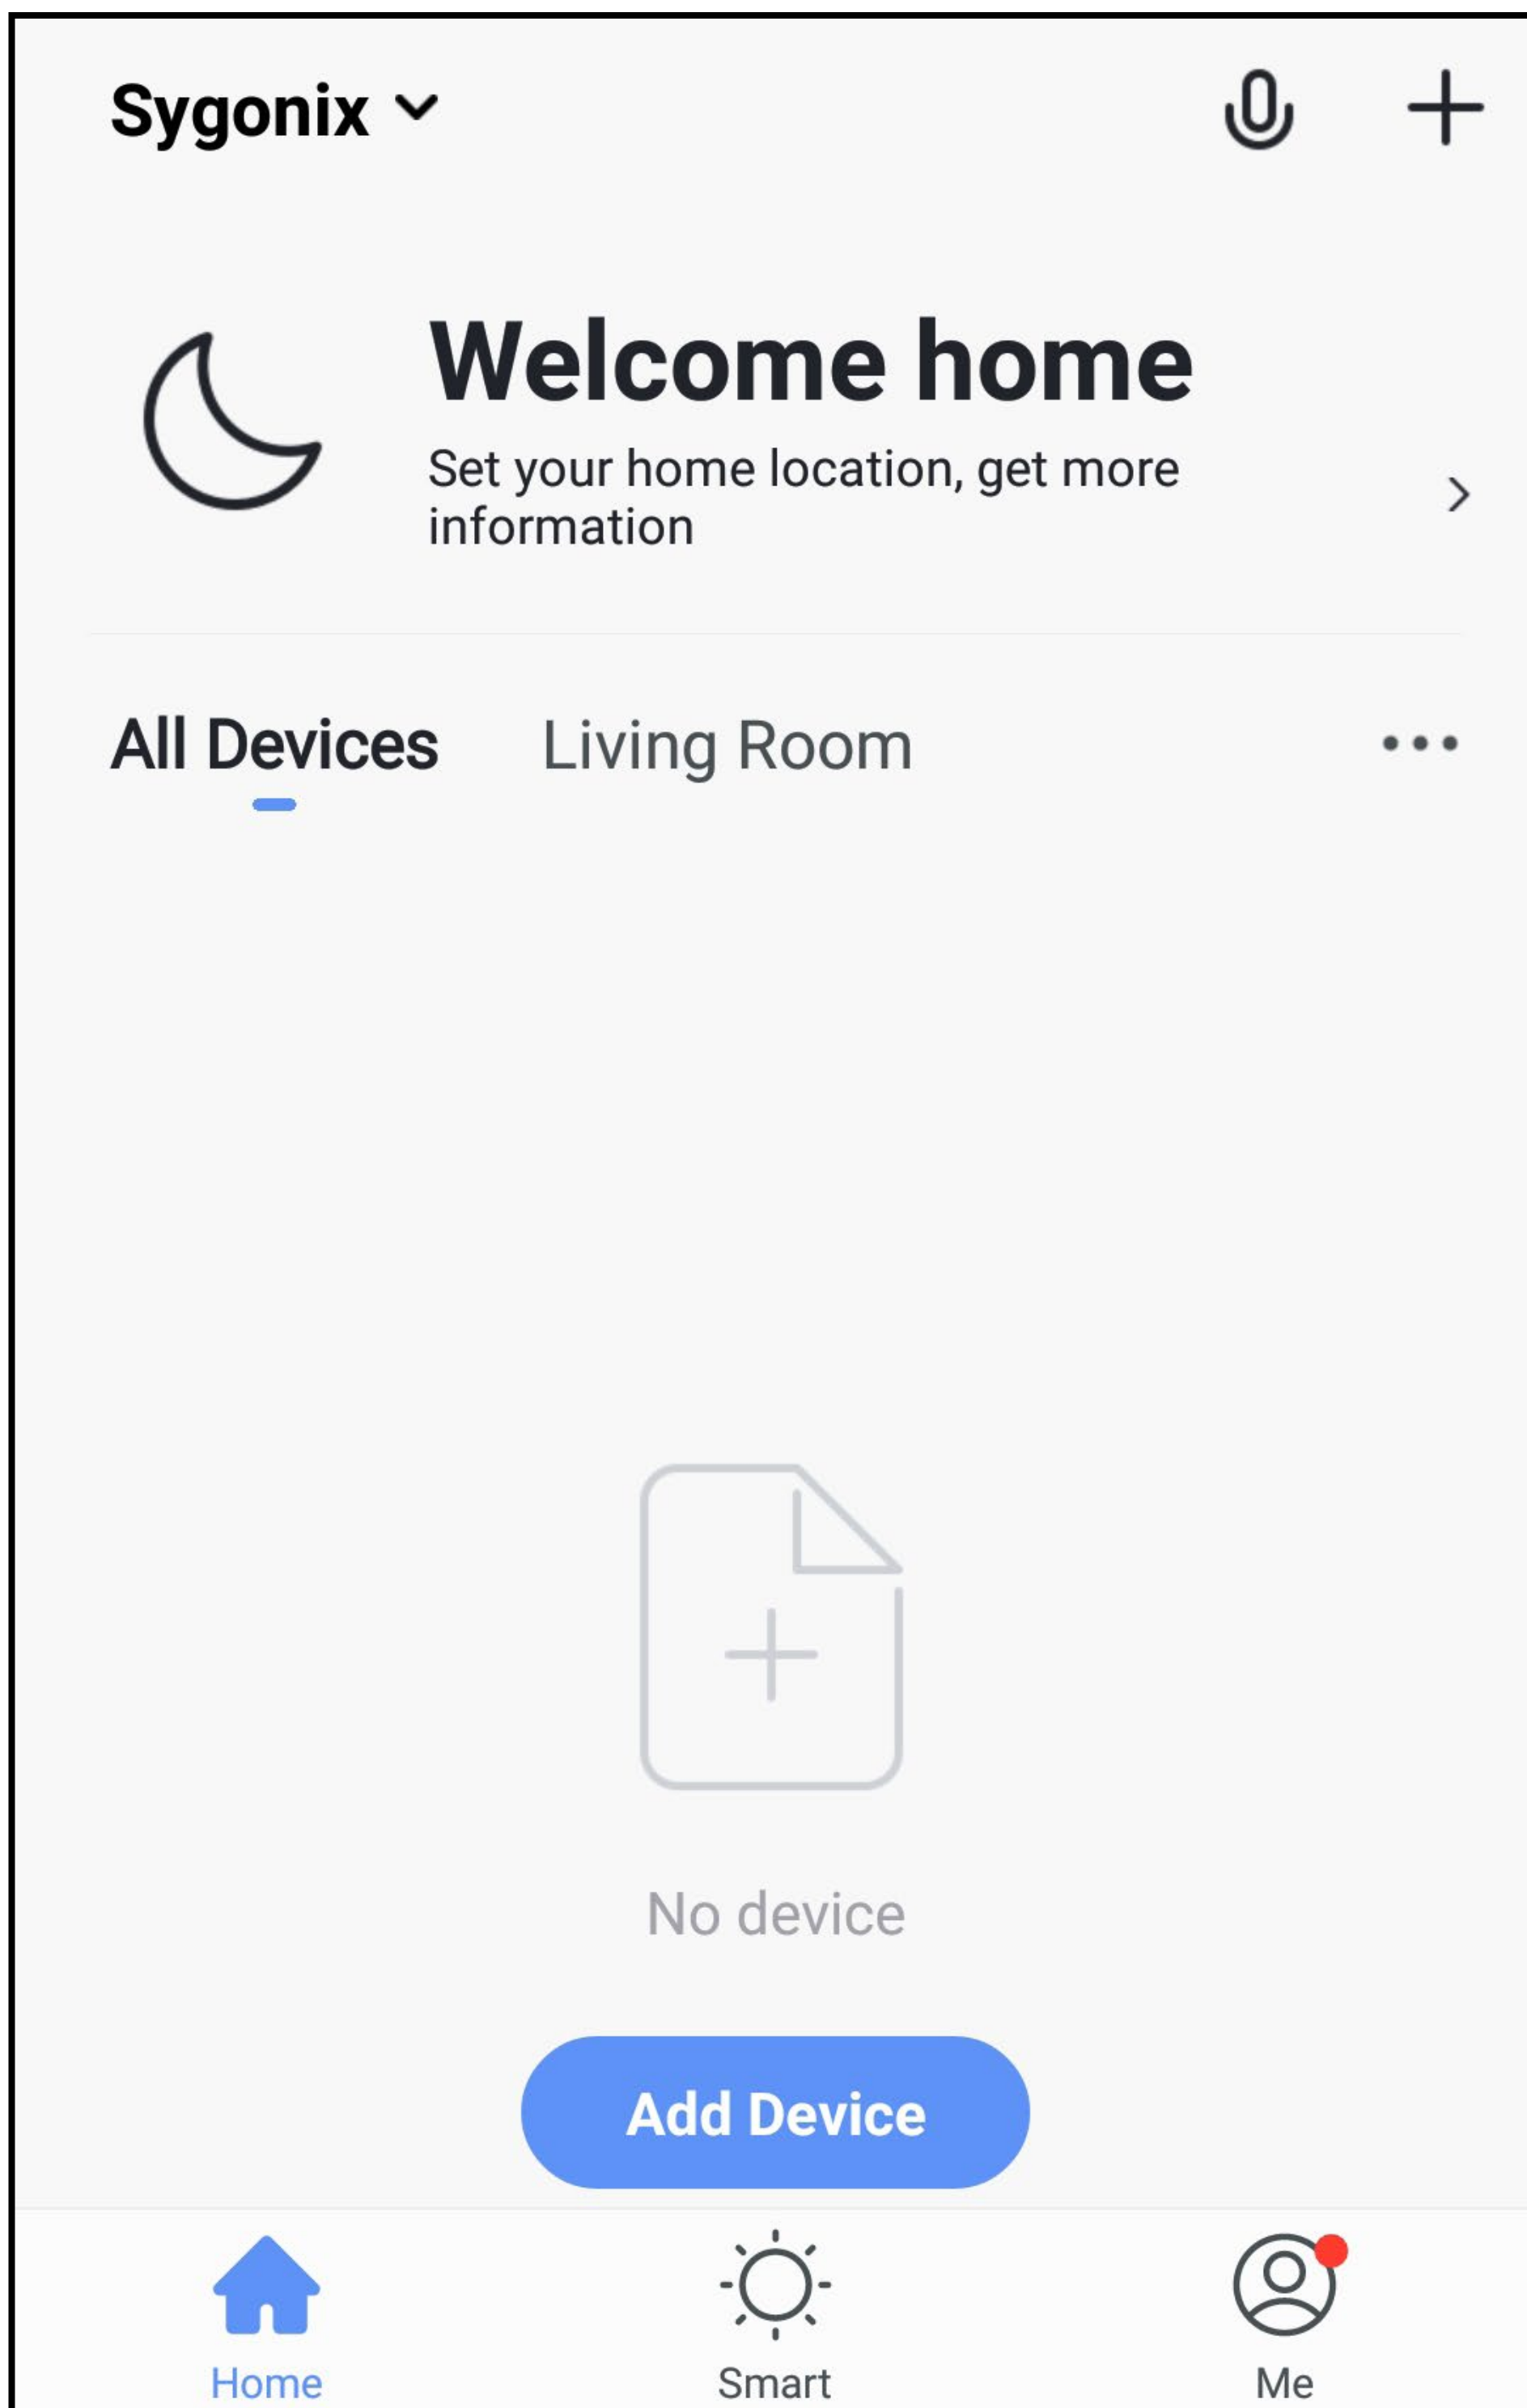

Functions on the home page of the app

Here you can get a brief overview of the control functions on the home page of the app.

The screenshot shows the Sygonix app home page. At the top left, the brand name 'Sygonix' is displayed with a dropdown arrow (A1). To the right, there are icons for a microphone (A14) and a plus sign (A13). Below this is a 'Welcome Home' section with a moon icon (A2), the text 'Welcome Home', and a subtext 'Set your home location for more information' with a right-pointing arrow (A12). A horizontal menu below features 'All Devices' (A3) and 'Living Room' (A11), with a plus sign icon (A11) to the right. A context menu is open over the 'Living Room' item, listing 'Grid view' (A10), 'Device Sequence' (A9), and 'Room Management' (A8). Below the menu is a large plus sign icon (A4) and the text 'No devices, please add'. At the bottom, there is a navigation bar with three icons: a blue house icon labeled 'Home' (A5), a sun icon labeled 'Smart' (A6), and a person icon labeled 'Me' (A7).

 
- A1** Opens a small menu, from which you can open directly the family management
- A2** Switches to the display of the respective room
- A3** Switches to the display of all devices
- A4** Adds a new device; identical with **A13**
- A5** Switches to the home page of the app (this display)
- A6** Switches to scenes and automation
- A7** Switches to your profile and settings
- A8** Directly opens the room management
- A9** Switches to the device order settings page
- A10** Switches the display of the devices and groups in the main display between a list display and a grid display (icons next to each other)
- A11** The three dots open the small menu, see items **A8** and **A9**
- A12** Directly opens the location selection
- A13** Opens the voice control of the app
- A14** Adds a new device; identical with **A4**

To refresh, simply swipe down in the app view.


Configuration and operation

Adding a new device


- To add a new device, on the home page of the app tap either “+” at the top right or the blue “**Add device**” button at the bottom.

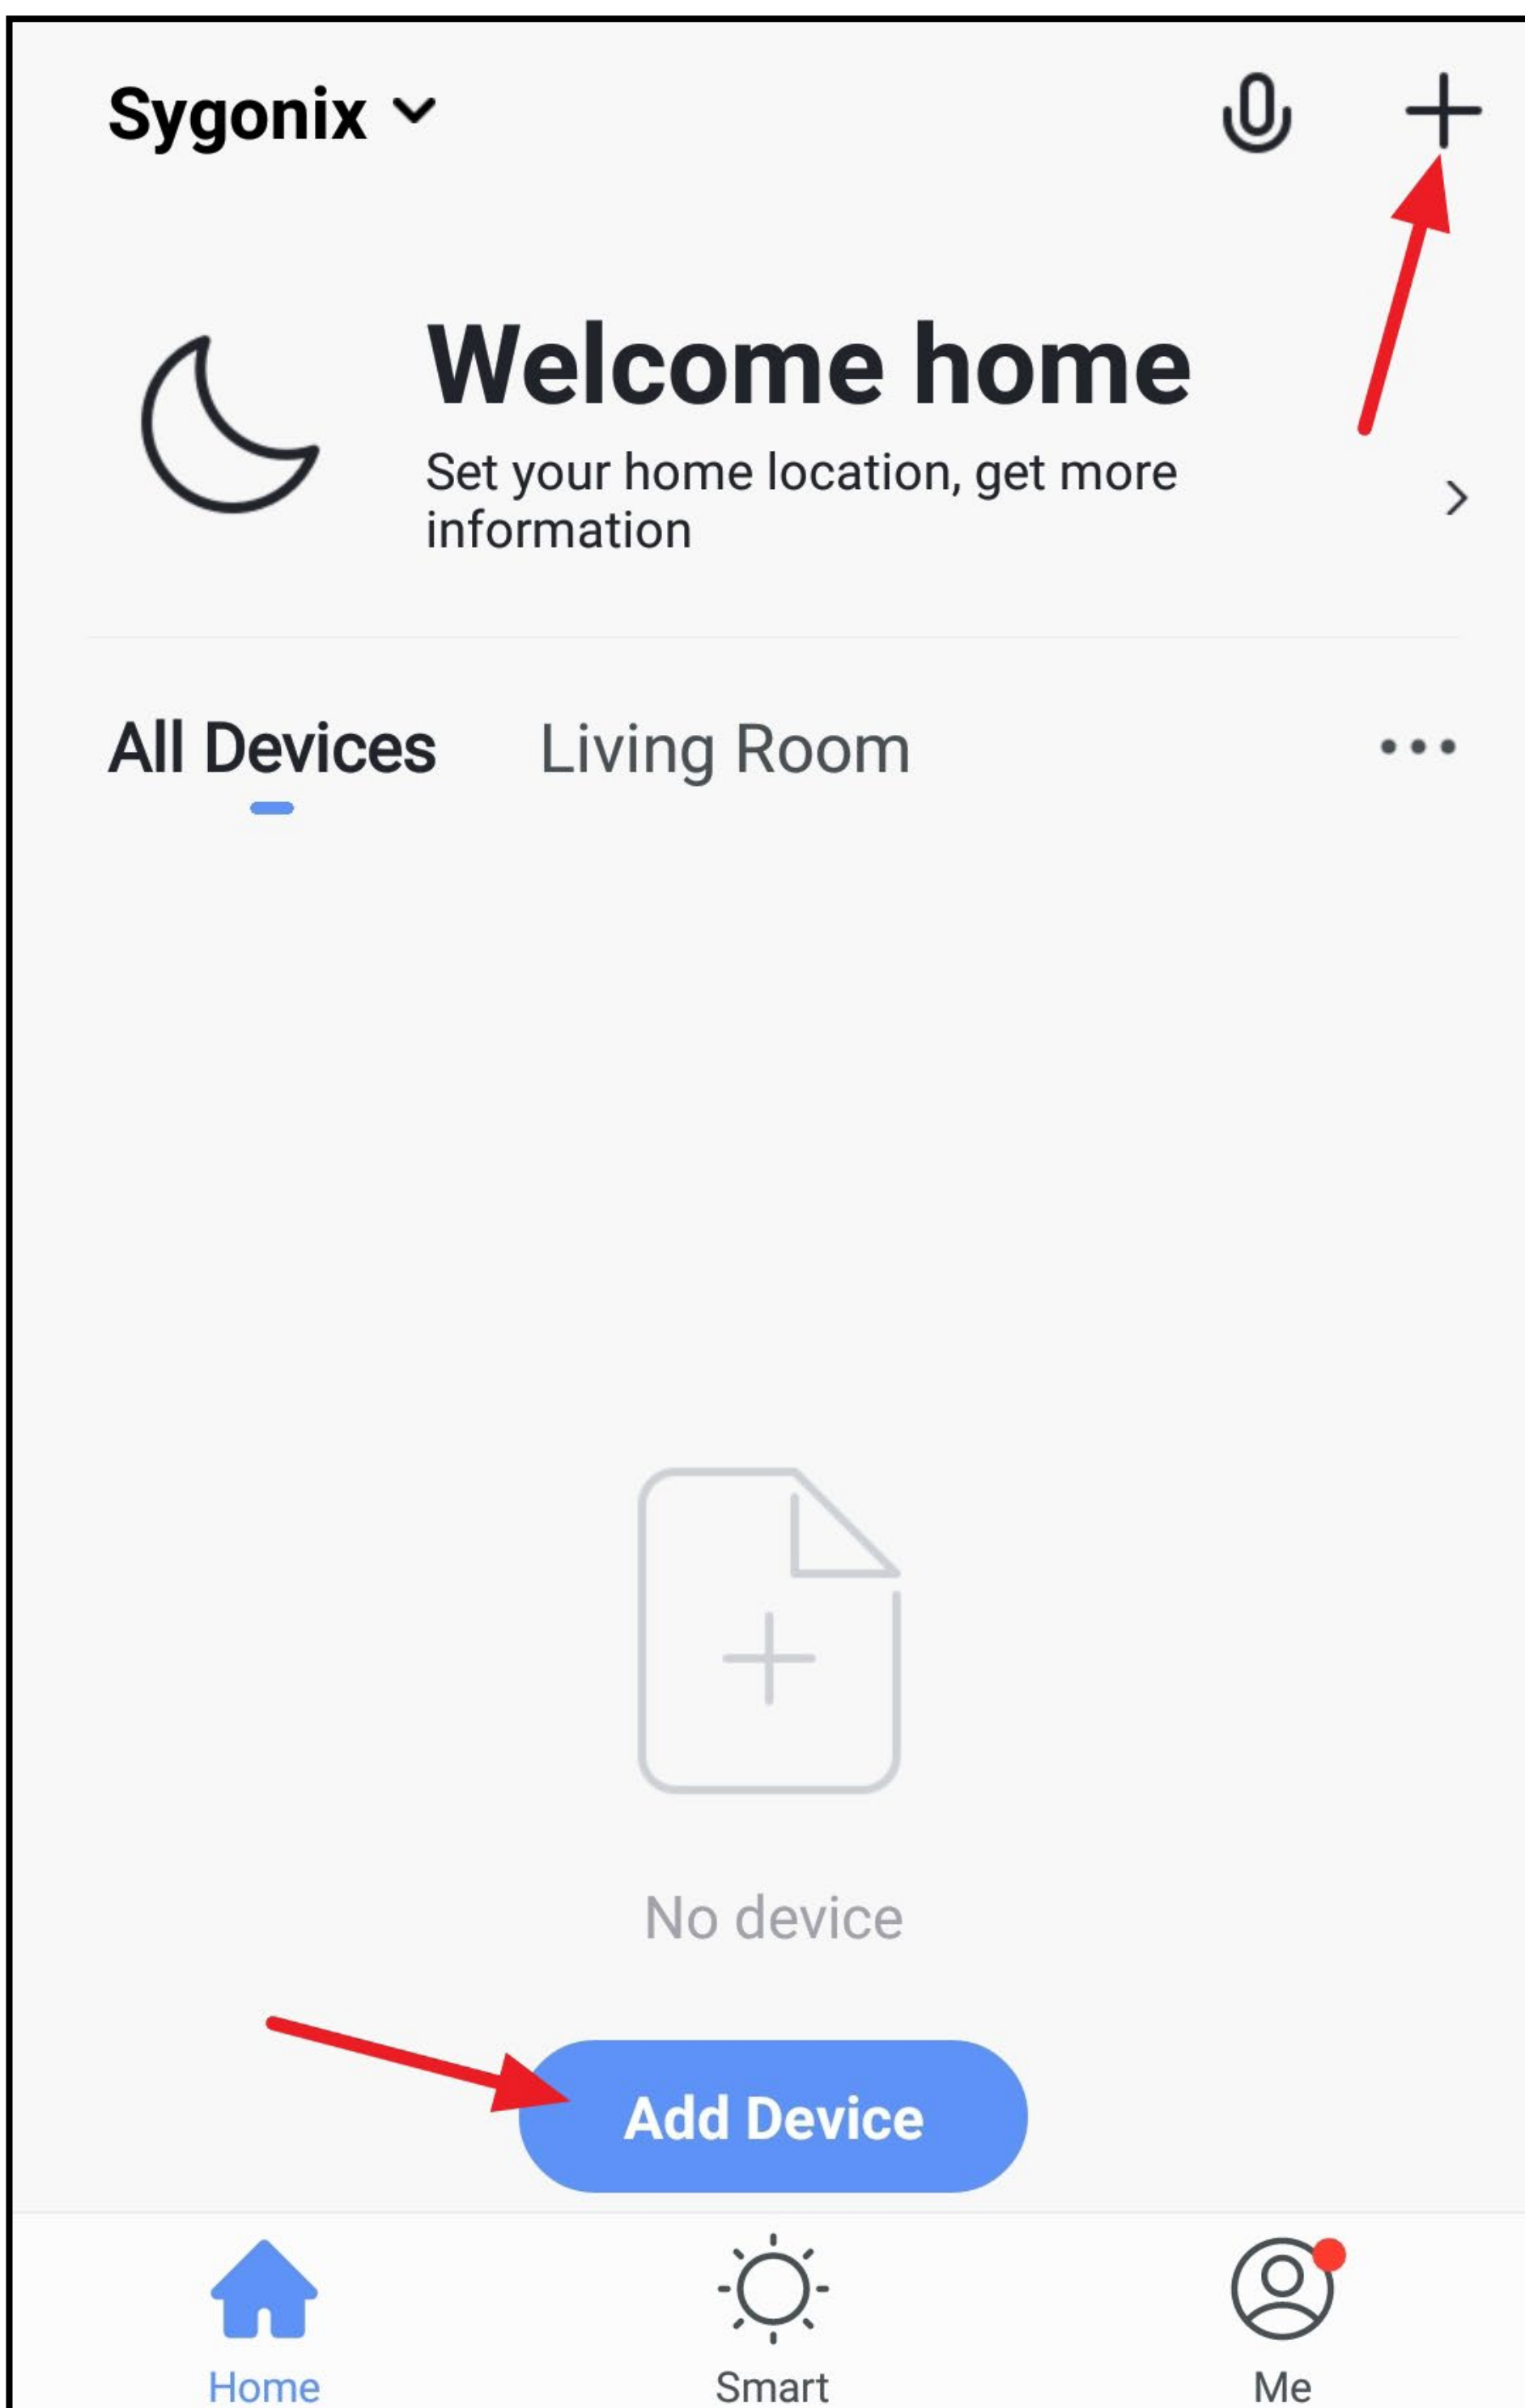

 - For the built-in Wi-Fi switch, on the next page first select the uppermost item in the menu on the left and then “**Switch**” on the right-hand side.

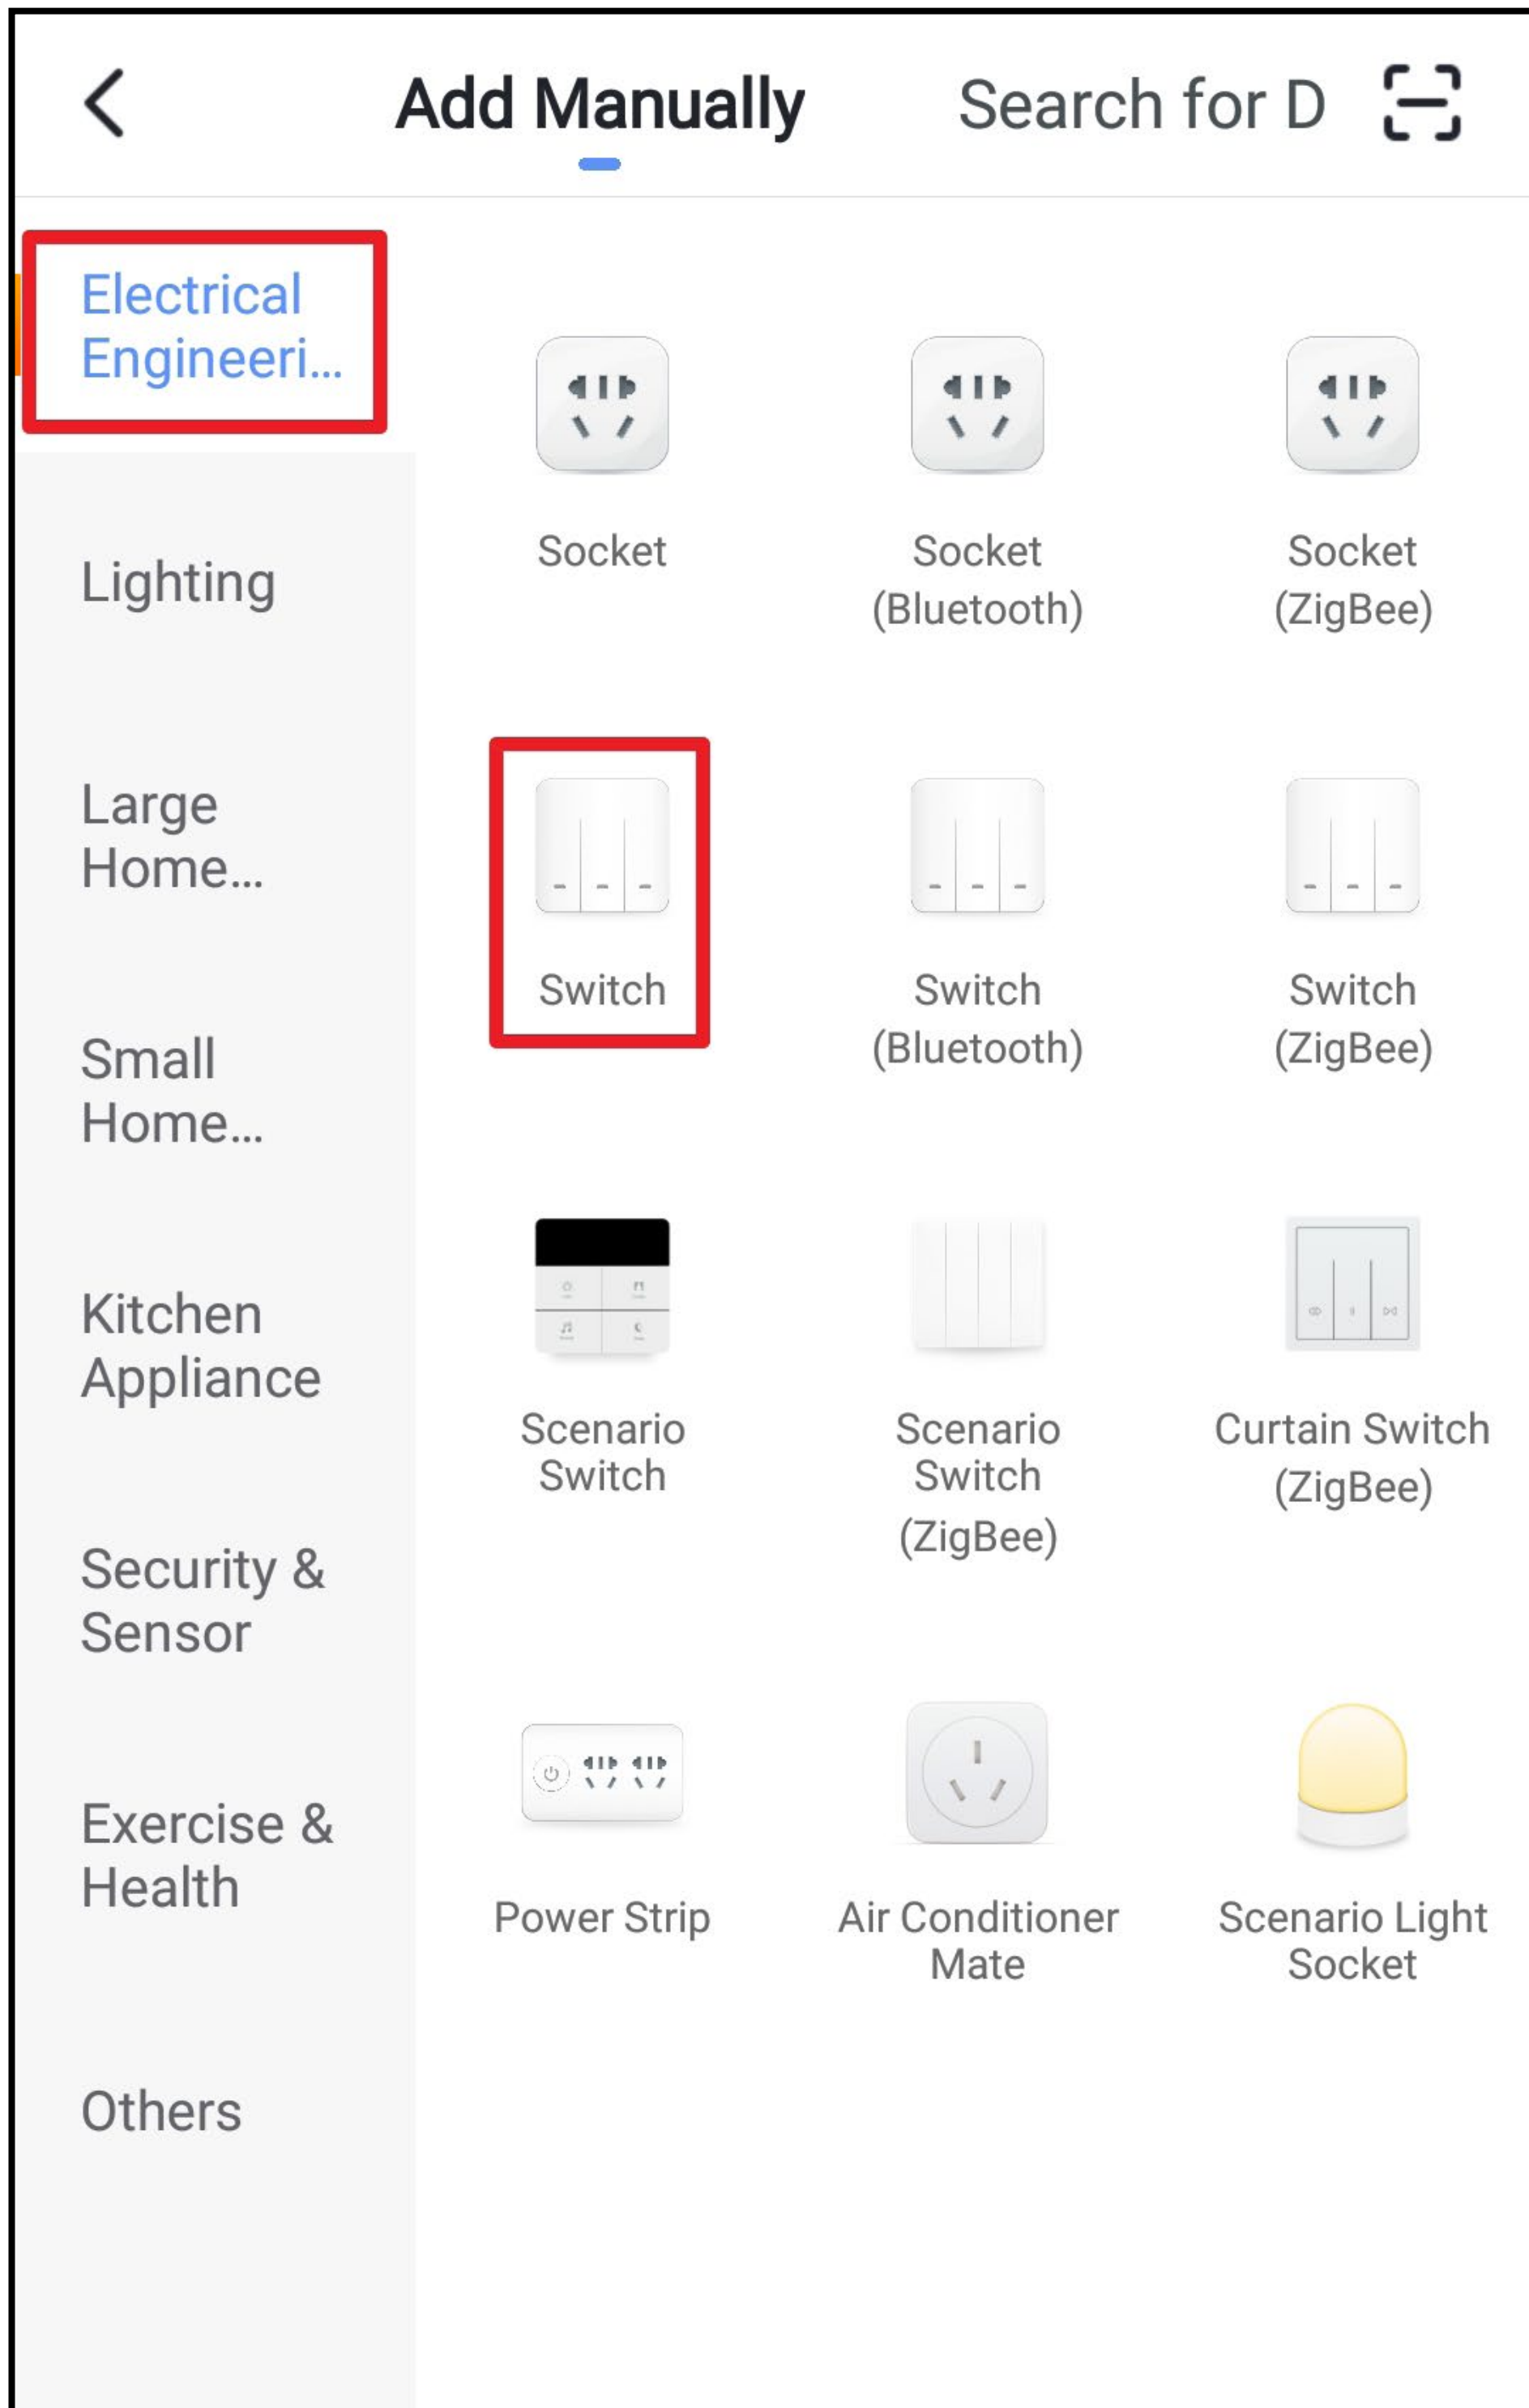

 - Before you continue, connect the built-in Wi-Fi switch to the power supply, if you have not already done so, and wait until the start process is complete.
- Now keep the button on the built-in Wi-Fi switch pressed until the built-in LED flashes green quickly.
- Then tap the bottom blue button in the app.

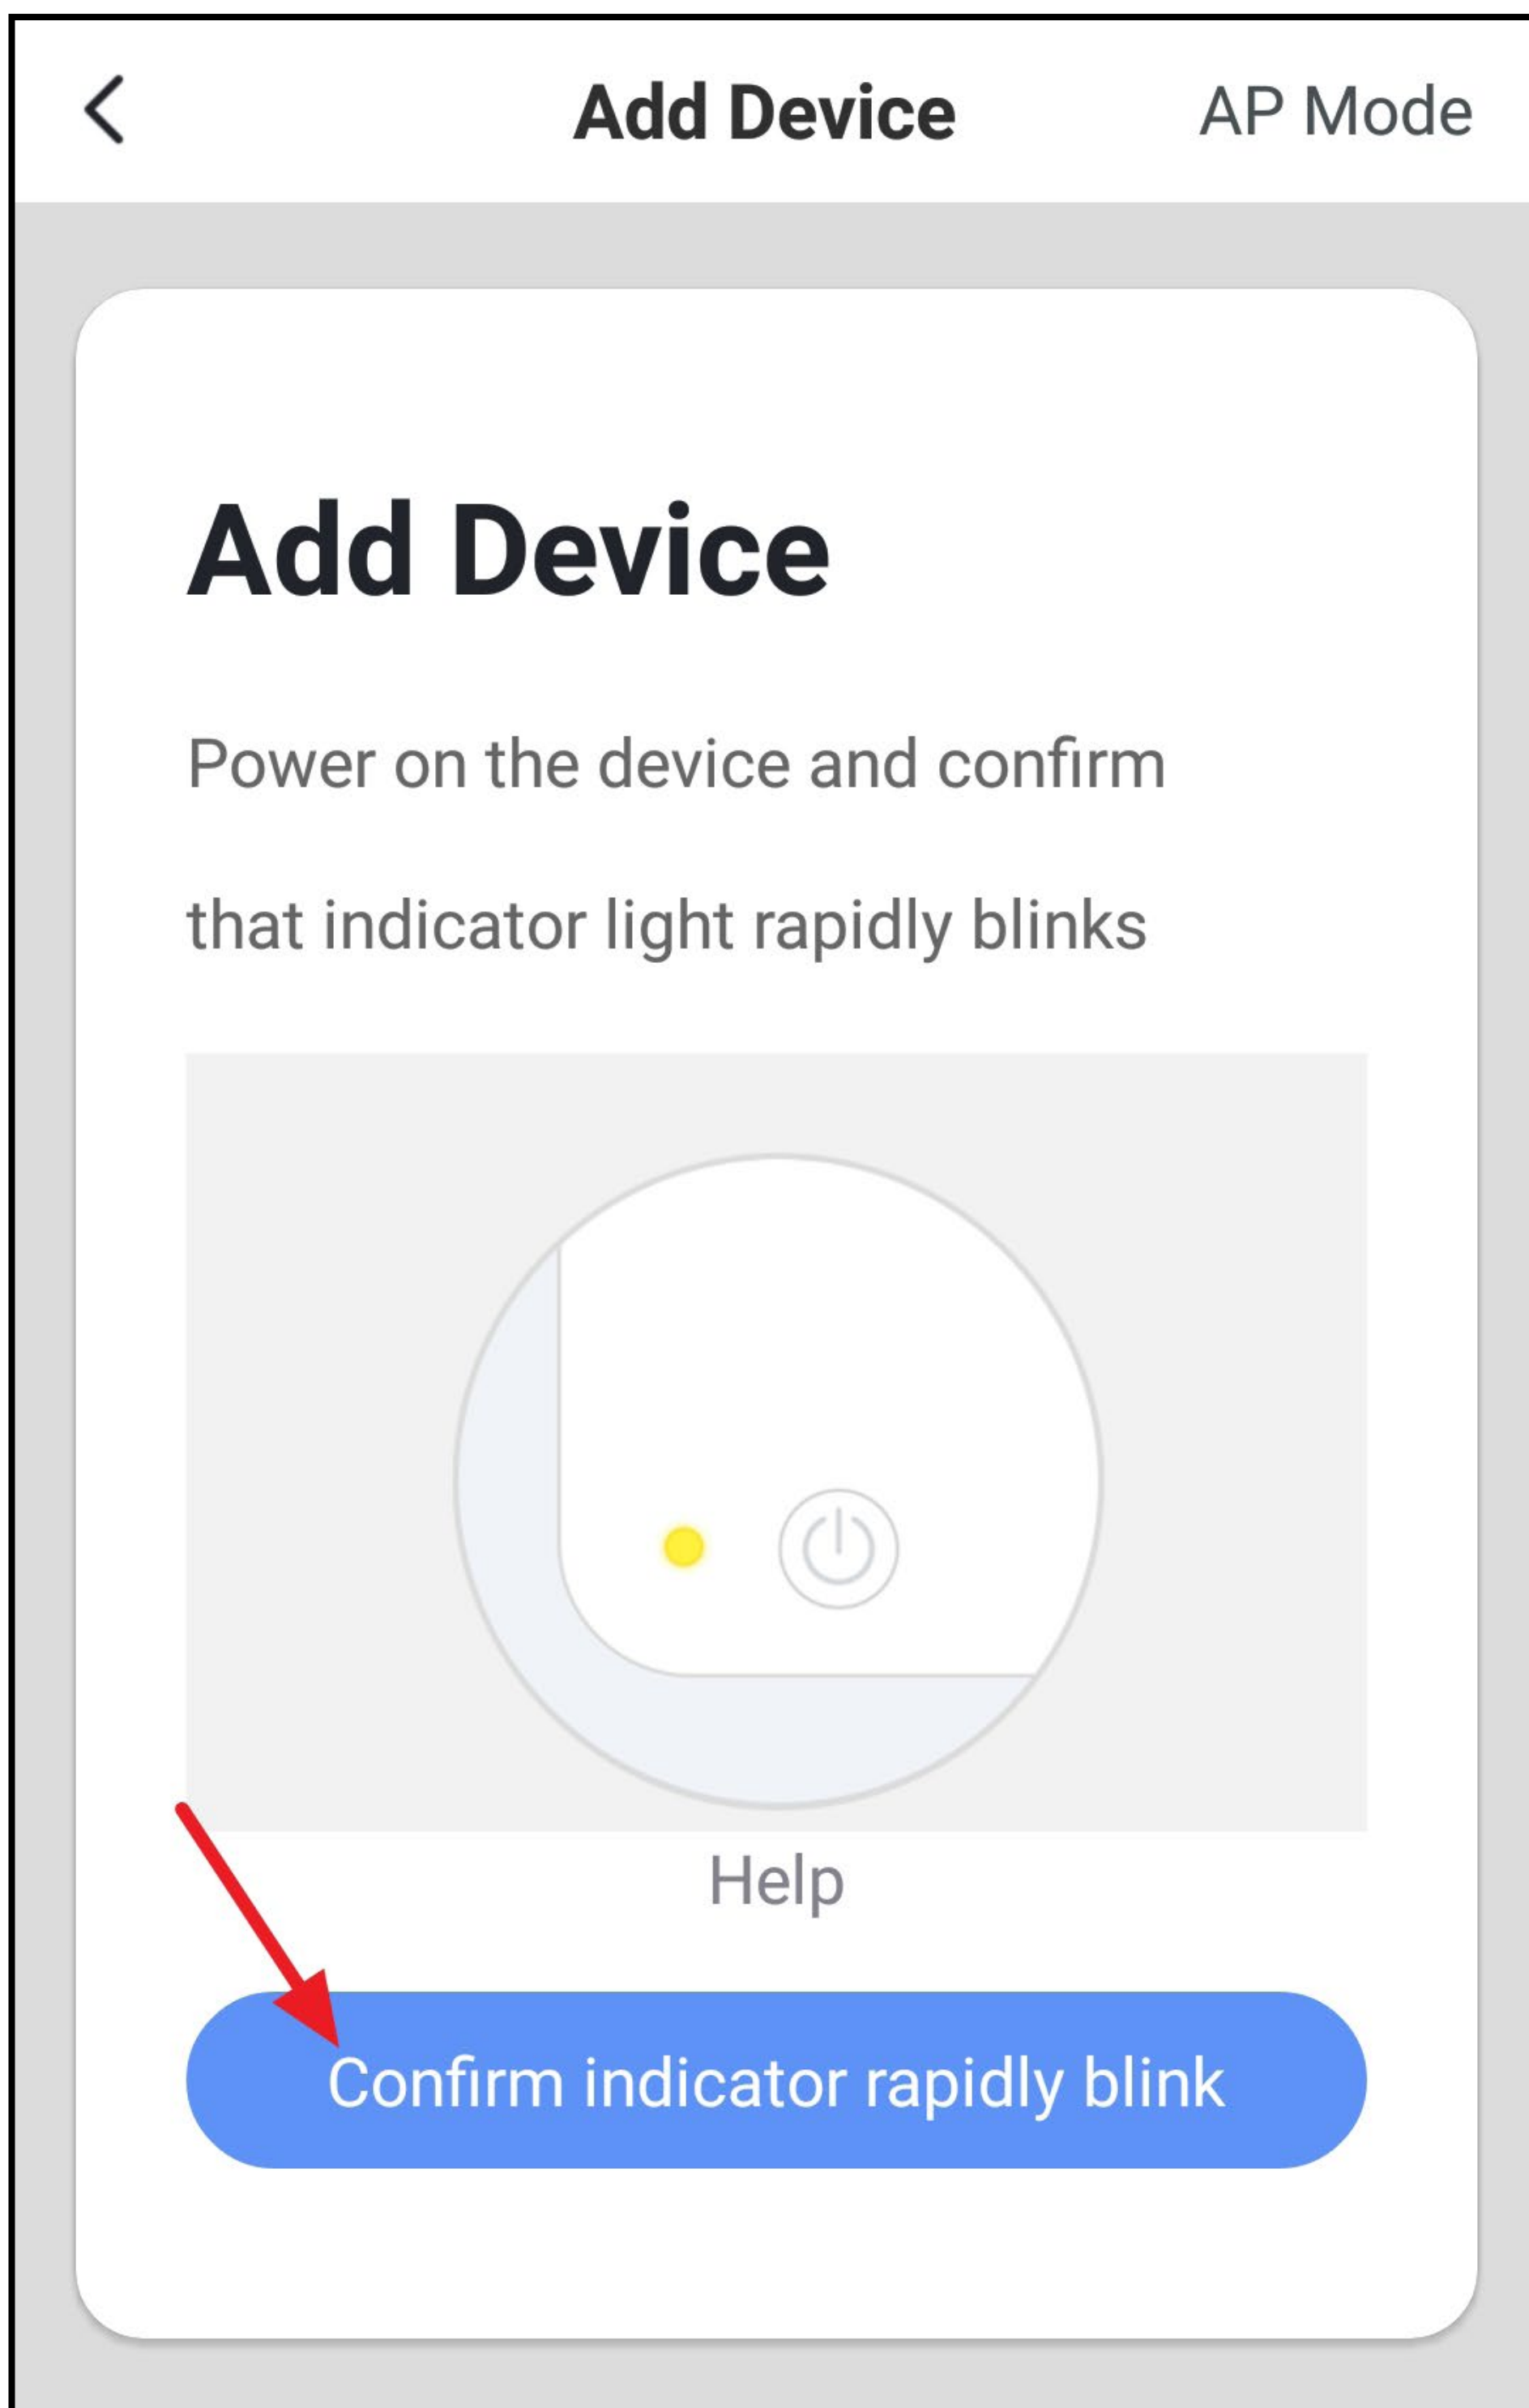


- If your Wi-Fi network has not been accepted automatically, first select it and then enter the Wi-Fi password below.
- Tap the bottom blue button to save the selection and continue.


Please note that only 2.4 GHz Wi-Fi networks are supported.

The screenshot shows a mobile application interface for adding a device. At the top, there is a back arrow and the title "Add Device". The main heading is "Enter Wi-Fi Password". Below this, a note in orange text states "Only 2.4 GHz Wi-Fi networks are supported". The network selection area shows a Wi-Fi icon, a blacked-out network name, and a "Change Network" link. The password input field is shown with a lock icon on the left, a series of dots for the password, and a red arrow pointing to the right. A blue "Confirm" button is at the bottom, with a red arrow pointing to it.

 
- The app will now search for the device and connect to it.
- Then the Wi-Fi settings will be transferred.

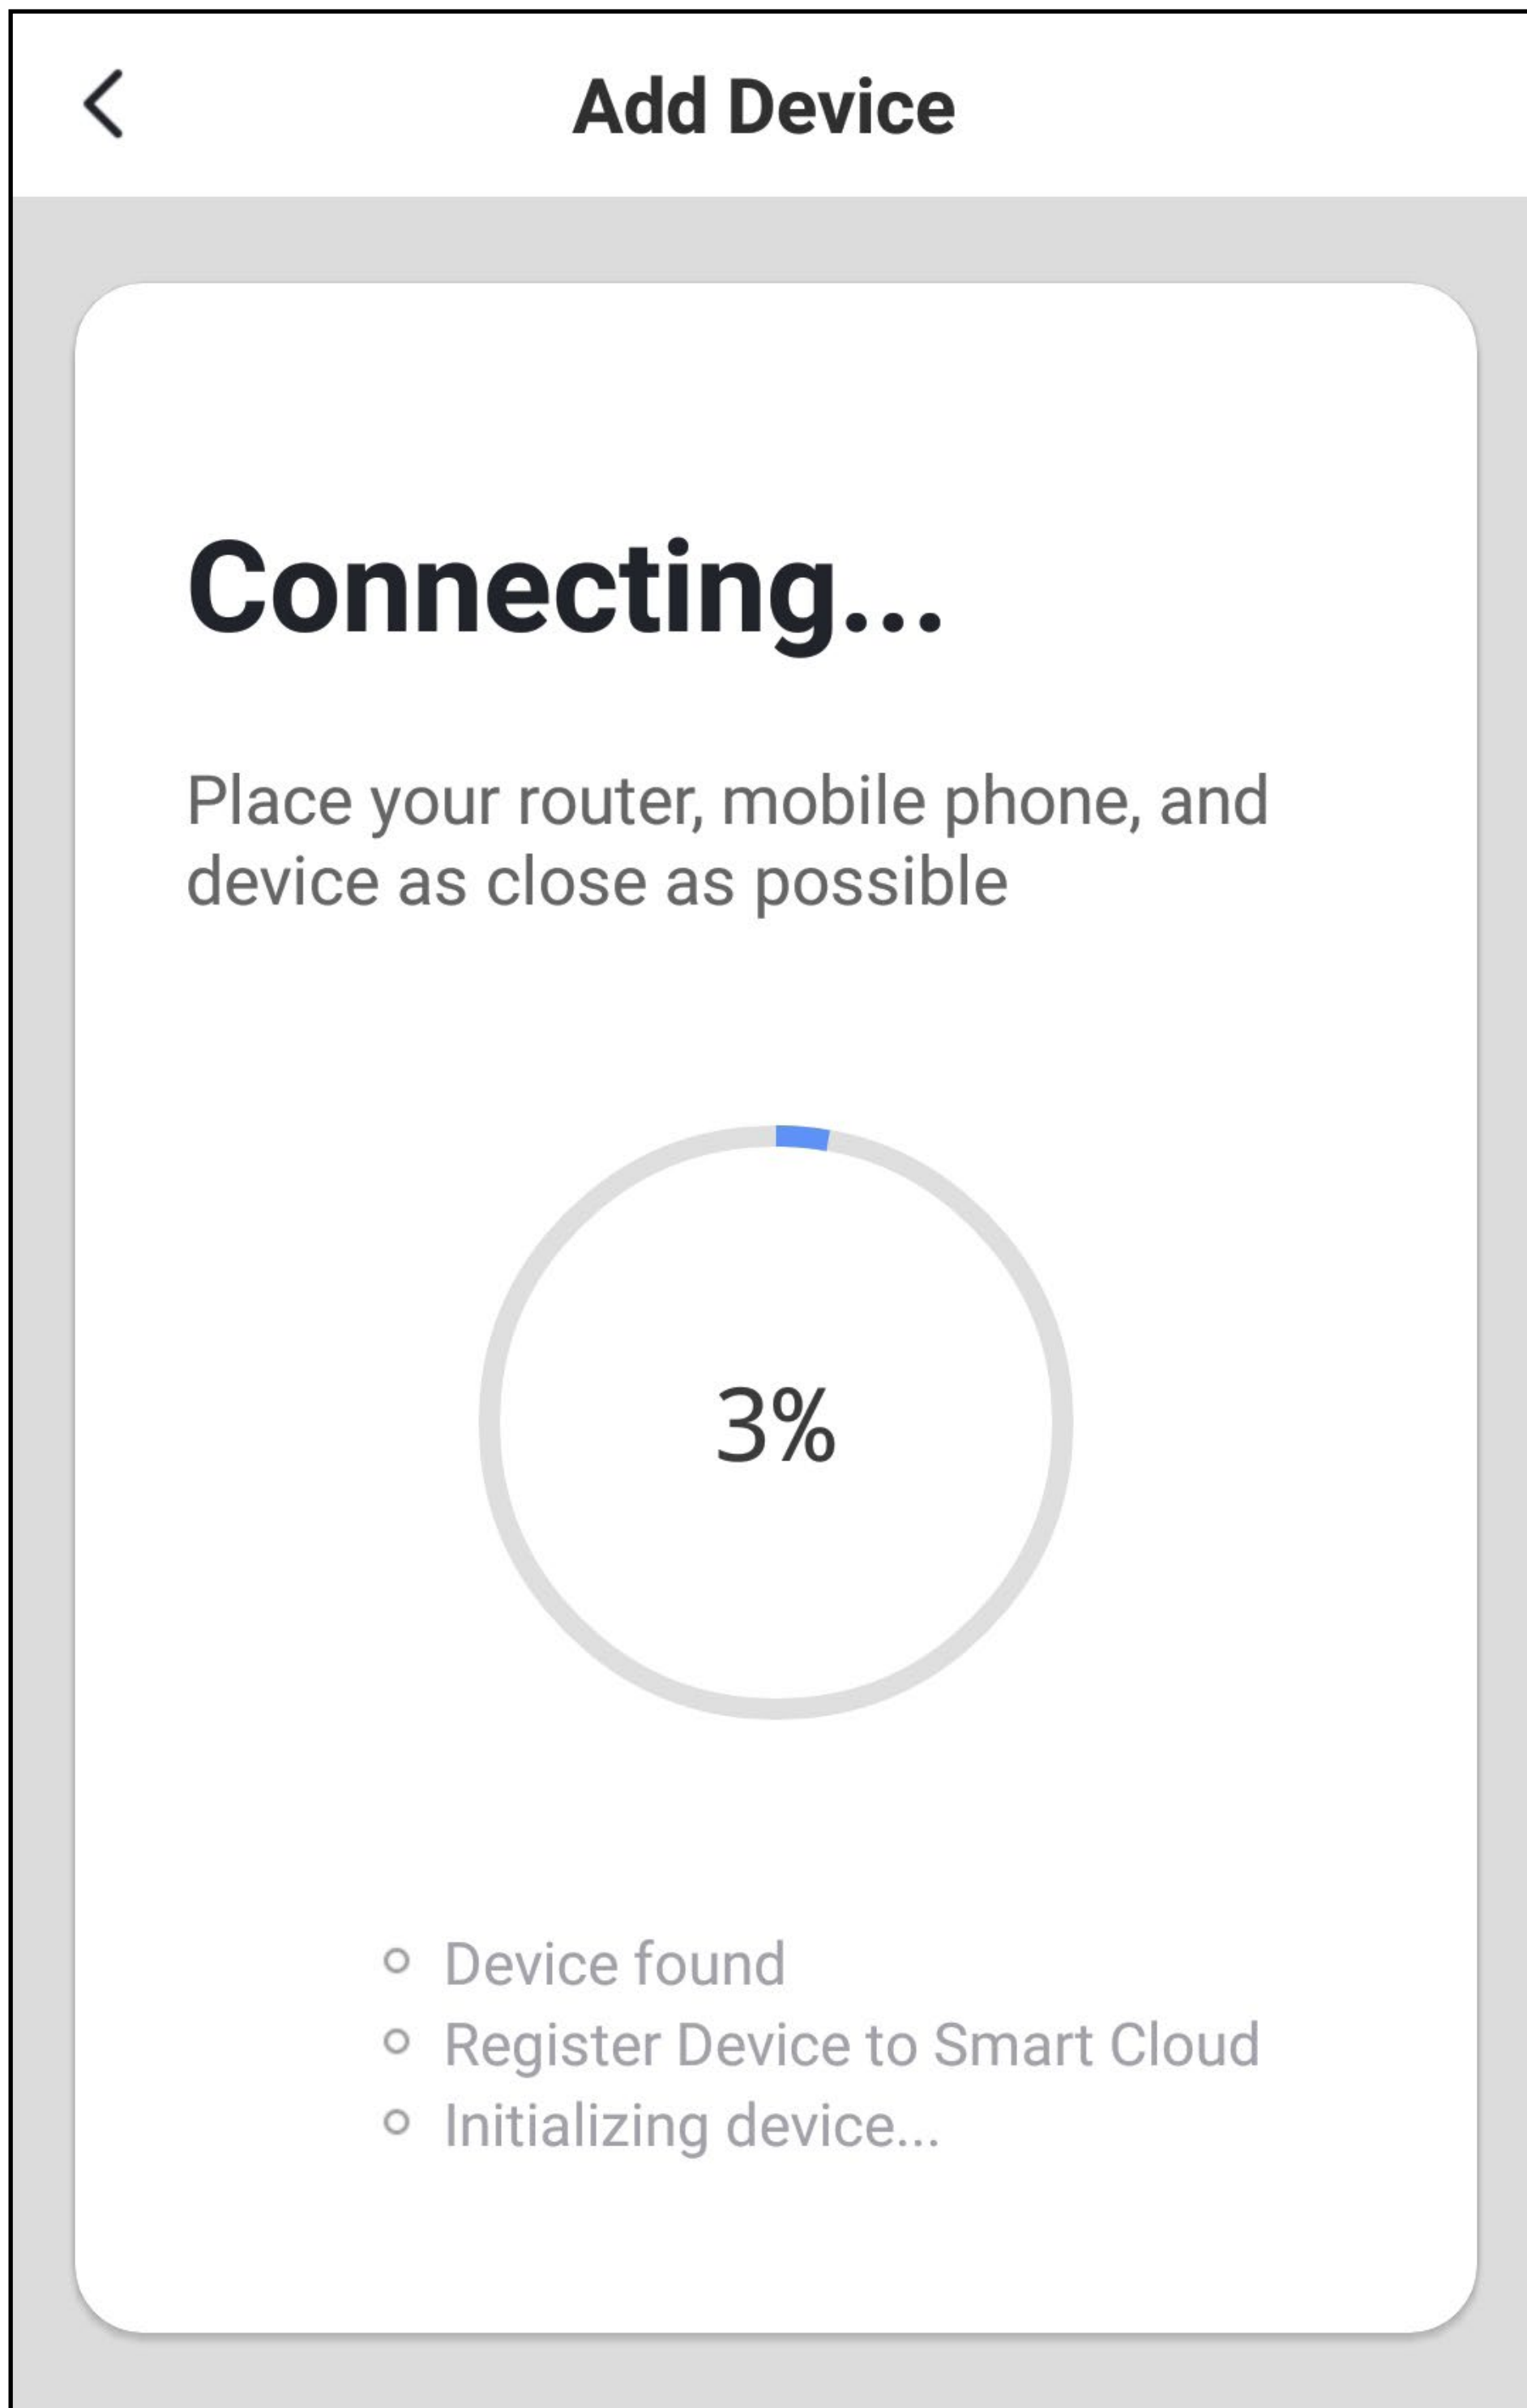

 
- The connection has been successfully established. To assign the newly added device to a room, tap the desired room under the name of the device so that it is highlighted with a dark background.
- Tap the pencil icon to assign an individual name to the new device.
- Finally, tap the bottom blue button again to complete the setup.

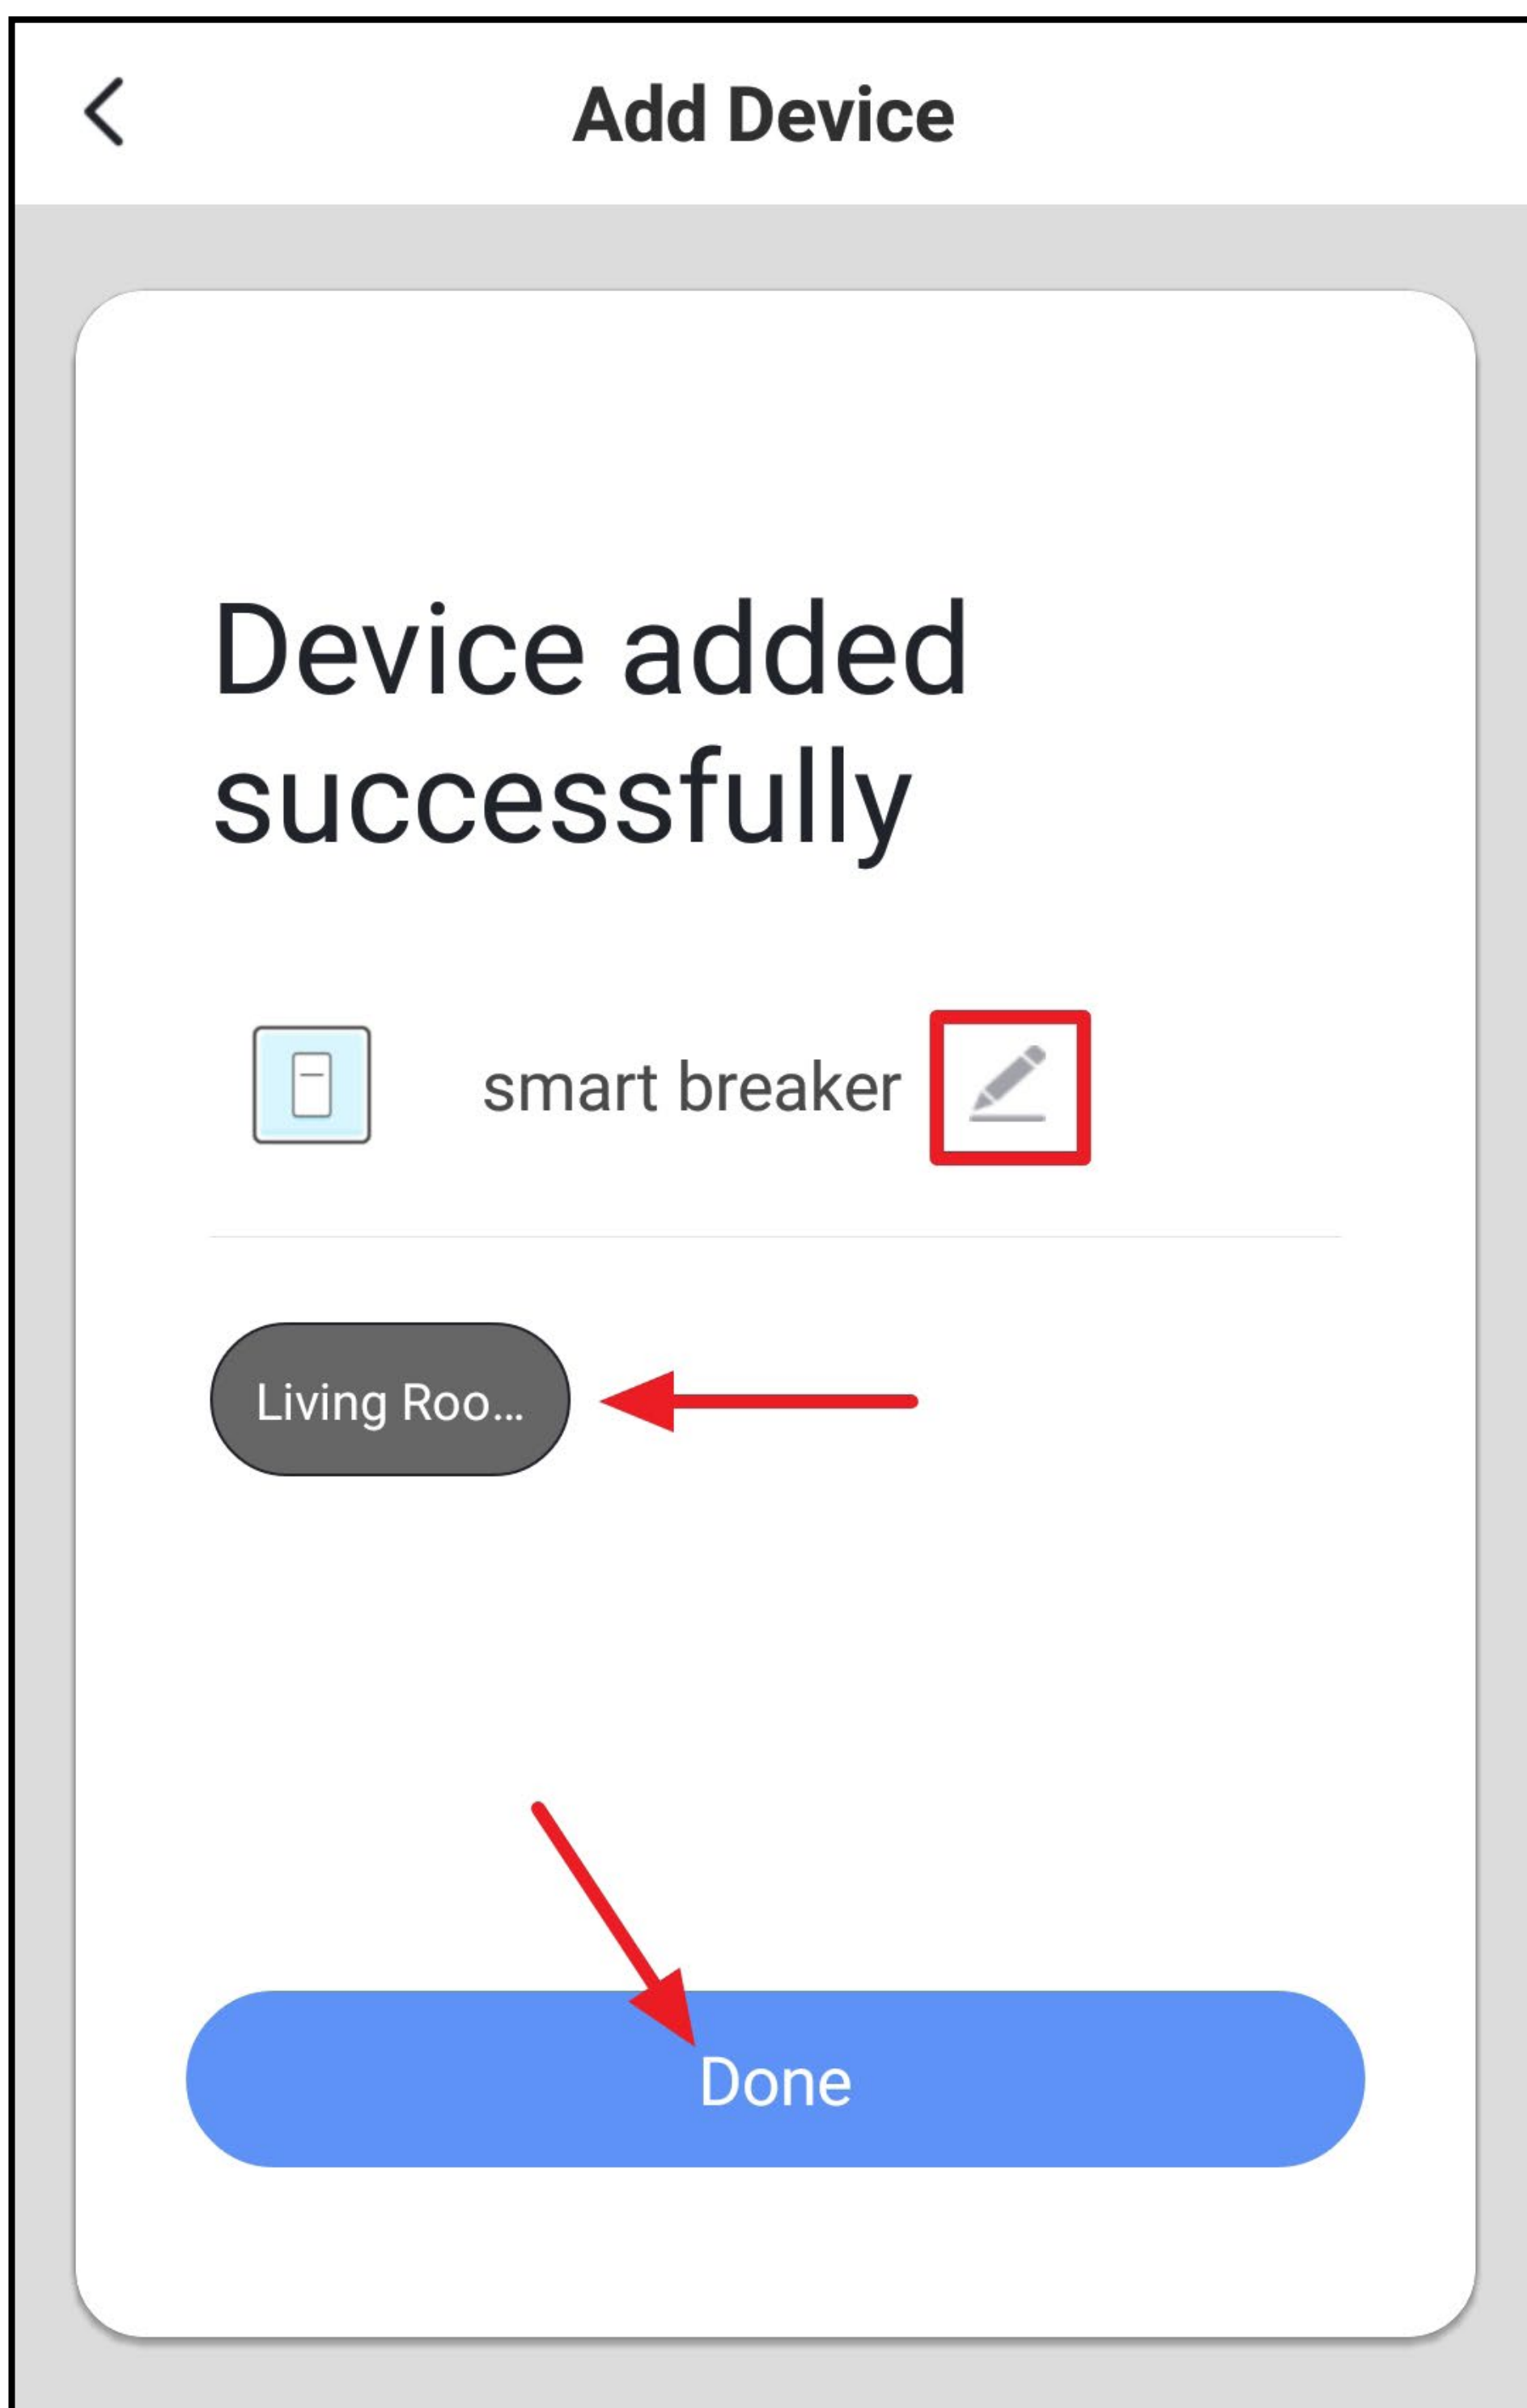

 - Now you see the main operating page of the smart device. The operation is explained in the following chapter.
- To return to the home page of the app, tap the left arrow at the top left.

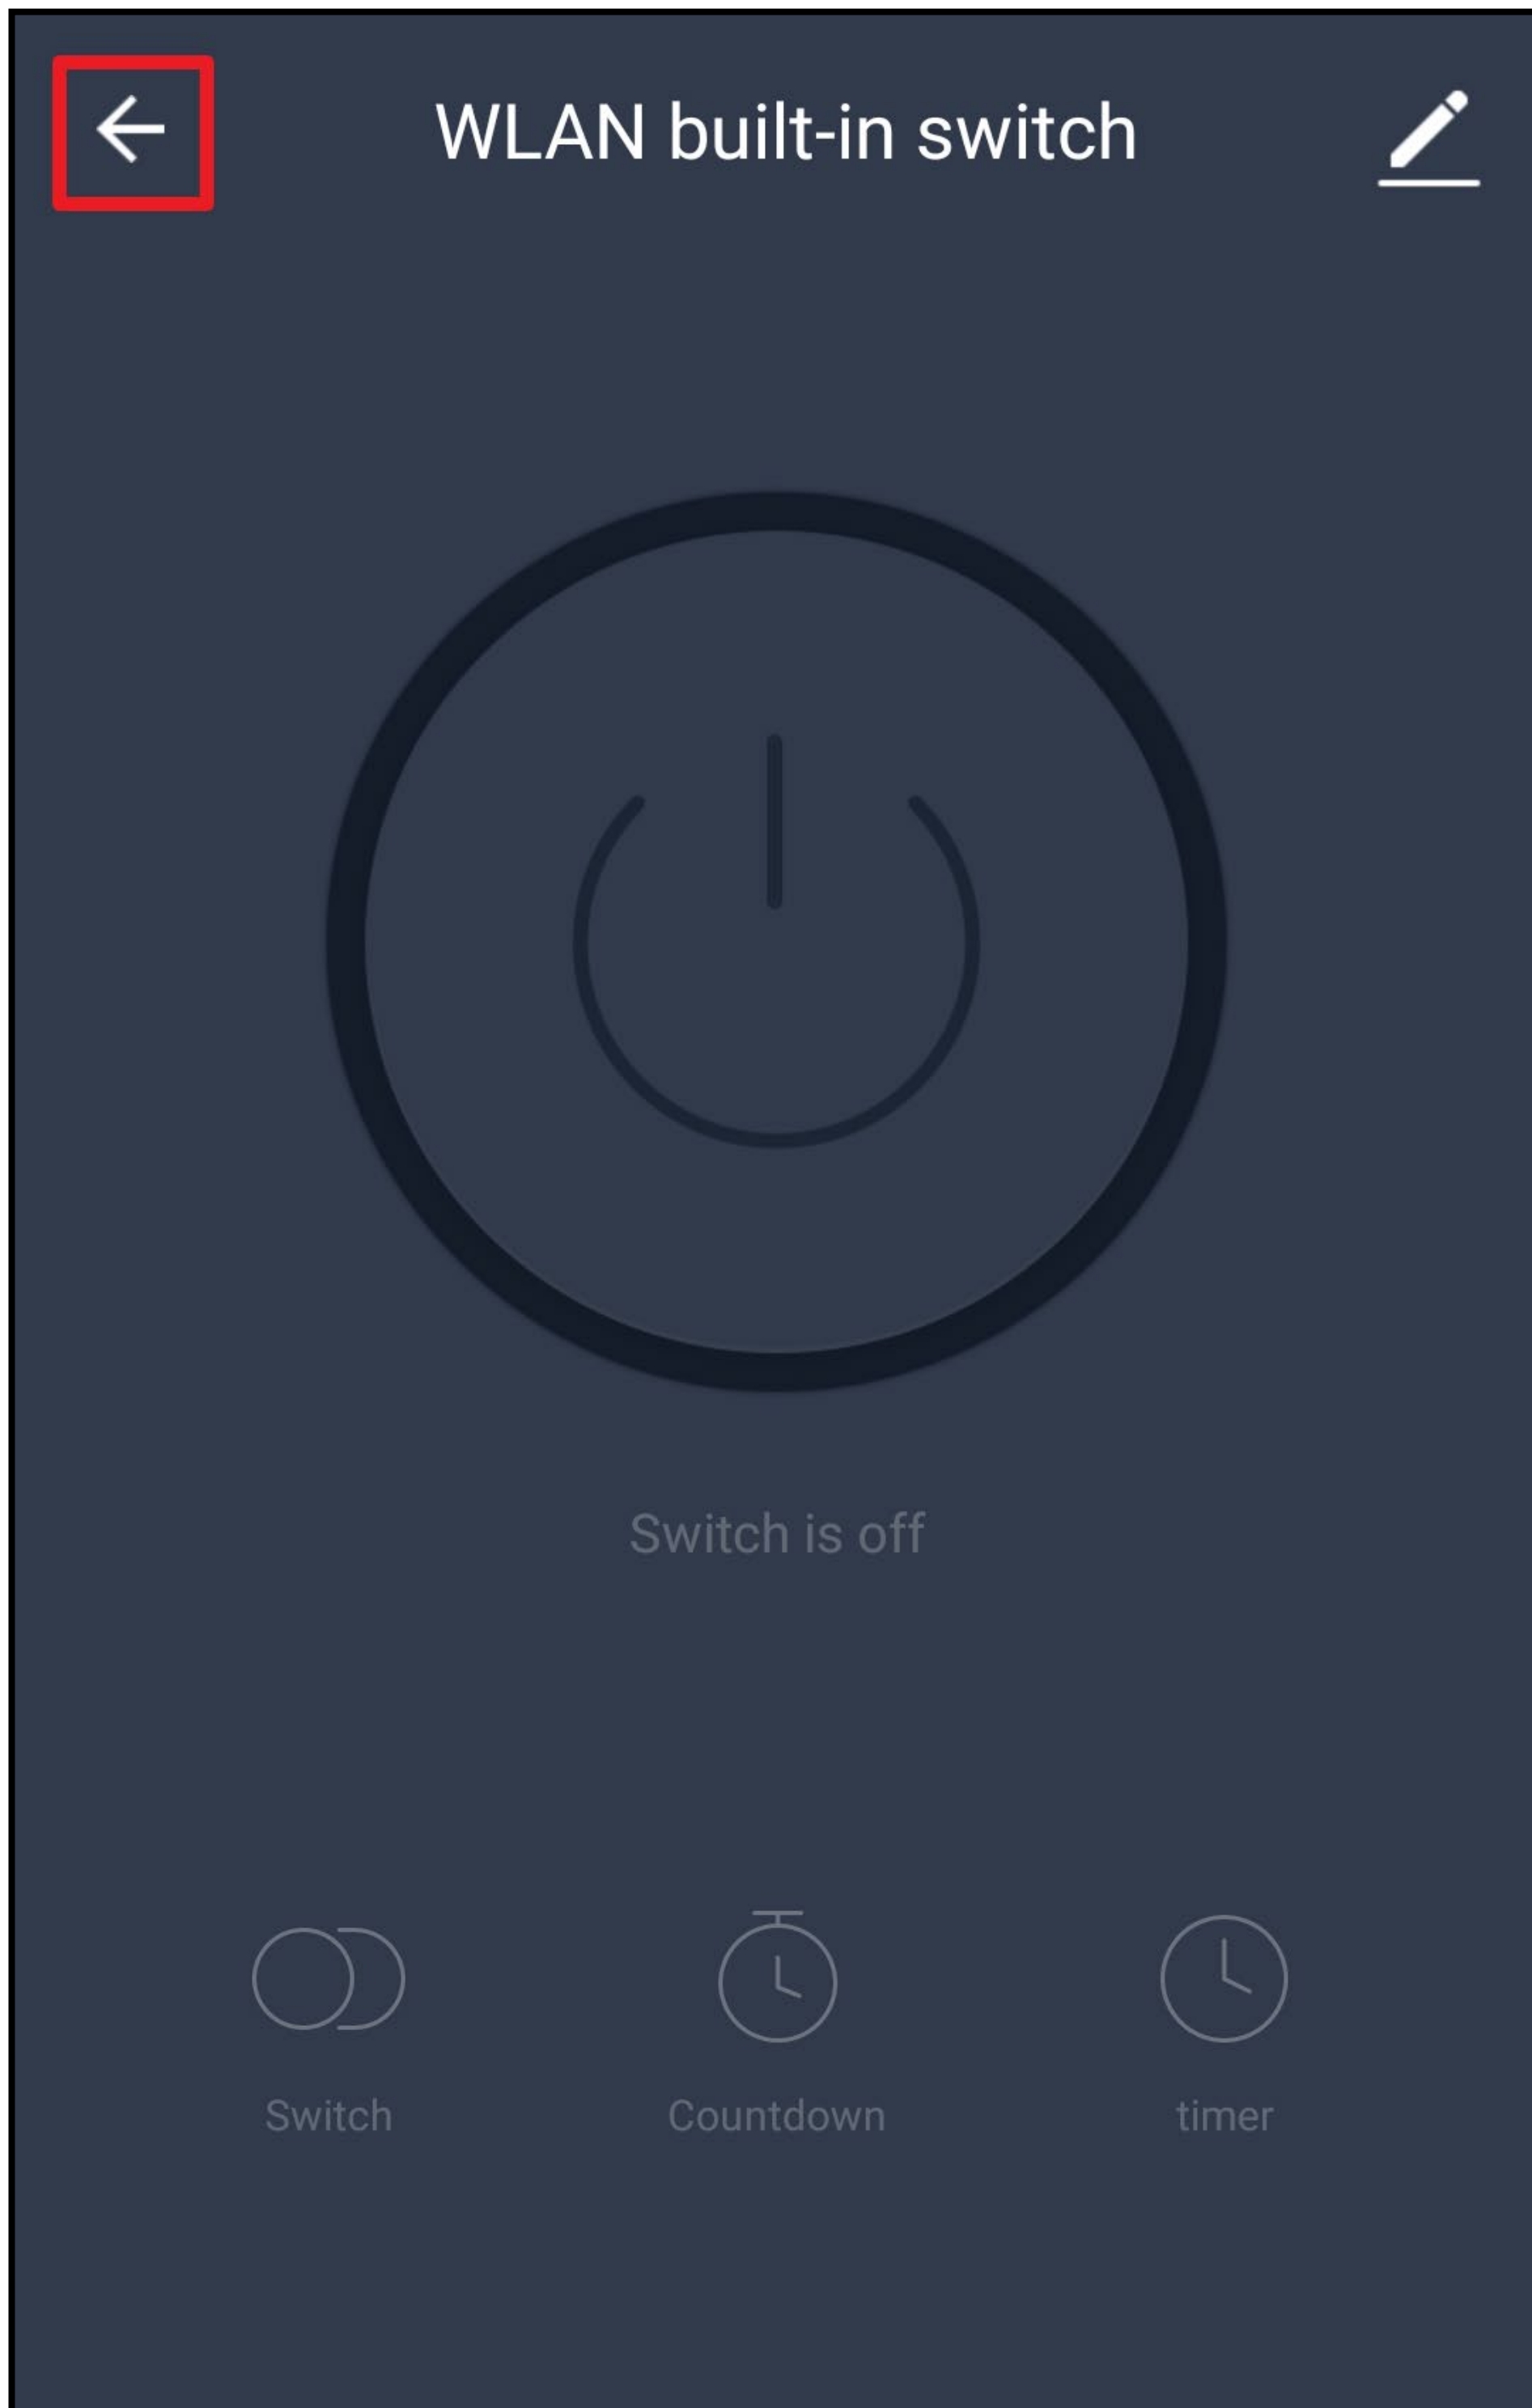

 - On the home page you will now see the newly added device.

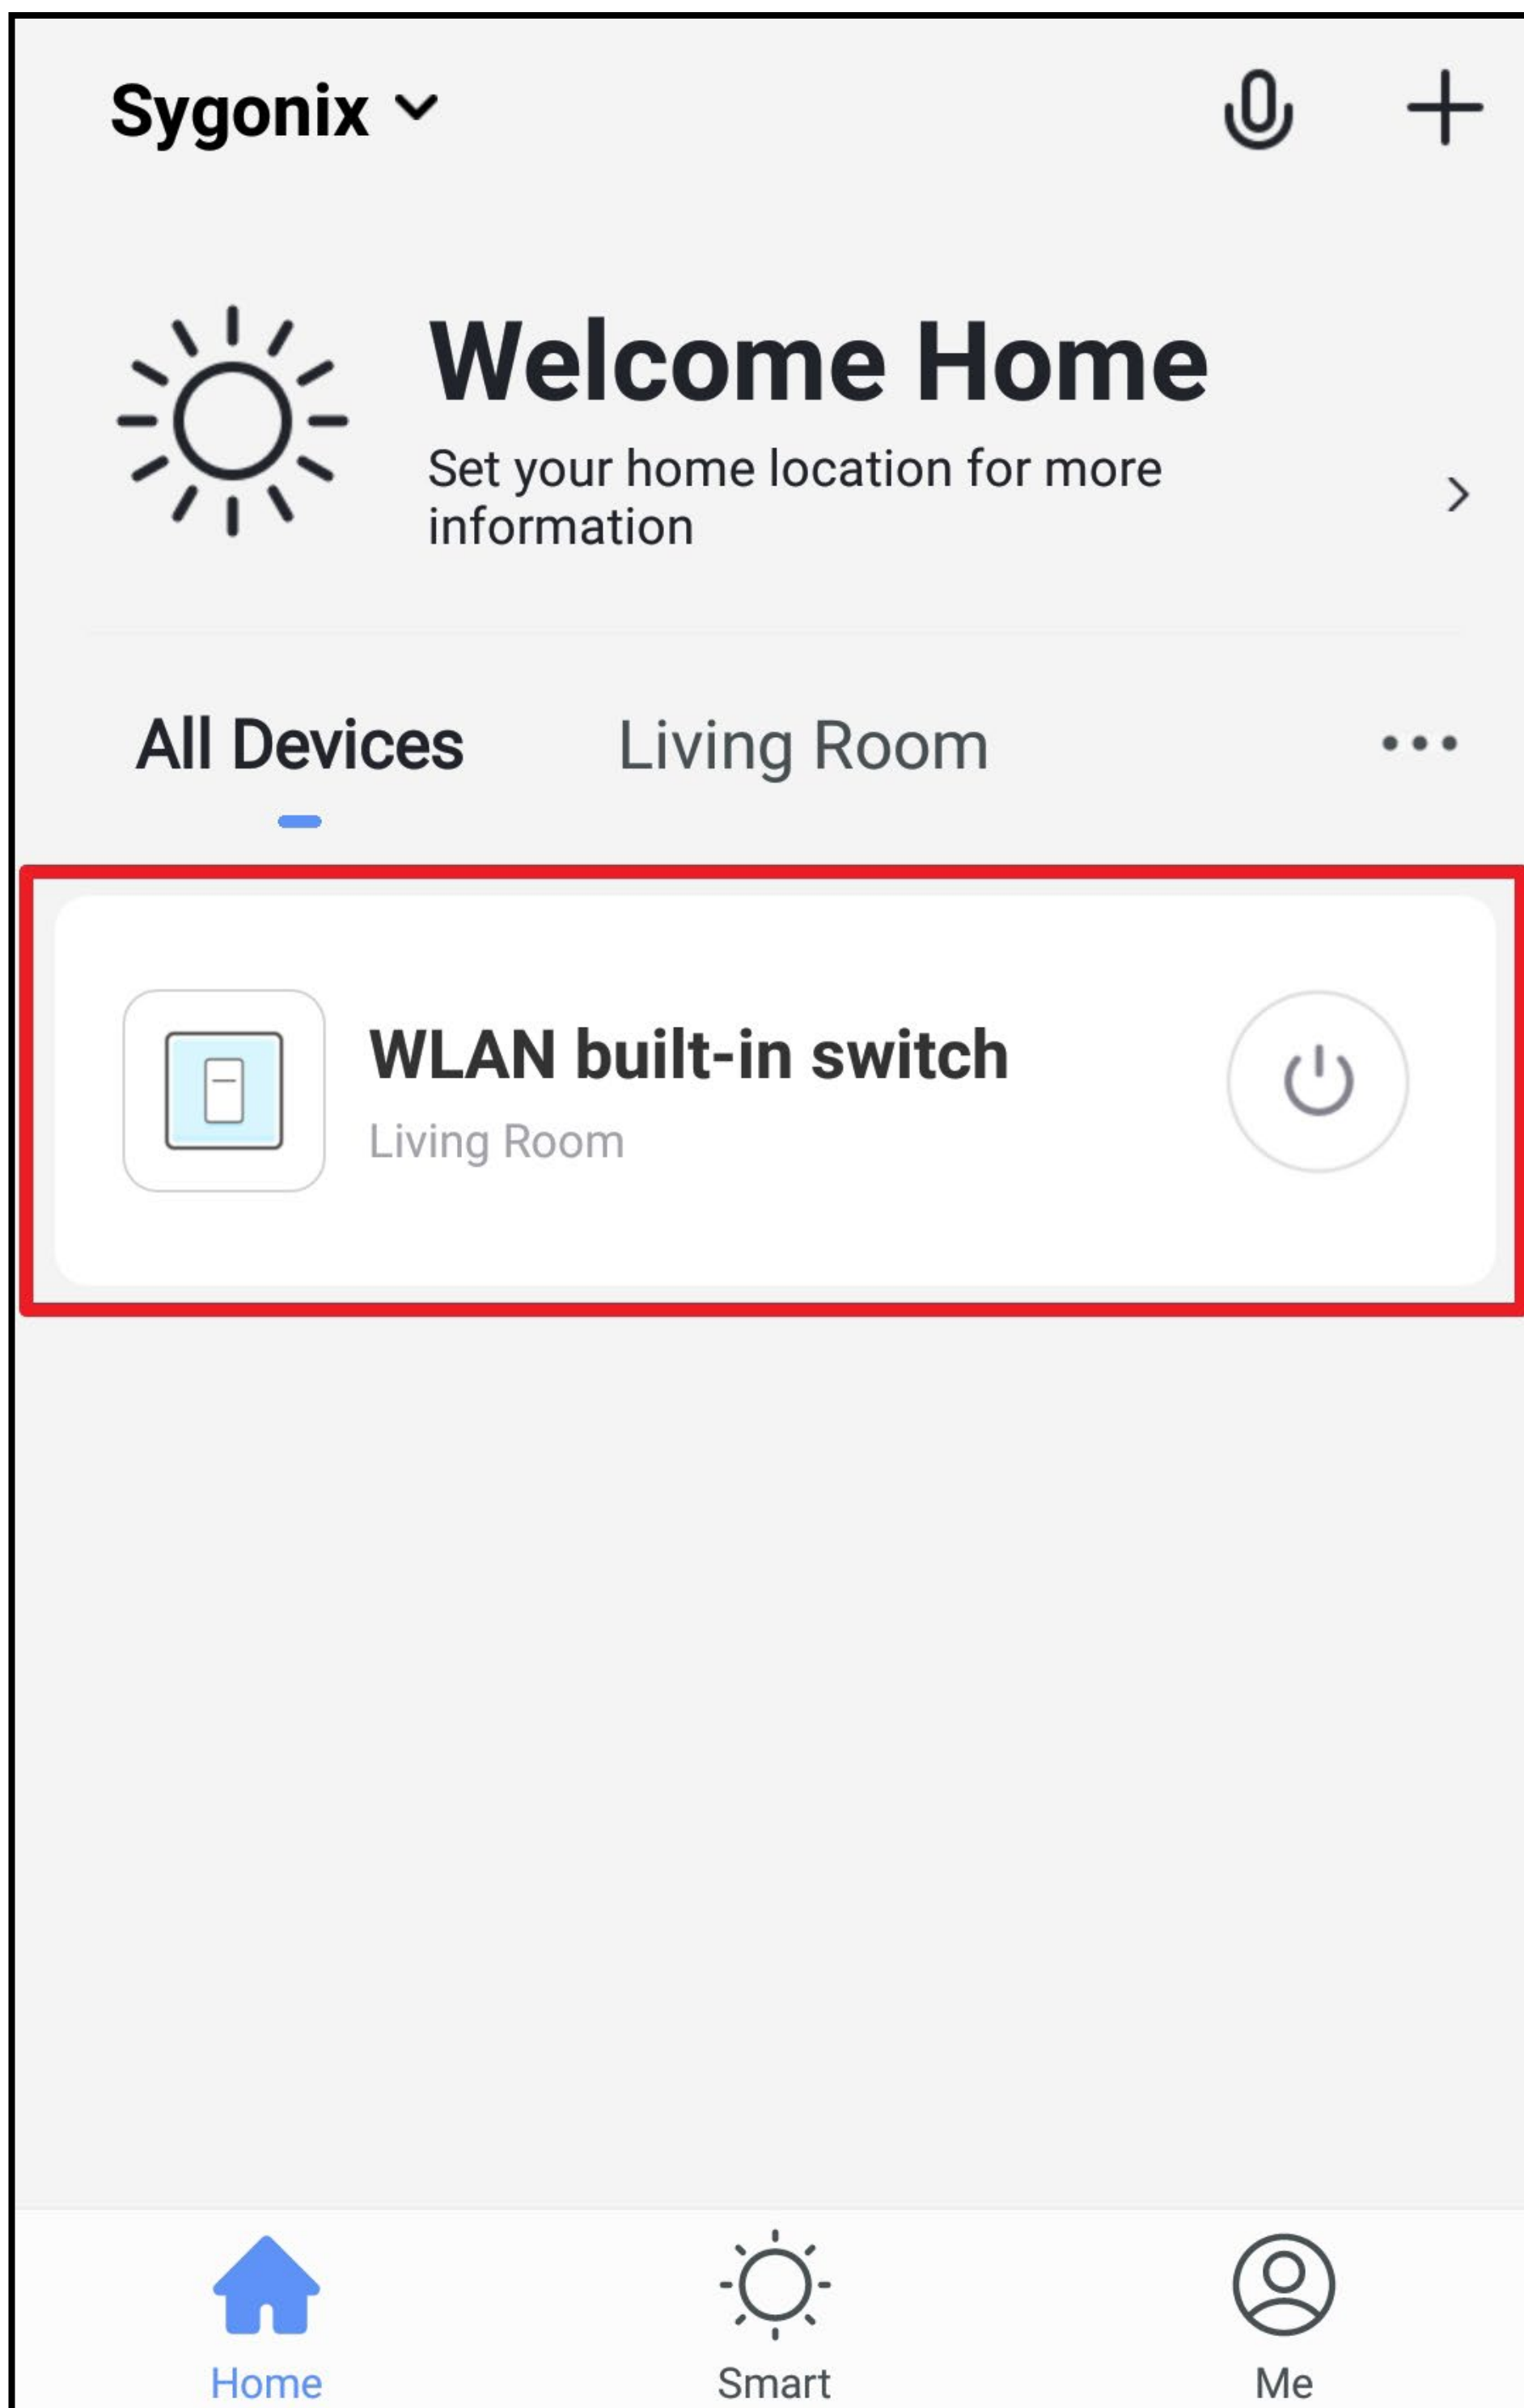


Operating the built-in Wi-Fi switch


- You can turn the respective device on and off using the home page of the app.

To do this, tap the on/off button depicted as an icon of the respective switch (see arrow in the figure).

 
- The figure shows the “**All Devices**” display. If you tap to switch to a room, you will only see the devices that are linked to the room (small square in the figure).
- For further operation, simply tap the desired device (big square in the figure).

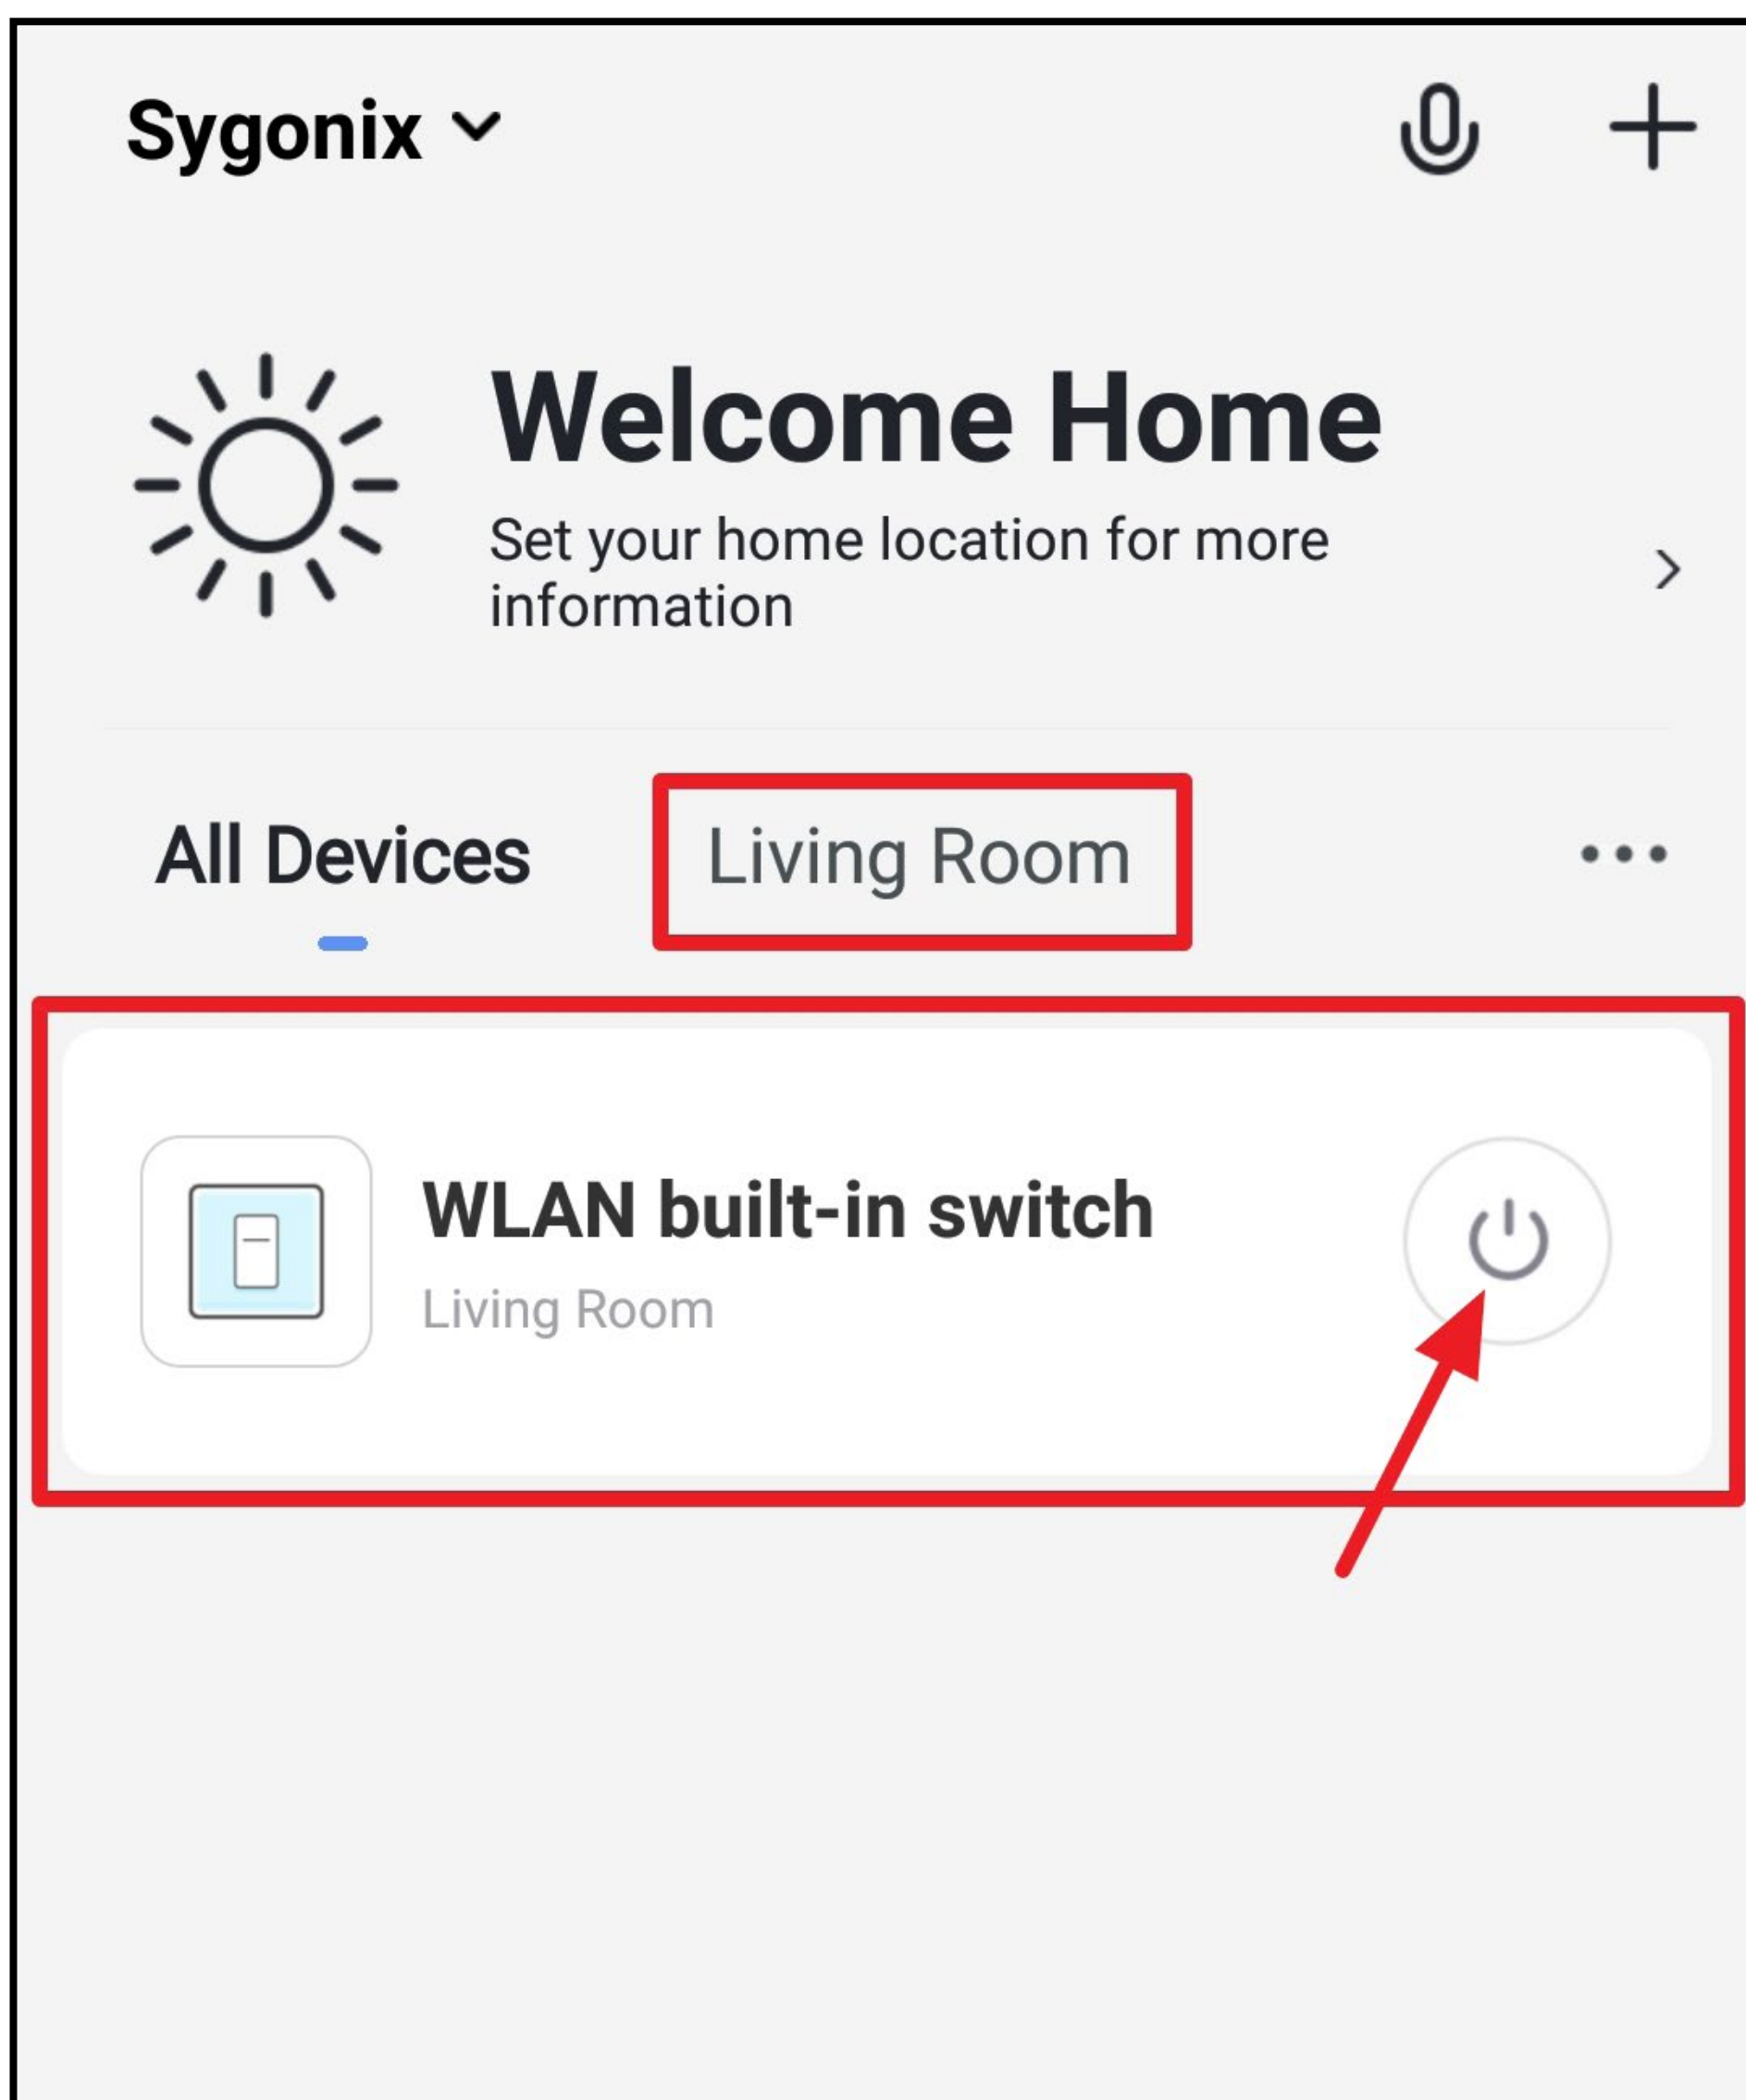

- Here you can also turn the device on and off.
To do this, tap either the on/off button in the middle of the figure or the bottom left button with two circles.
- Currently the switch is disabled. On the one hand, it can be recognised by the dark background, and, on the other hand, the current status is displayed below the on/off button (see small square in the figure).
- Turn on the built-in Wi-Fi switch.

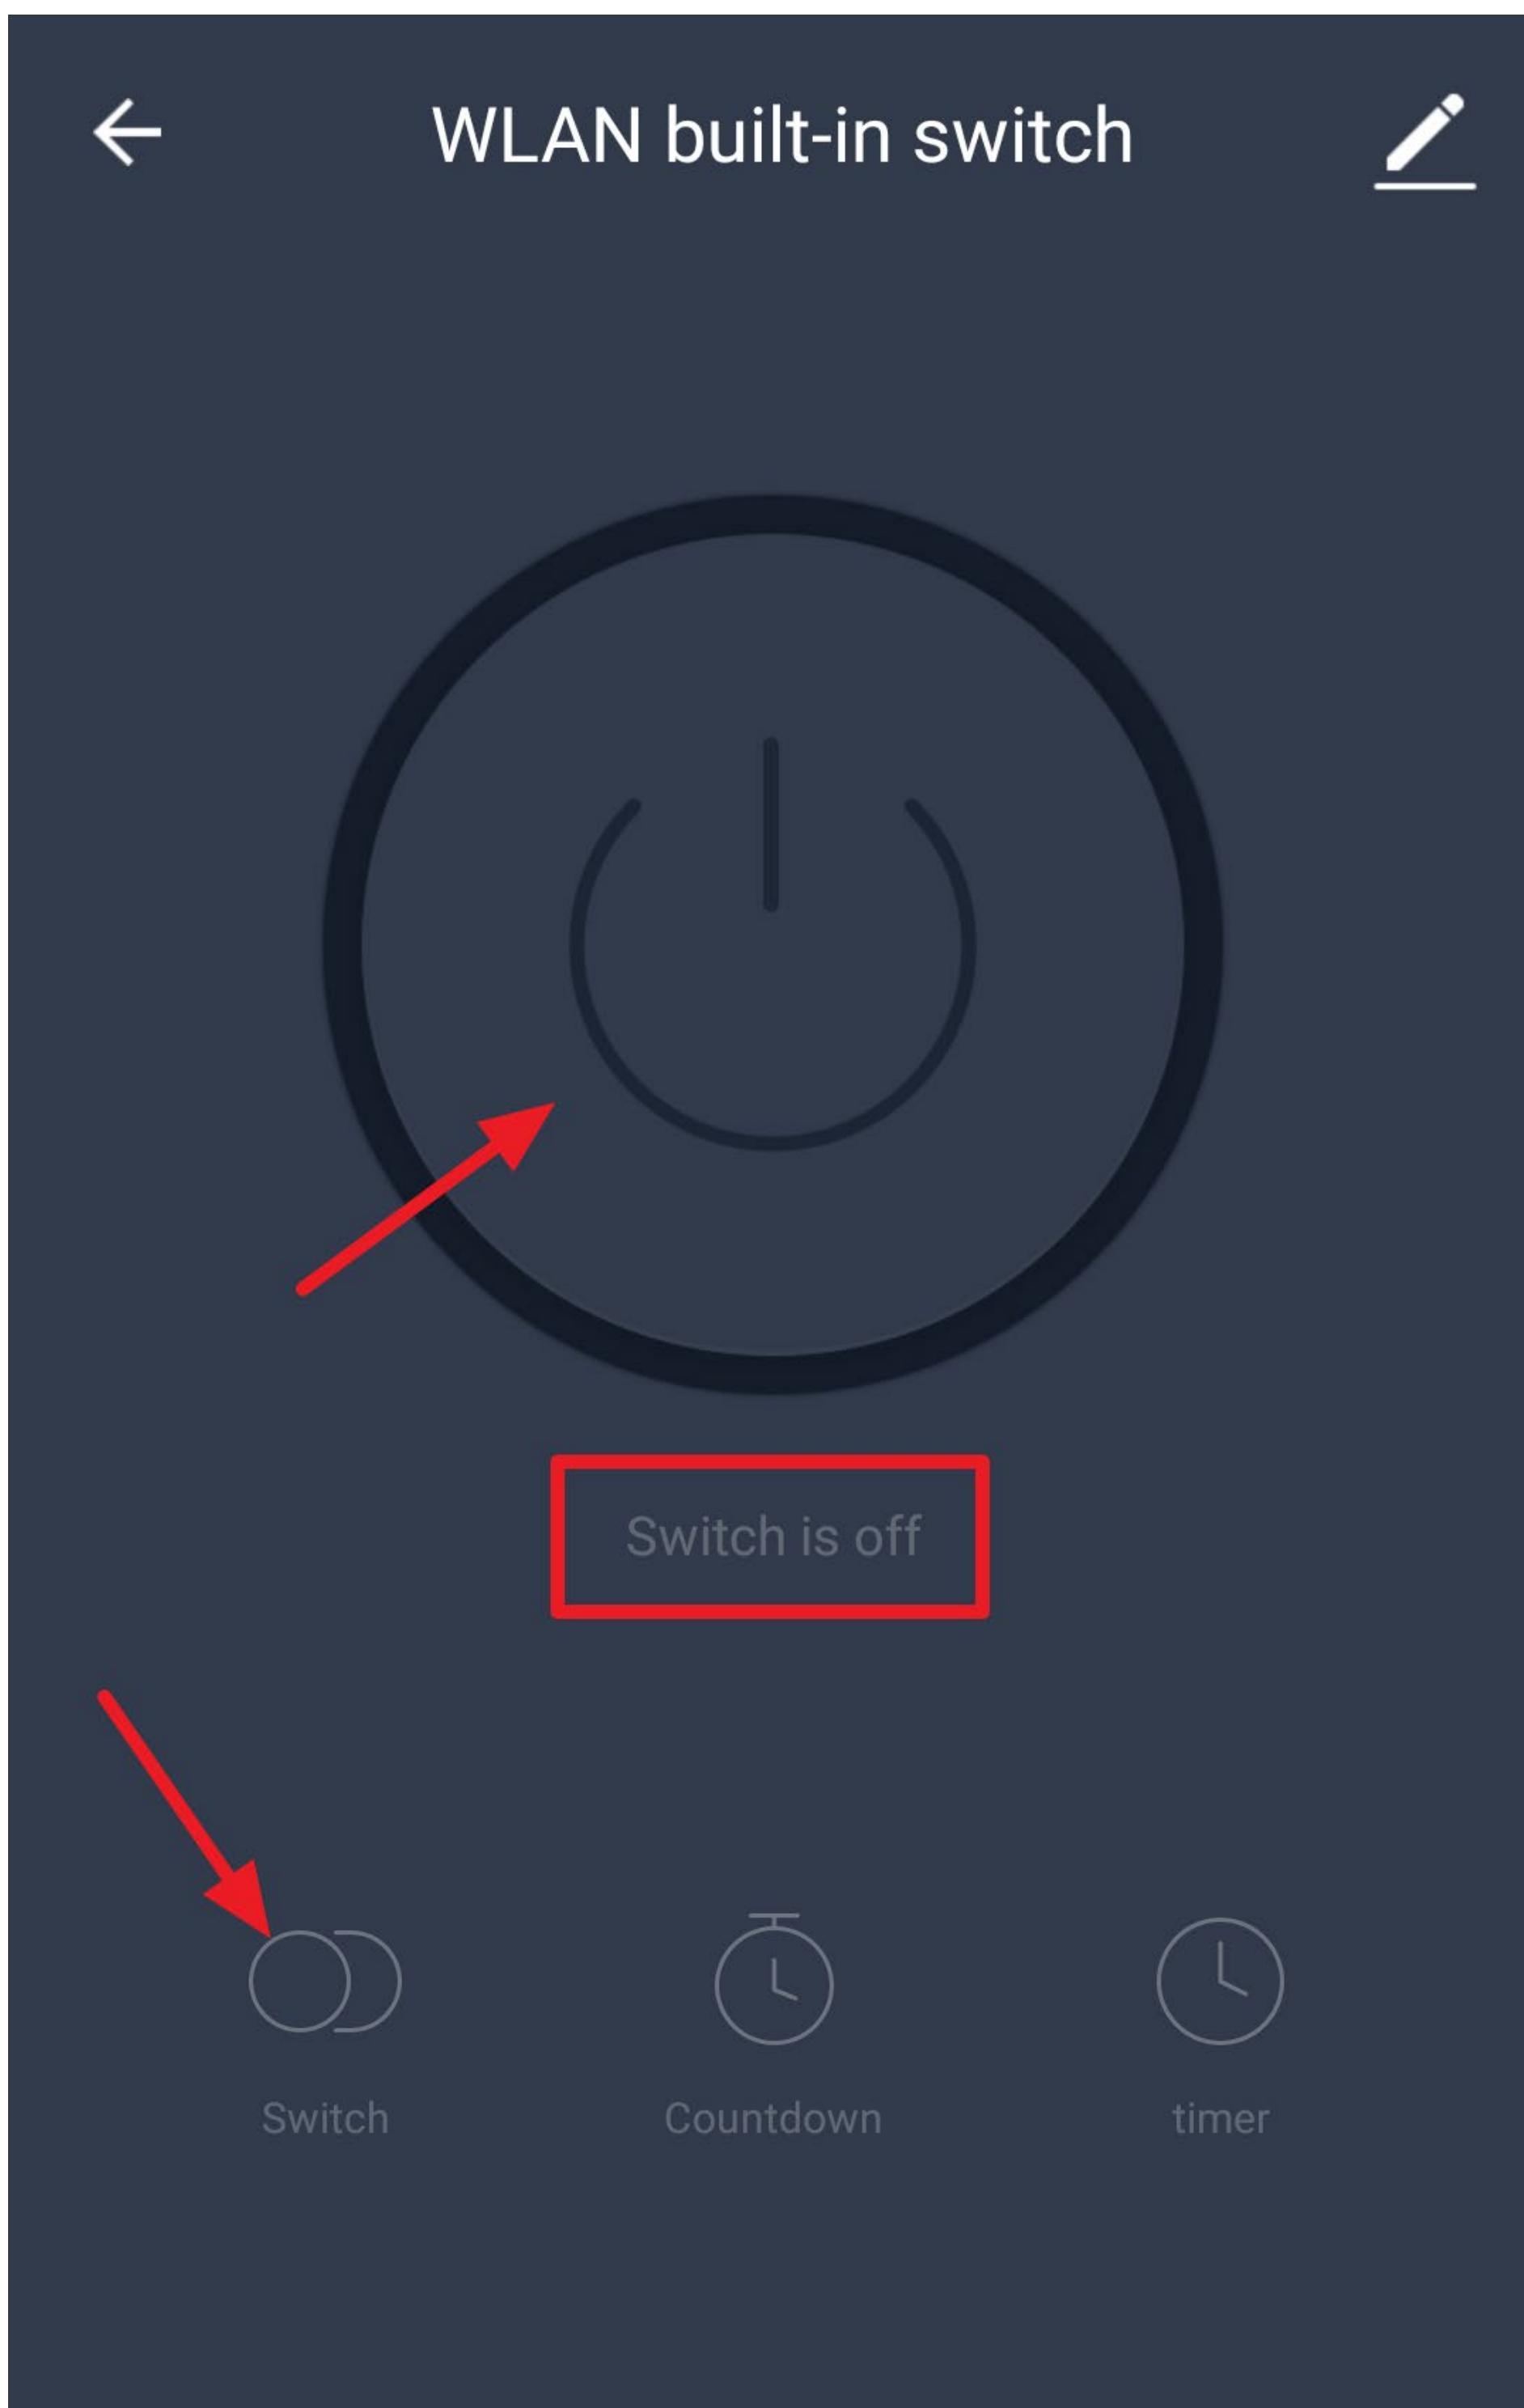 


 - The background will thus become light and the status display will also change.
- To programme a countdown, tap the icon at the bottom centre.

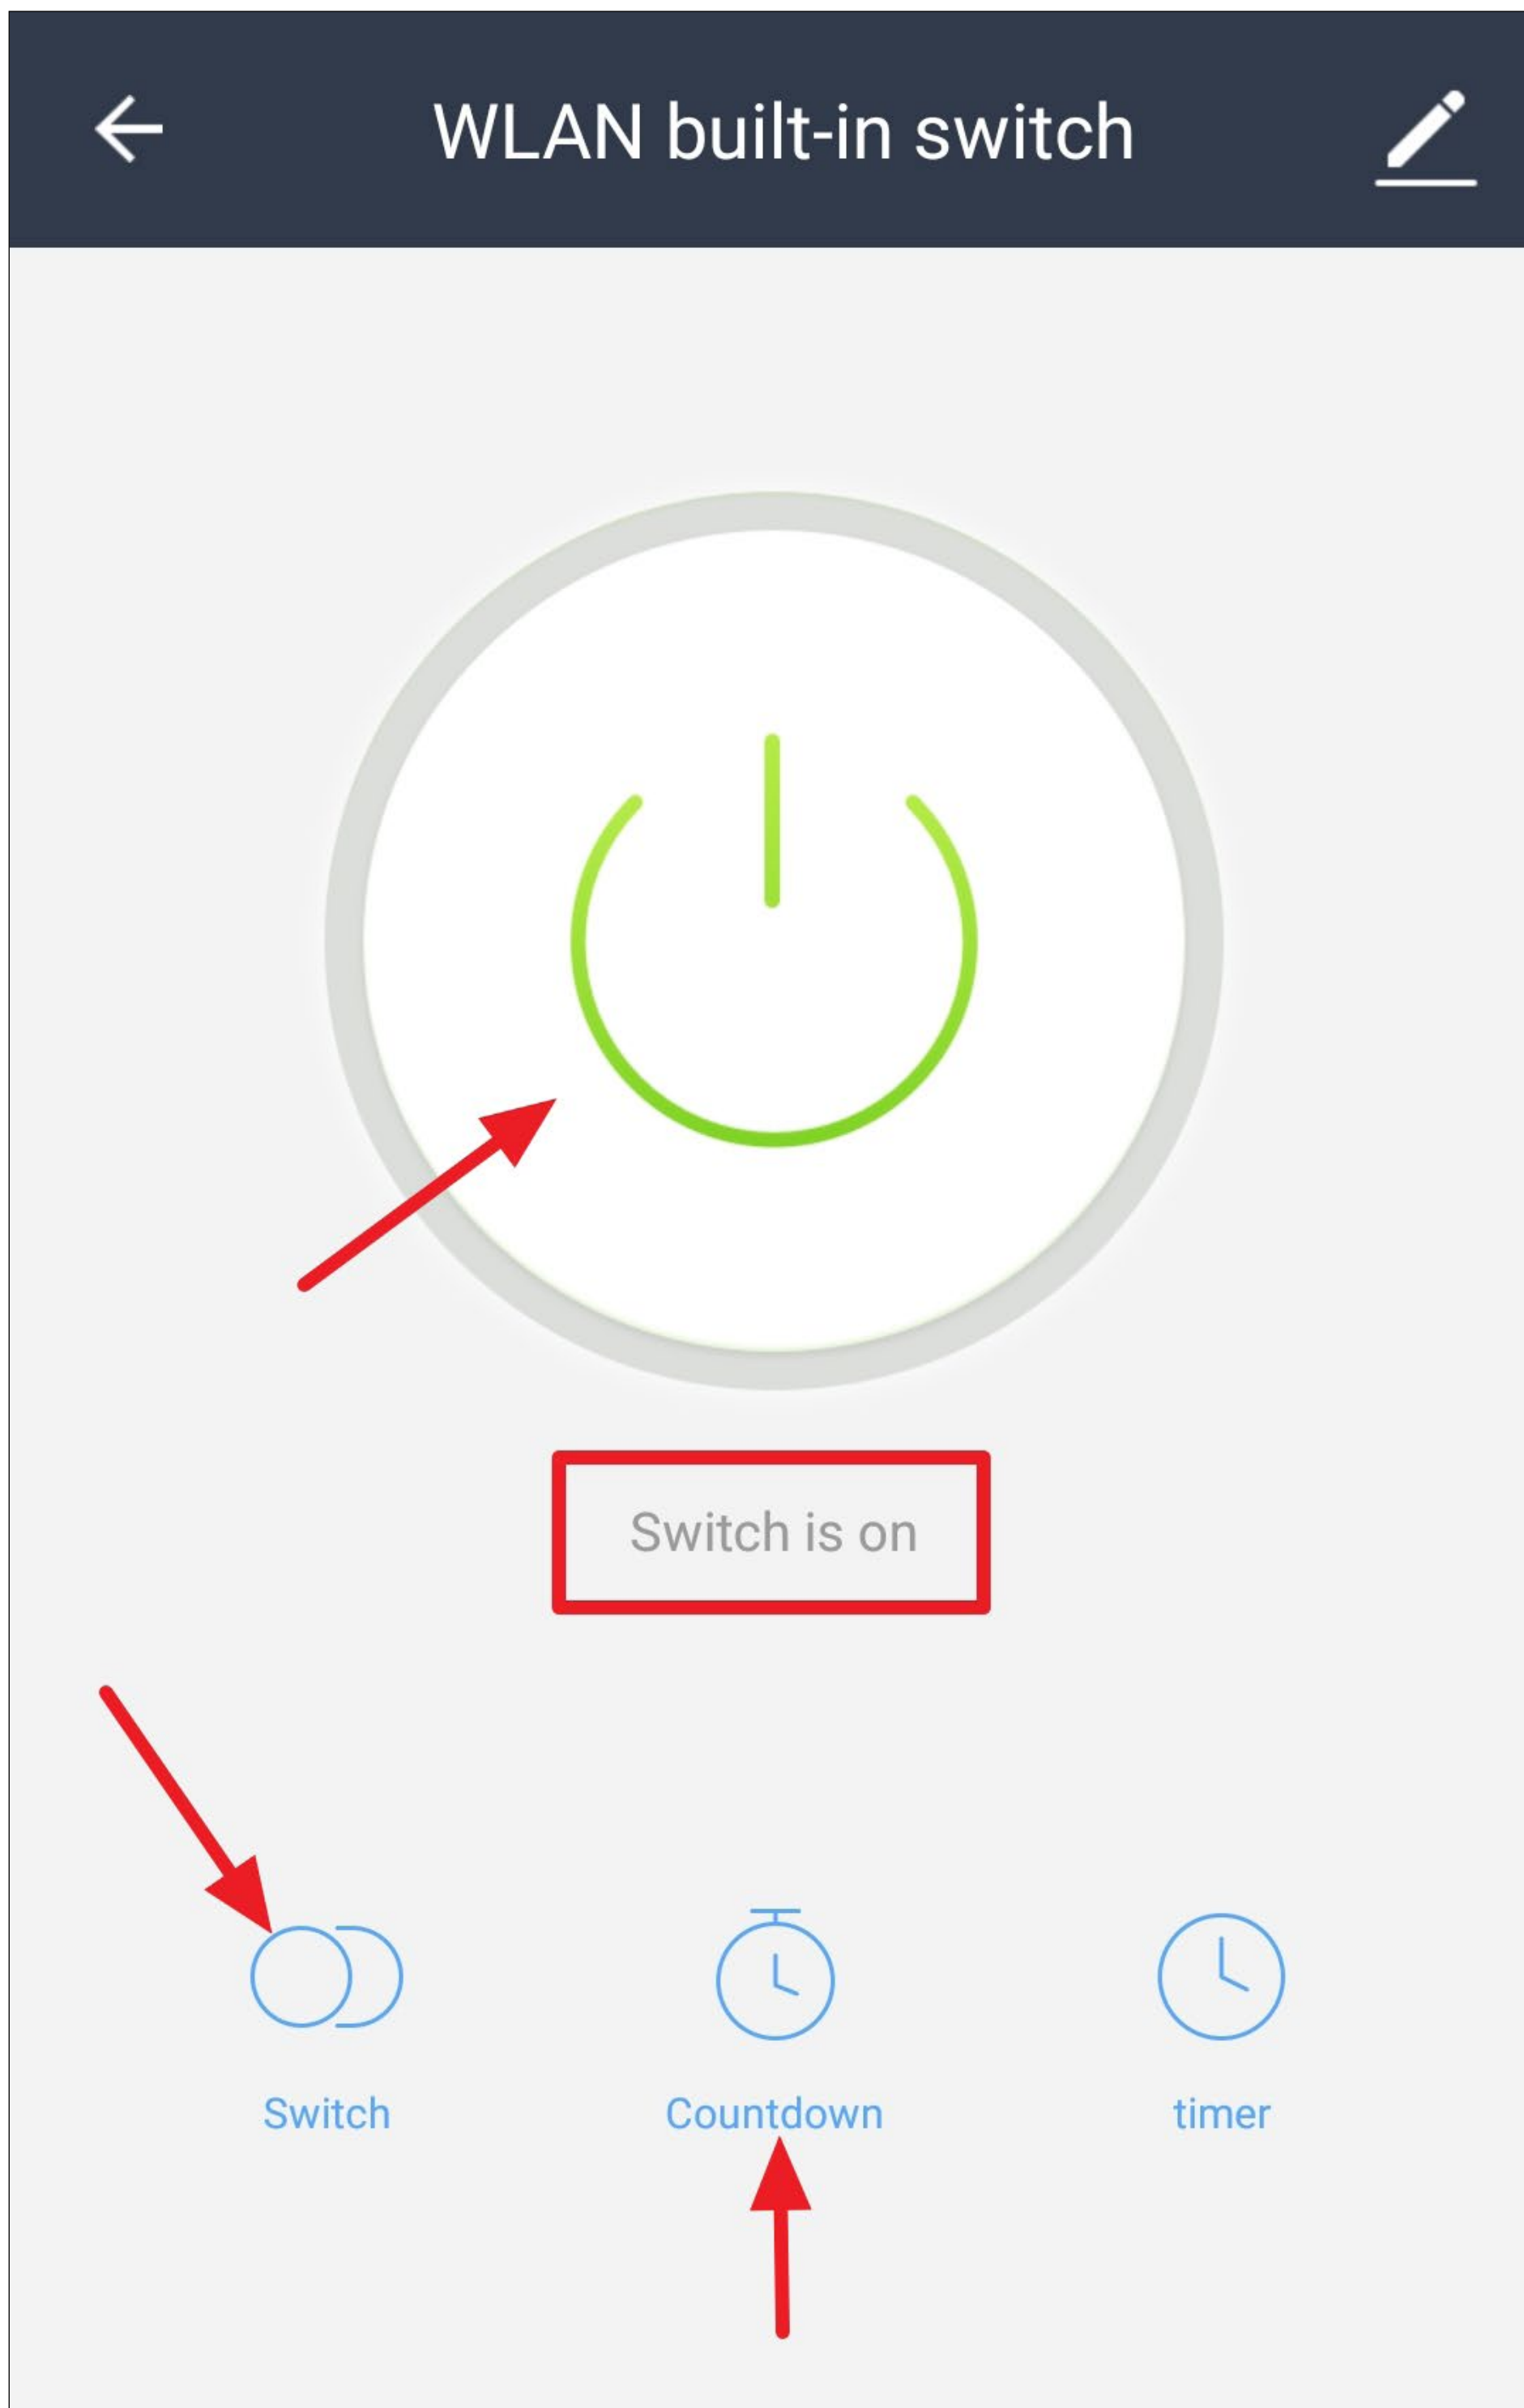


- The hour selection is enabled automatically.
- Set the desired hour.

 To do this, simply move your finger around the small circle (set on 1 in the figure), or just tap the desired hour.

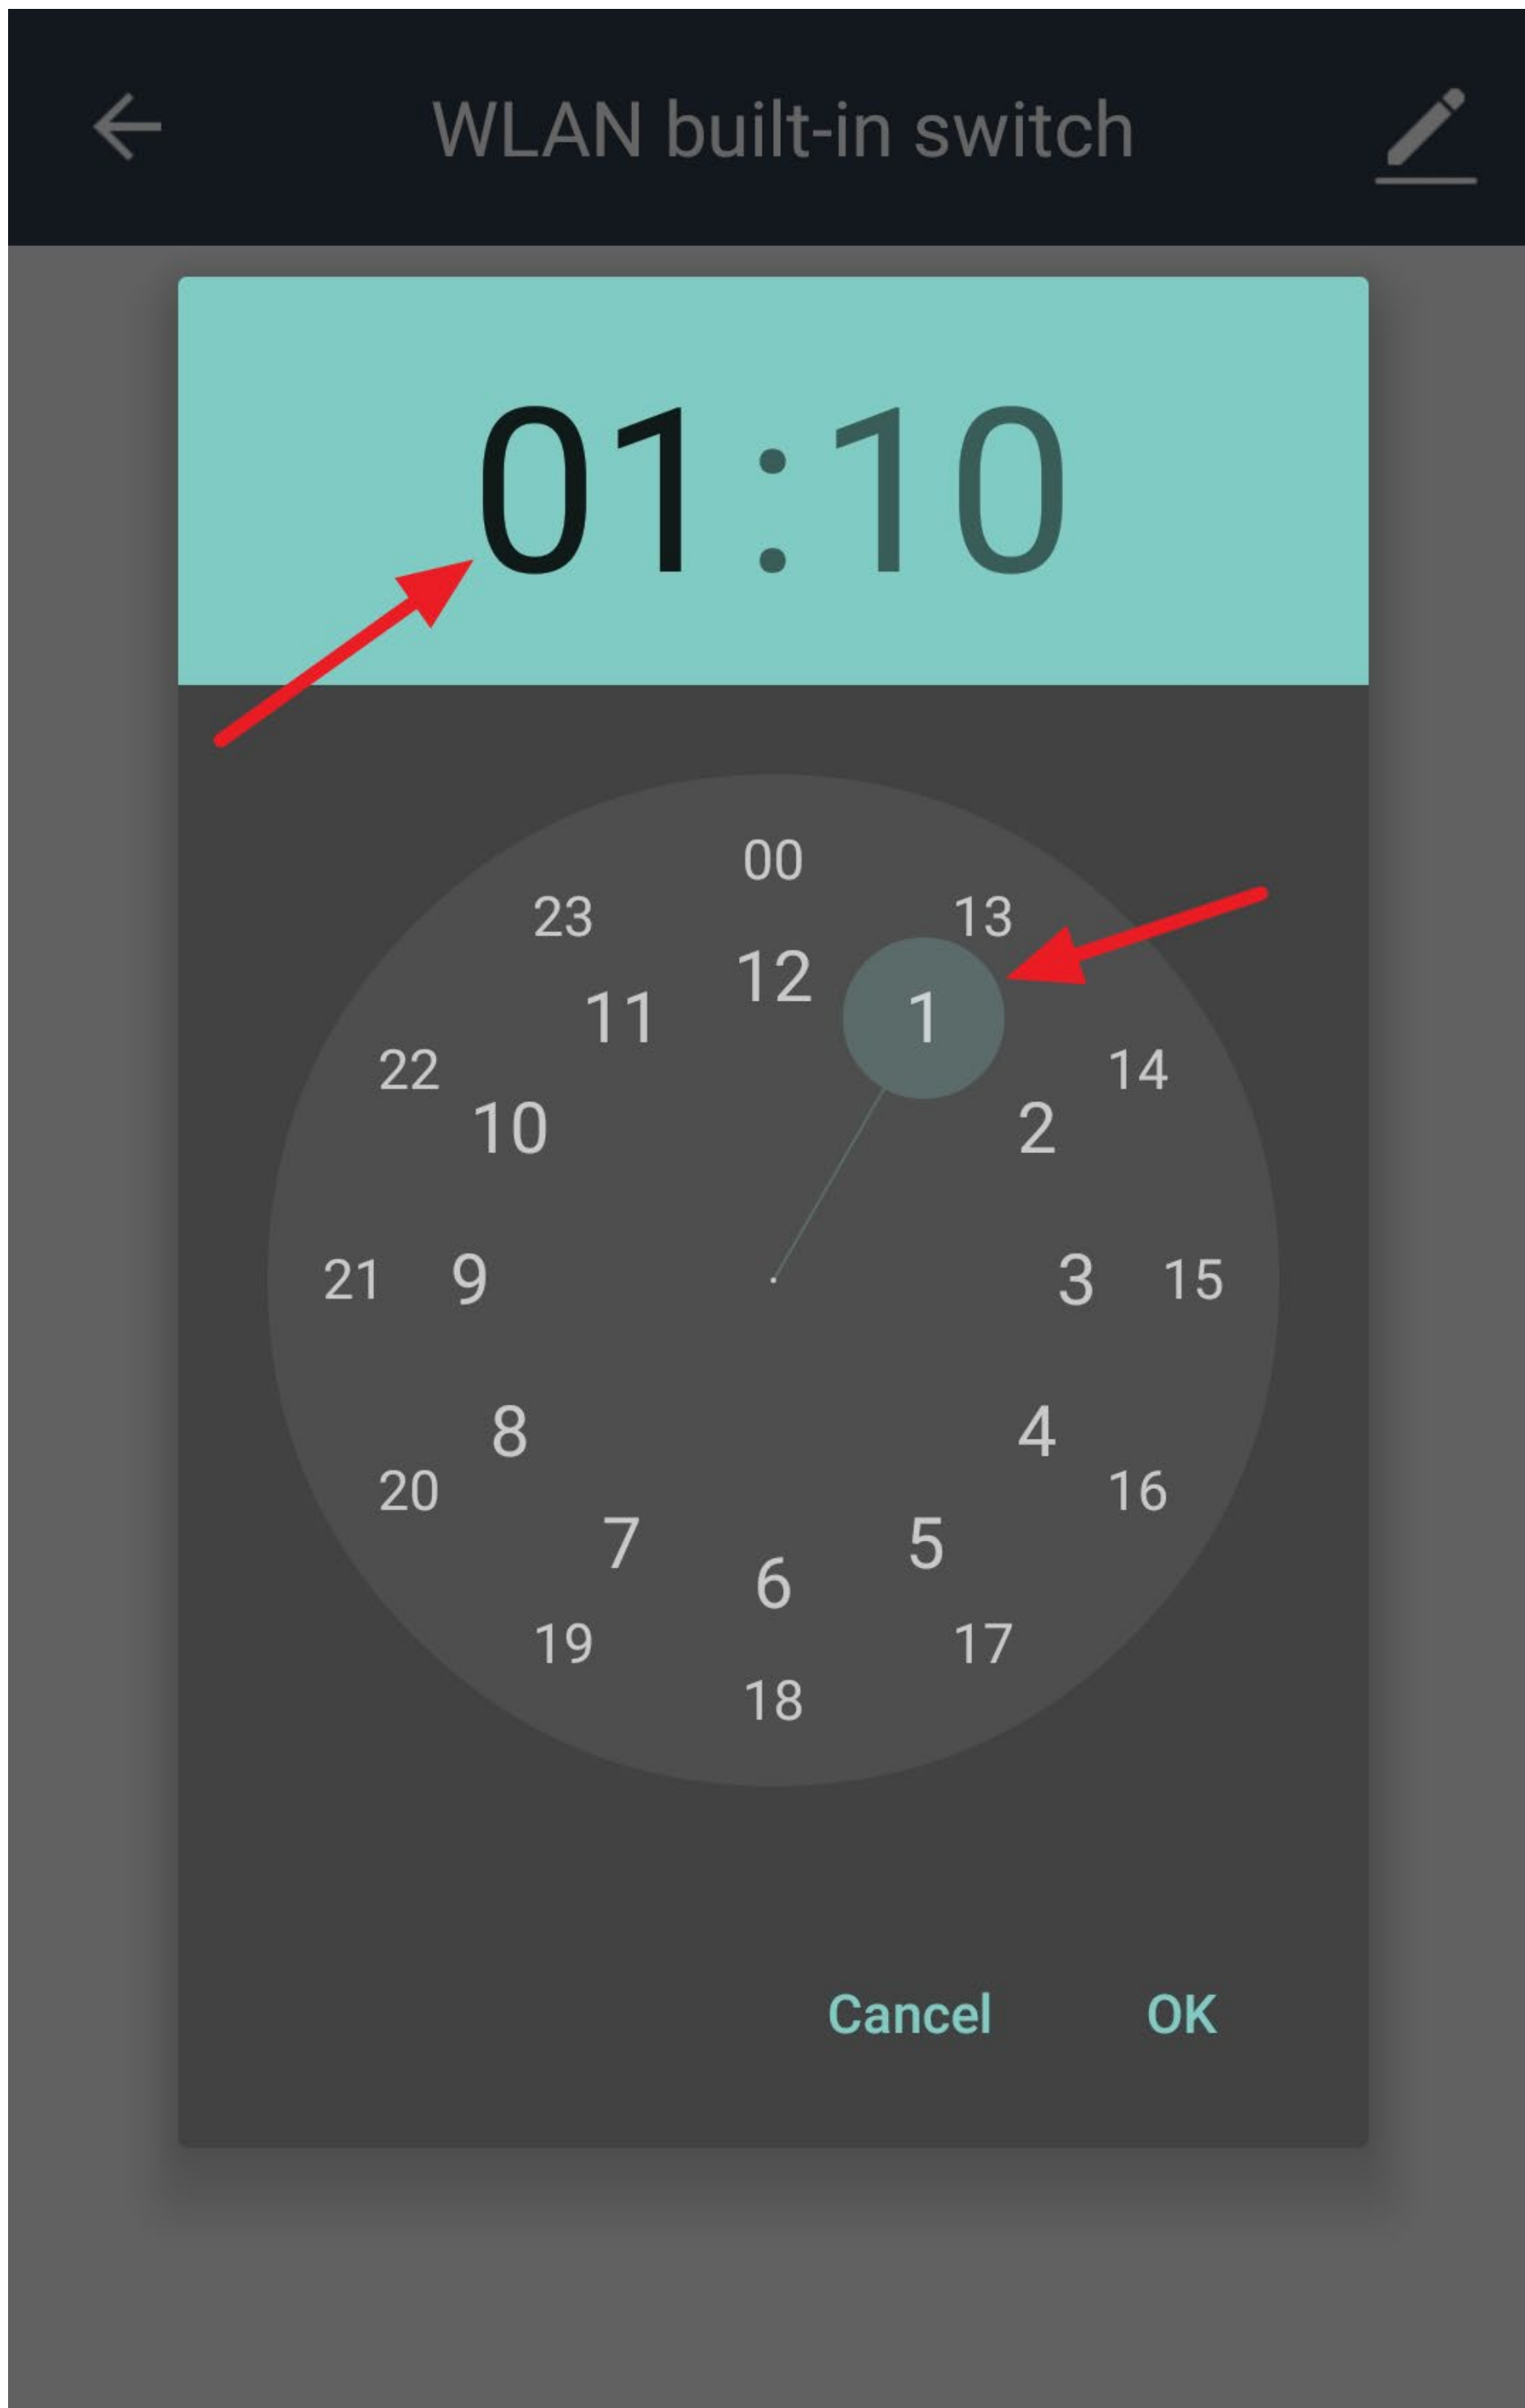

 
- Tap the minute selection.
- Set the desired minutes in the same fashion as the hour.
- Tap “**OK**” to confirm and save.

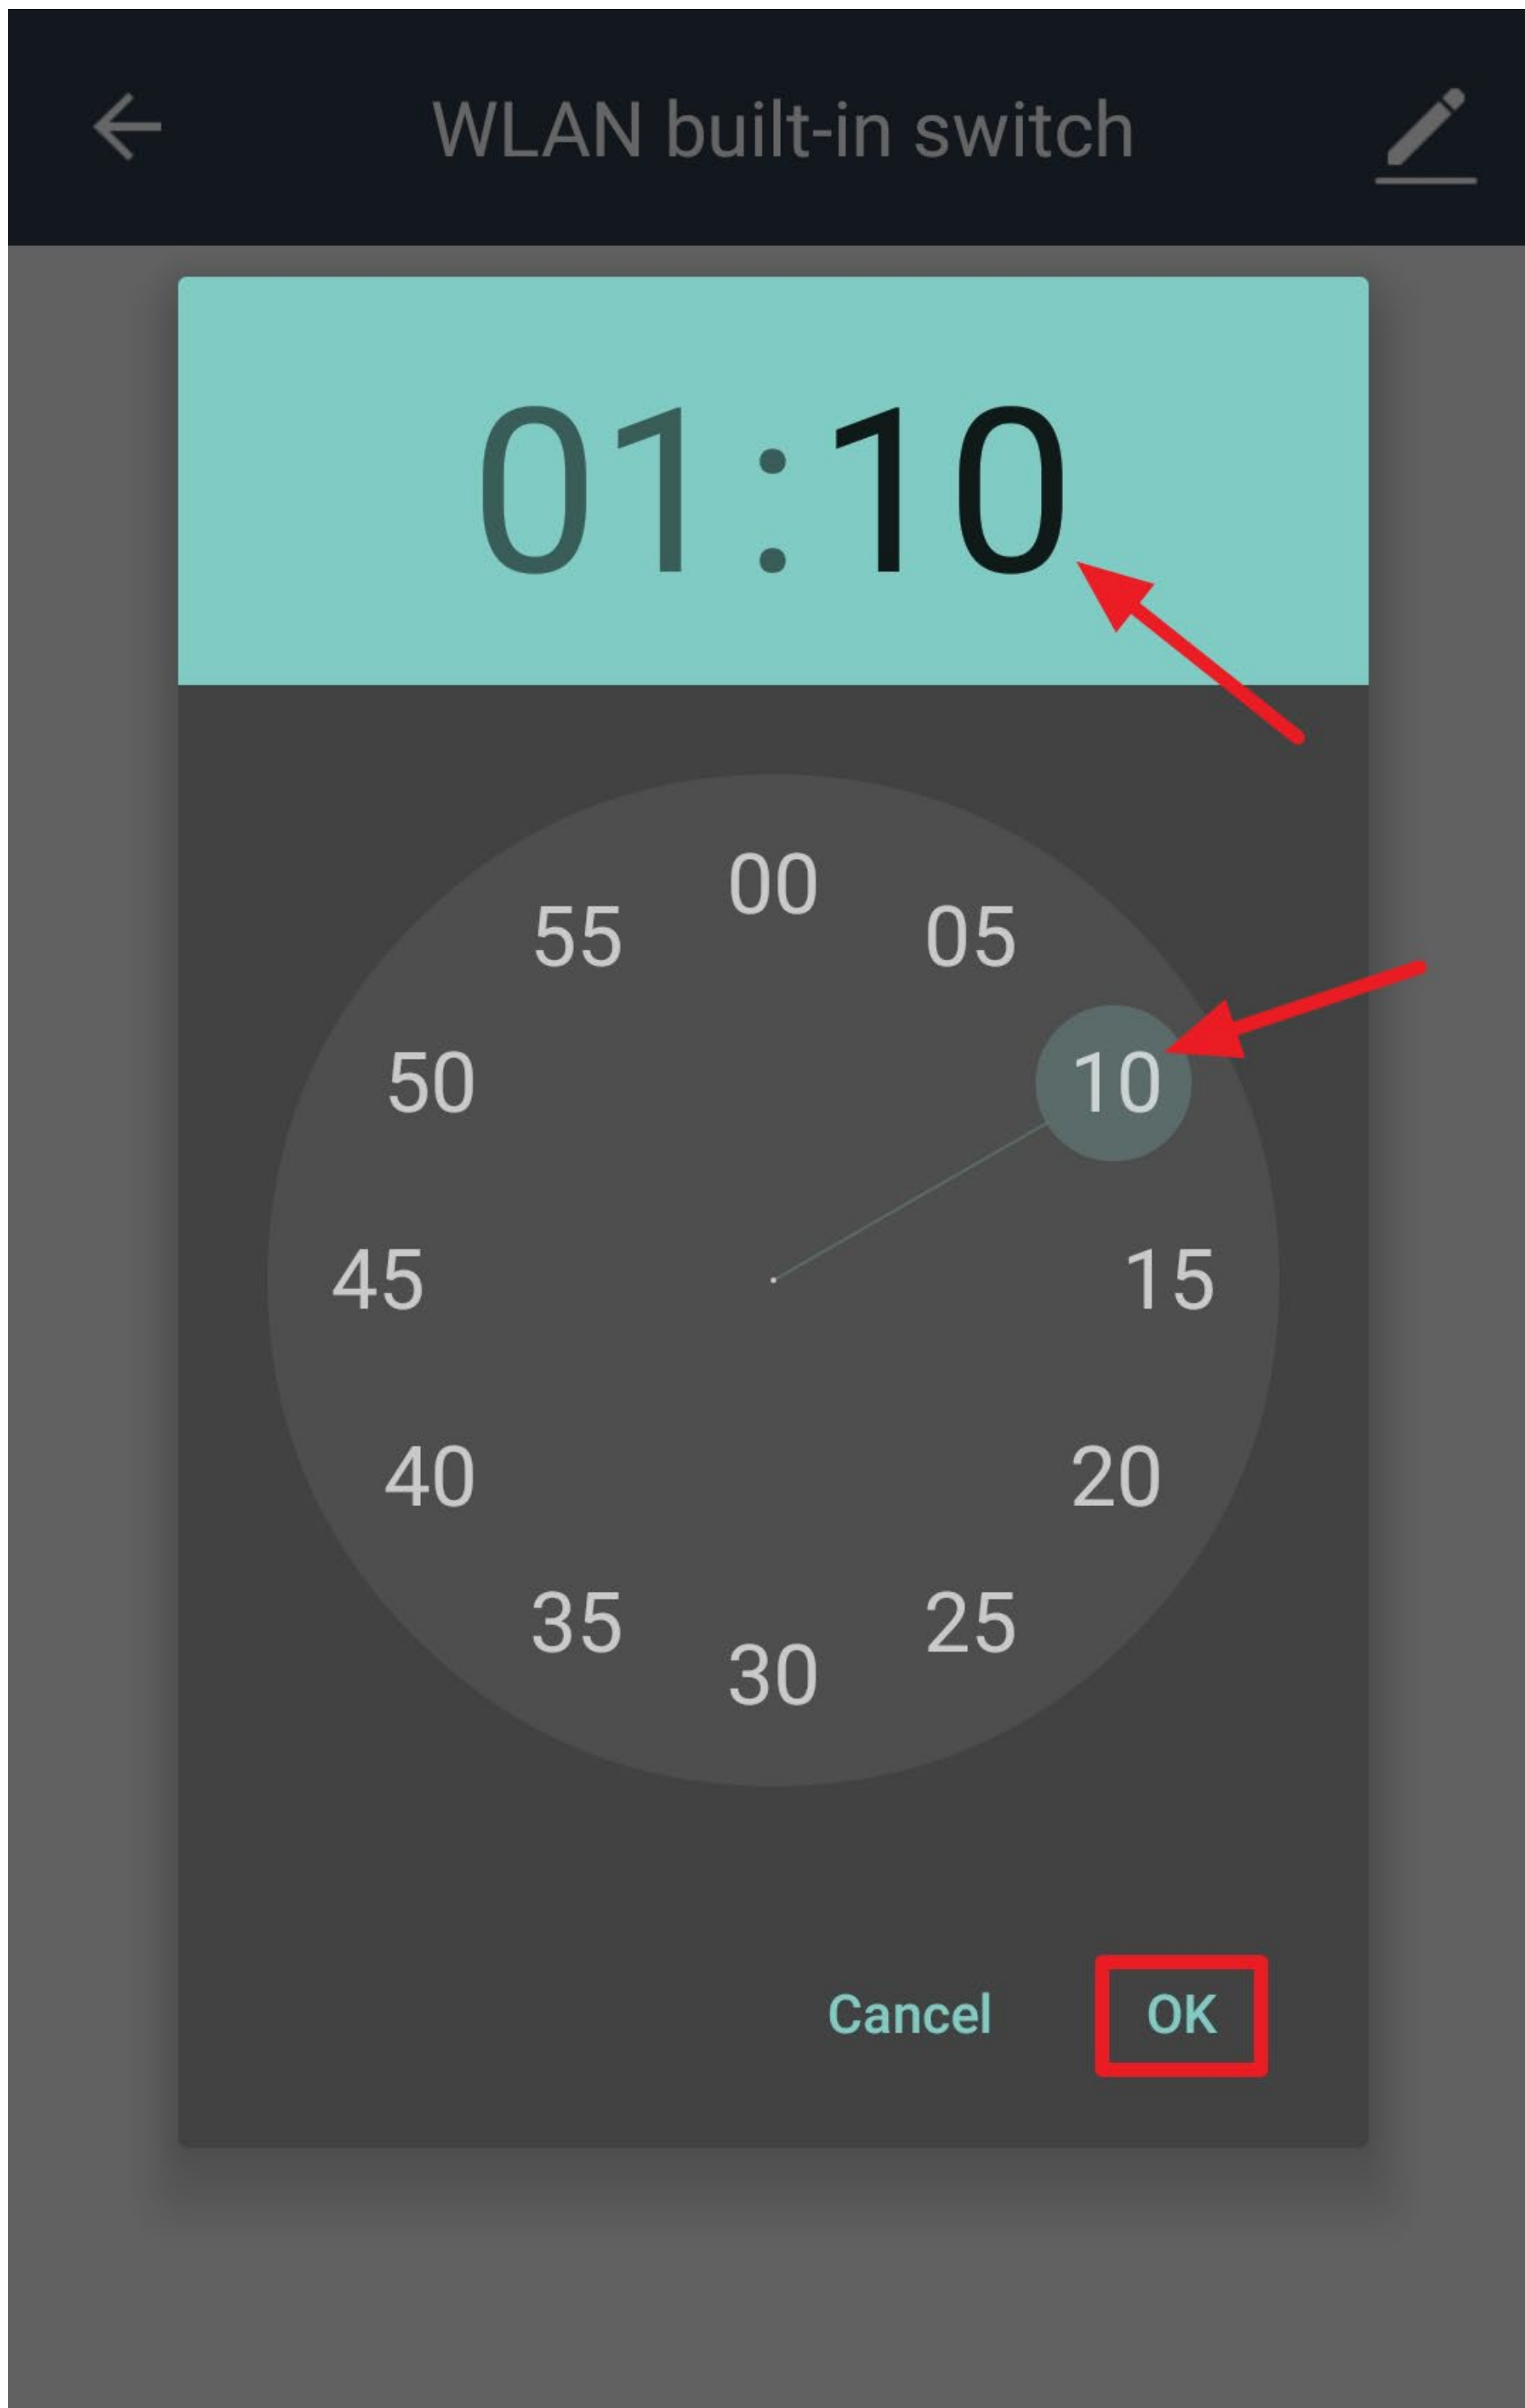


- The status field now shows the current status, as well as the countdown and what will happen at the end of the countdown.

In this case, the switch will turn off at the end of the countdown.

 - If you want the switch to remain enabled after the countdown, it must be disabled during programming.
- To clear the countdown, simply perform a manual switching operation.
- To programme a timer, tap the icon at the bottom right.

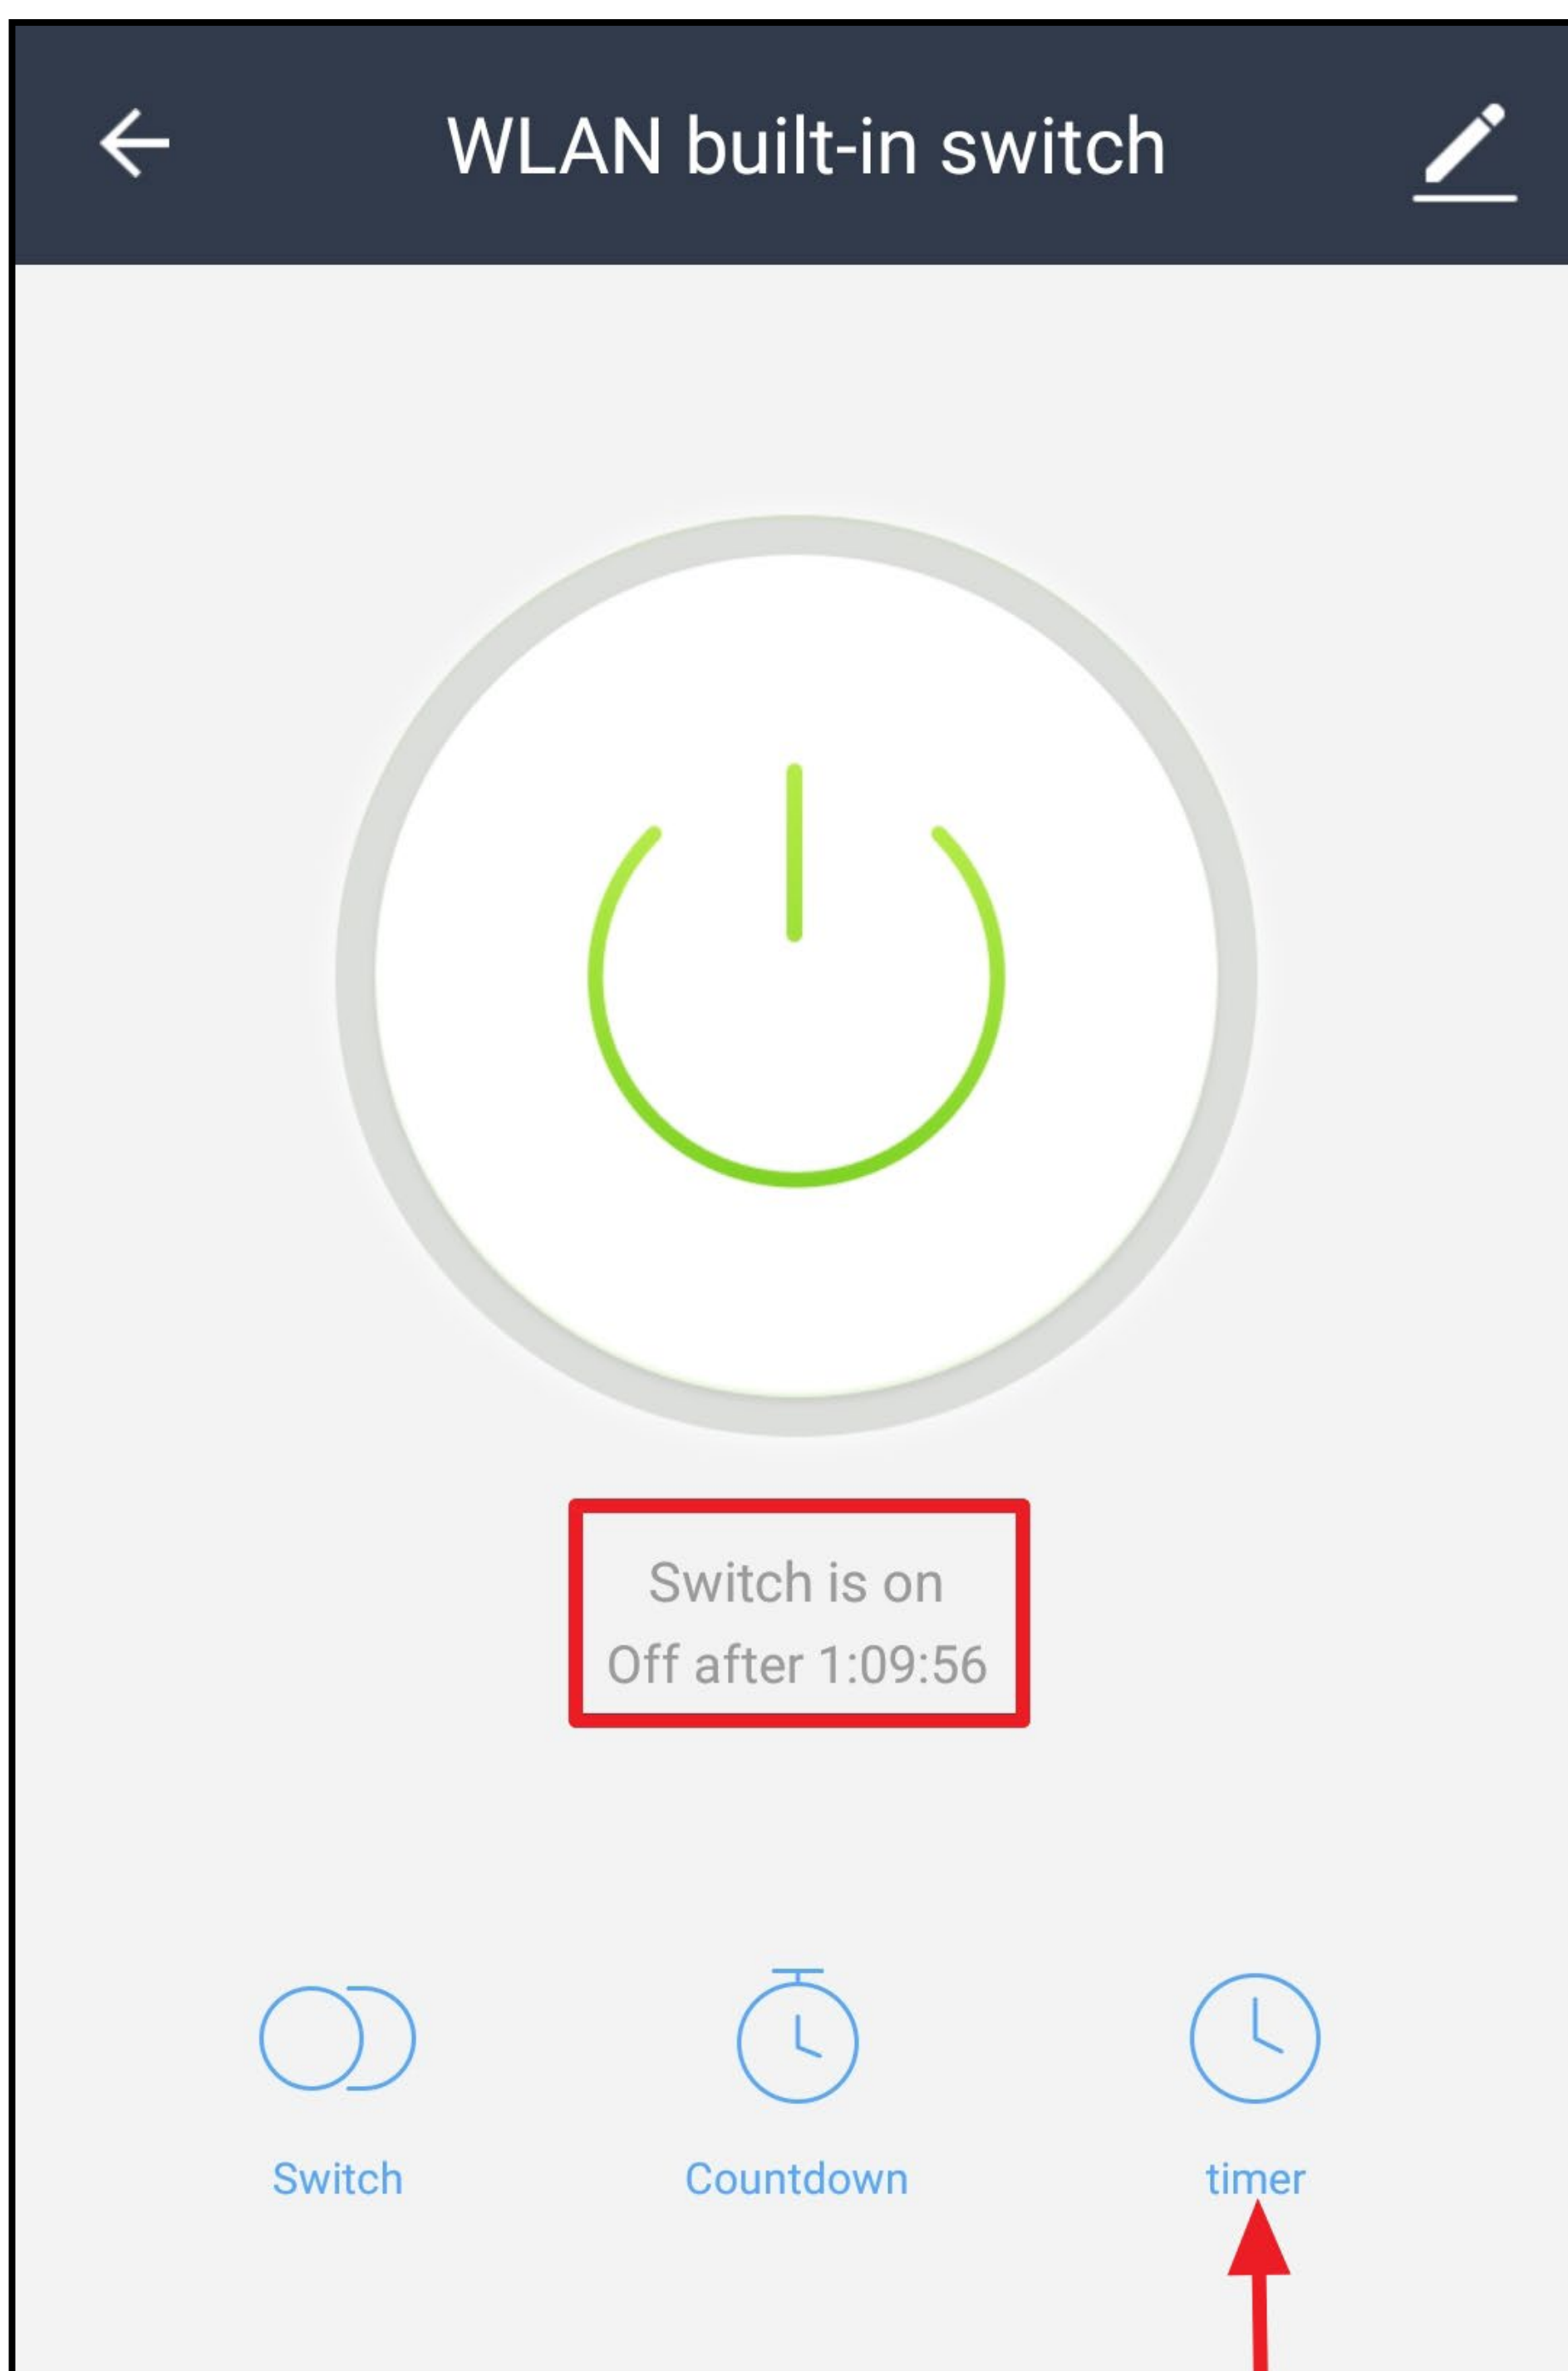

 
- To add a new timer, tap the bottom button.

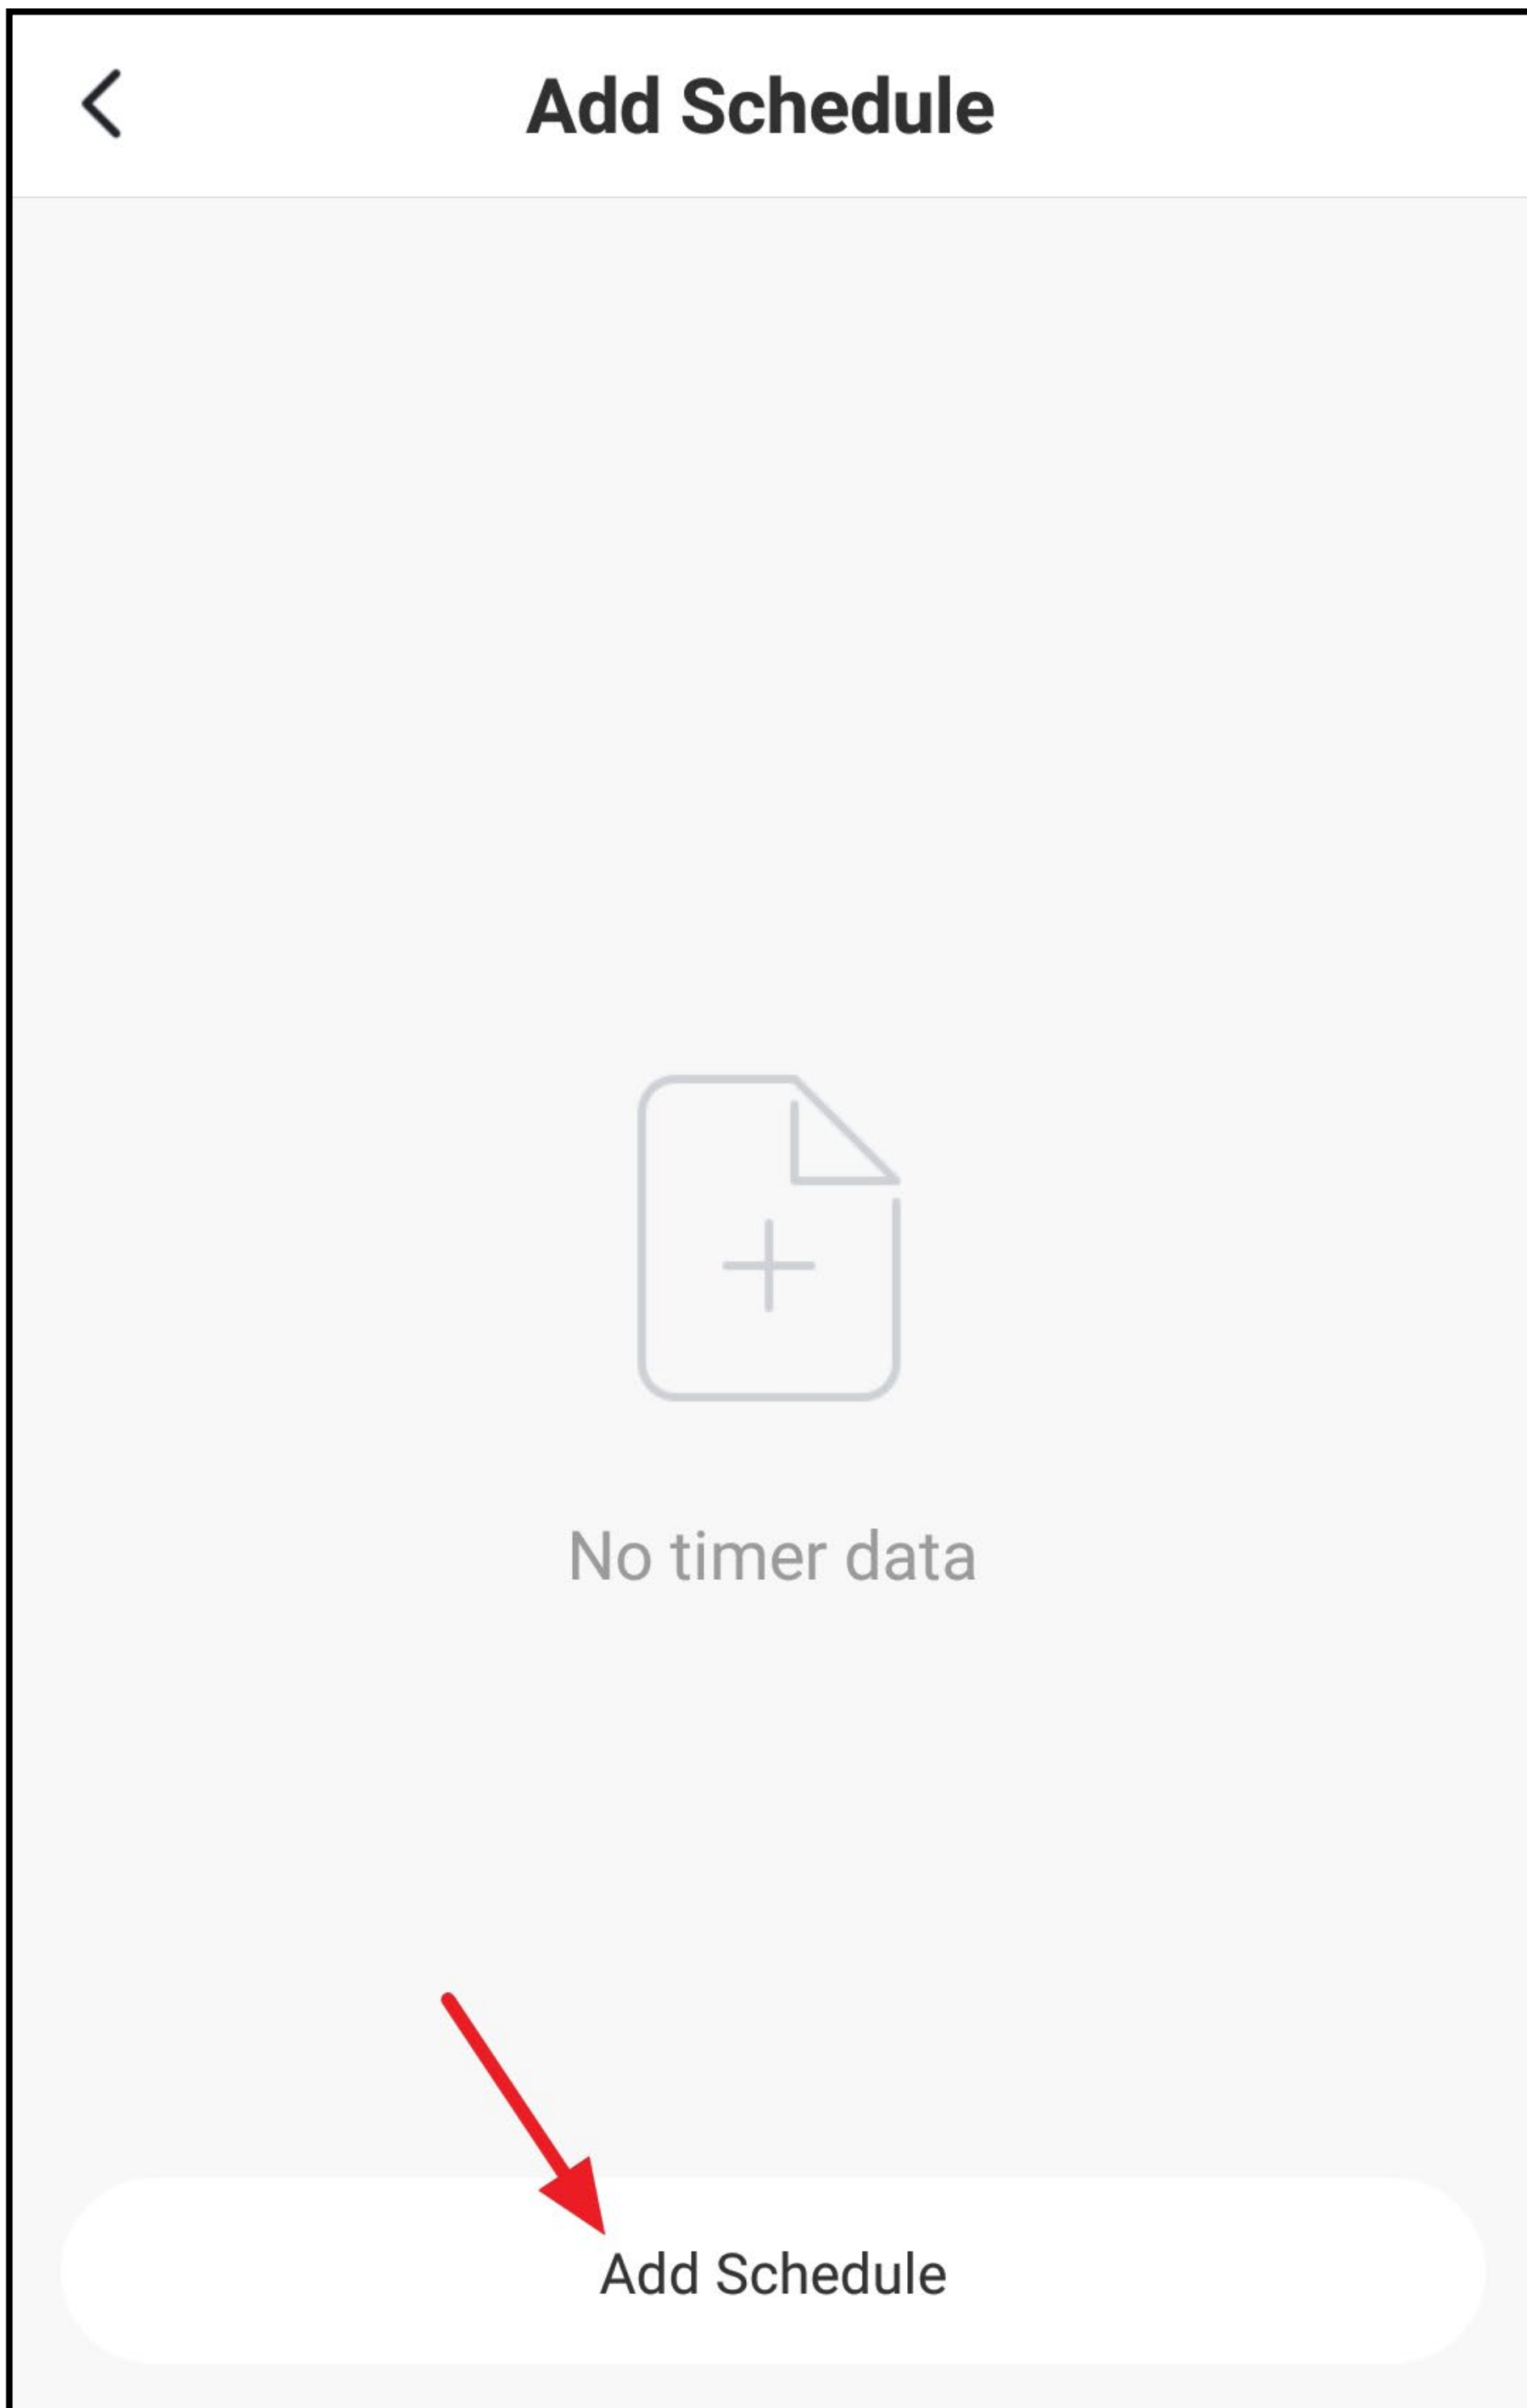

- Swipe up and down to set the hours and then the minutes of the desired time.
- If you want the timer to run more than once, tap the repeat button (square in the figure).

The screenshot shows the 'Add Schedule' screen. At the top, there is a back arrow on the left, the title 'Add Schedule' in the center, and a 'Save' button on the right. Below the title, there is a time picker with three rows of numbers. The first row shows '06' and '29'. The second row shows '07' and '30', with red arrows pointing to each number. The third row shows '08' and '31'. Below the time picker, there are two options: 'Repeat' and 'Switch'. The 'Repeat' option is set to 'Once' and is highlighted with a red box. The 'Switch' option is set to 'ON'.

- Select the desired days by tapping.
- Then tap the arrow at the top left.



Repeat


Execute once by default if you select none

| | |
|-----------------|-------------------------------------|
| Every Sunday | |
| Every Monday | <input checked="" type="checkbox"/> |
| Every Tuesday | <input checked="" type="checkbox"/> |
| Every Wednesday | <input checked="" type="checkbox"/> |
| Every Thursday | <input checked="" type="checkbox"/> |
| Every Friday | <input checked="" type="checkbox"/> |
| Every Saturday | <input type="checkbox"/> |


- Now select what should happen at the selected time.
- To do this, tap the respective button (small square in the figure).

The screenshot shows a mobile application interface titled "Add Schedule". At the top left is a back arrow, and at the top right is a blue "Save" button. The main content area contains three rows of dates, each separated by a horizontal line: "06 29", "07 30", and "08 31". Below the dates, there are two rows of options. The first row is labeled "Repeat" and has "Once" selected with a right-pointing chevron. The second row is labeled "Switch" and has "ON" selected with a right-pointing chevron. The "ON" option is highlighted with a red rectangular box.

 - In this case, select either “**ON**” or “**OFF**” and use the bottom right button to save the selection.

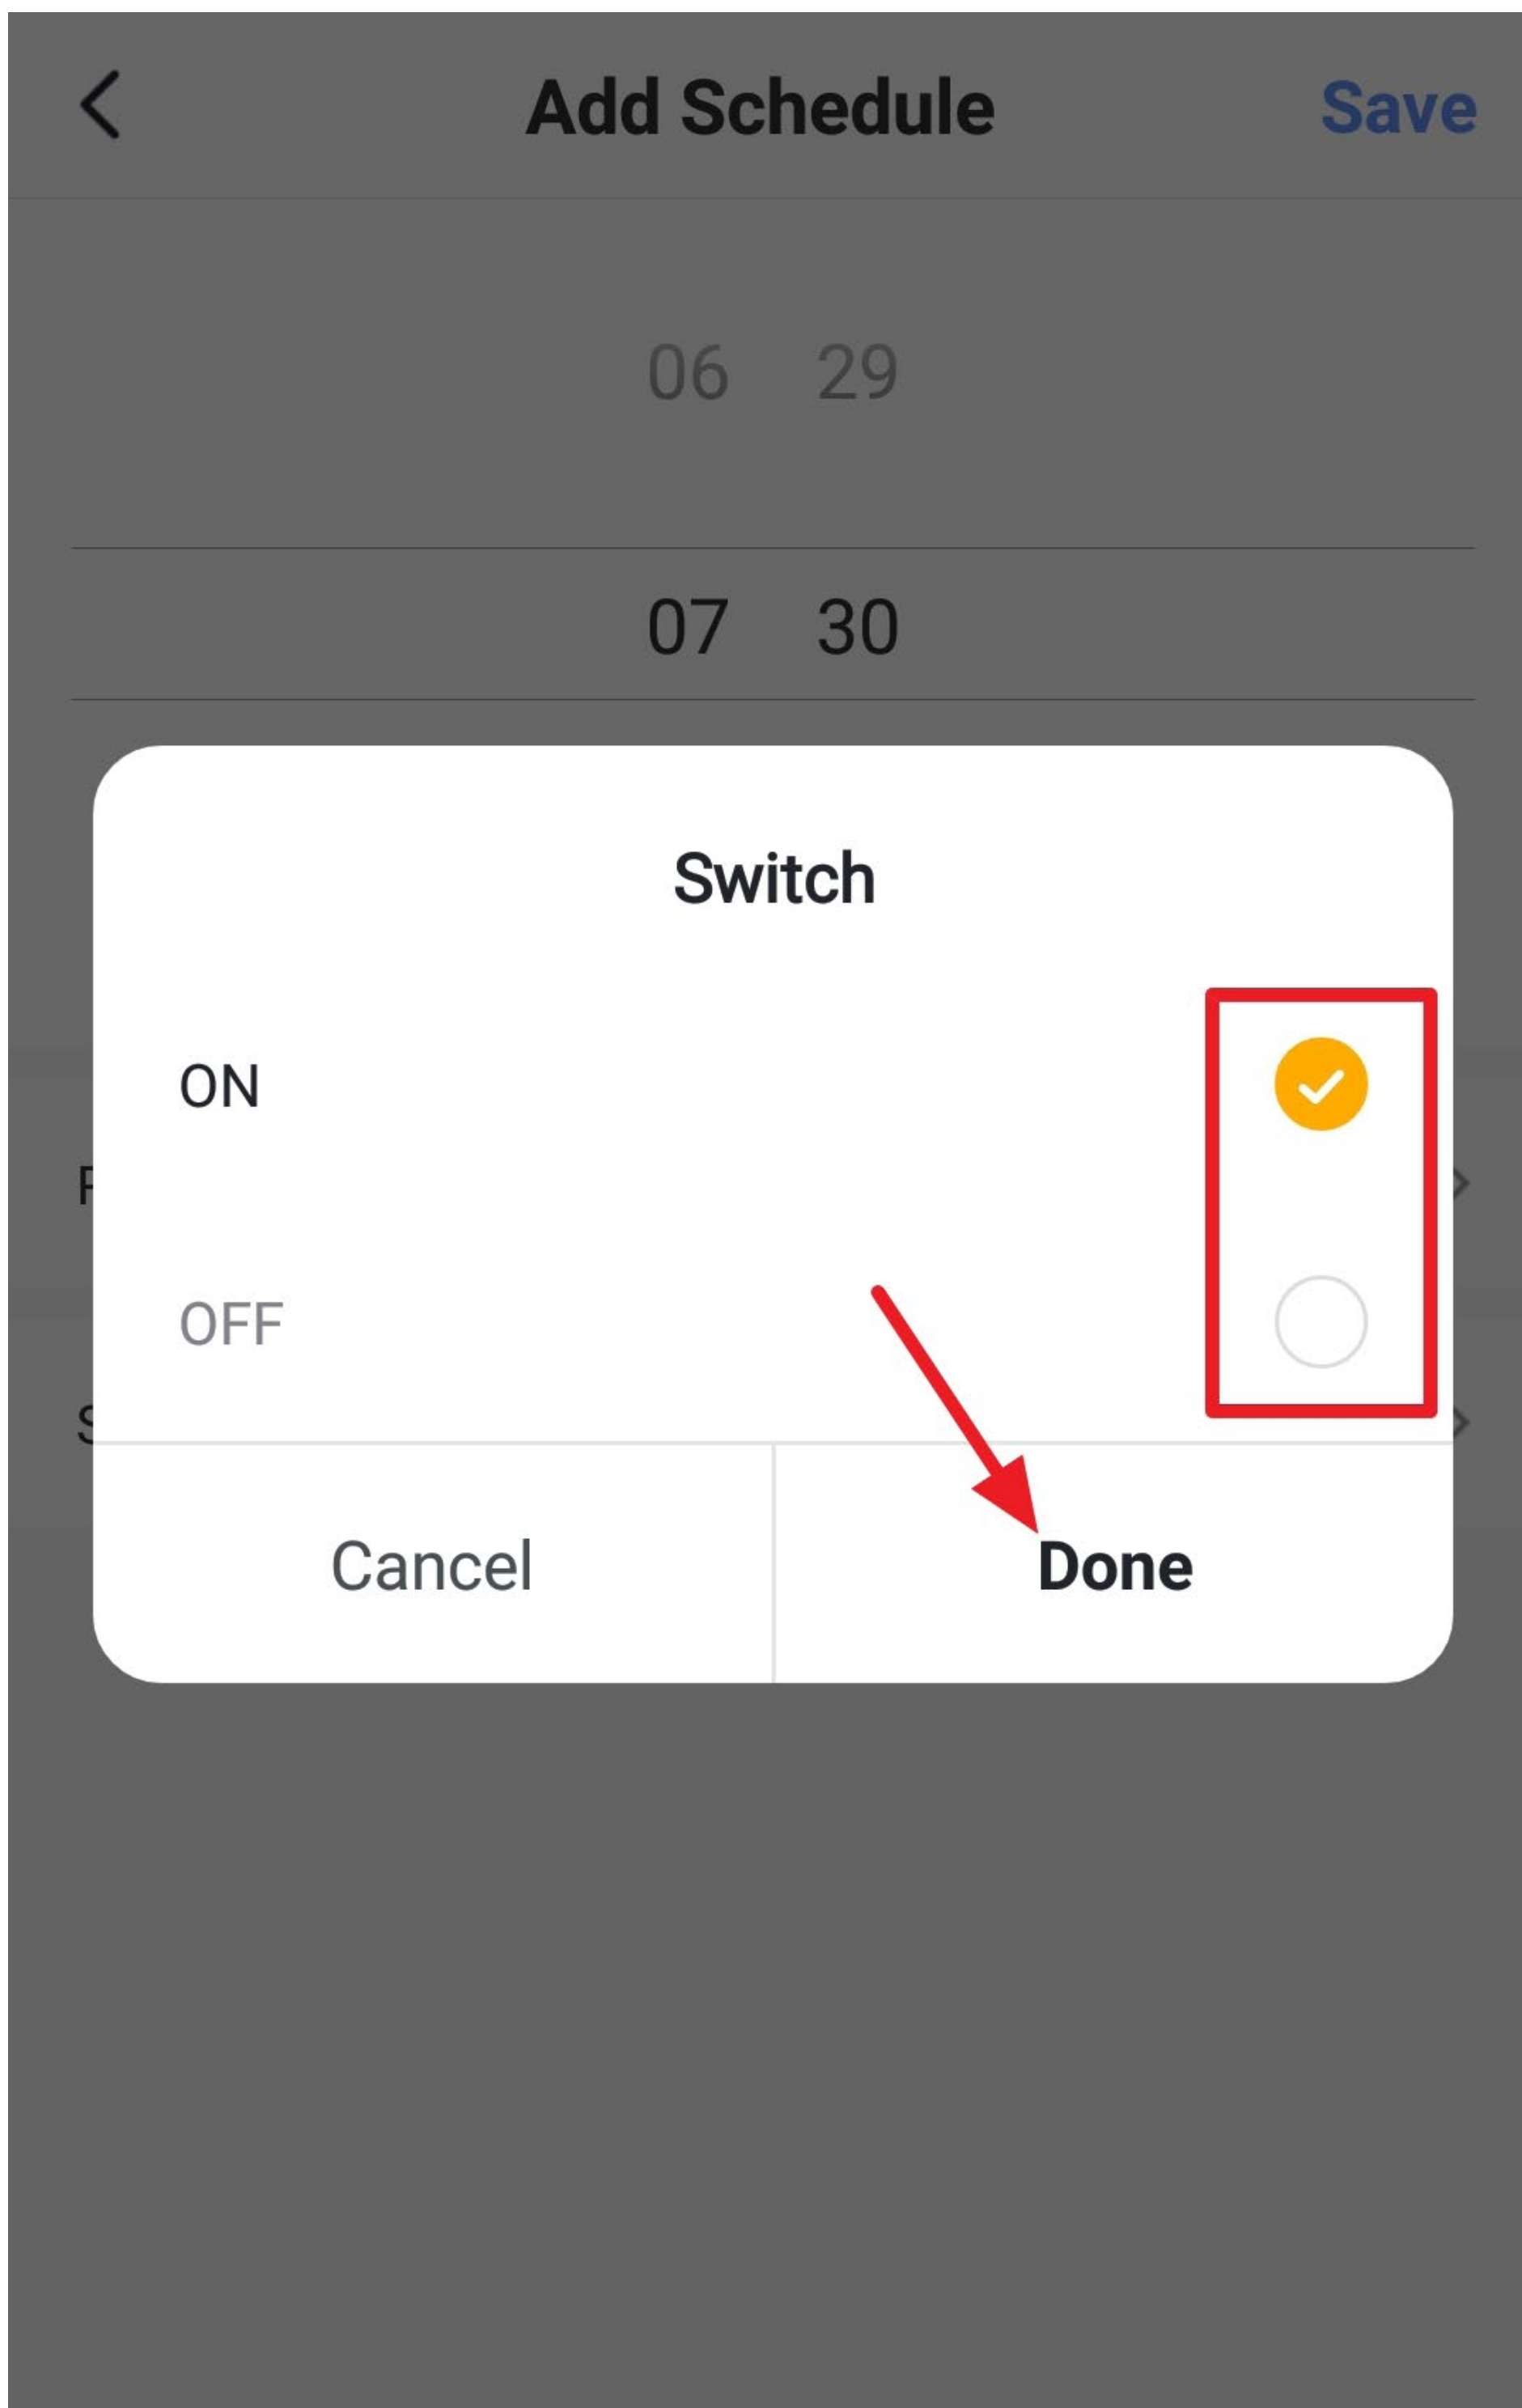


 - On the timer overview page, you can turn all timers on or off (just tap the switch), whichever one you need.
- To delete the timer, tap it a little longer and then confirm the deletion.
- To exit this display, tap the arrow at the top left.

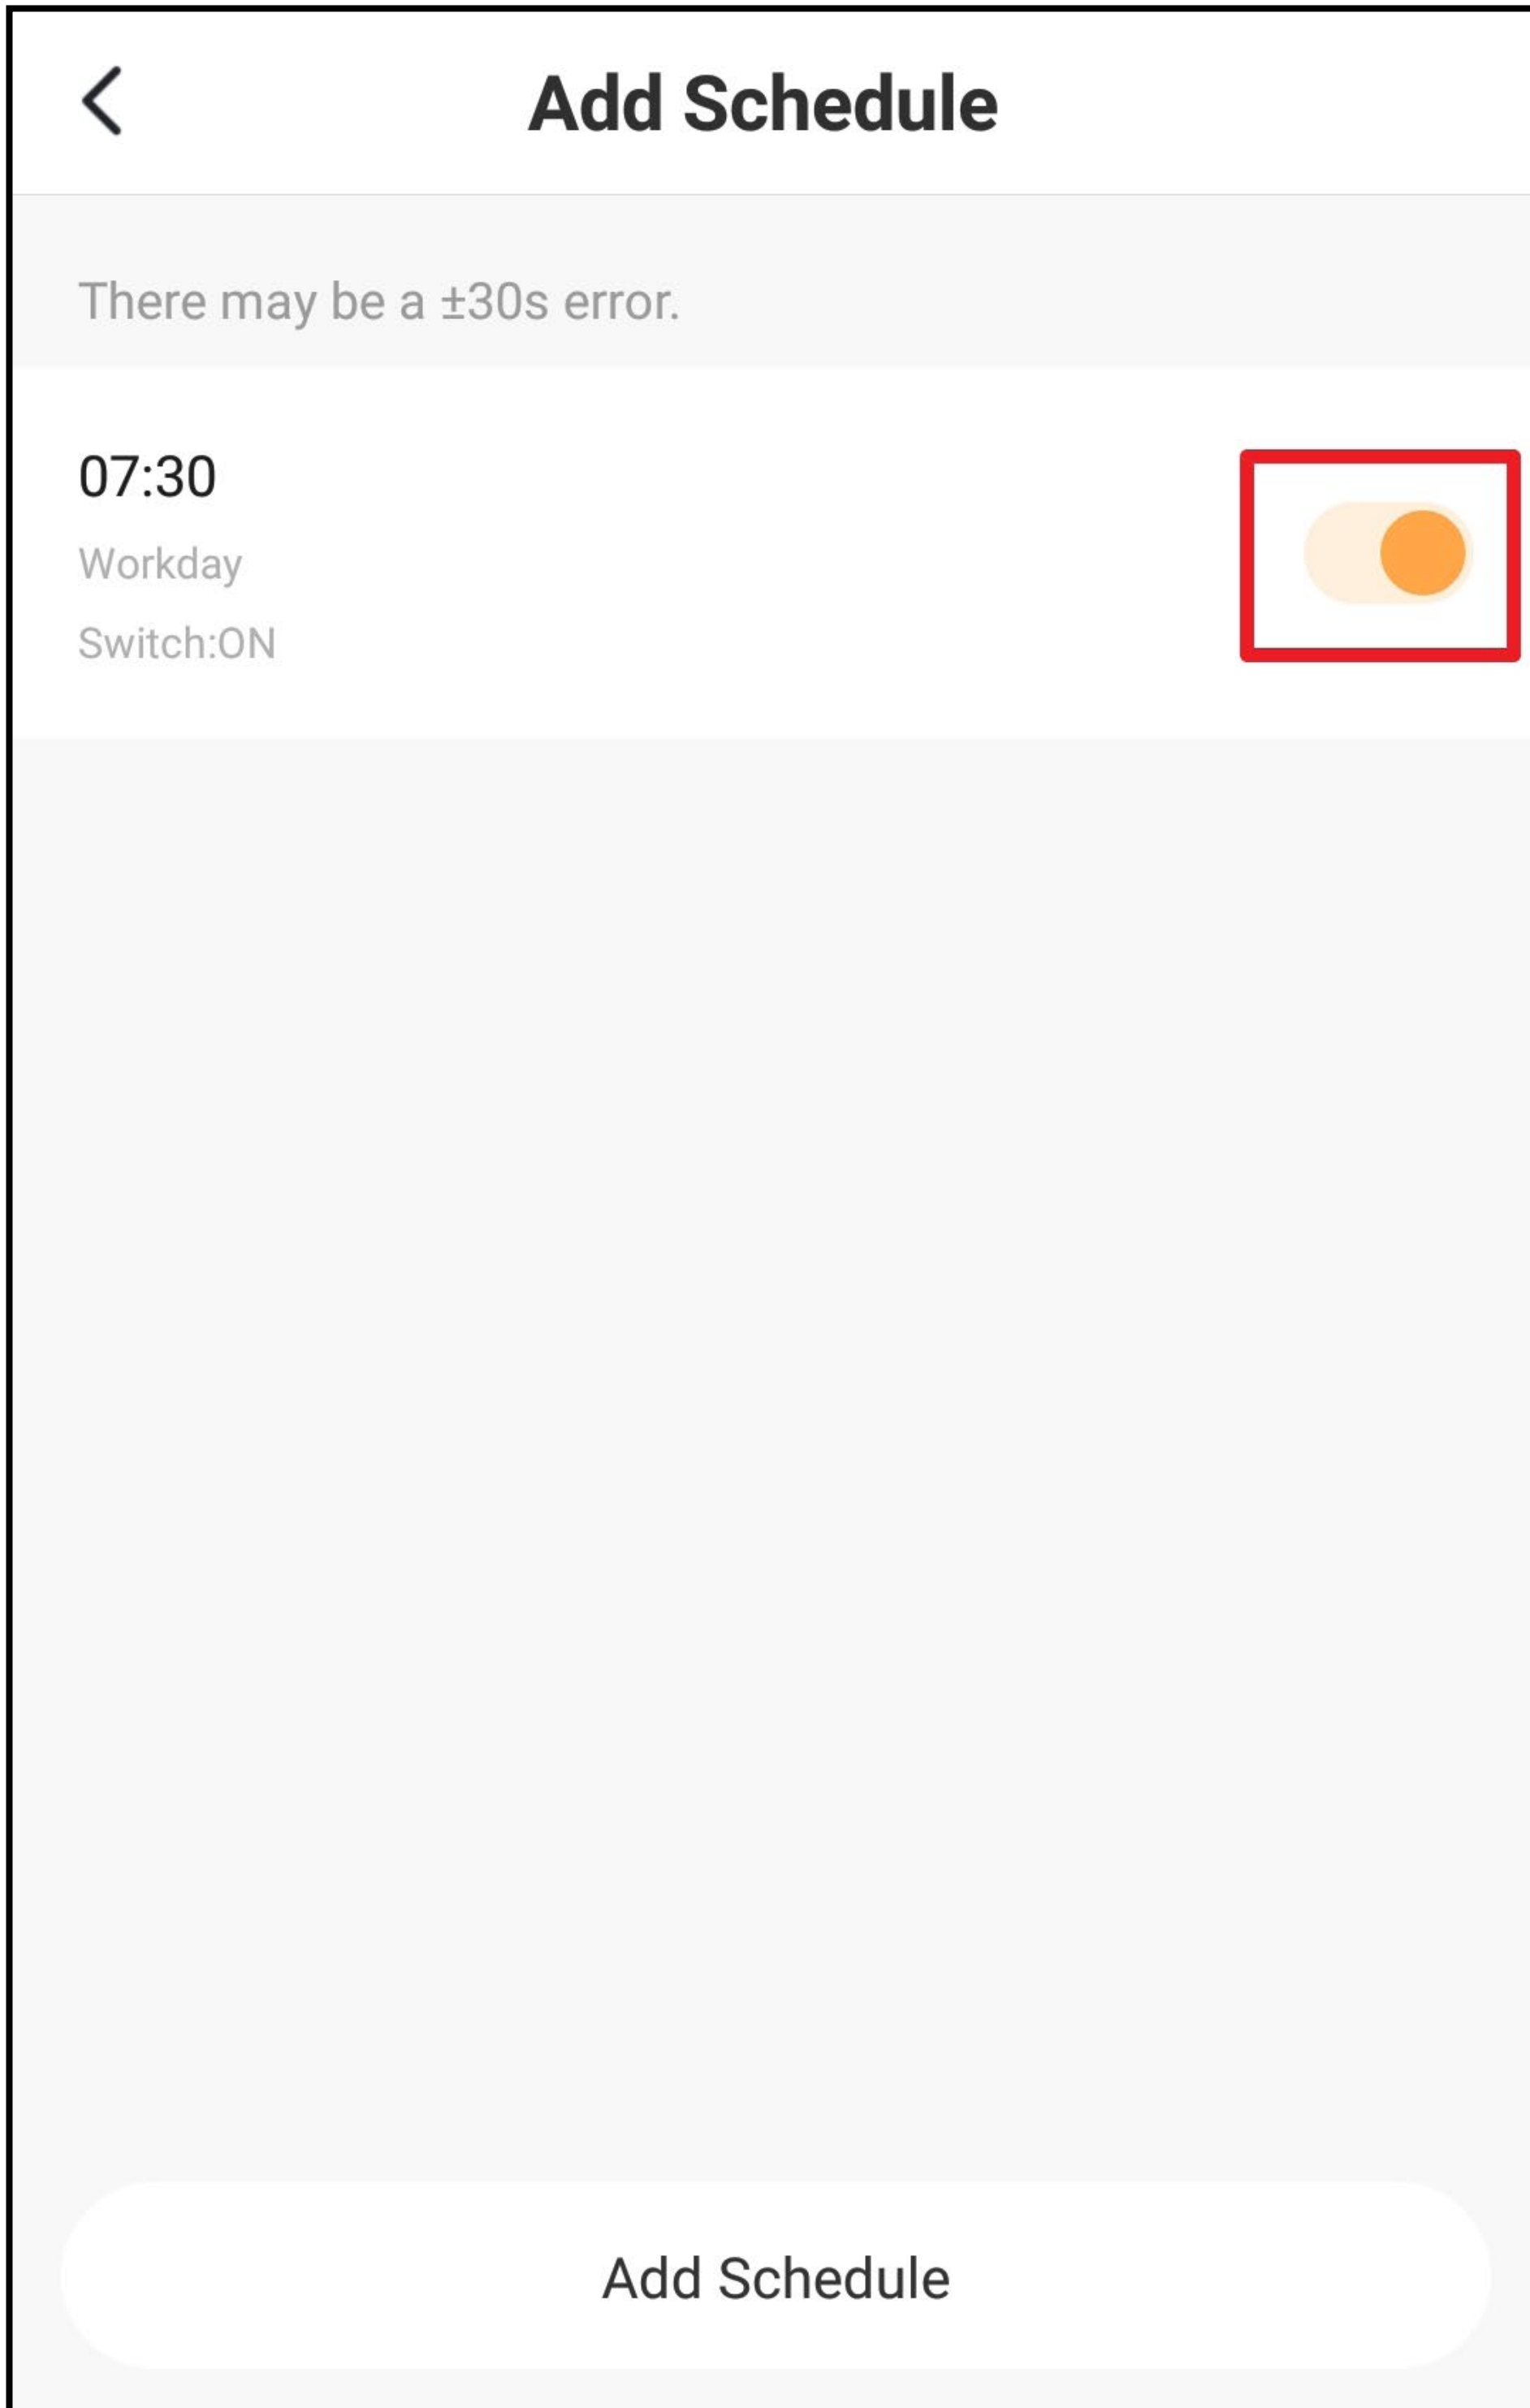

Further device settings

 - To open further device settings, tap the pencil icon at the top right in the device display.

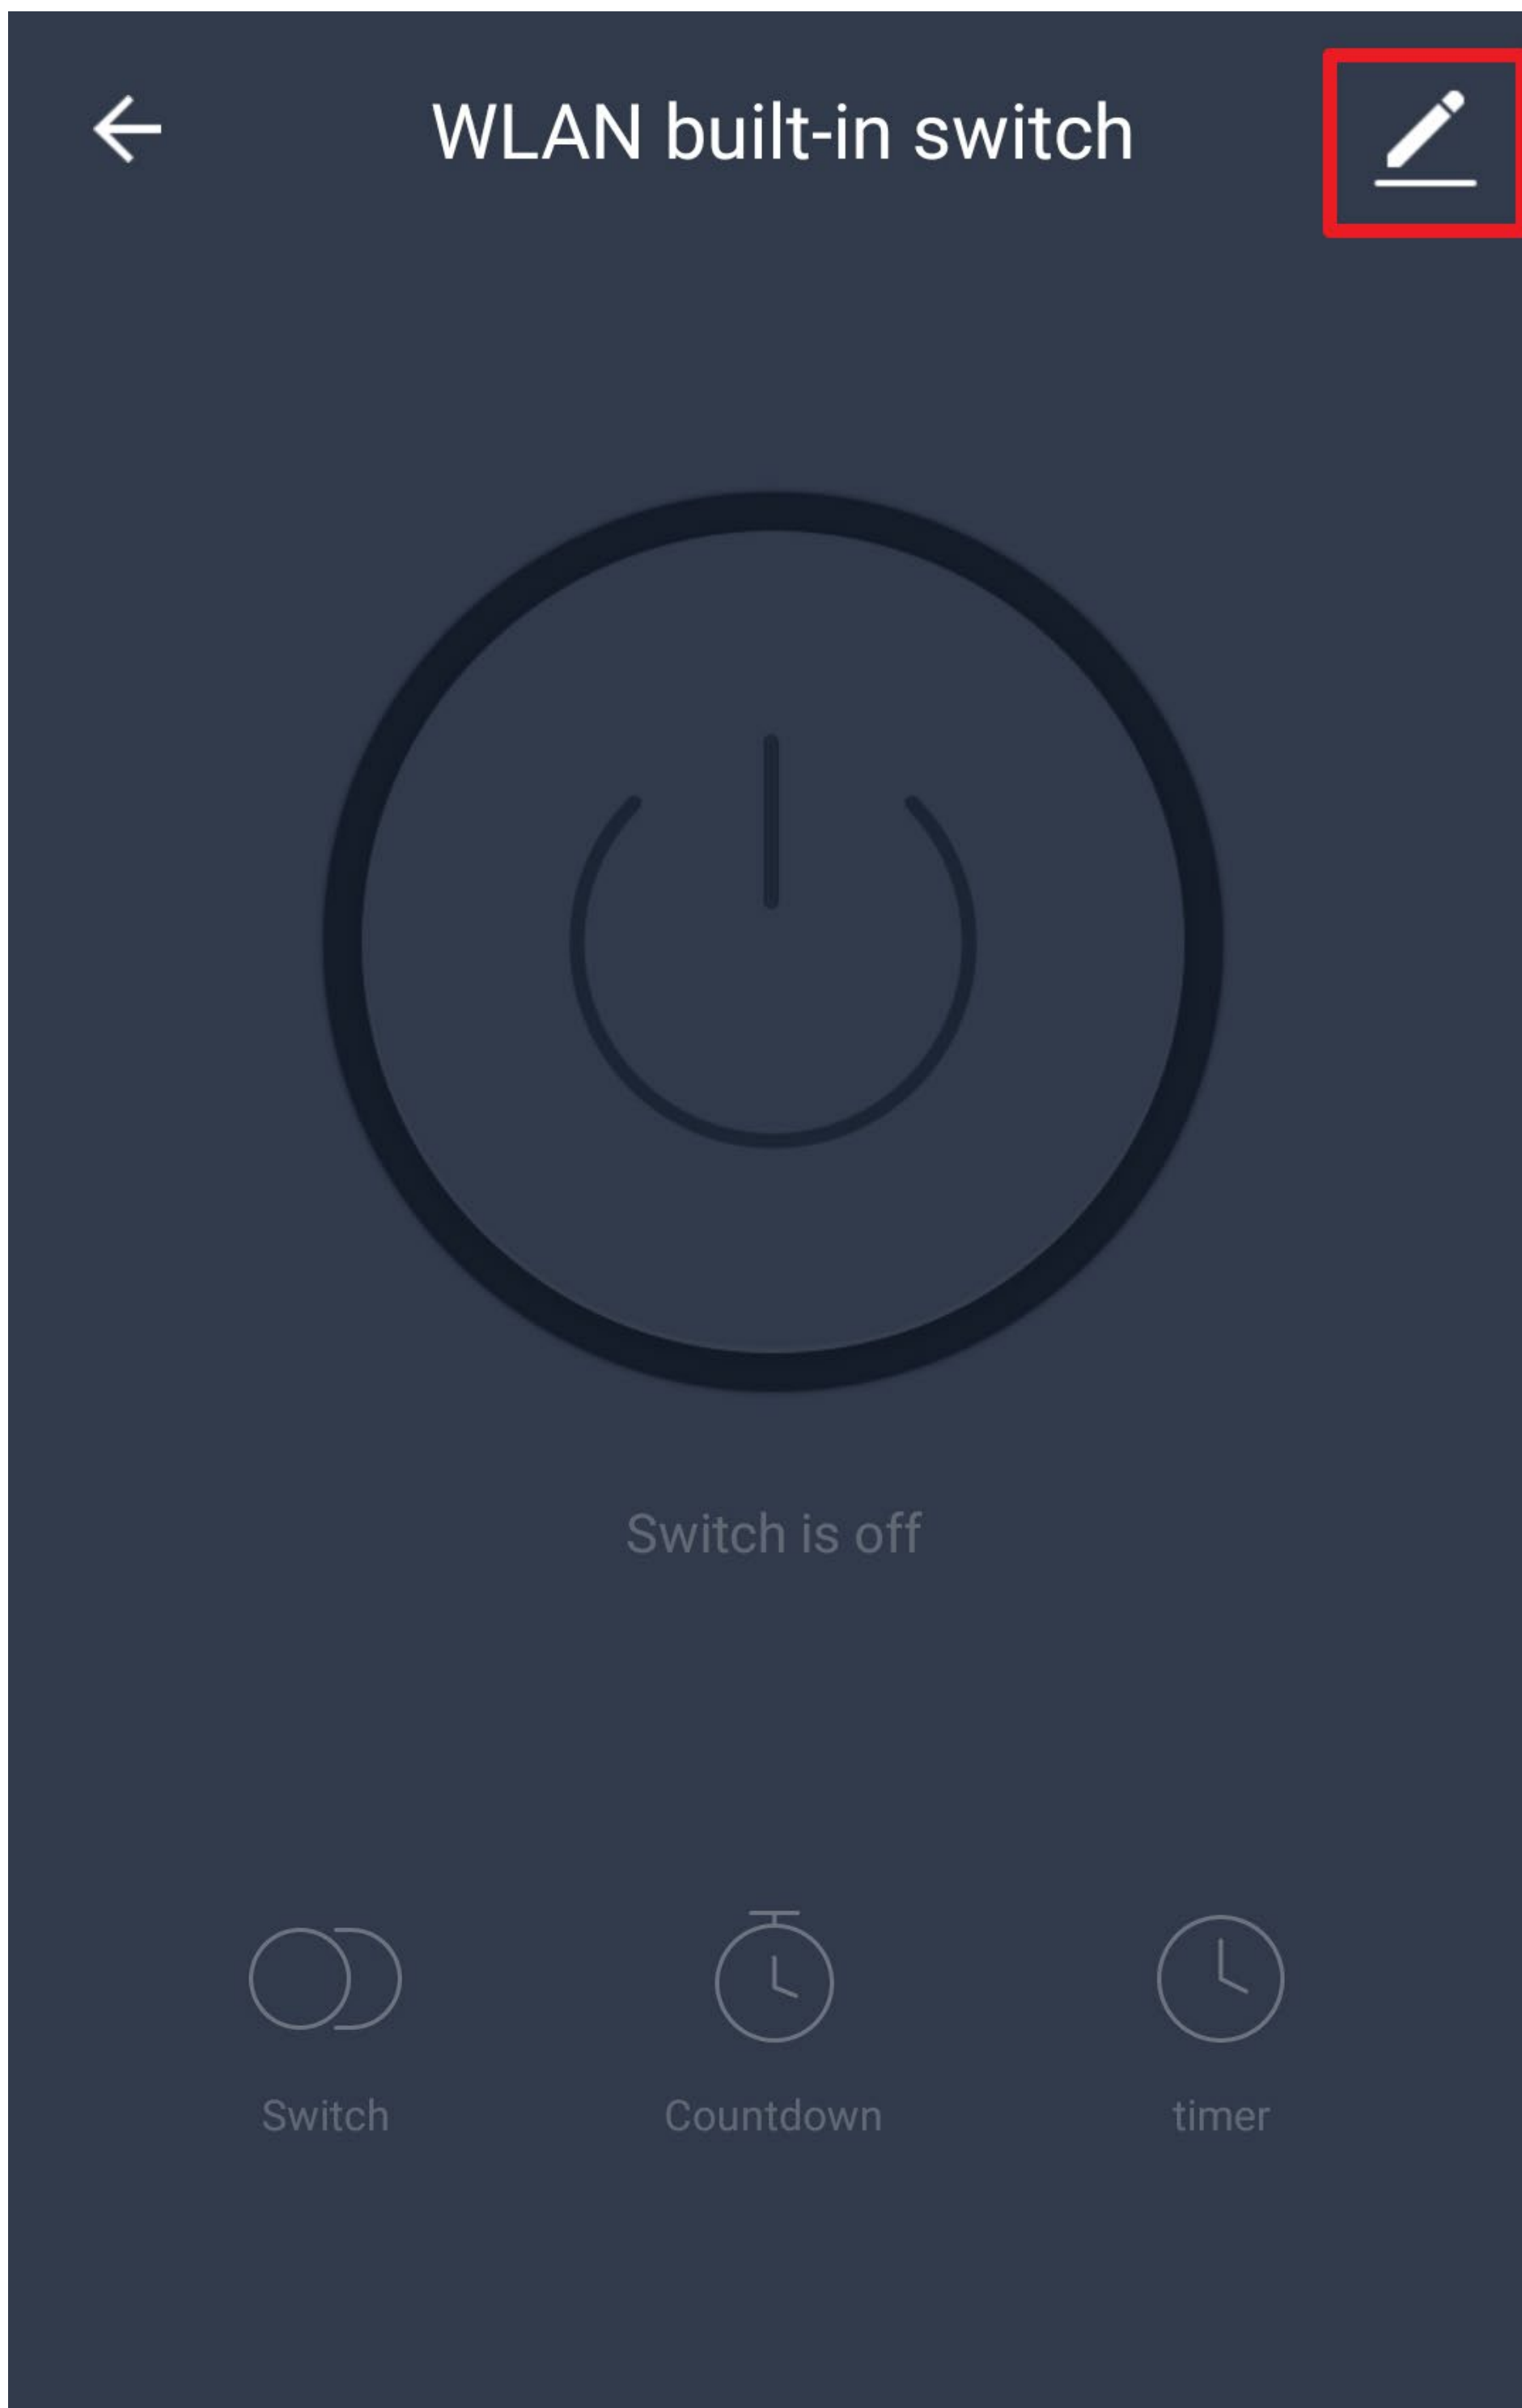

B1



Device Details

Basic Device Information

B2

Device Name

WLAN built-in switch >

B3

Device Location

Living Room >

B4

Check Device Network

Check Now >

Third-party Control

 
B5



Alexa



Google Assistant

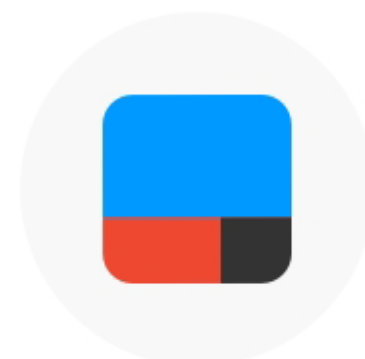

IFTTT



Tmall Genie

Others

B6

Share Device



B7

Create Group



B8

Device Information



B9

Feedback



B10

Check for Firmware Upgrade



B11

Remove Device

 
B12

Restore Factory Defaults


- B1** Use the arrow to go back to the device display.
- B2** Here you can change the name of the device.
- B3** Here you can adjust the location of the device, provided you have selected or created multiple rooms.
- B4** Use this function to check the network connection to the device.
- B5** Here you can select a service you would like to use to link the app and need help with that.
- B6** Here you can share the selected device with another external user.
- B7** Use this function to create a group in which you can combine multiple devices.
- B8** Here you can enter information such as the IP address of the device.
- B9** In this item you can give feedback to the developers if there are any problems with the app.
- B10** Provides information about the firmware of the device.
- B11** Tap this button to remove the device from the app. The device itself will not be reset to factory settings.
- B12** Tap this button to reset the device to factory settings and remove it from the app.

Creating a group

- To create a group, open the devices display and then tap the pencil icon at the top right.

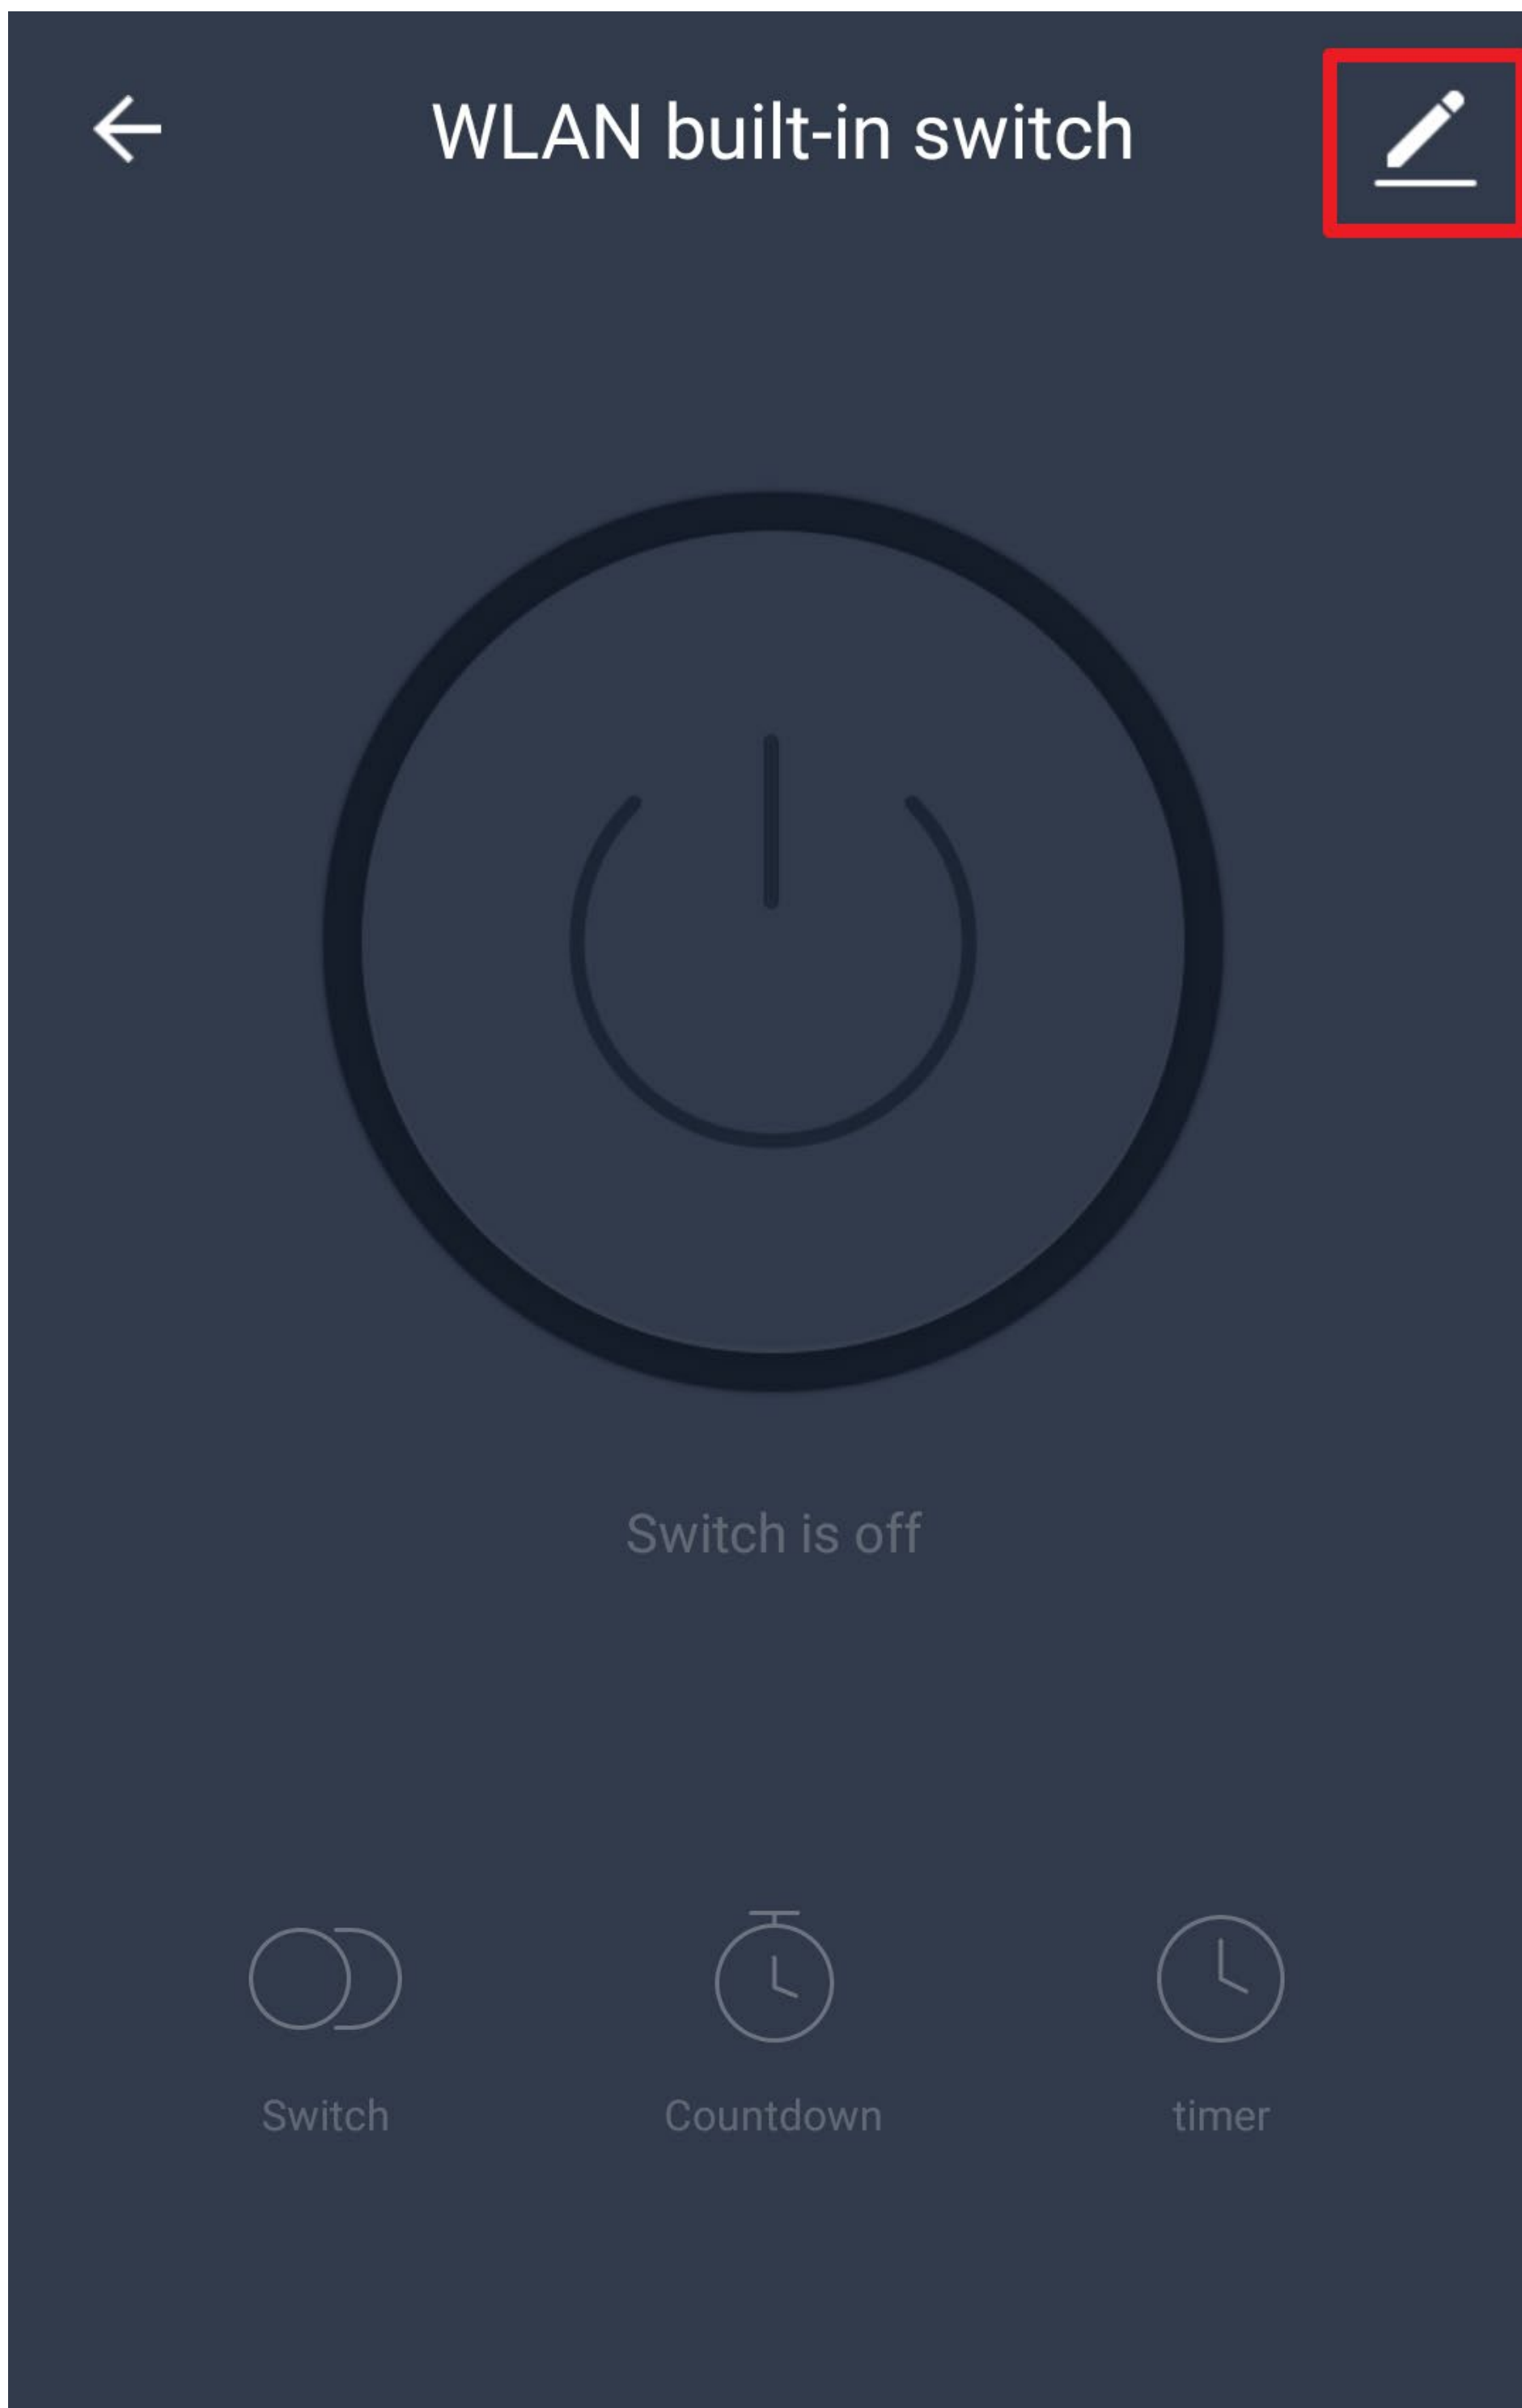

 - In the device settings, tap **“Create Group”**.

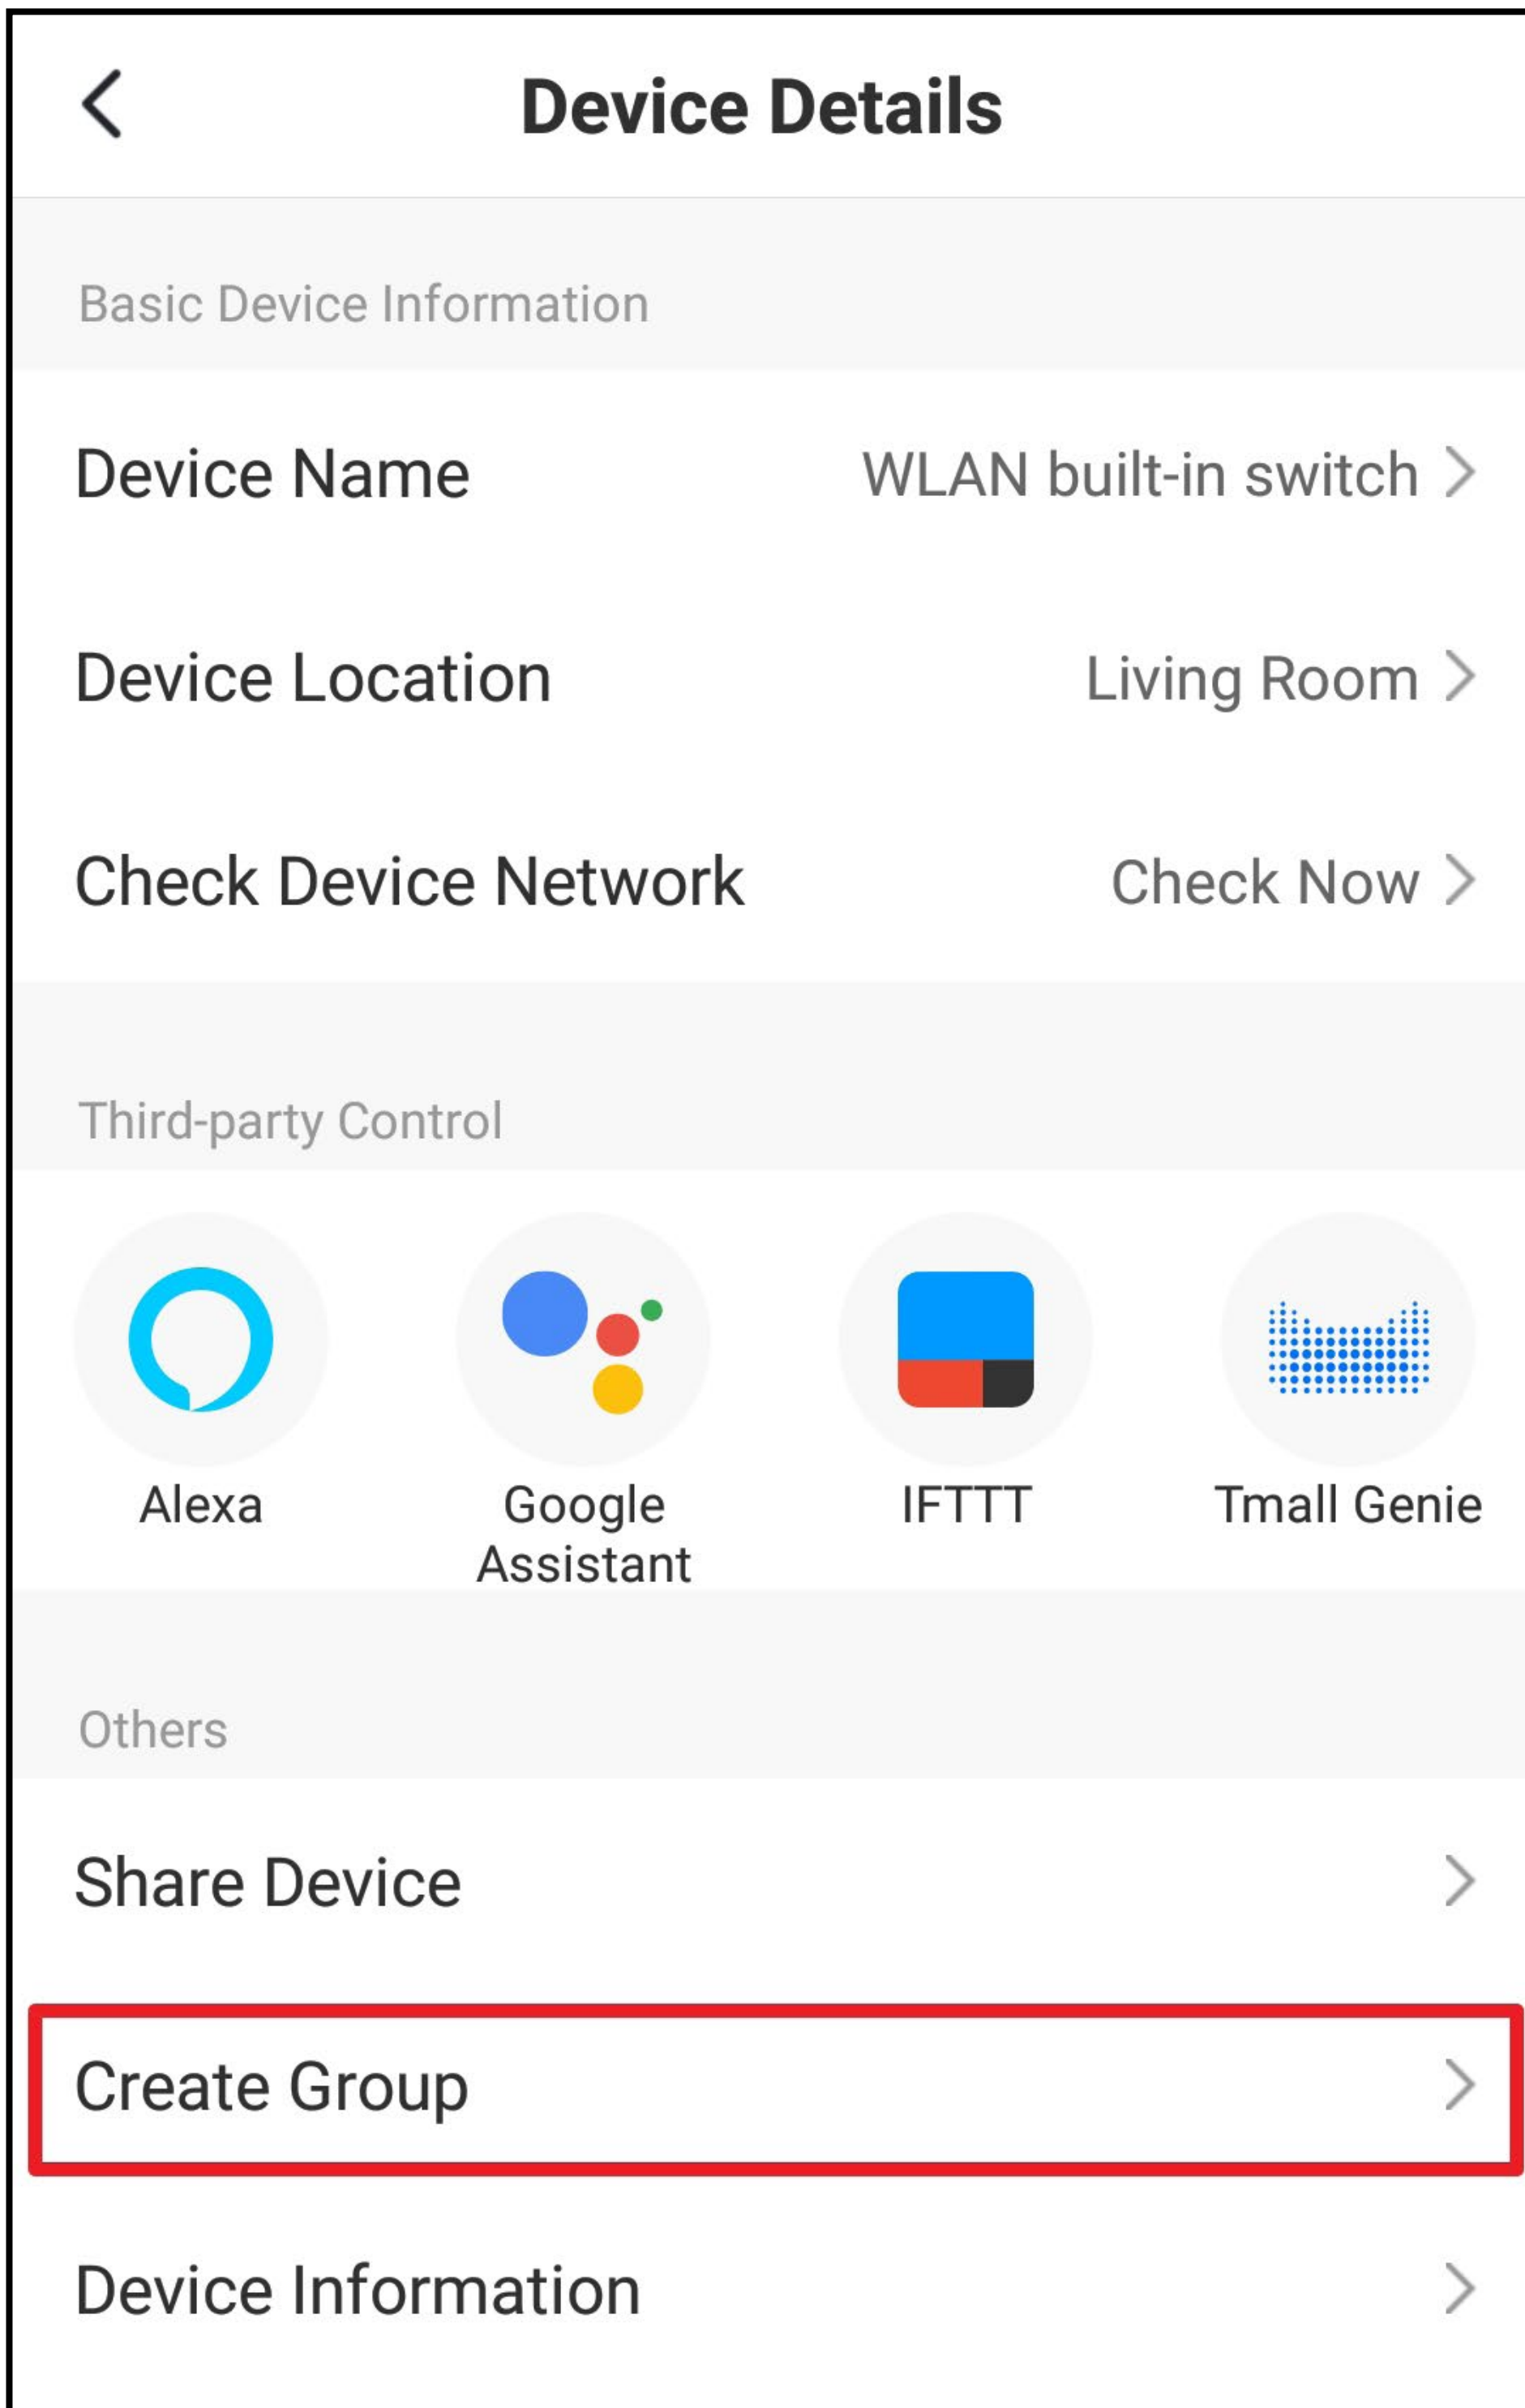


- Now select the devices you would like to have in the group.

To do this, check the box in front of each device you want to add to the group.


Of course, a group with one device, as in our example, makes little sense.

If multiple devices are connected, they will all be listed.

 
- Tap the save button at the top right.

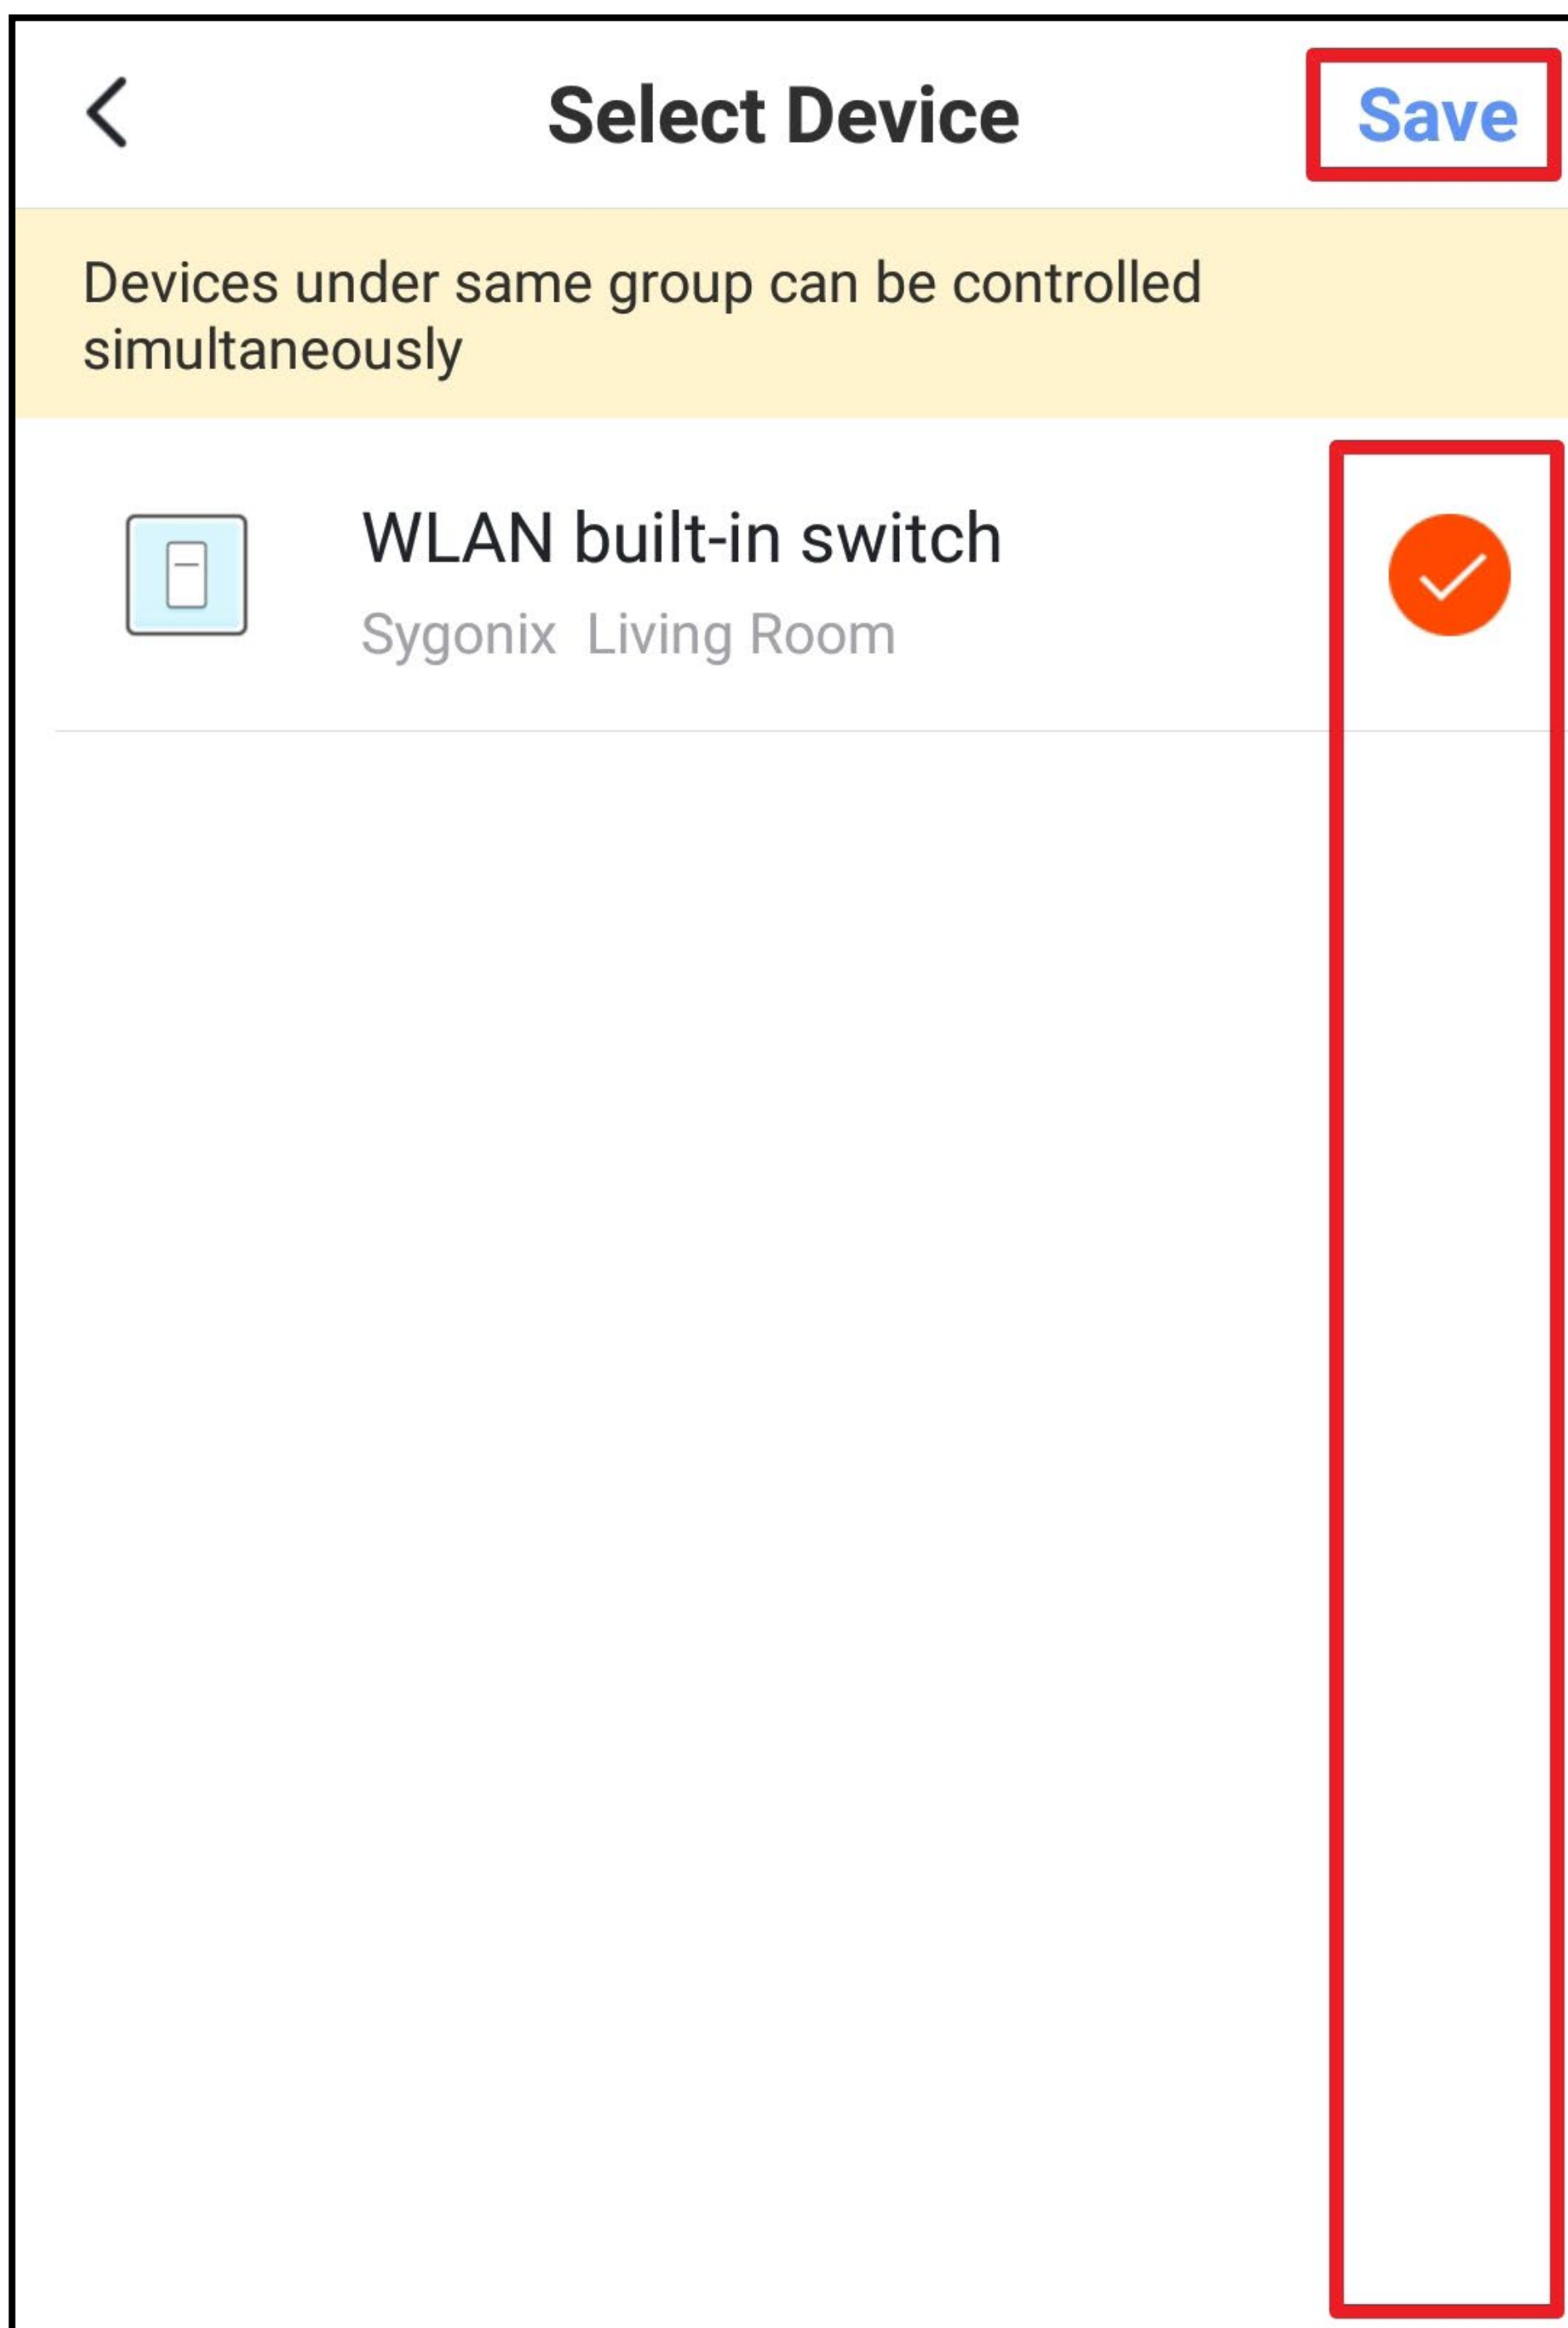

 
- Now enter a name for the group and save it.

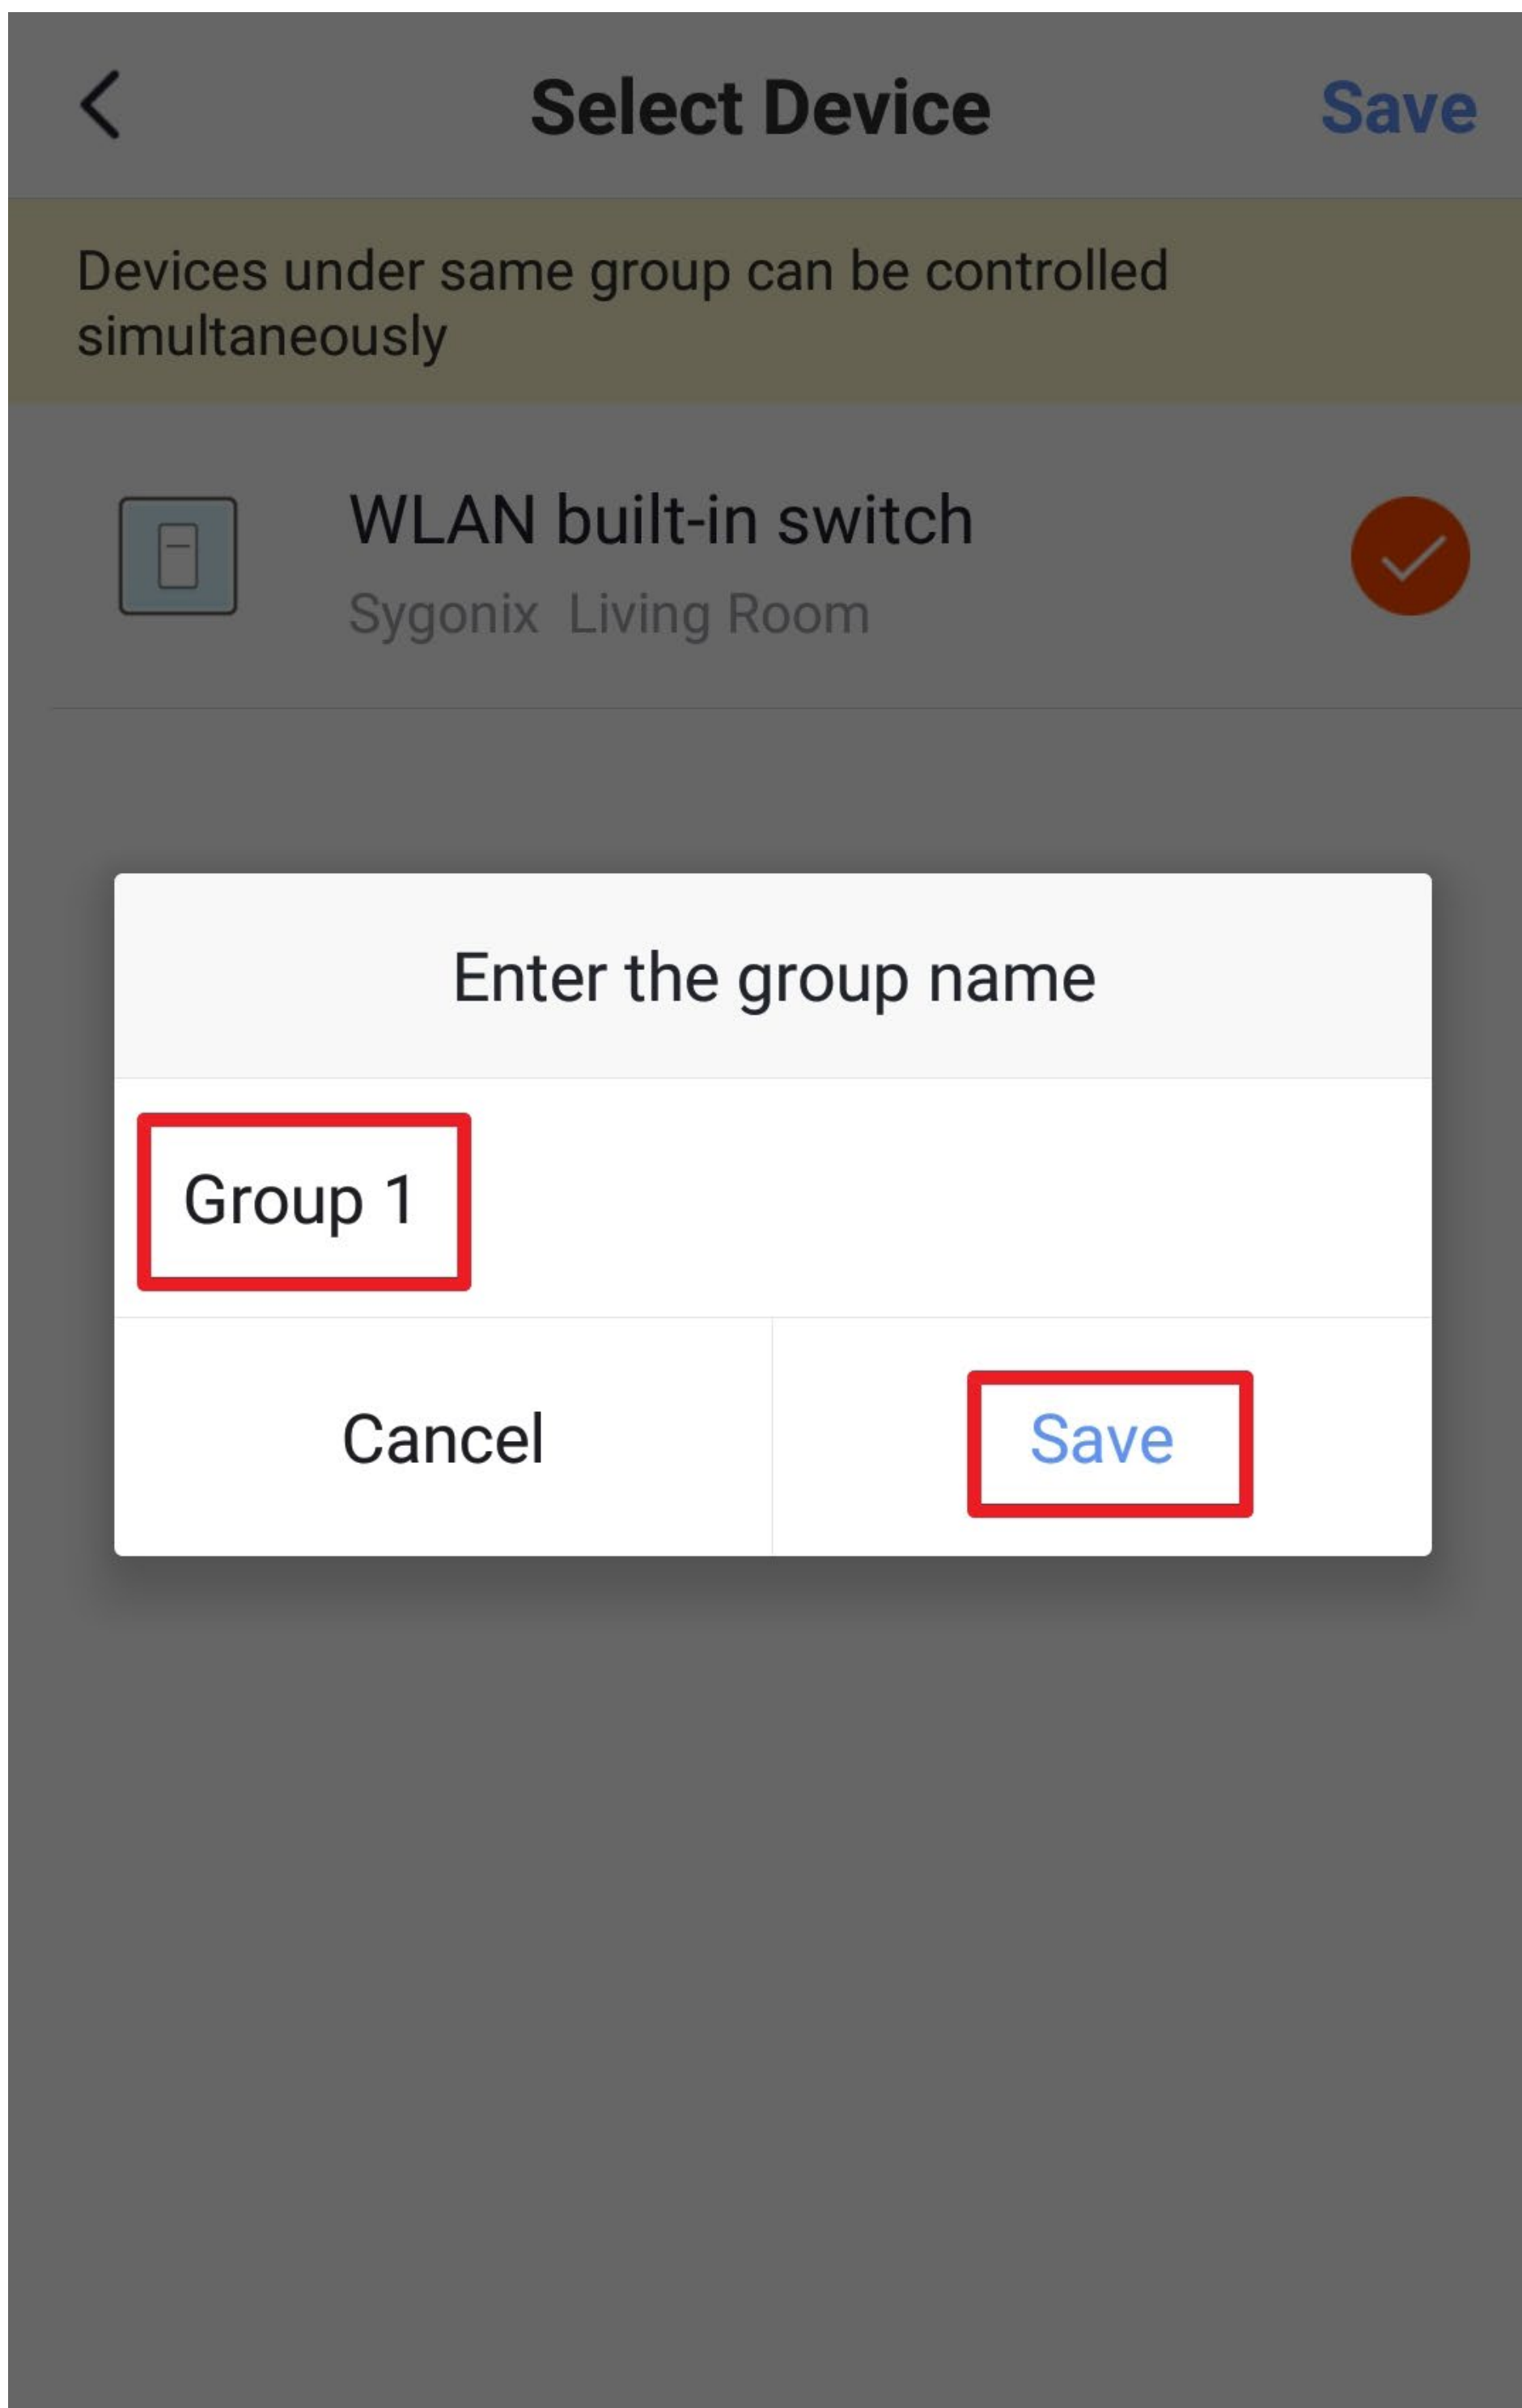

 
- It no longer shows the devices display, but the groups display for the previously created group.
- Go back to the home page (top left arrow).

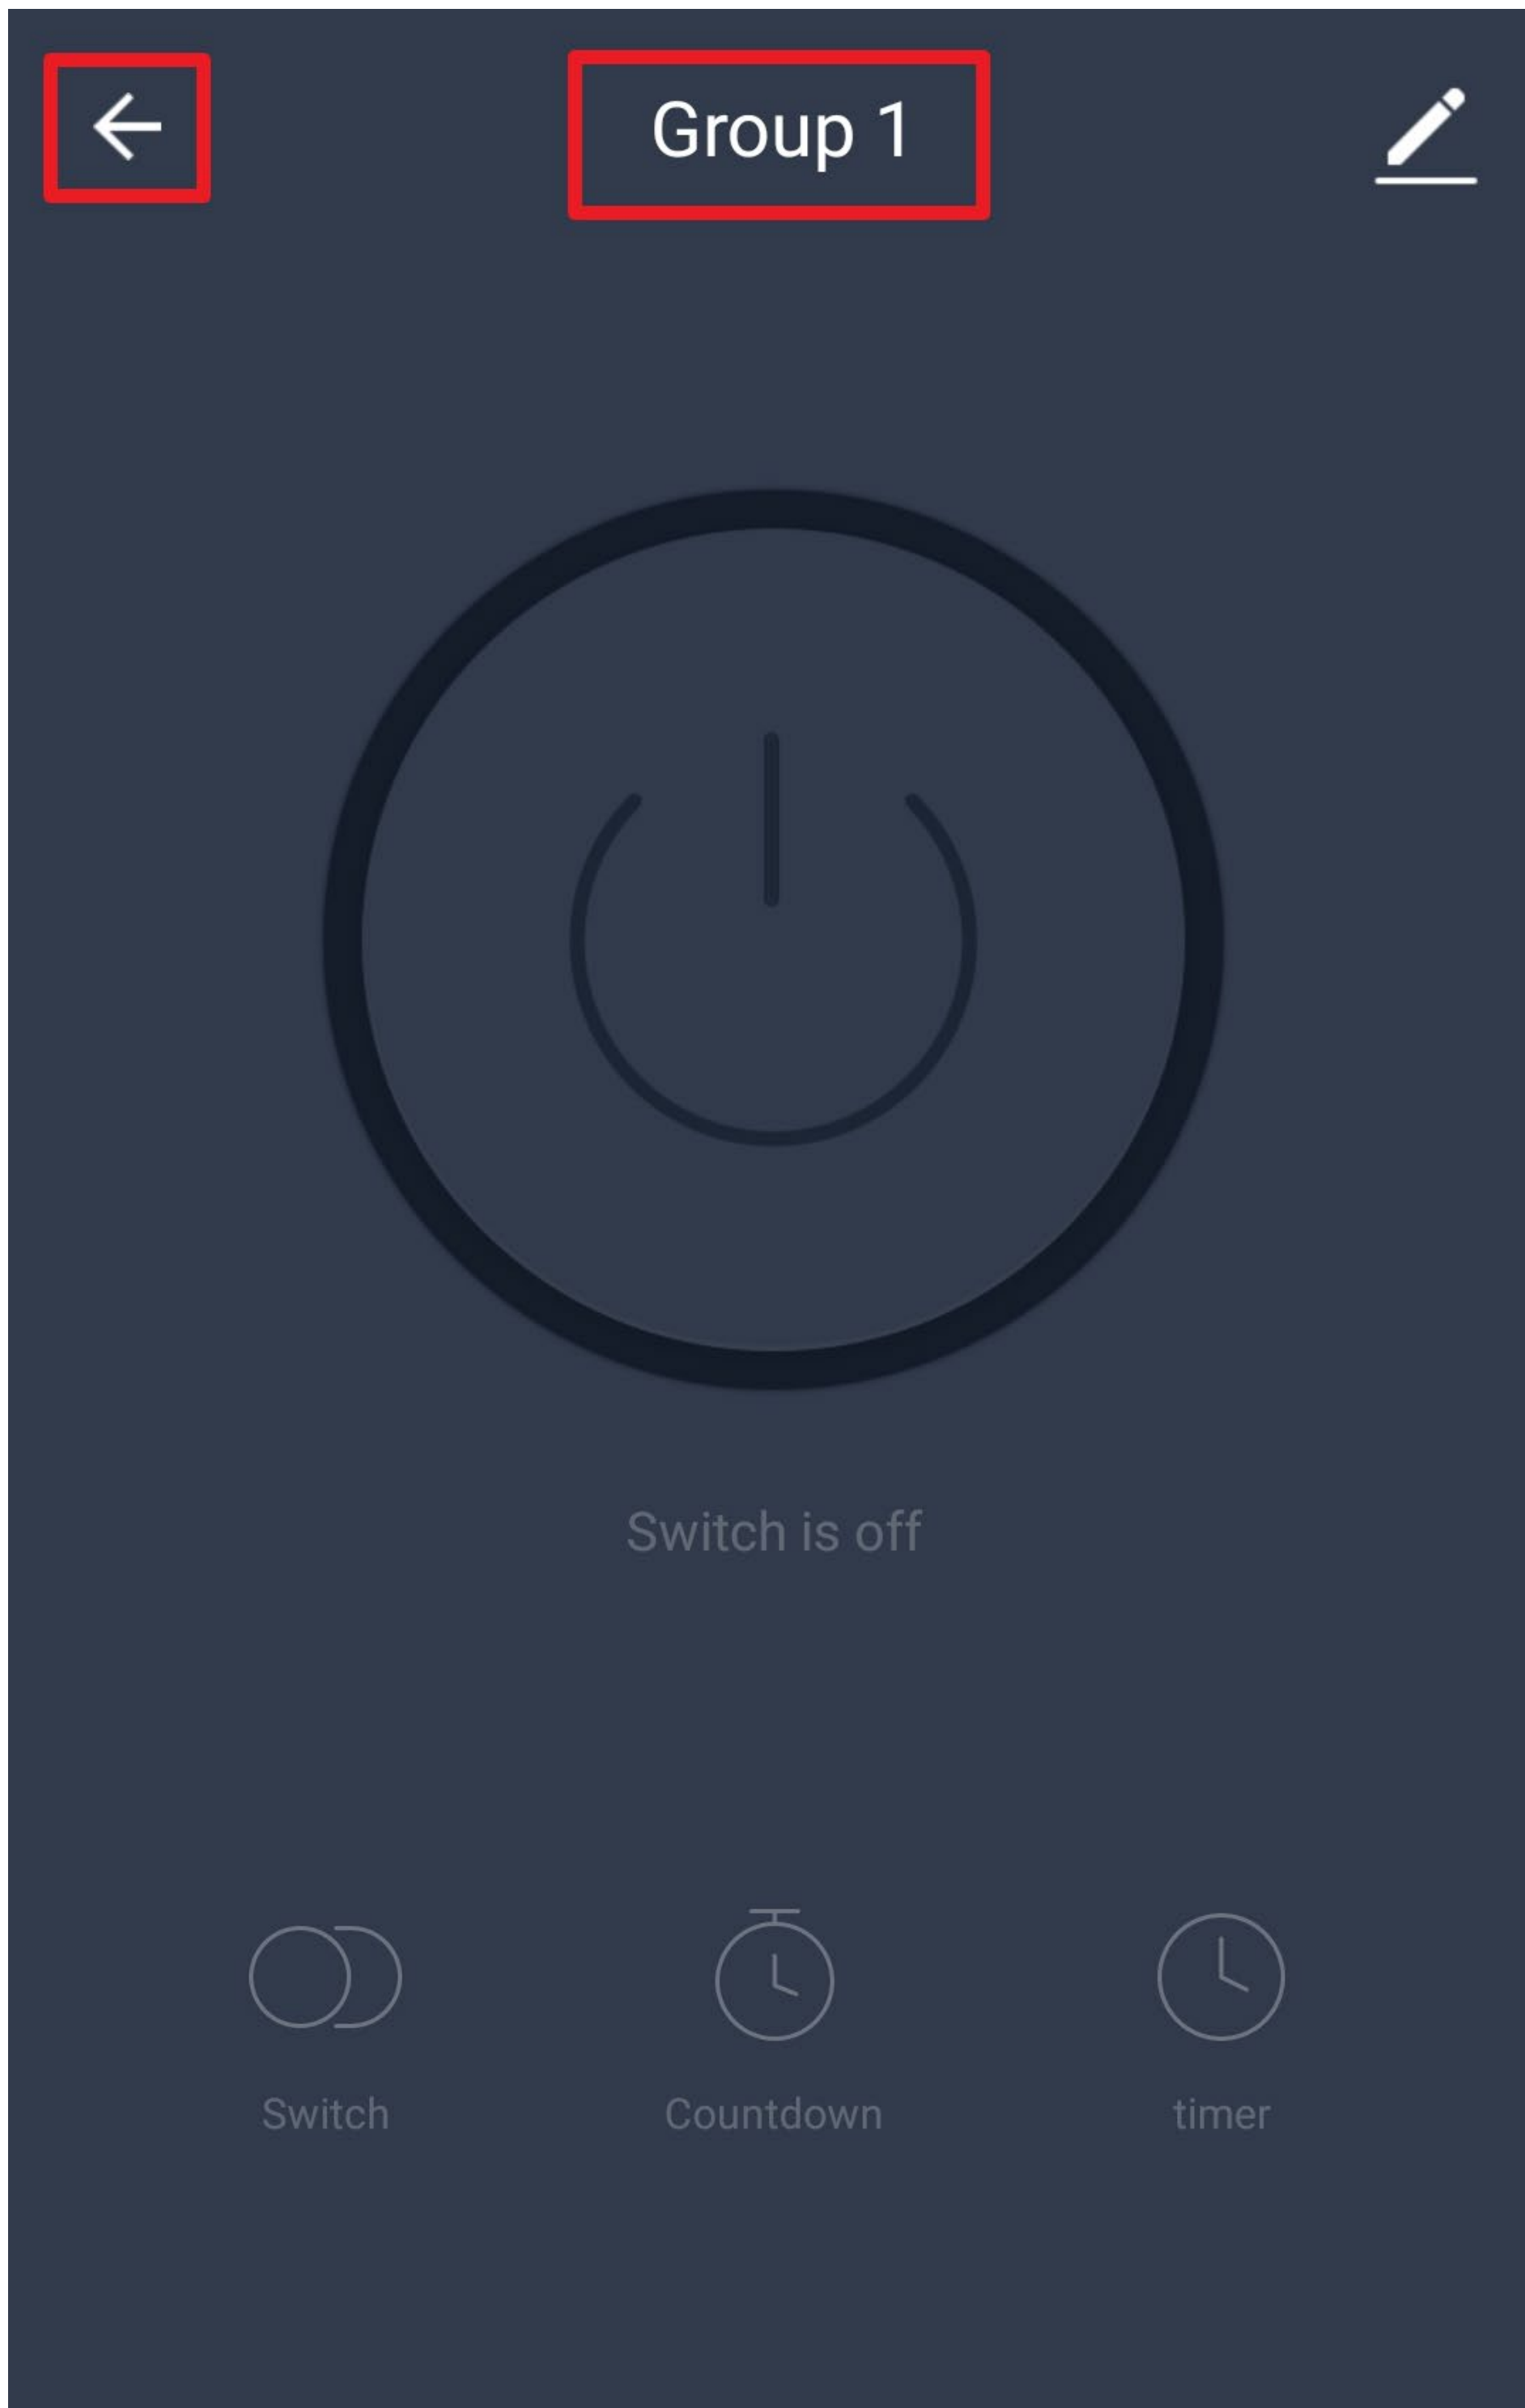

 
- The main display now shows the device (lower button) and the newly created group (upper button).
- To display the devices or the groups display, press the respective button.
- To open the groups display again, tap the group.

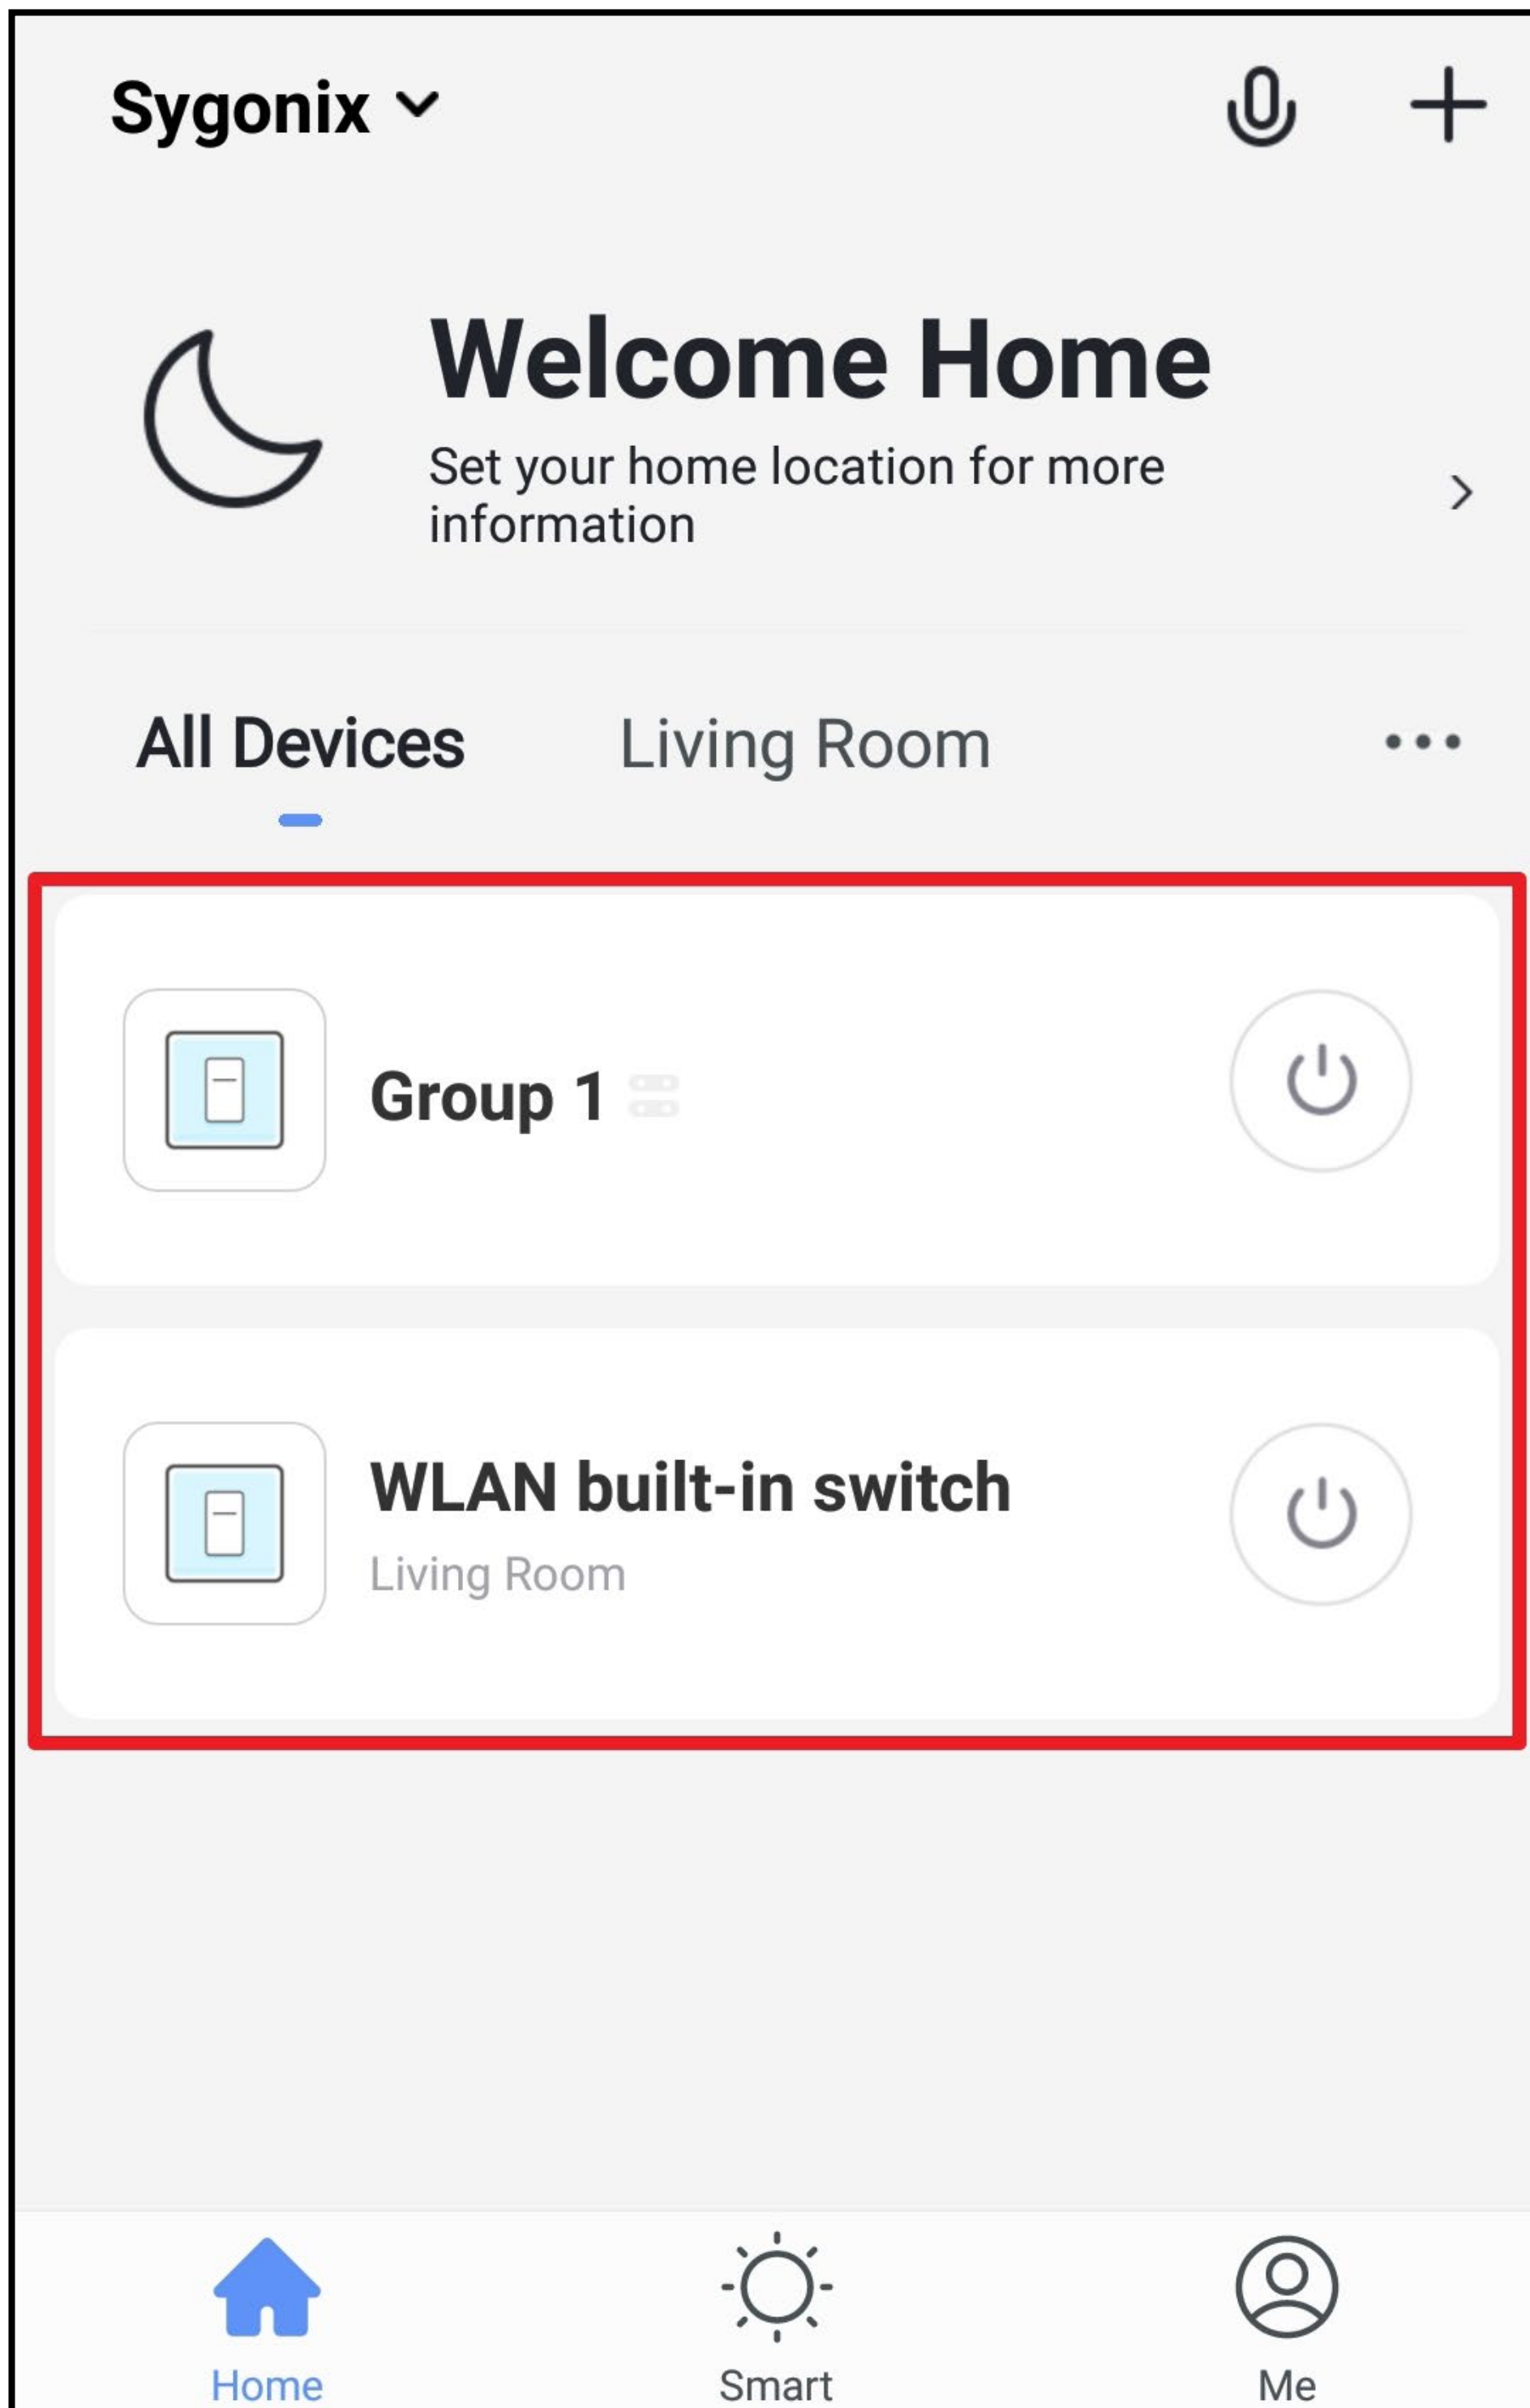

 - To open the groups settings, tap the pencil icon at the top right again.

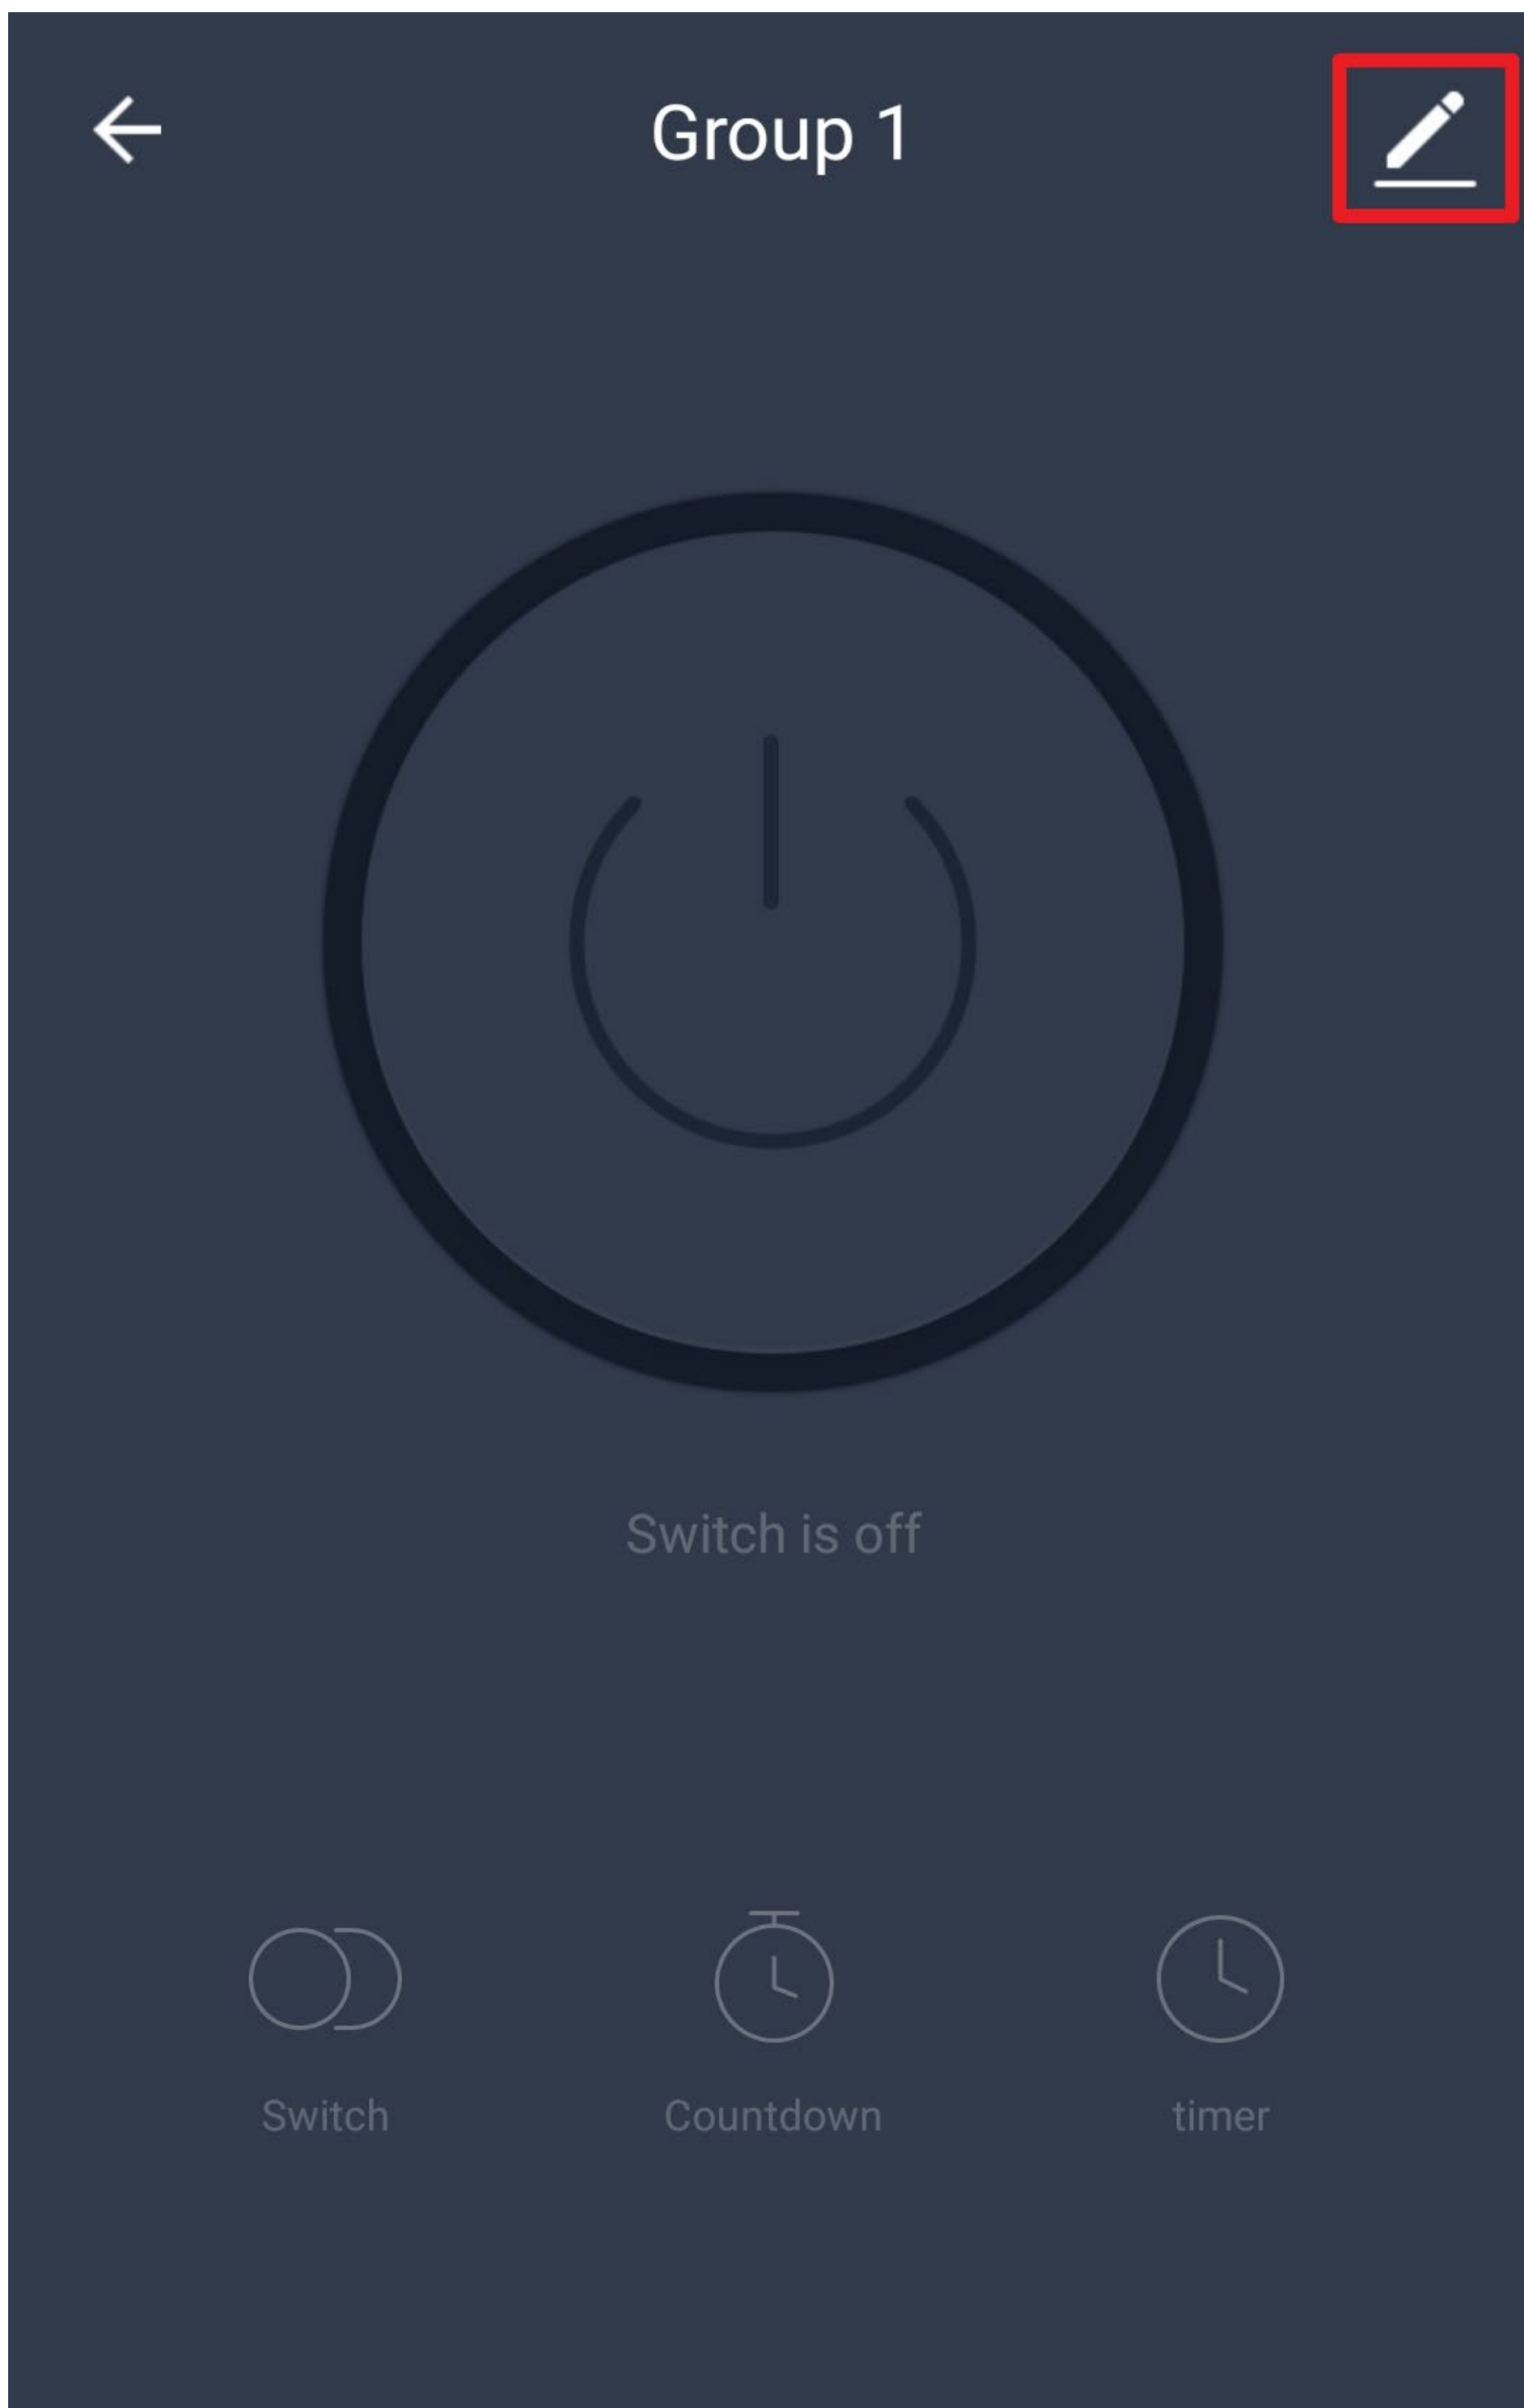


 - The group settings enable you to adjust all settings for the group: change the name of the group; move the group to another room; remove and add devices; share the group; give feedback on problems to the developer; dissolve the group (no devices are removed).

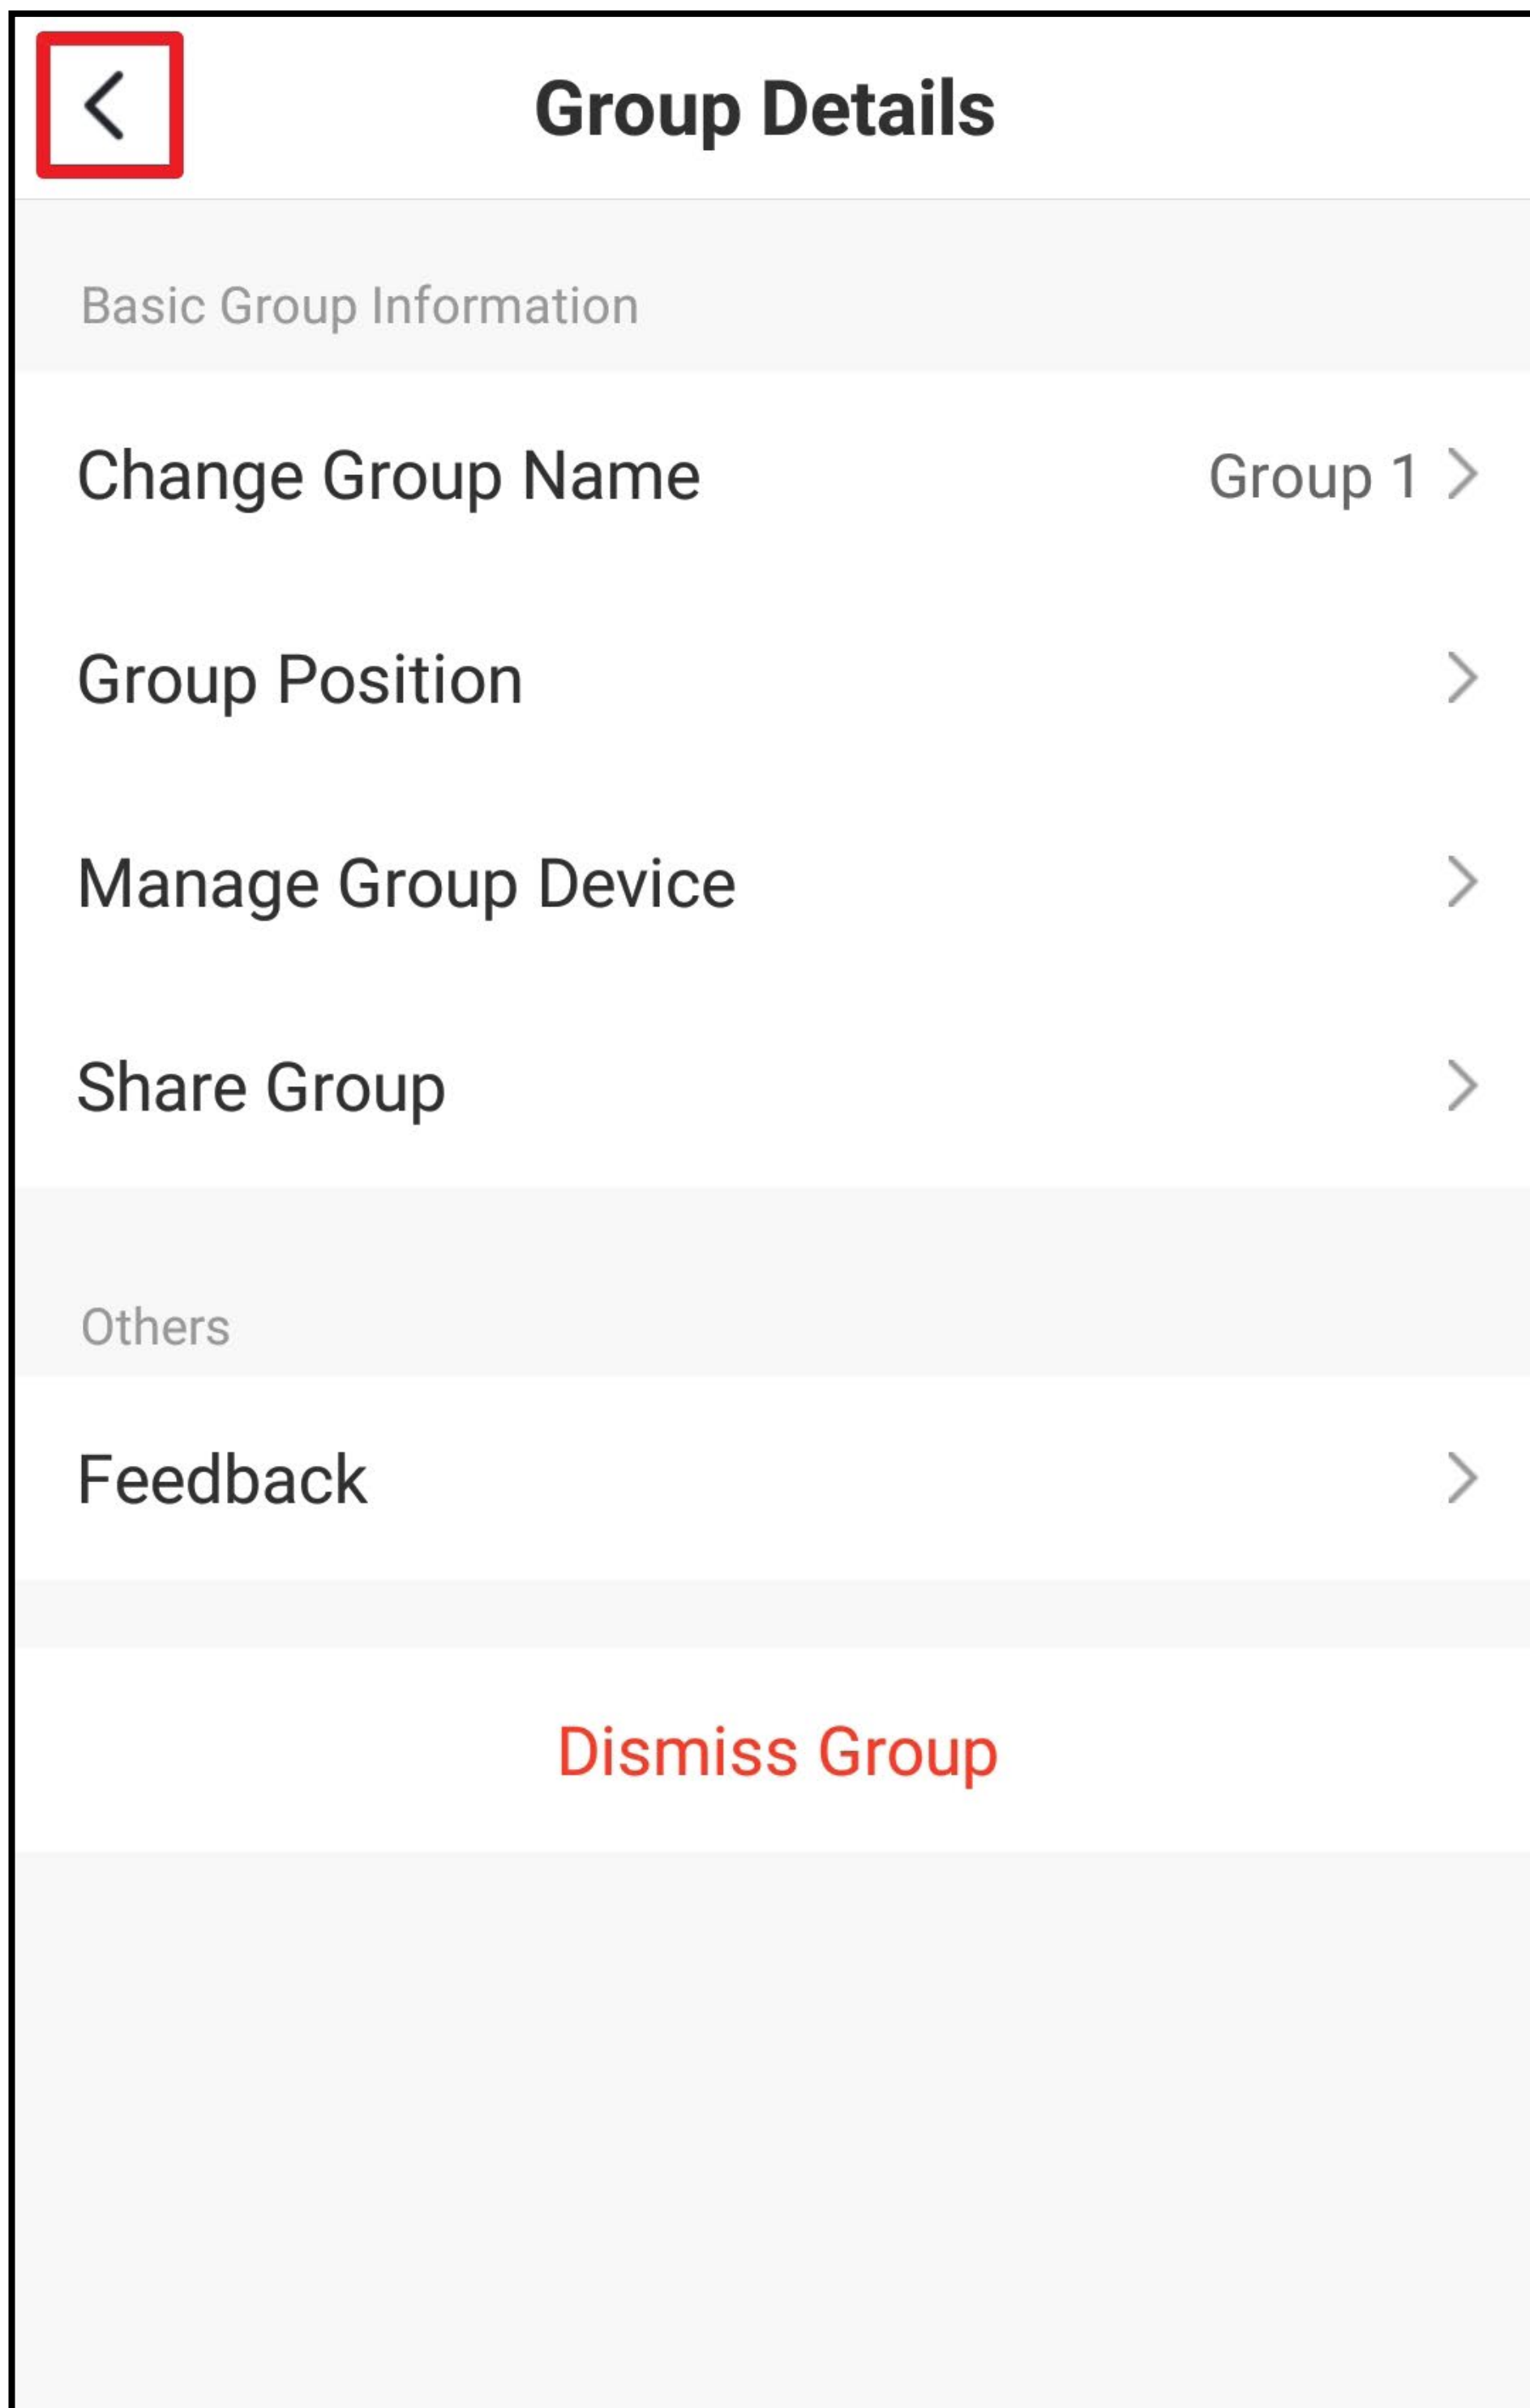


Creating a scene

 
- To create a scene, tap the sun icon at the bottom centre in the main display of the app.

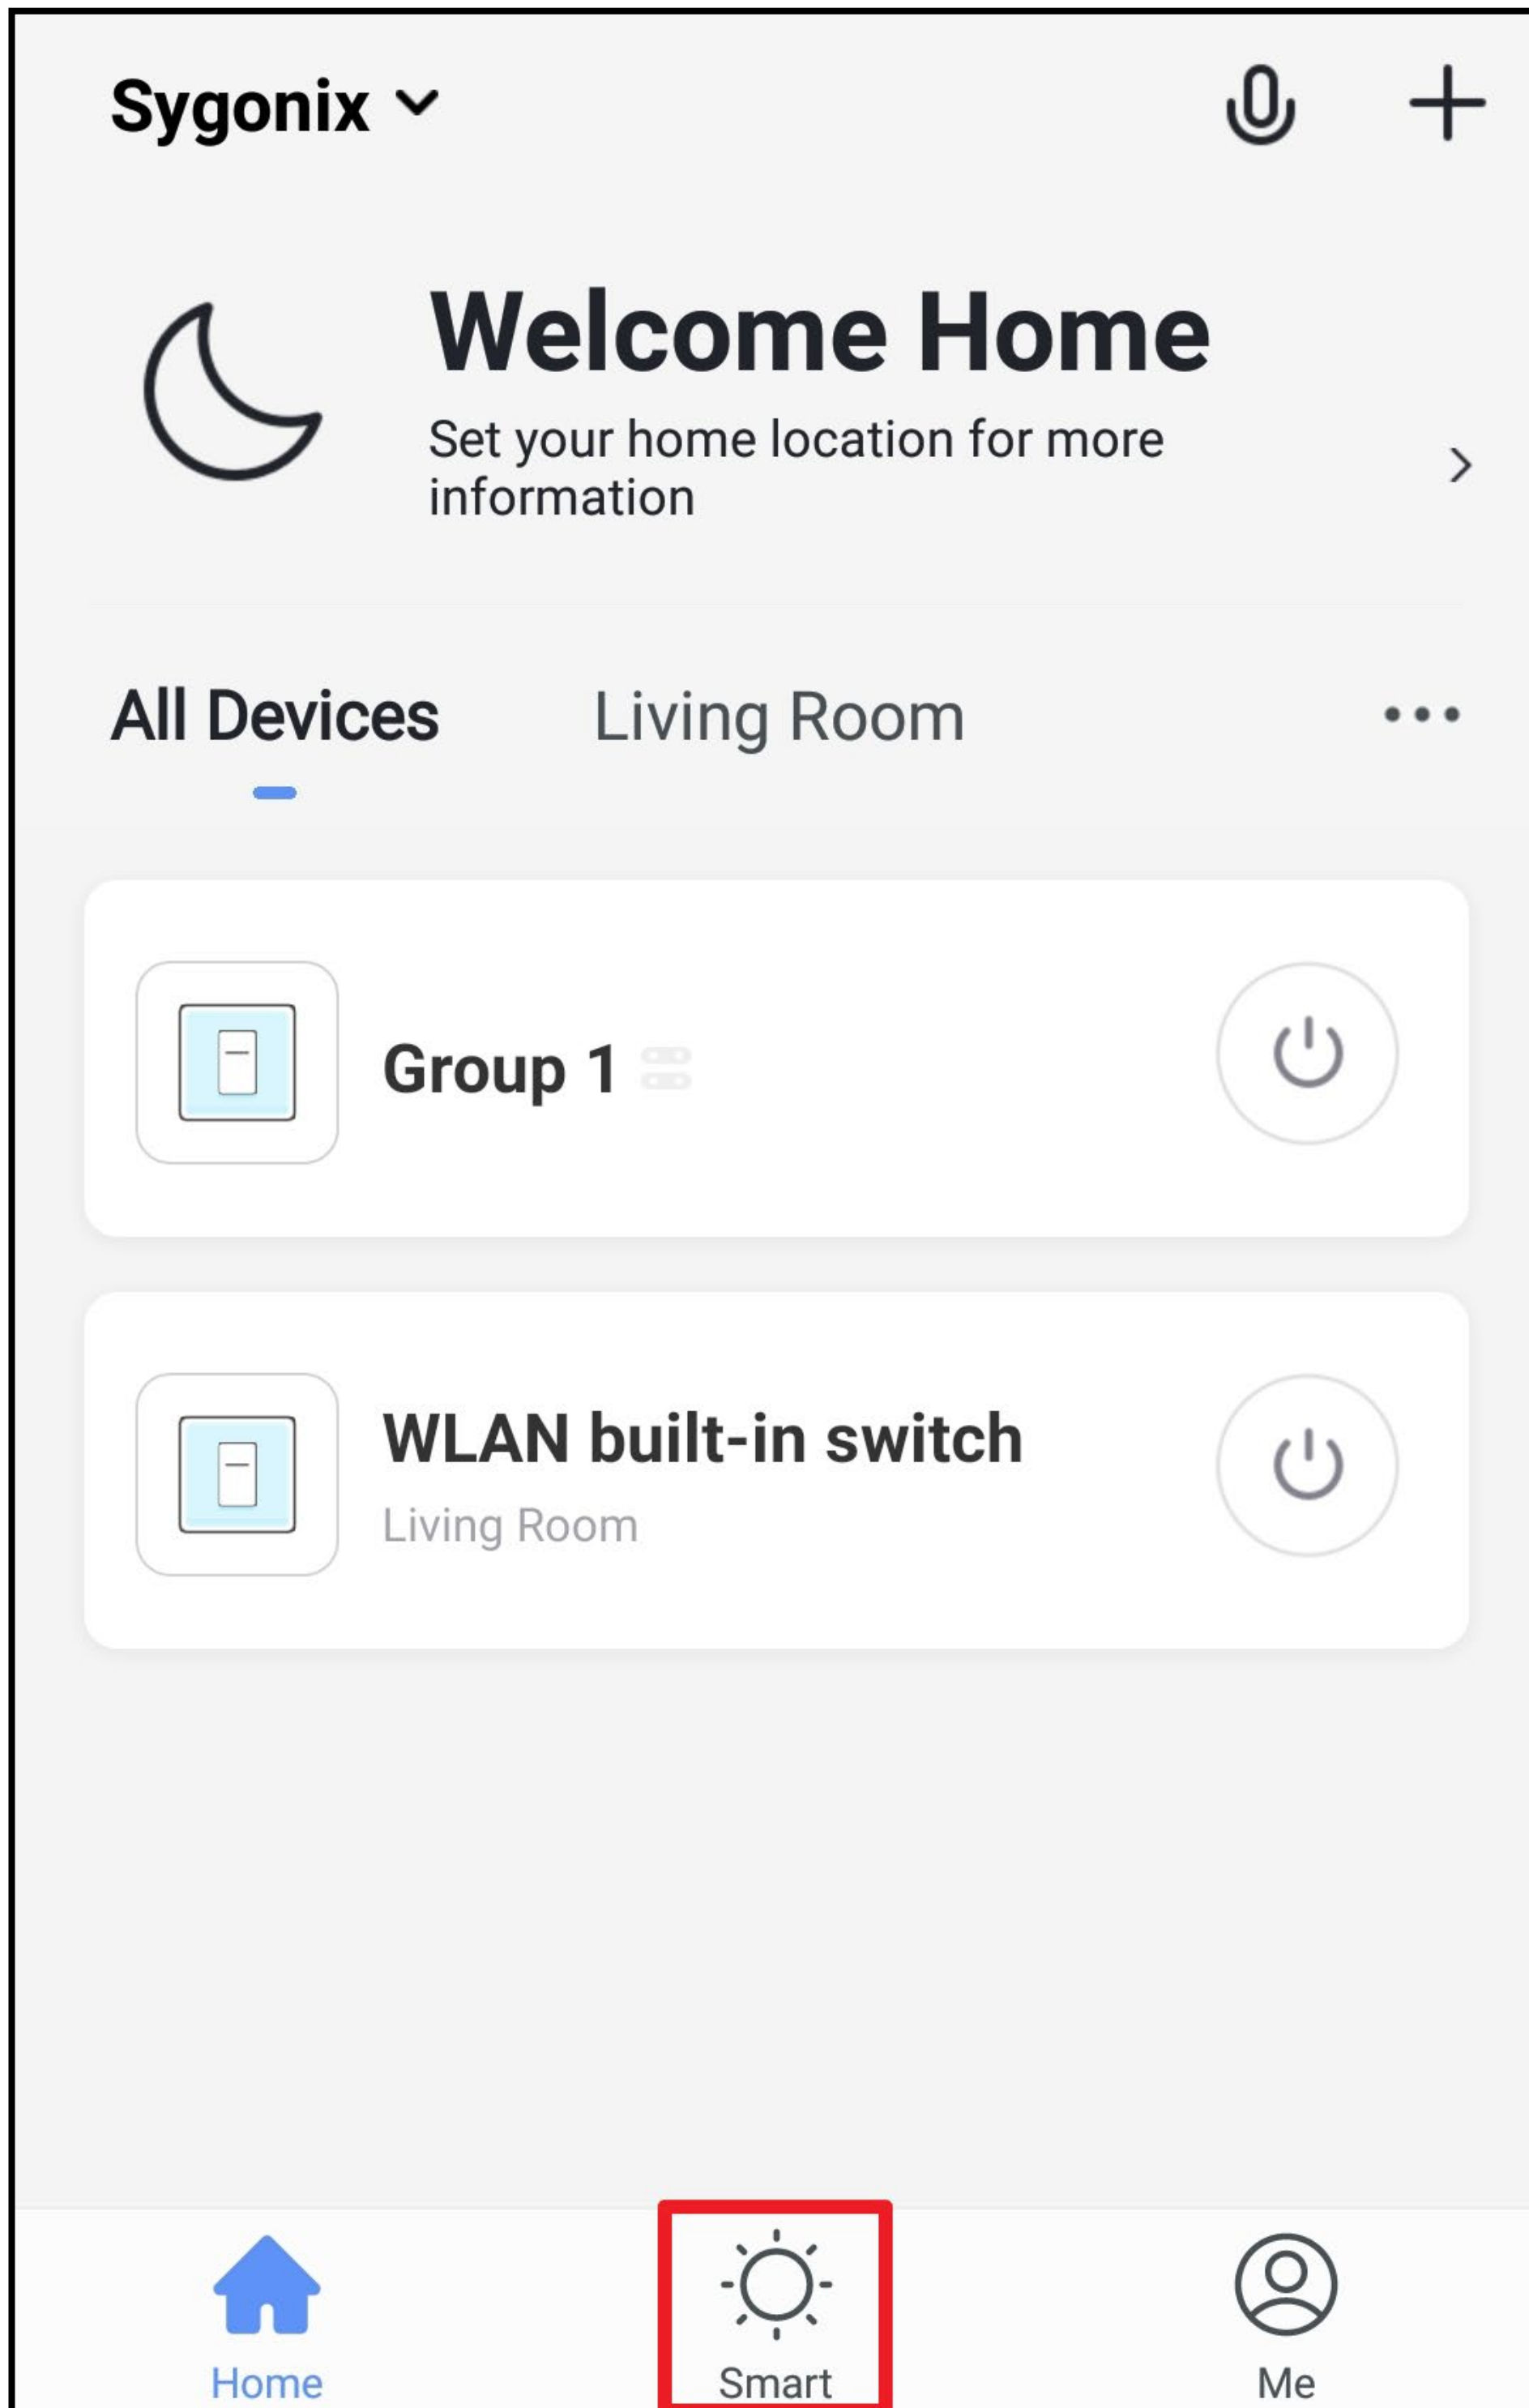

 - Tap “+” in the upper right corner or the blue button in the middle.

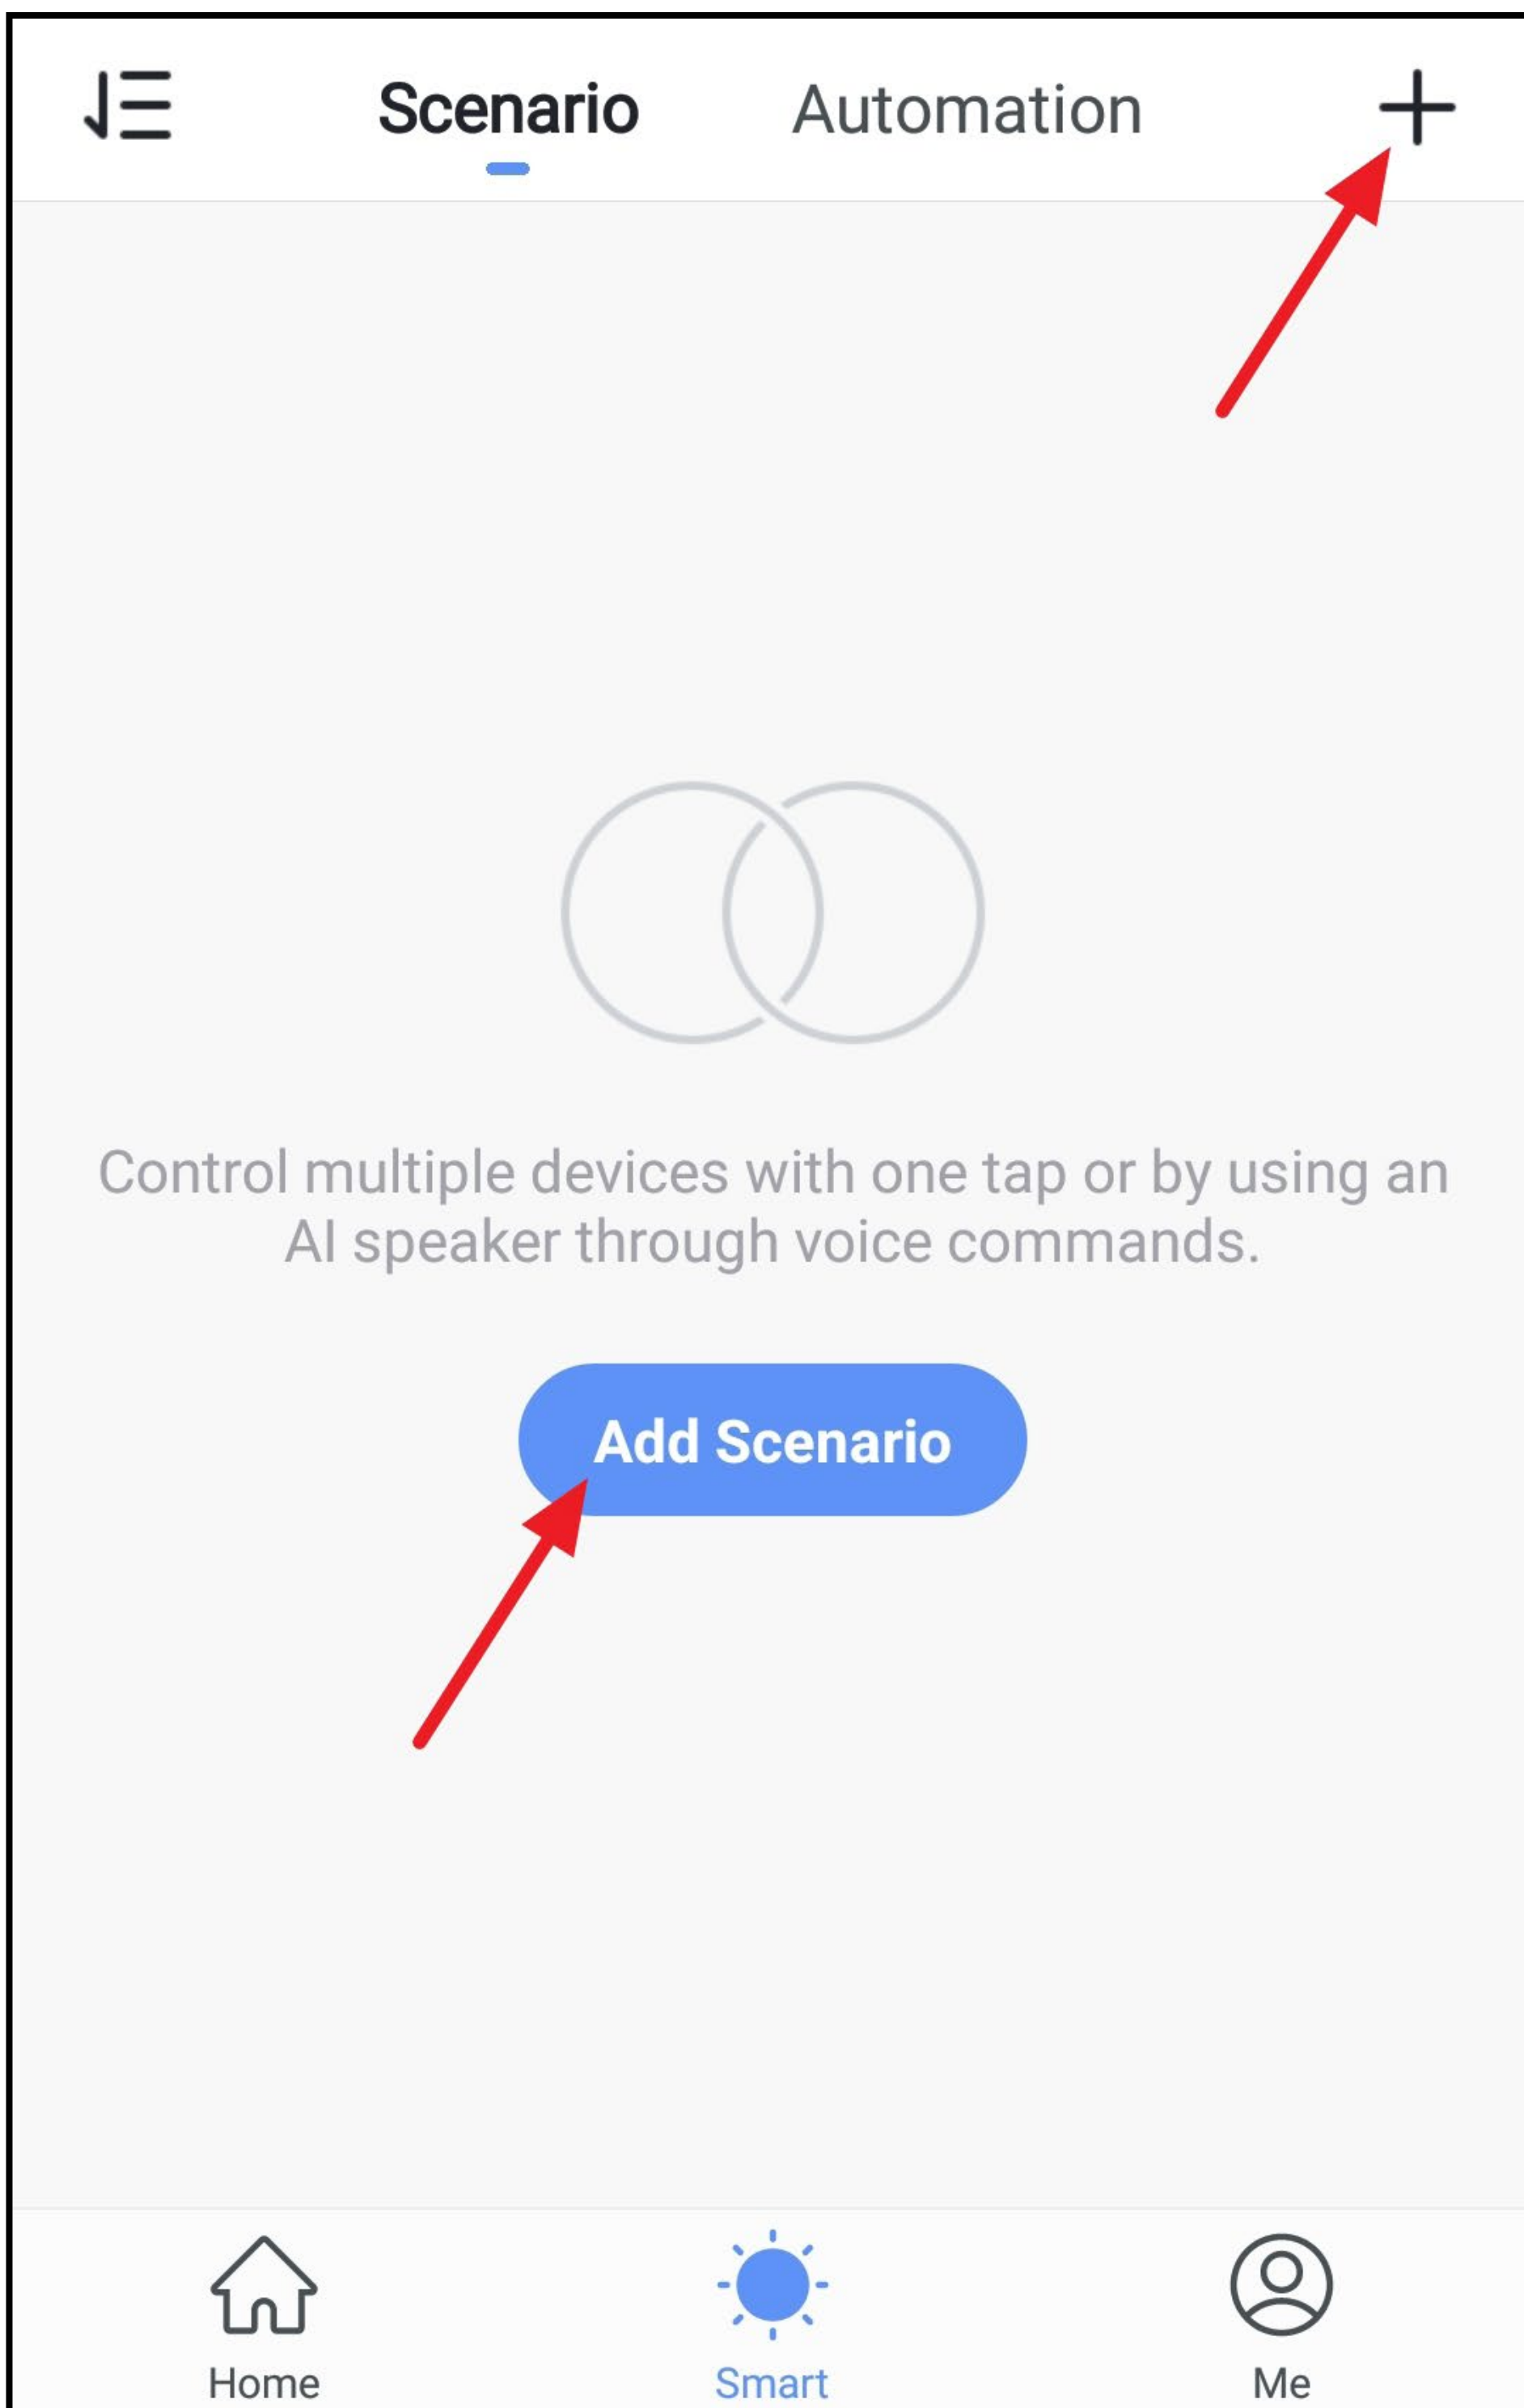


 - Tap the background image to select another.
- Then tap the small “+”.

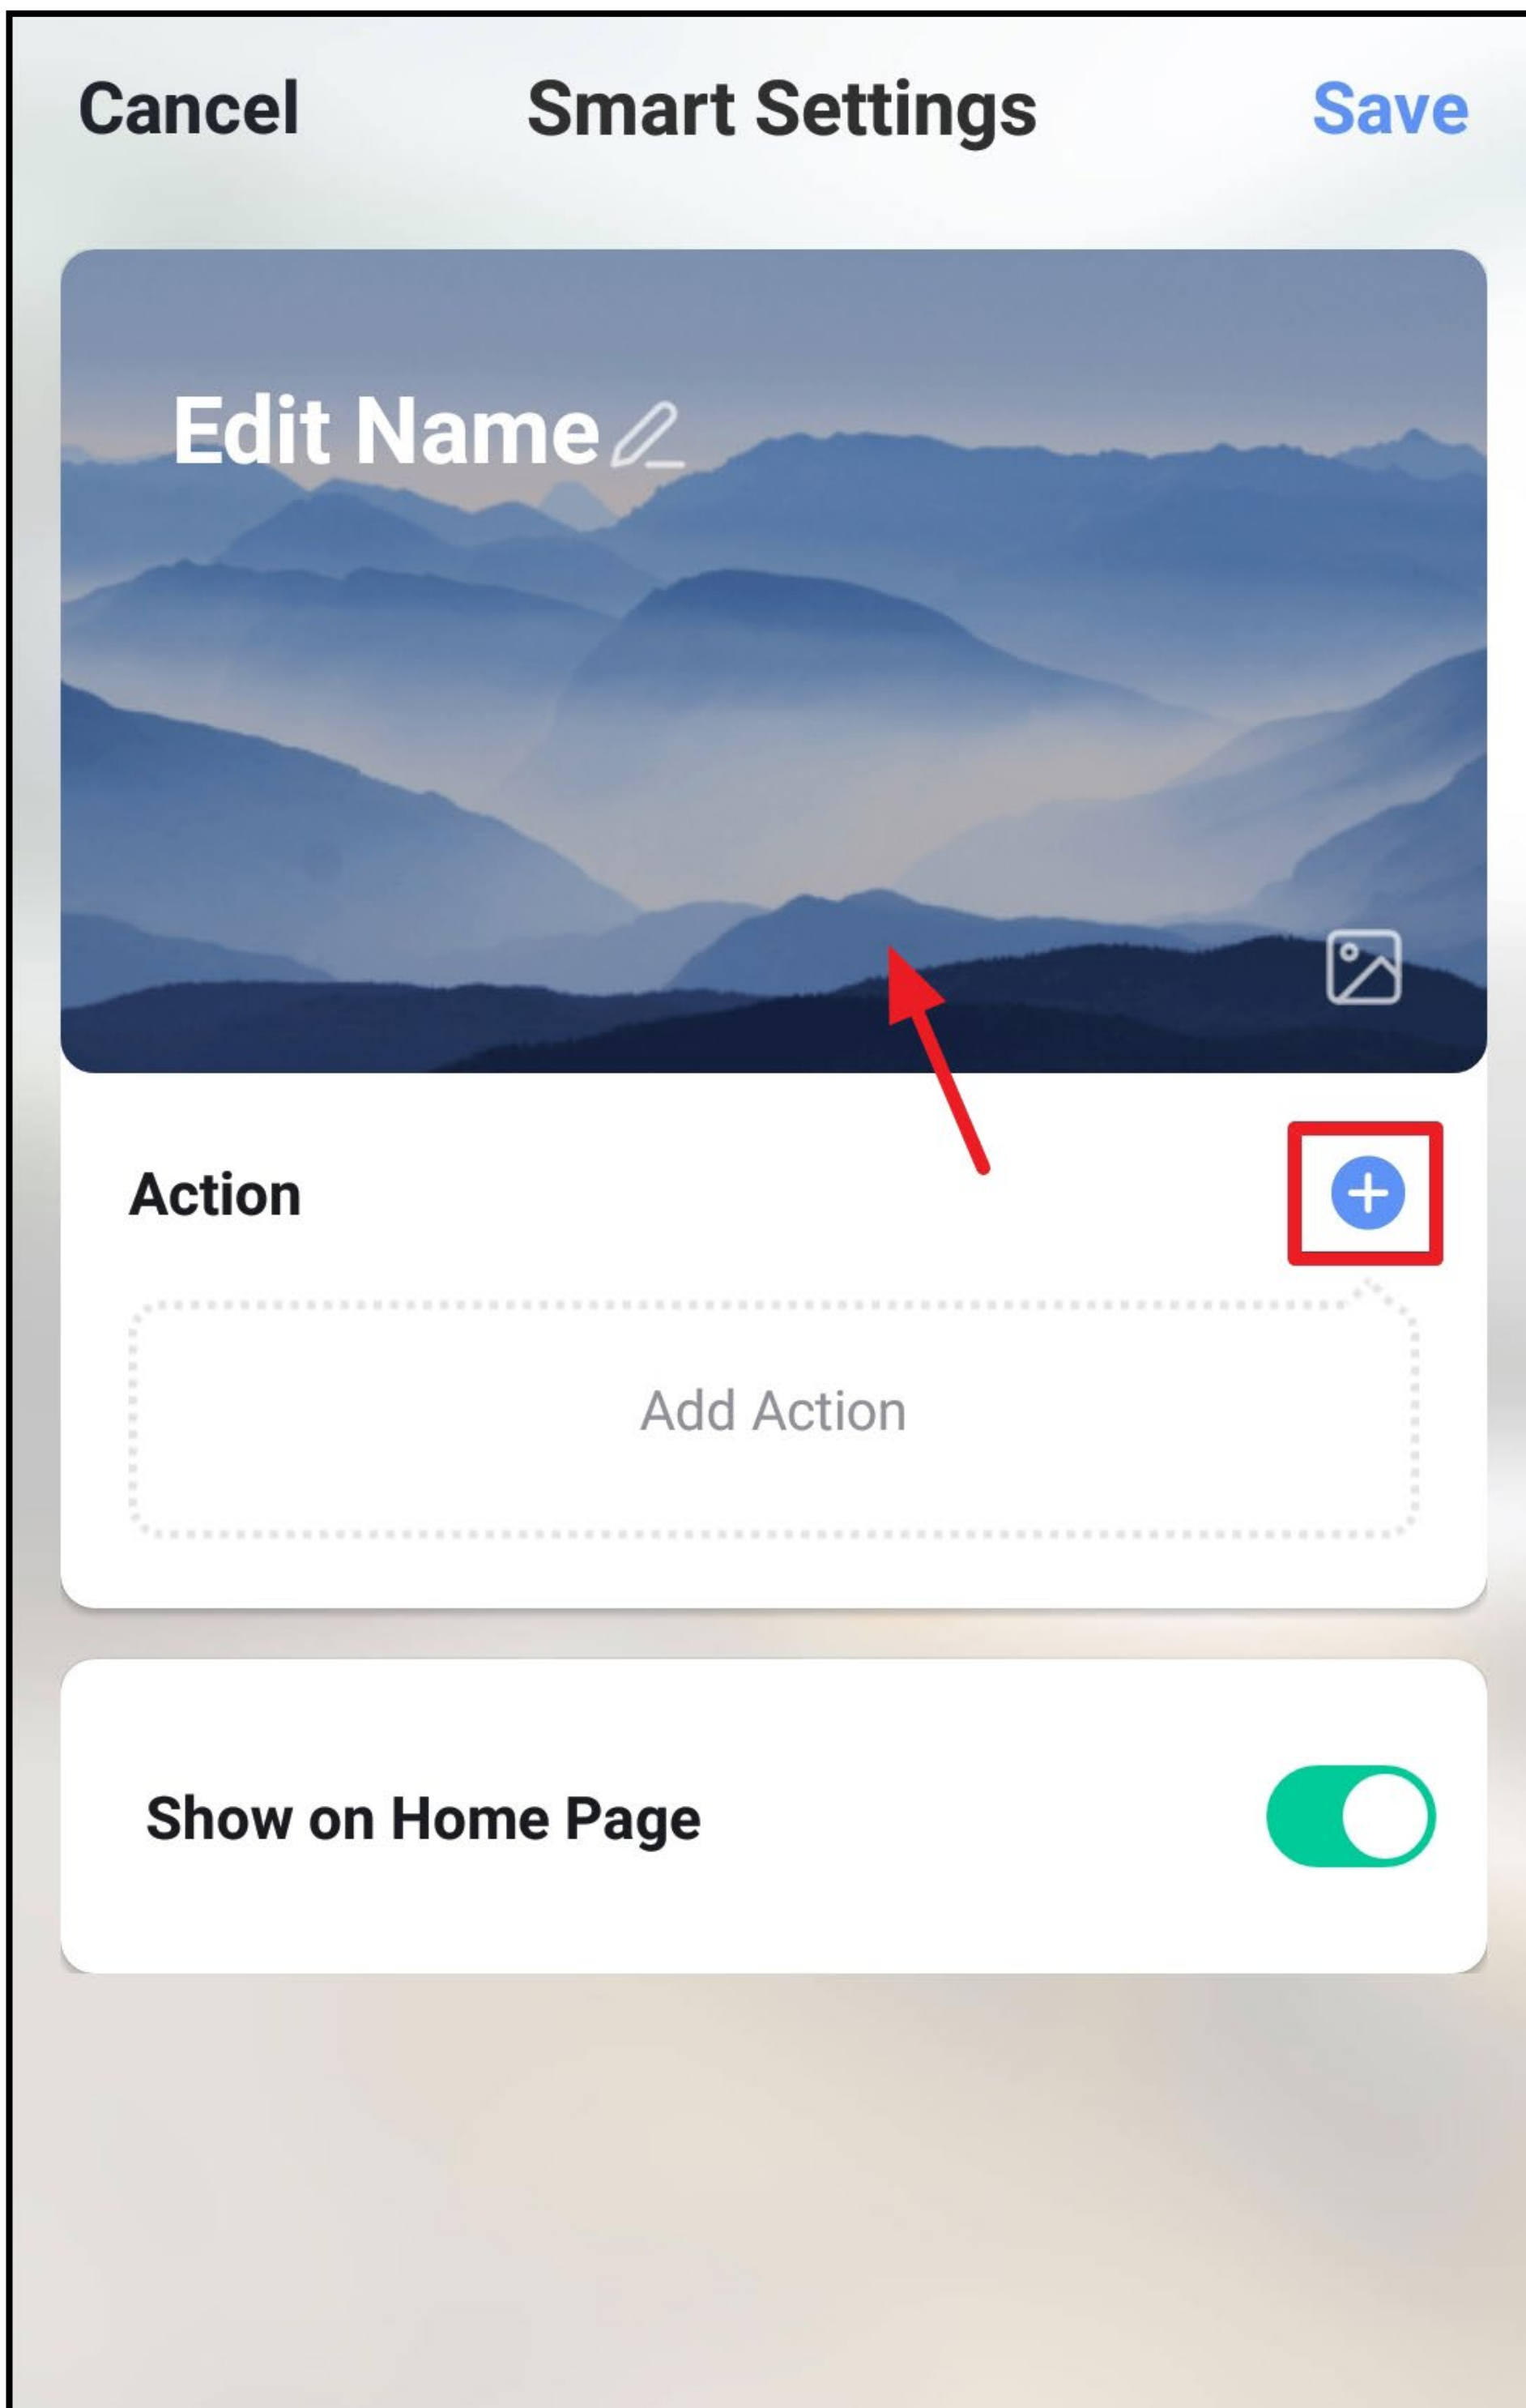


- In our example, we are creating a scene with delay. To do this, tap the button in the middle.

 
Since a delay always requires a device to follow it, we will first create the delay and then add the device.

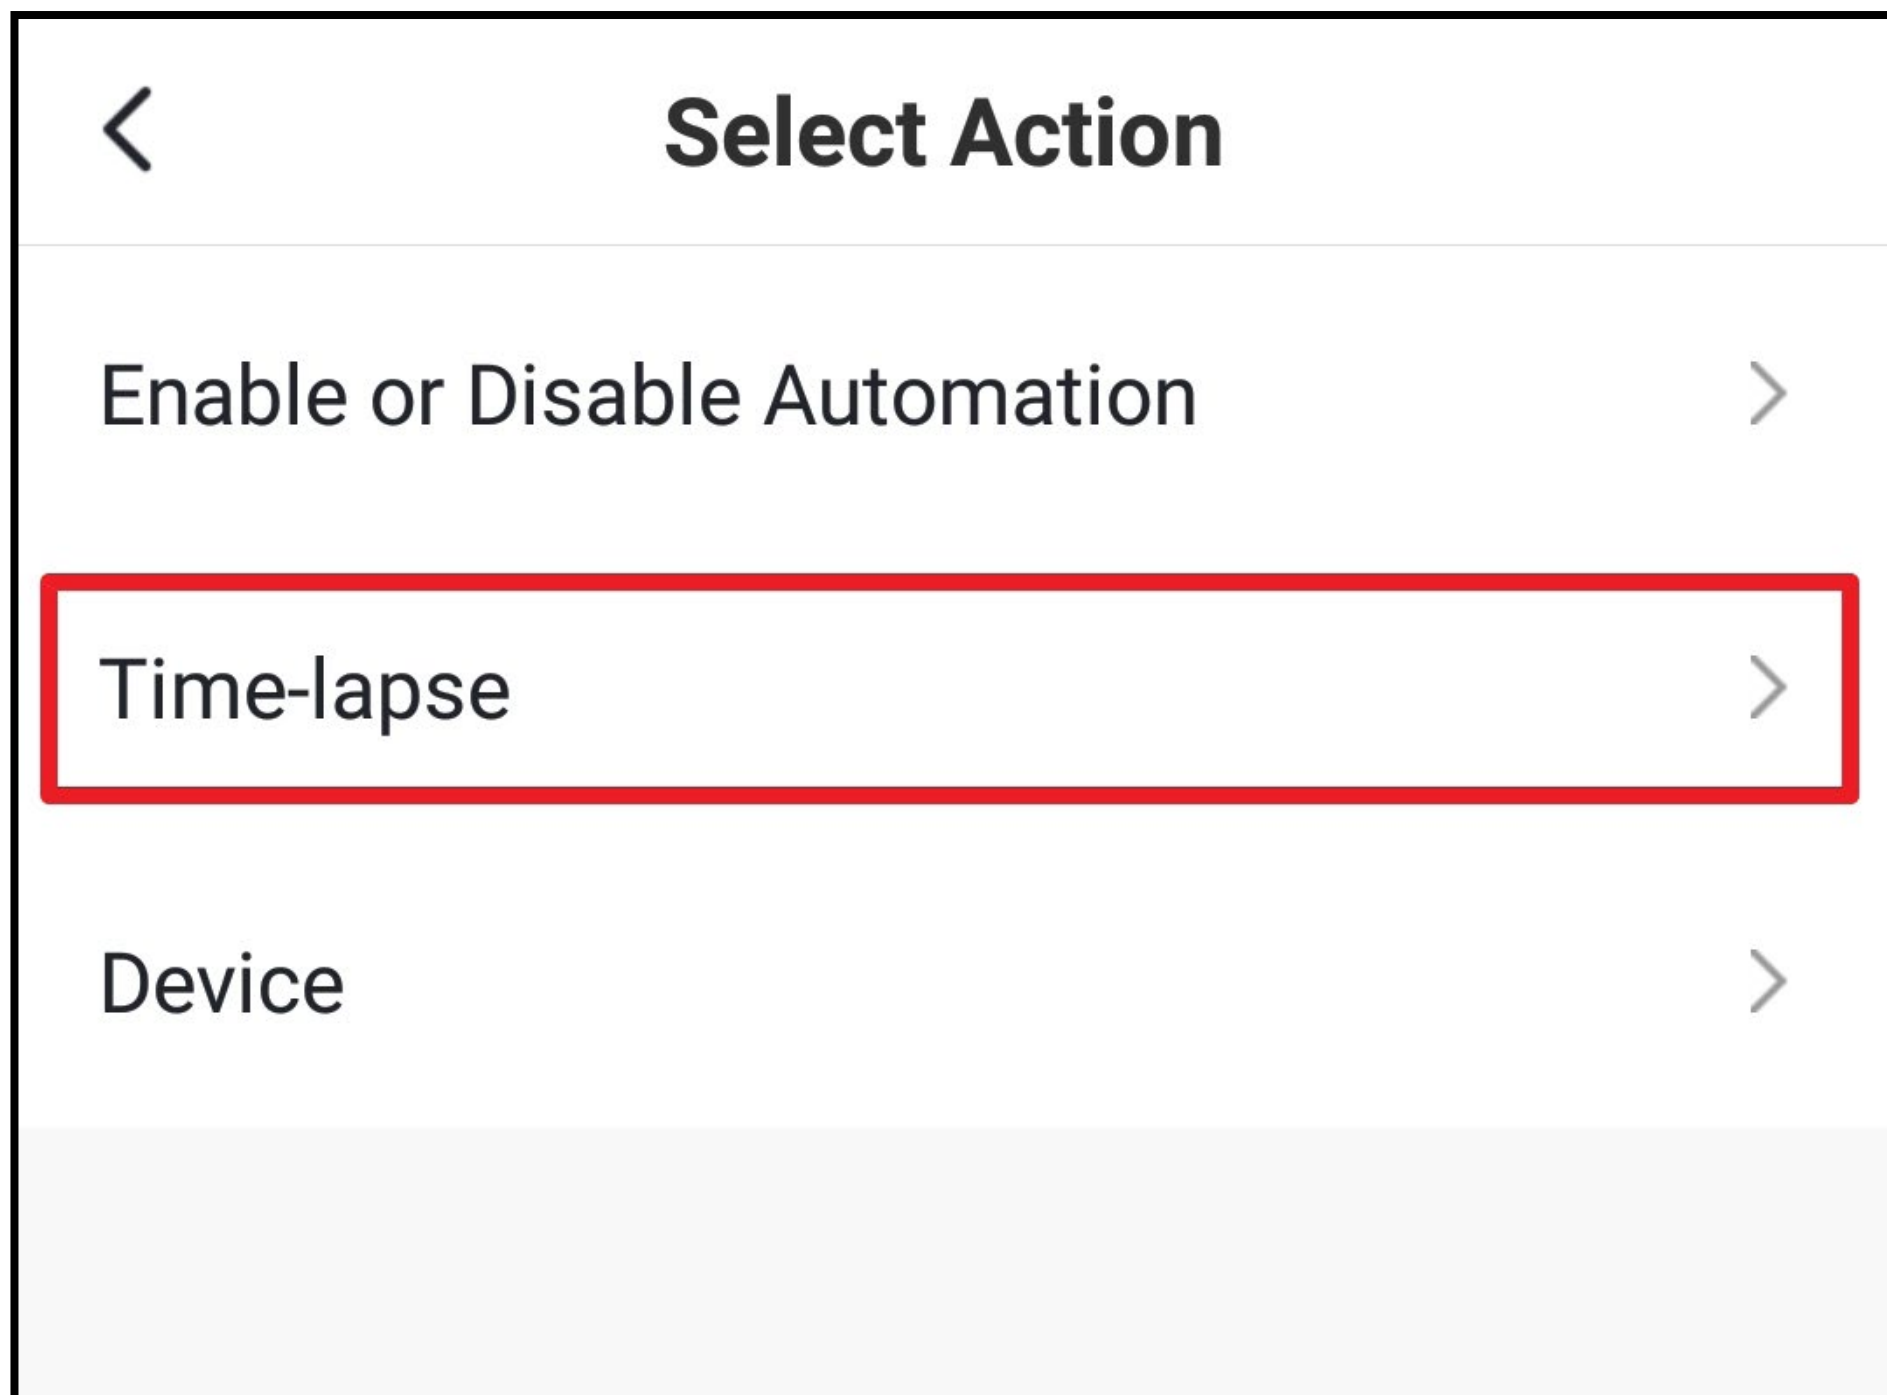

 
- Swipe up or down to set the desired minutes and seconds.
- Then tap "**Next**" at the top.

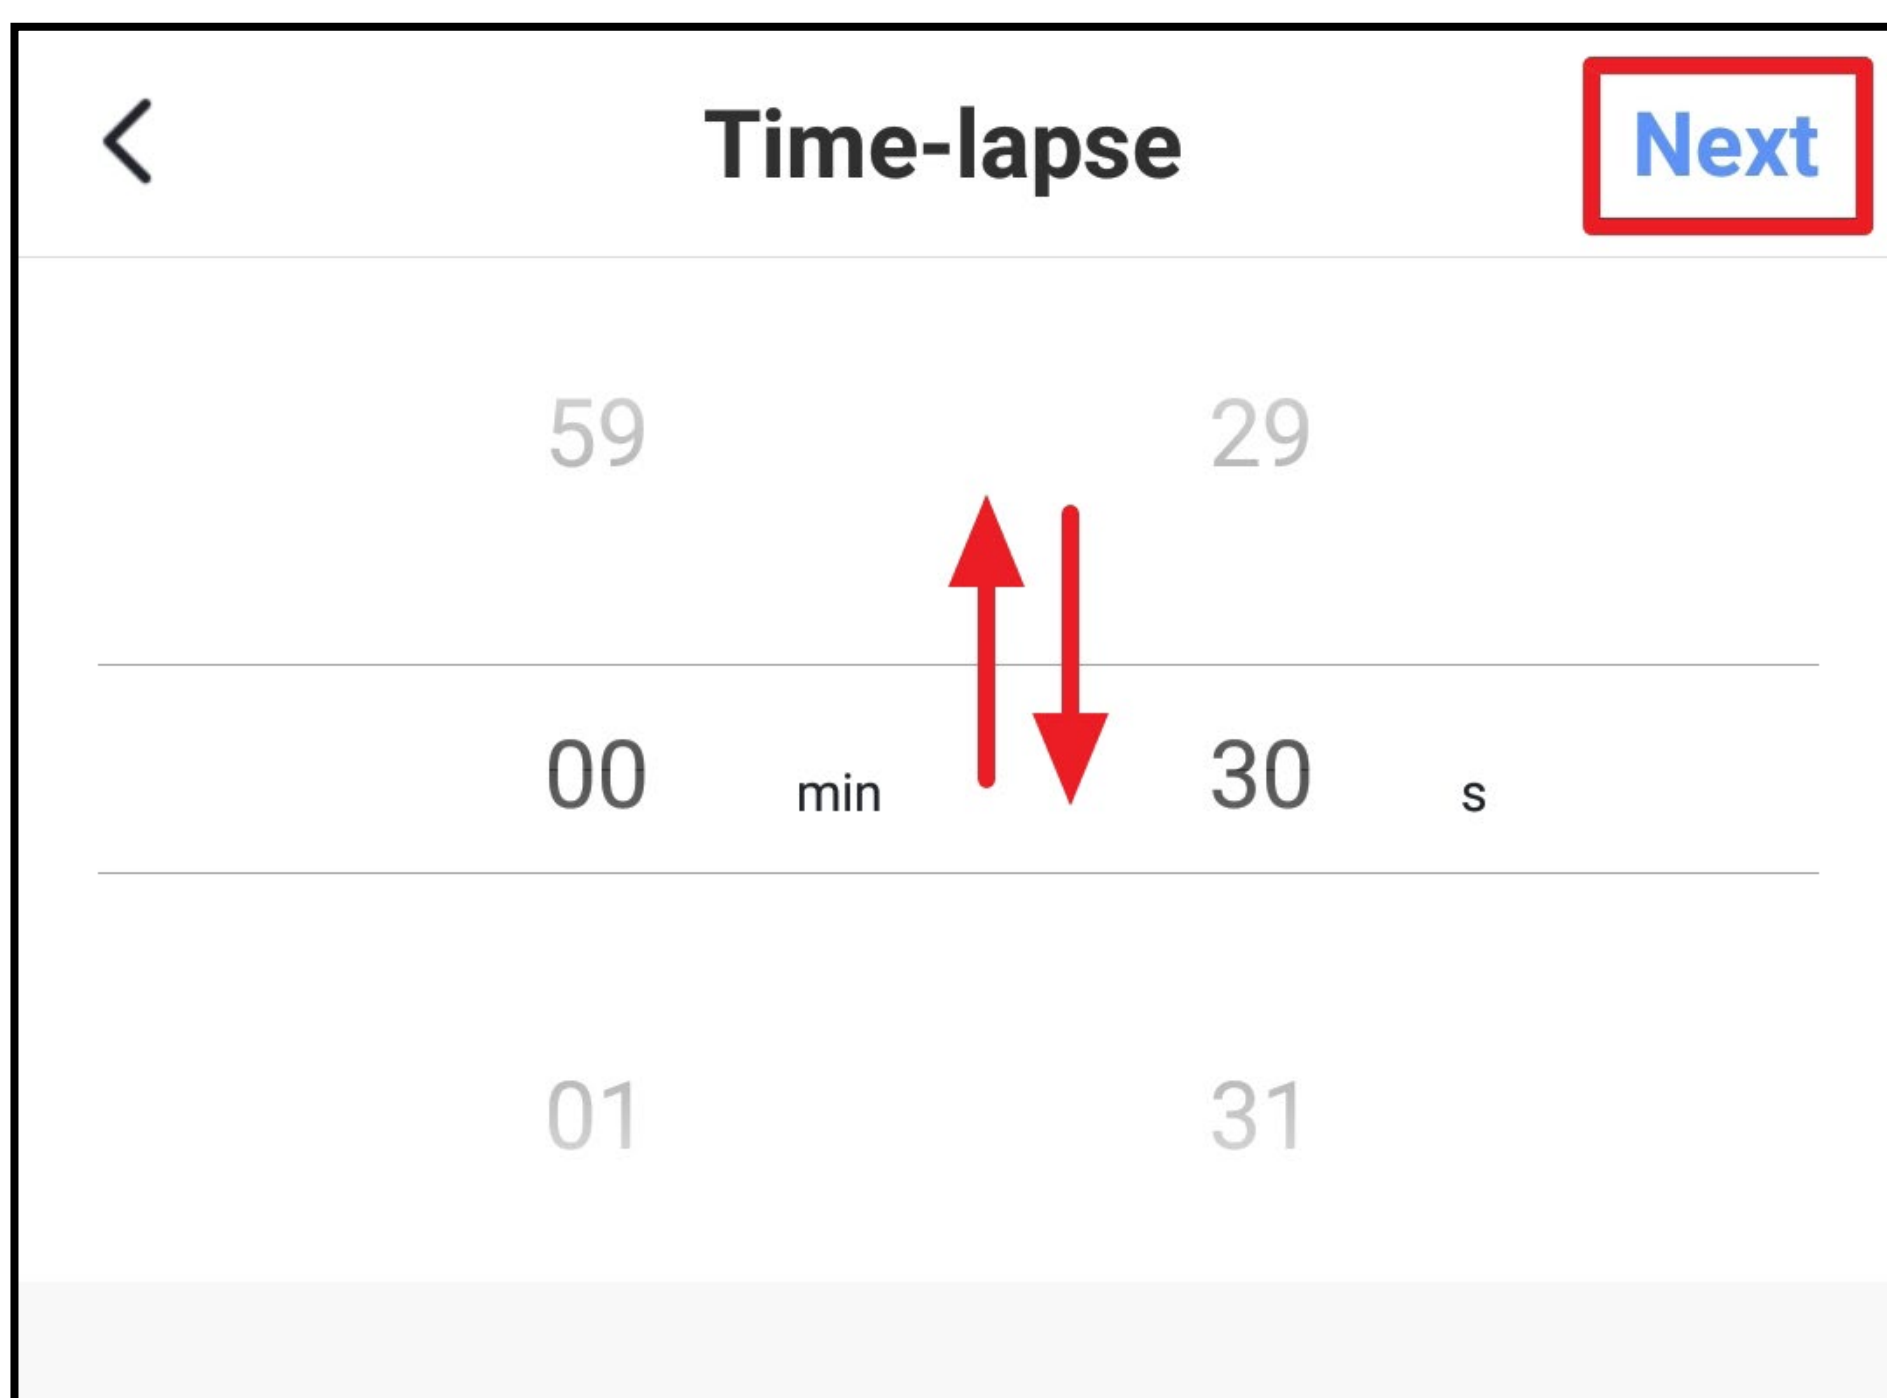

 
- The delay has been added to the scene.
- To add the device, tap the small “+” again.

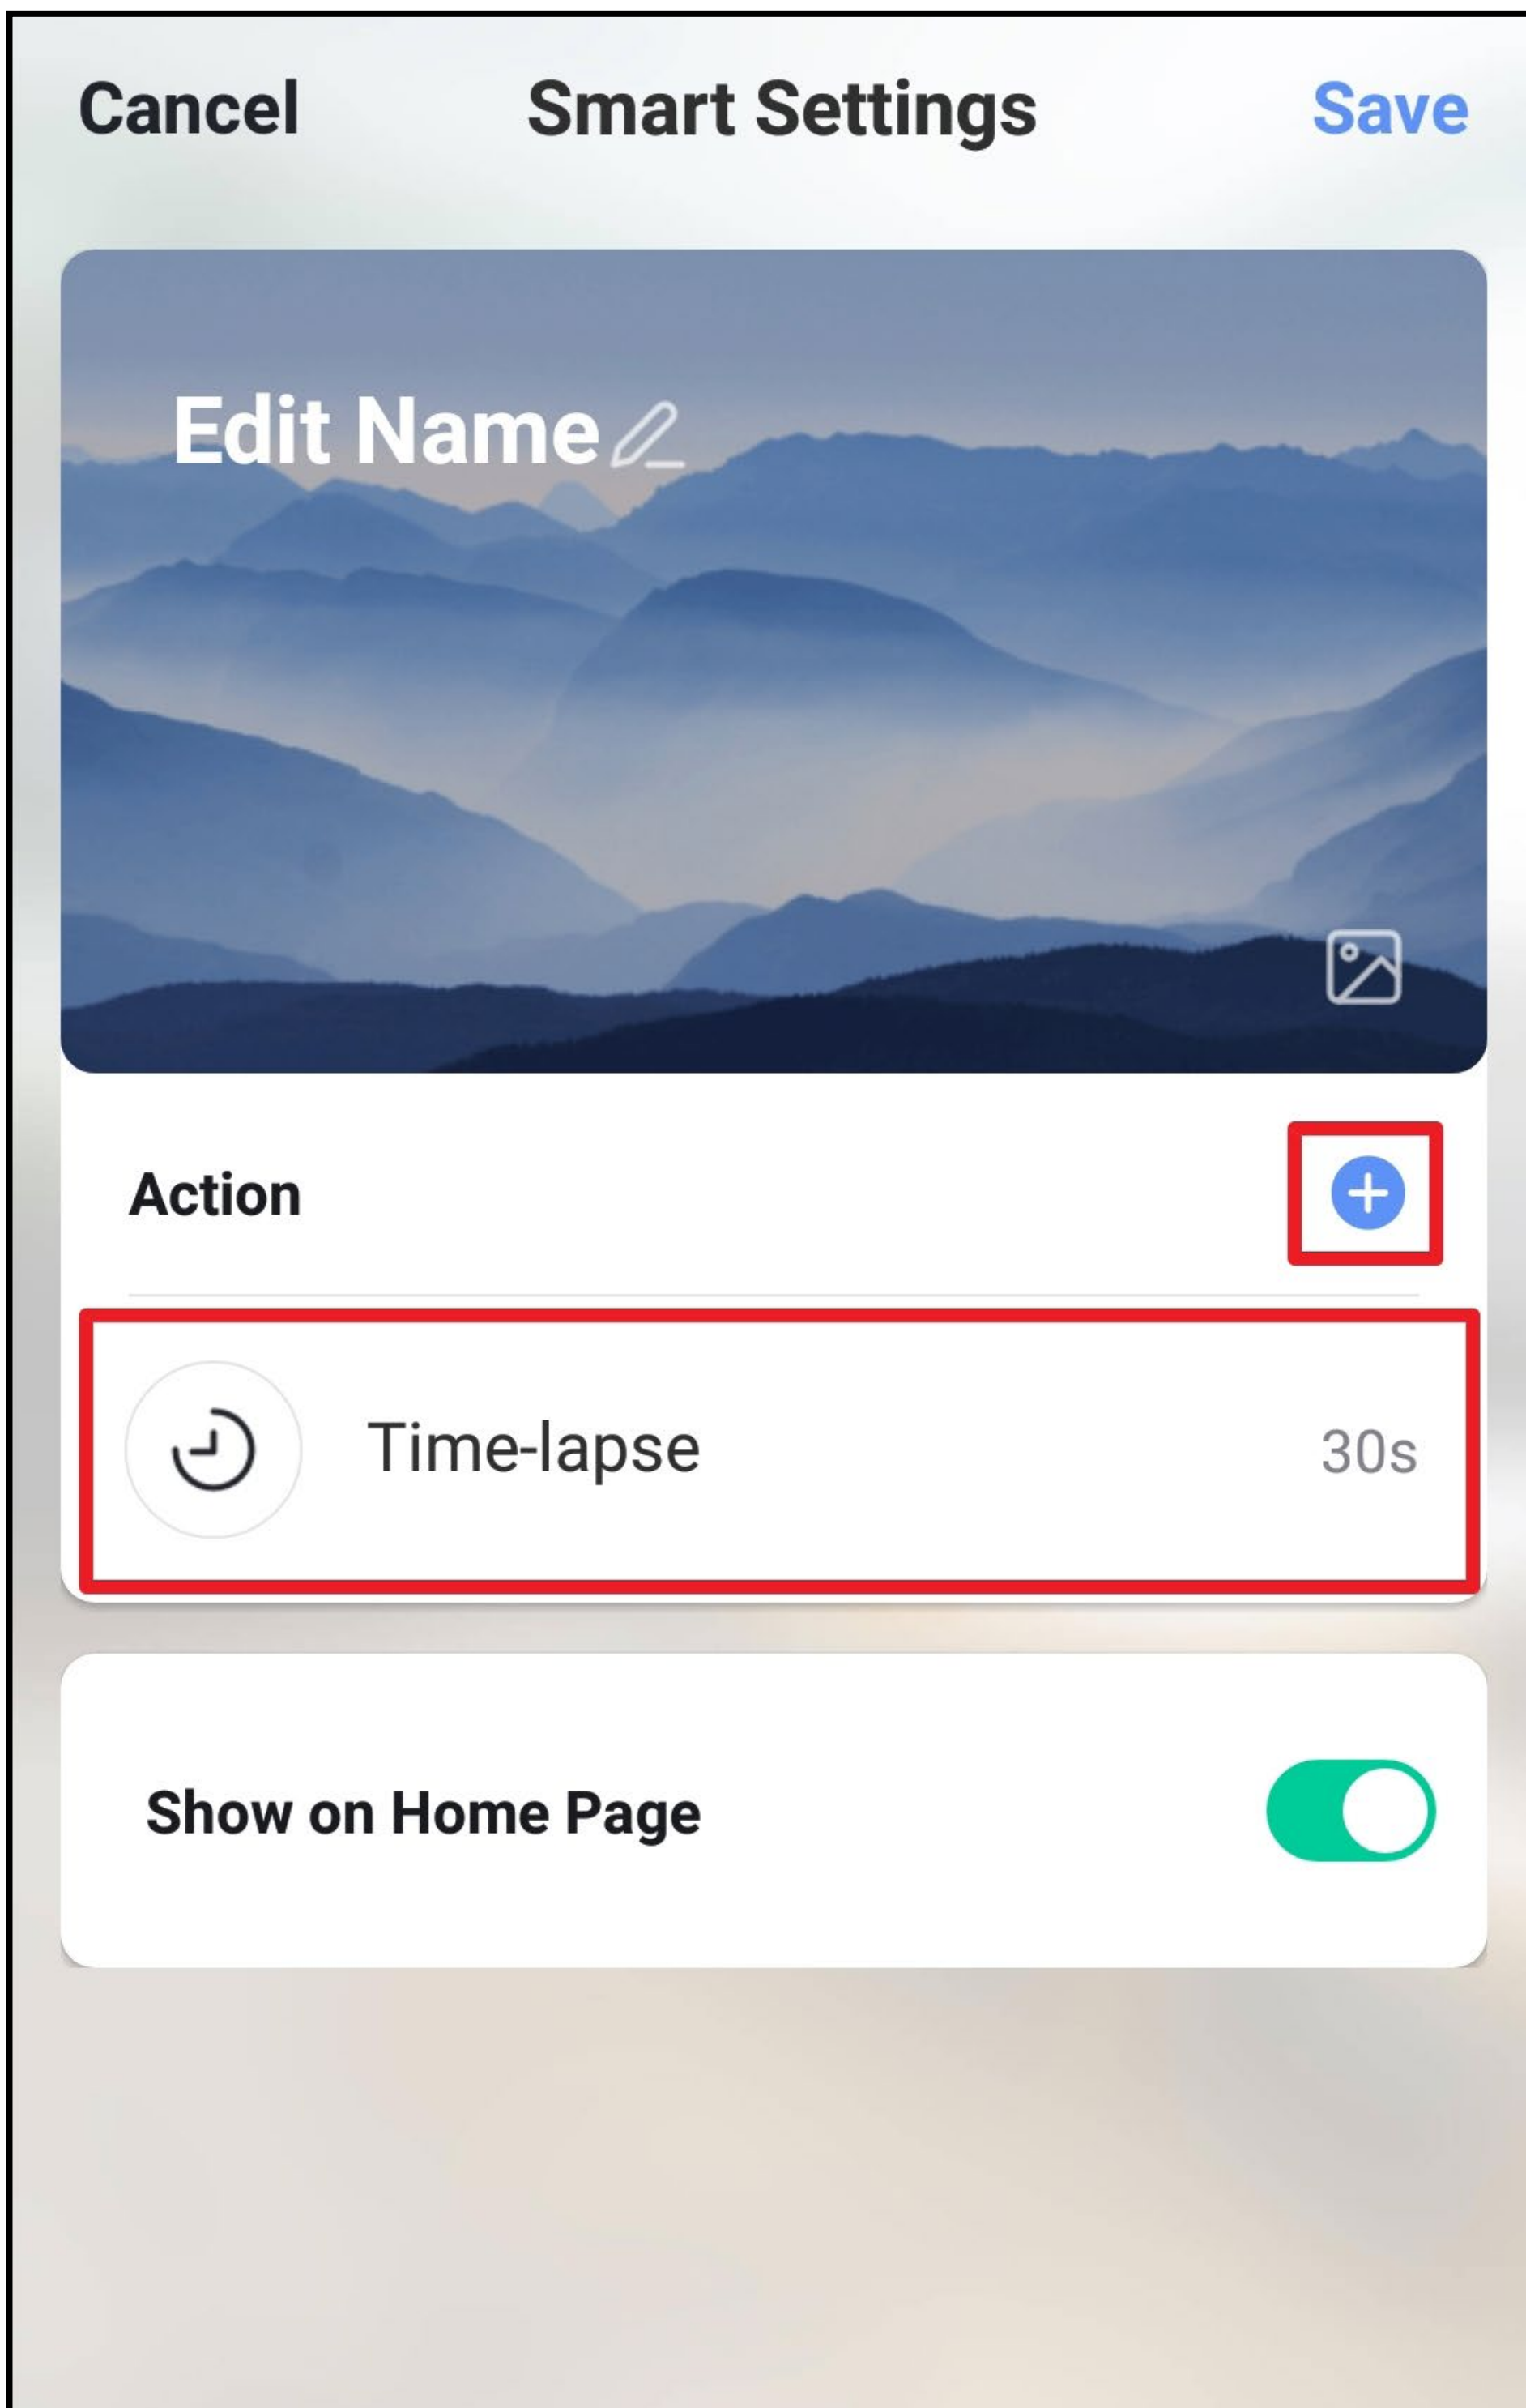

- Now tap the “**Device**” button.

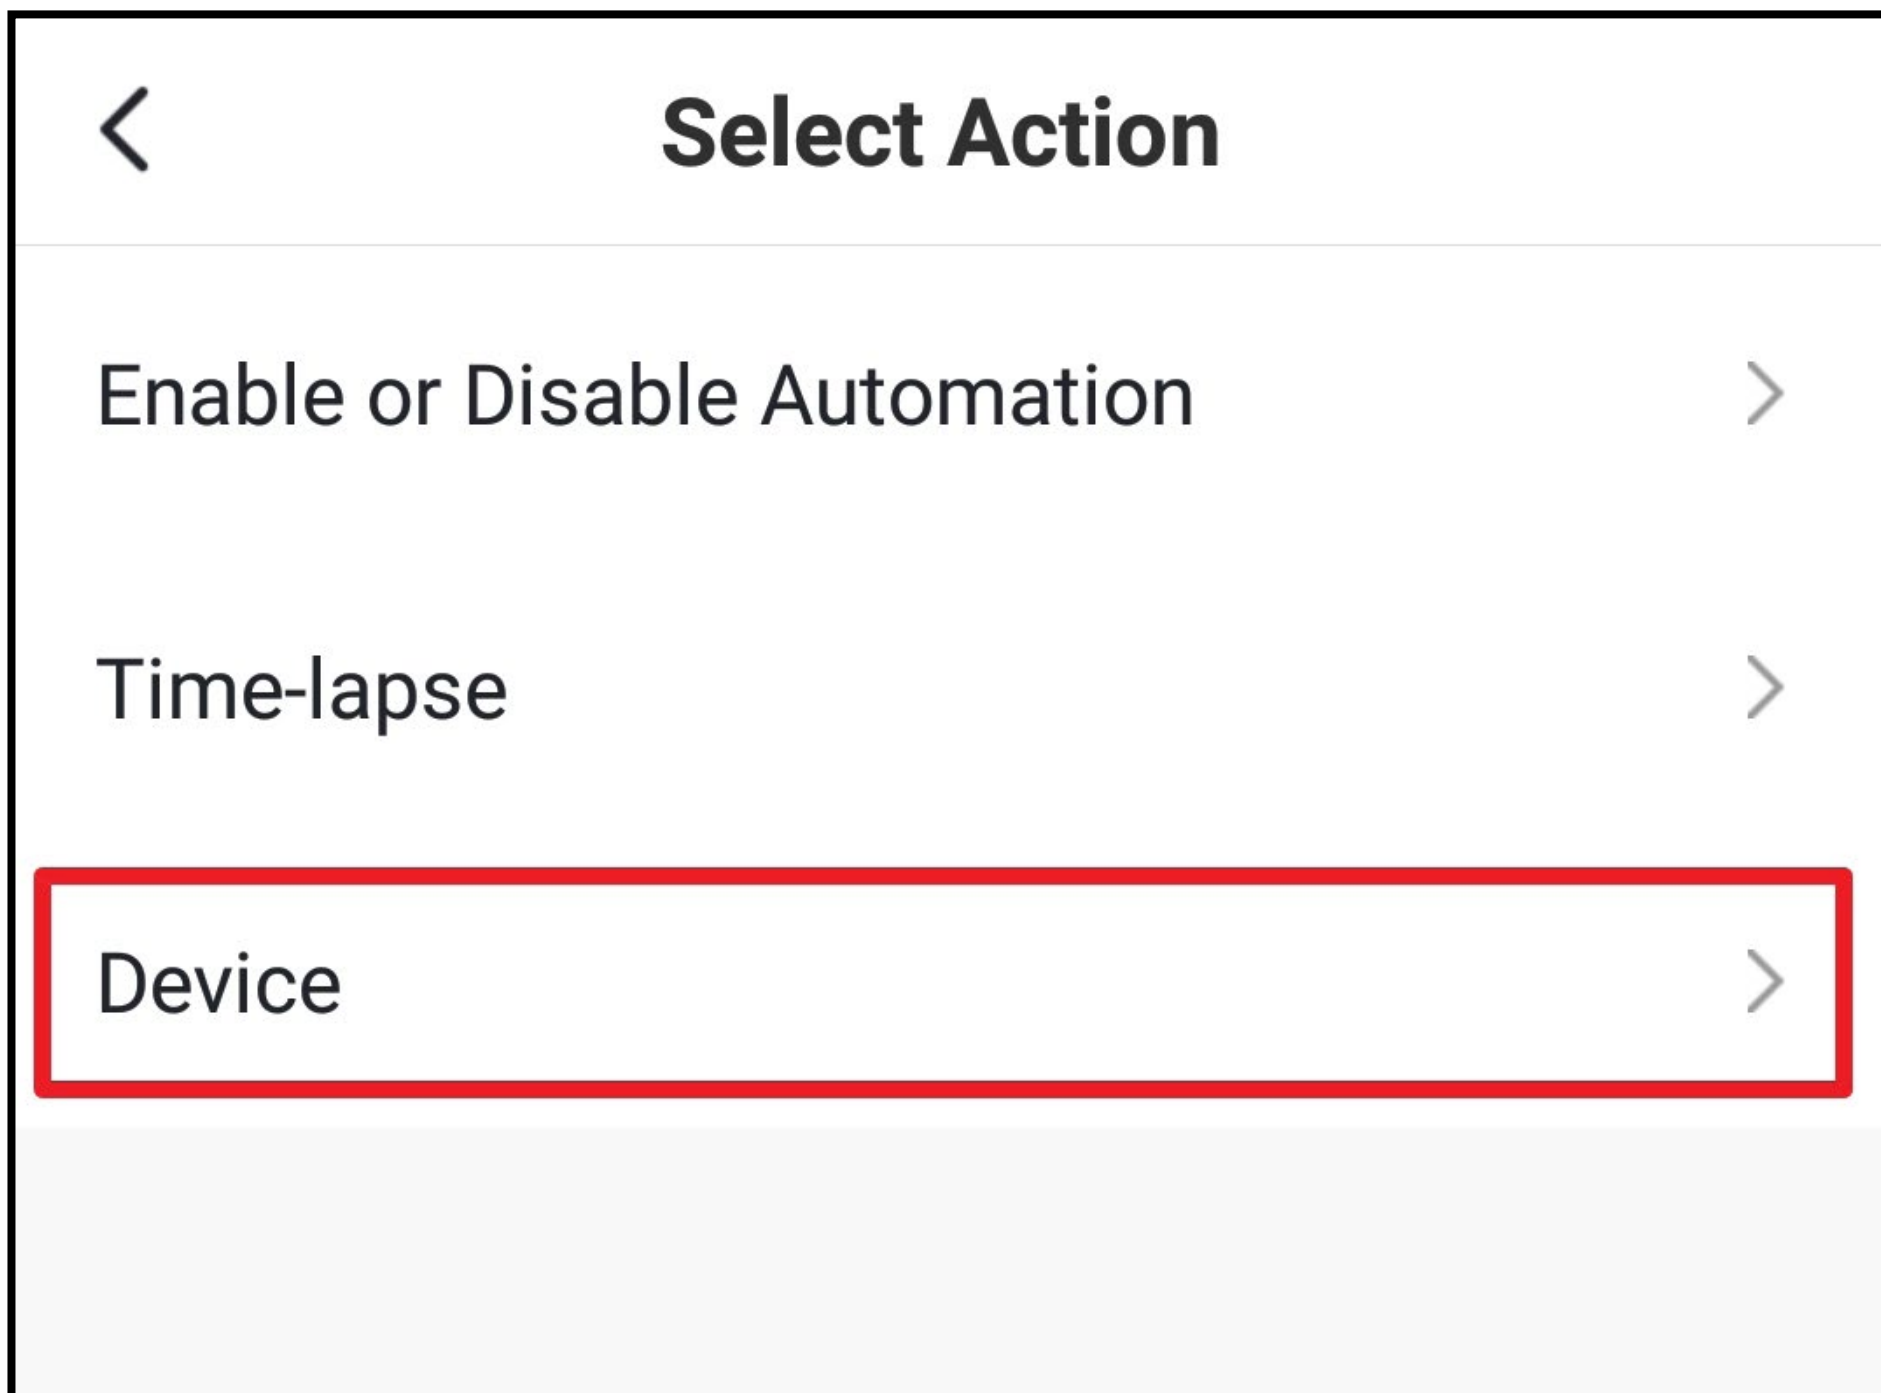 


- Select the desired device and tap it.

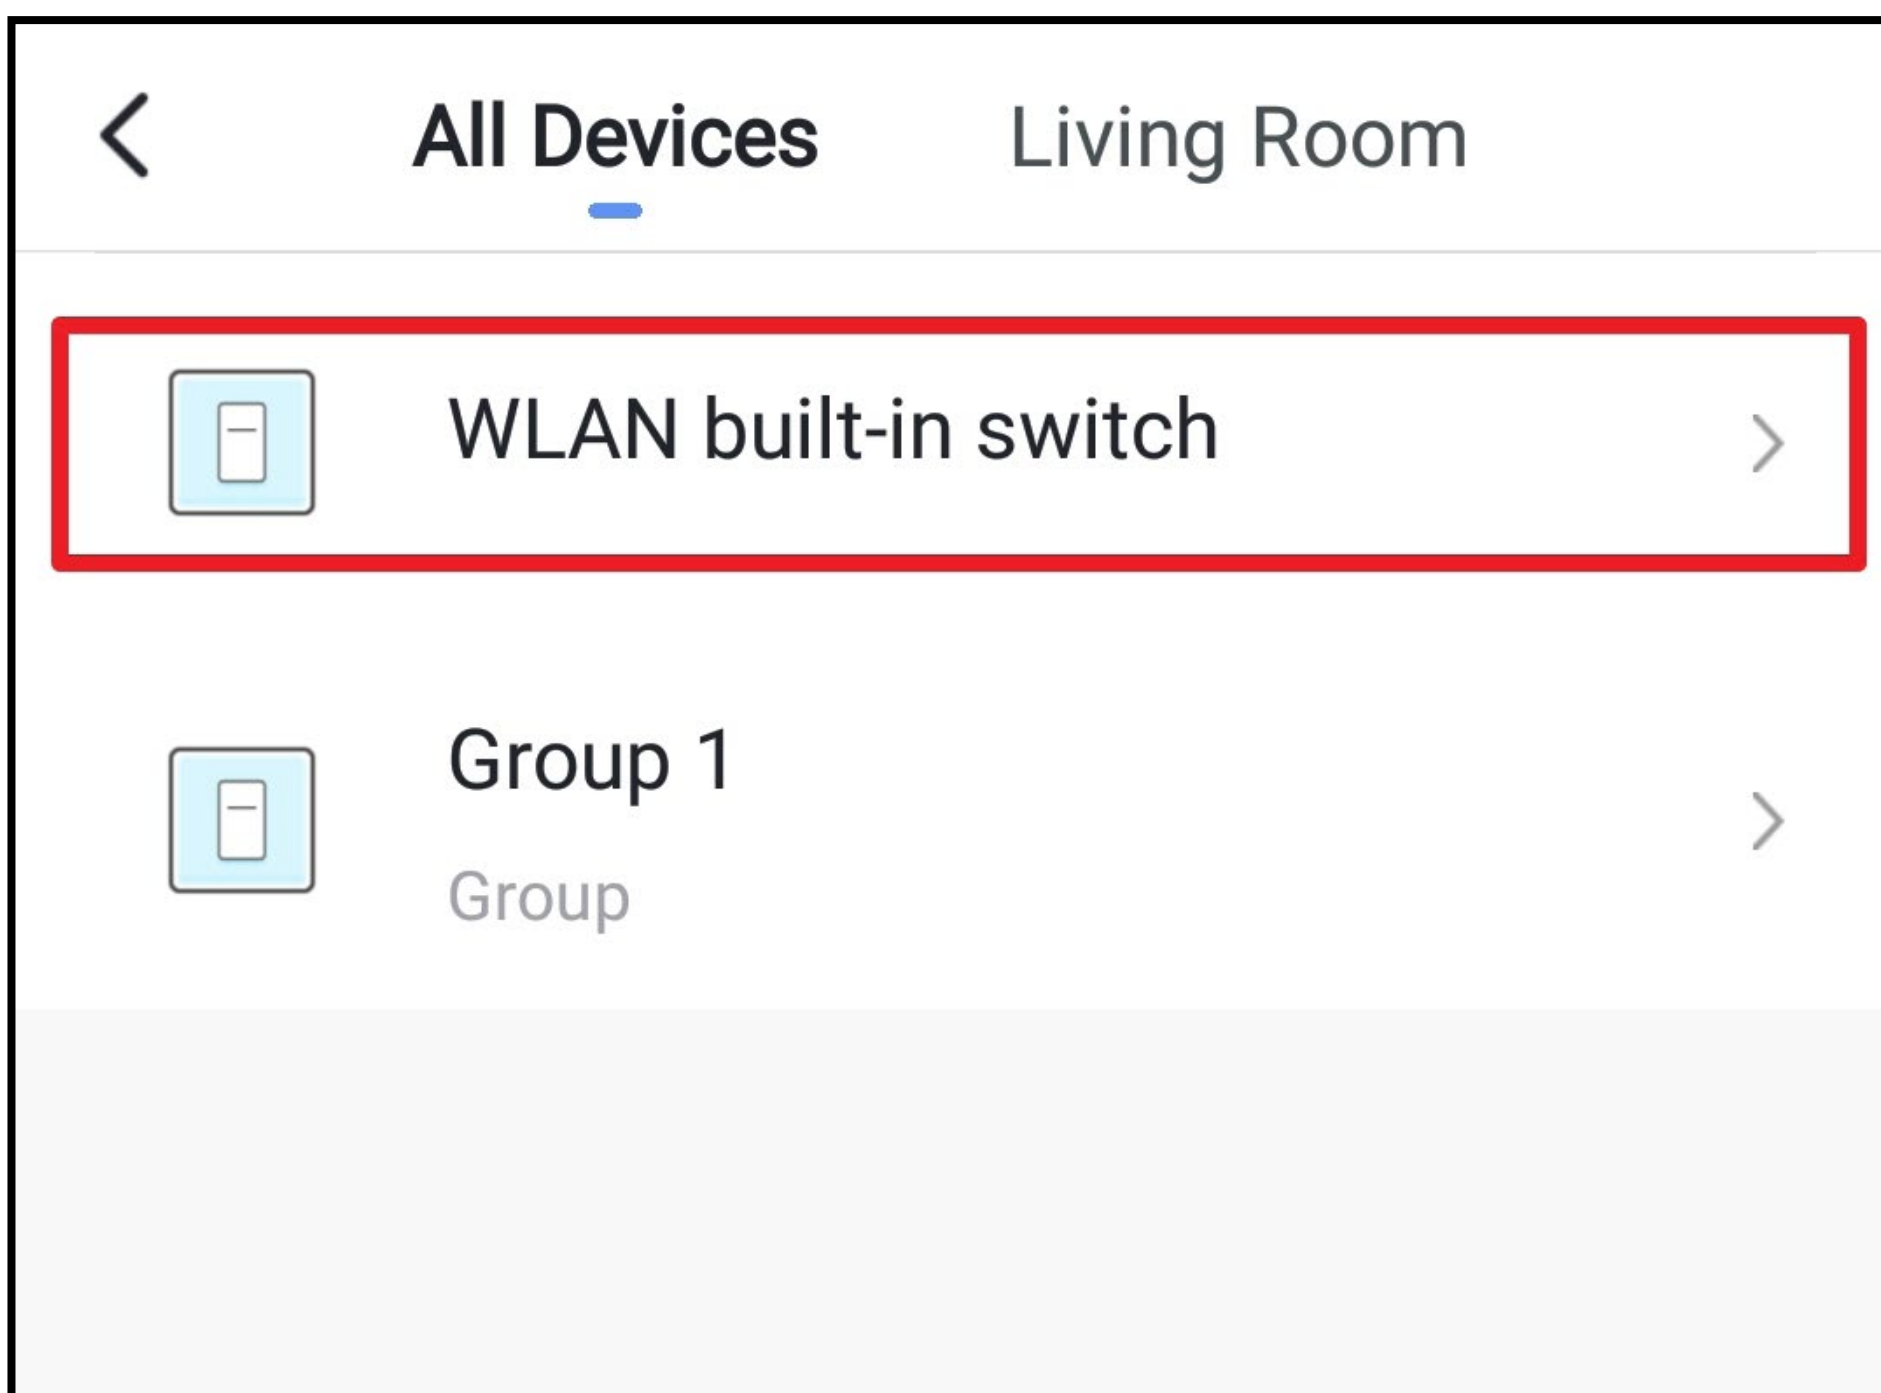 

- In our case it is a switch.

 
Tap the button.

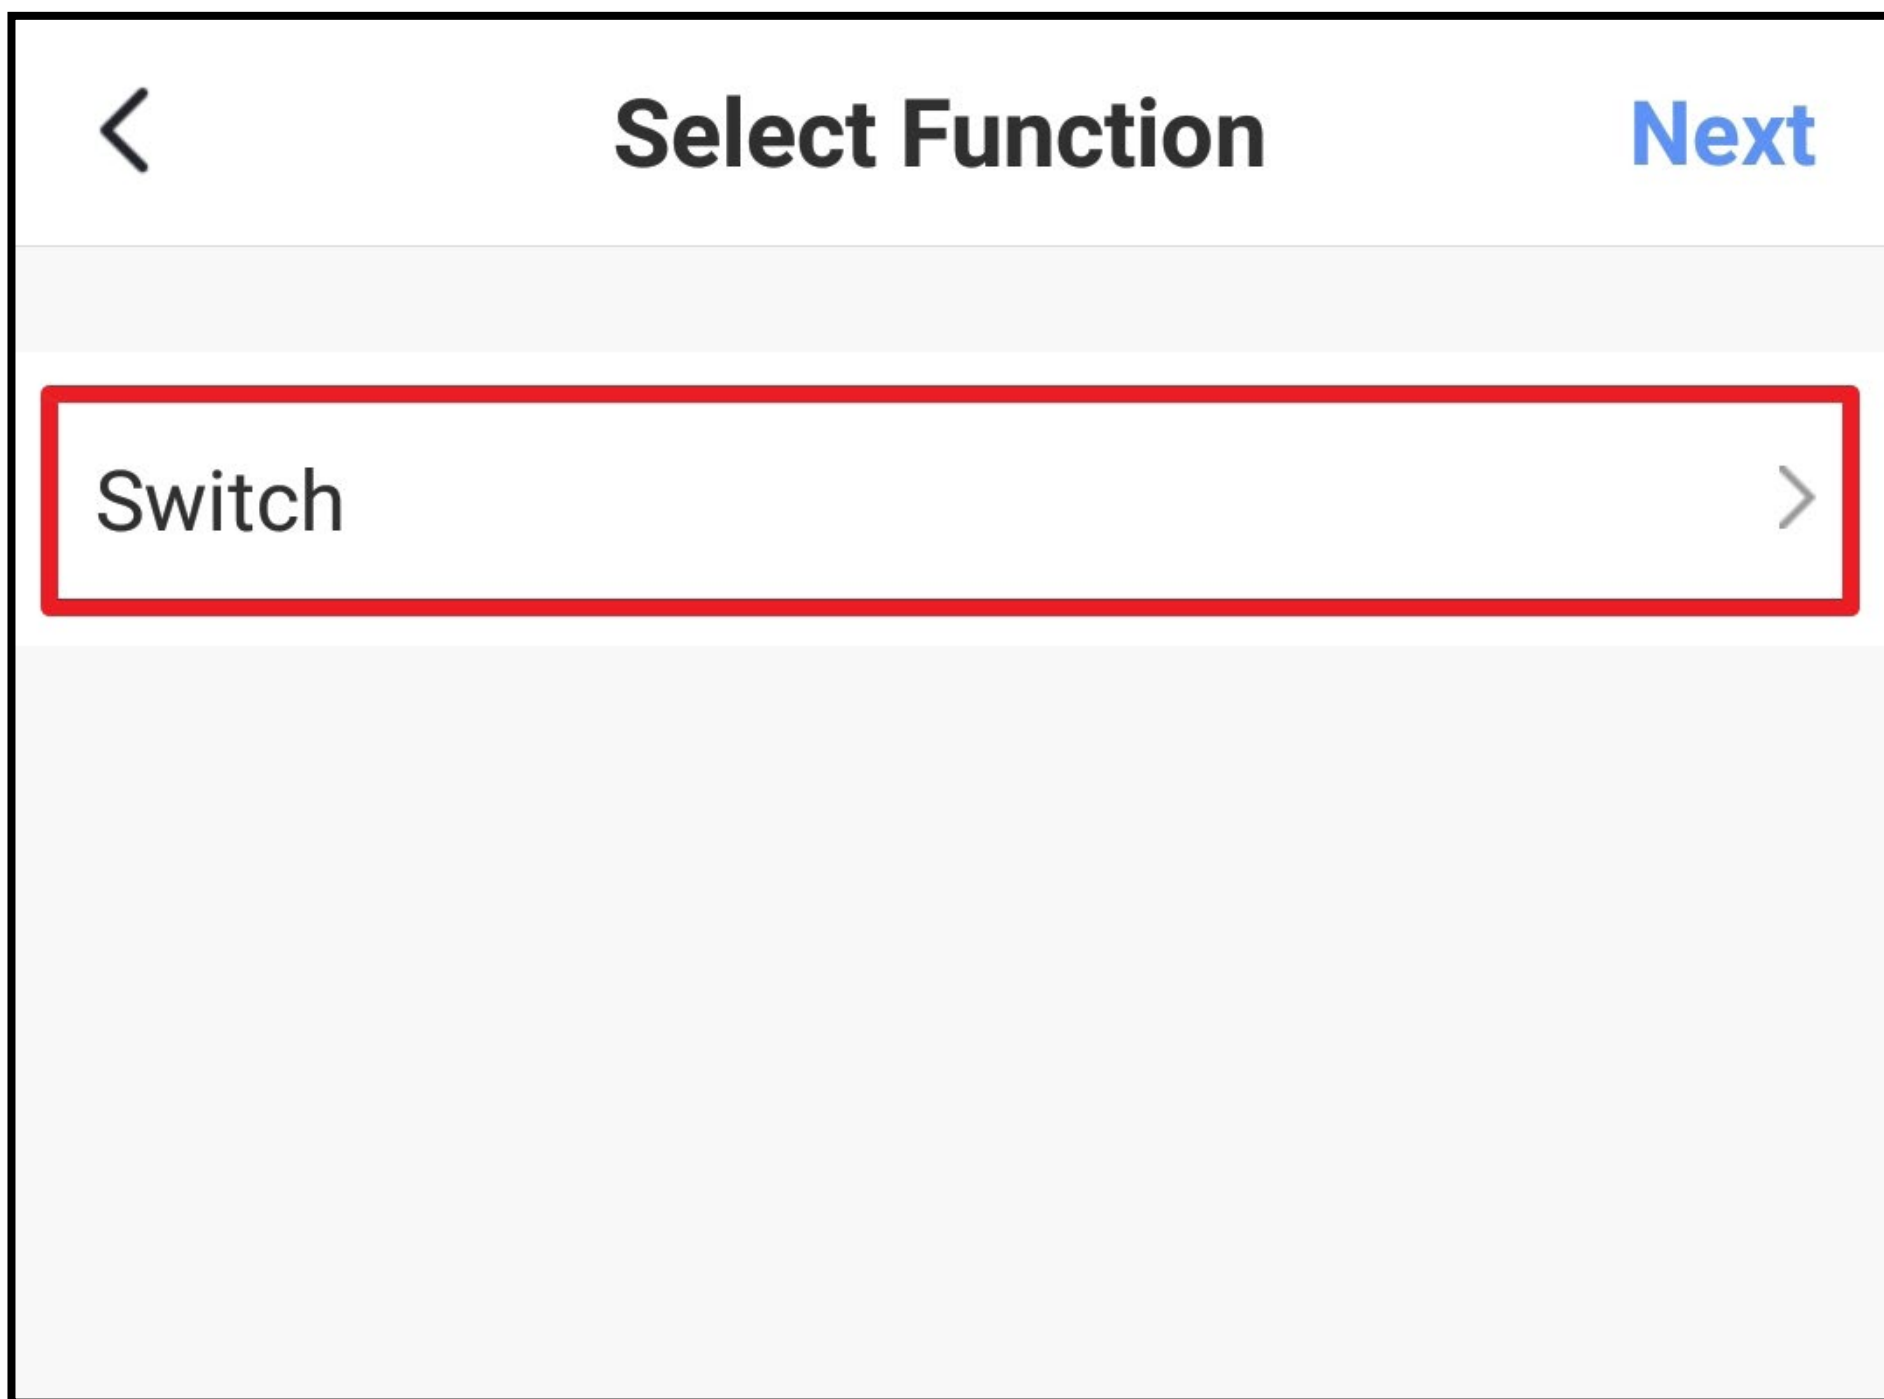


- Now select whether the switch should be disabled or enabled after the delay.

In our case, the switch should be enabled.

 - Tap the bottom right button to save the selection.

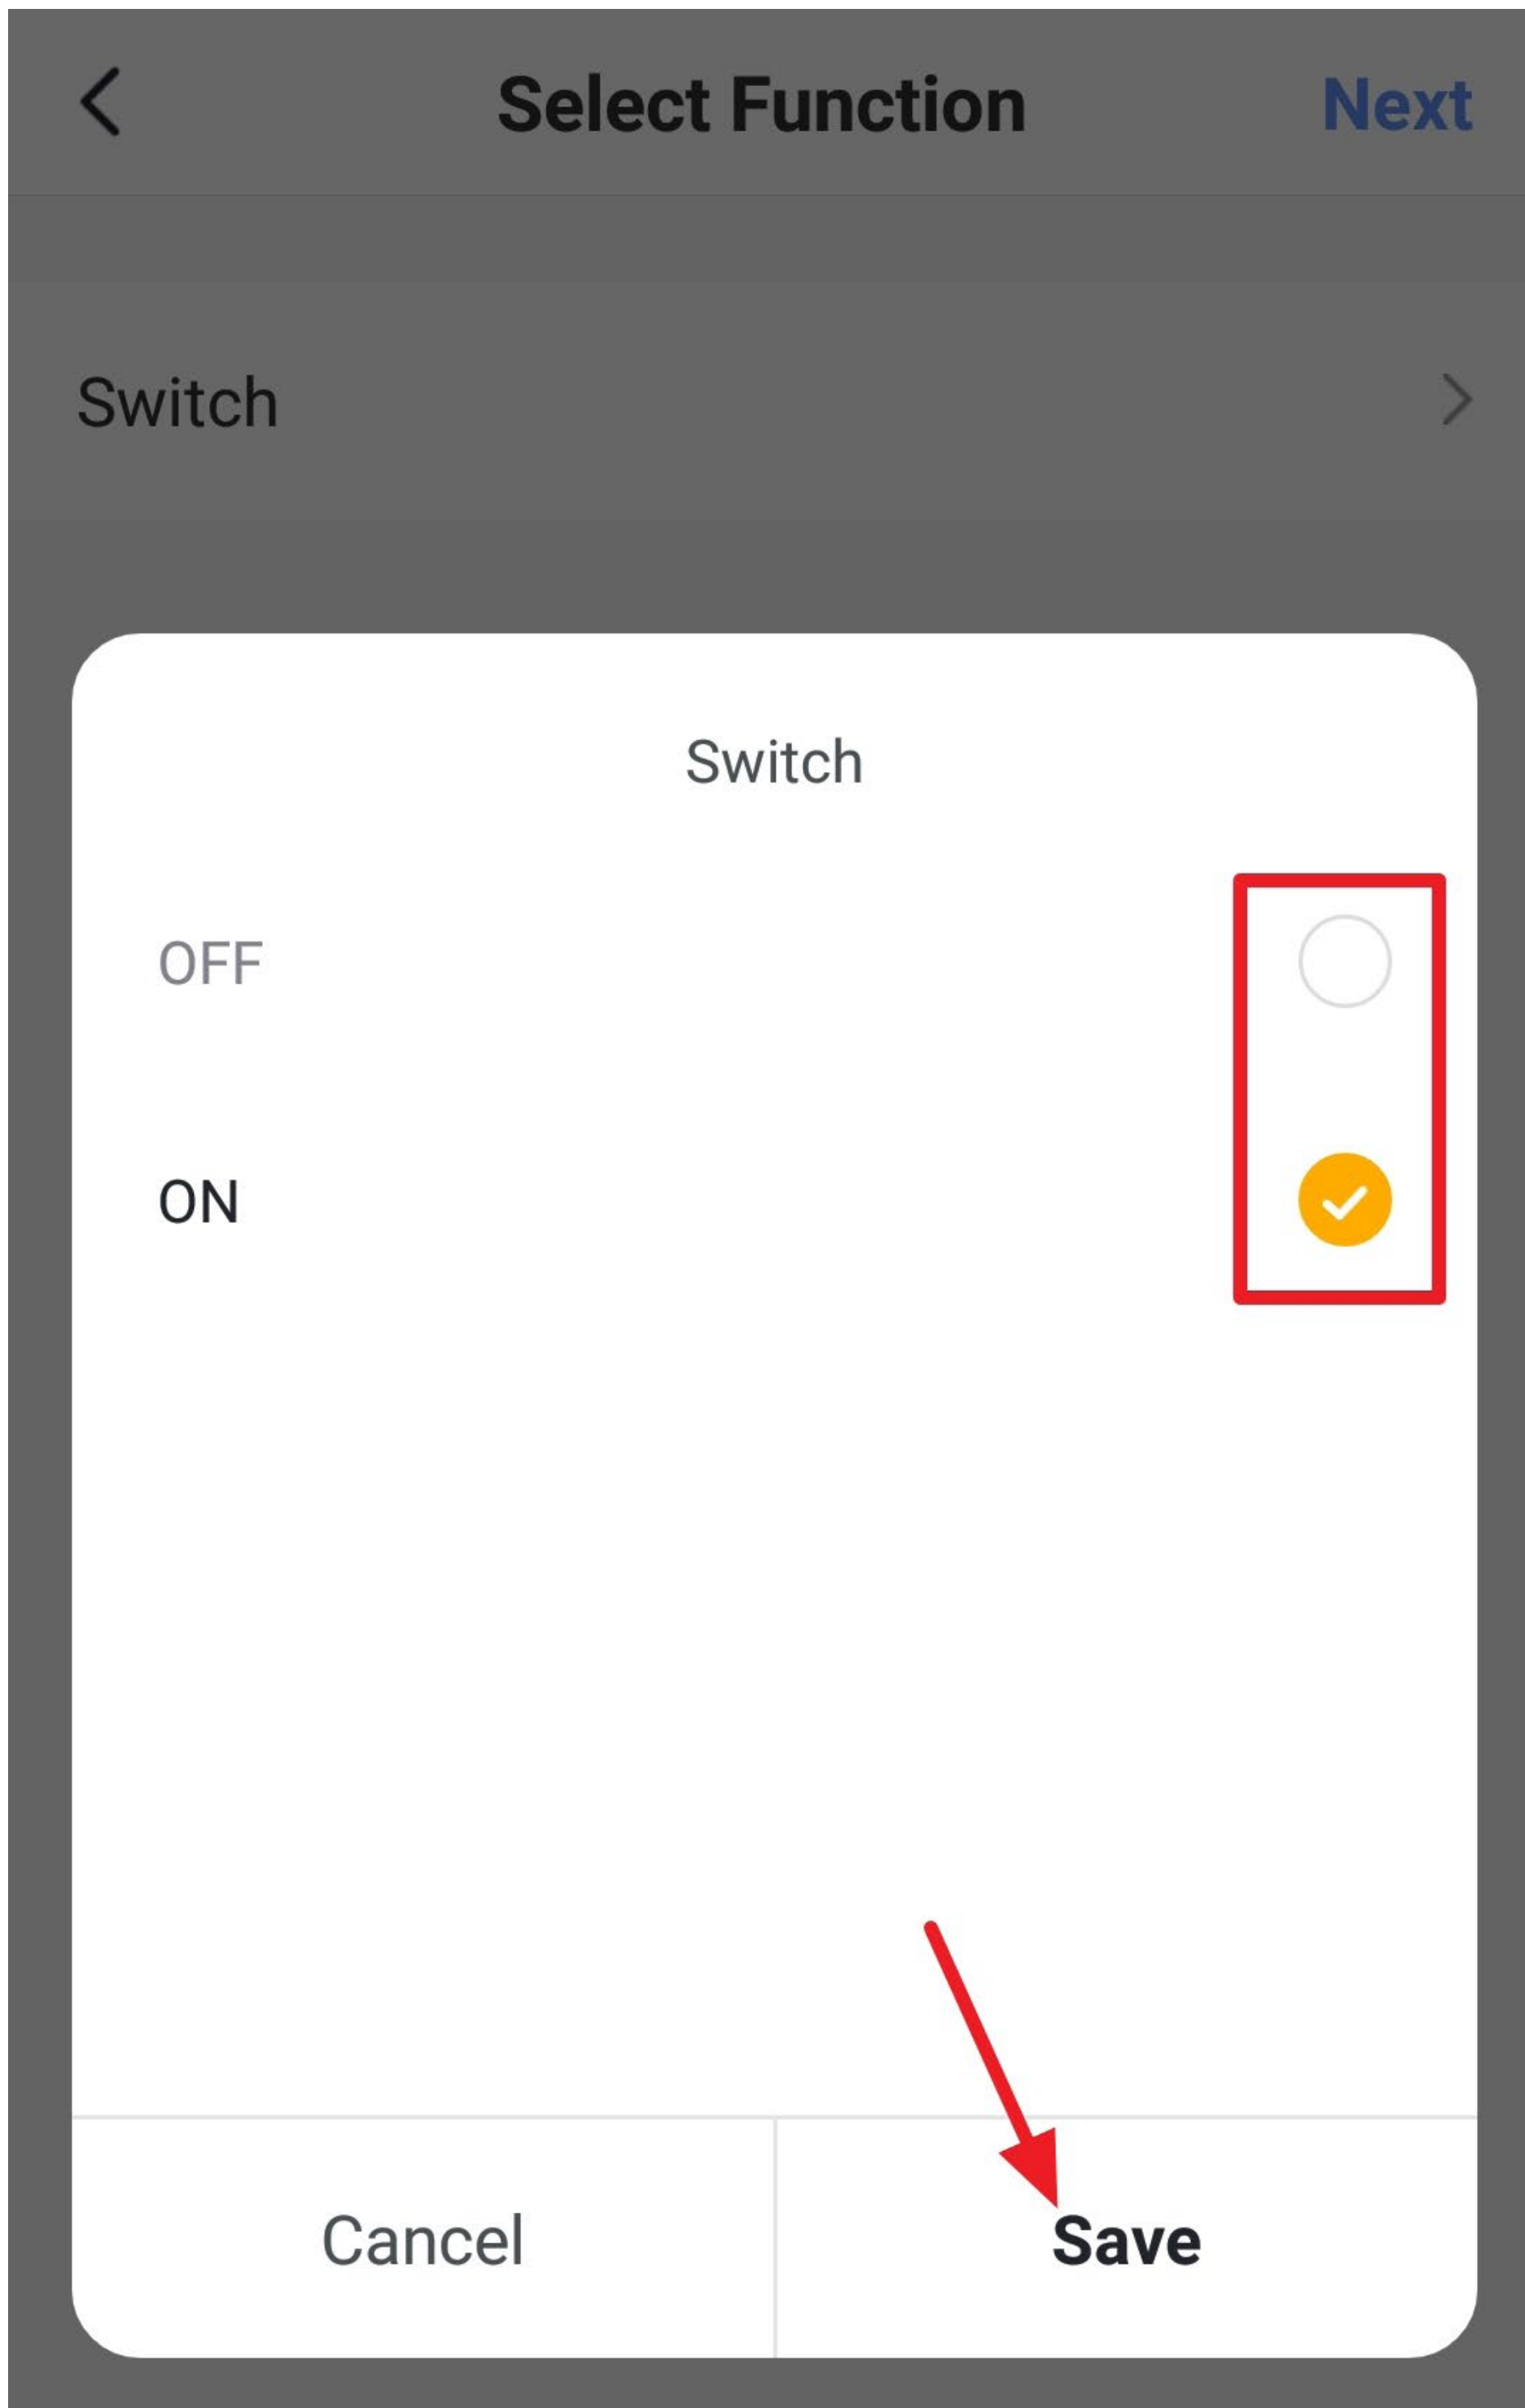

 - The desired function is now displayed behind the switch.
- Tap the top right button to continue.

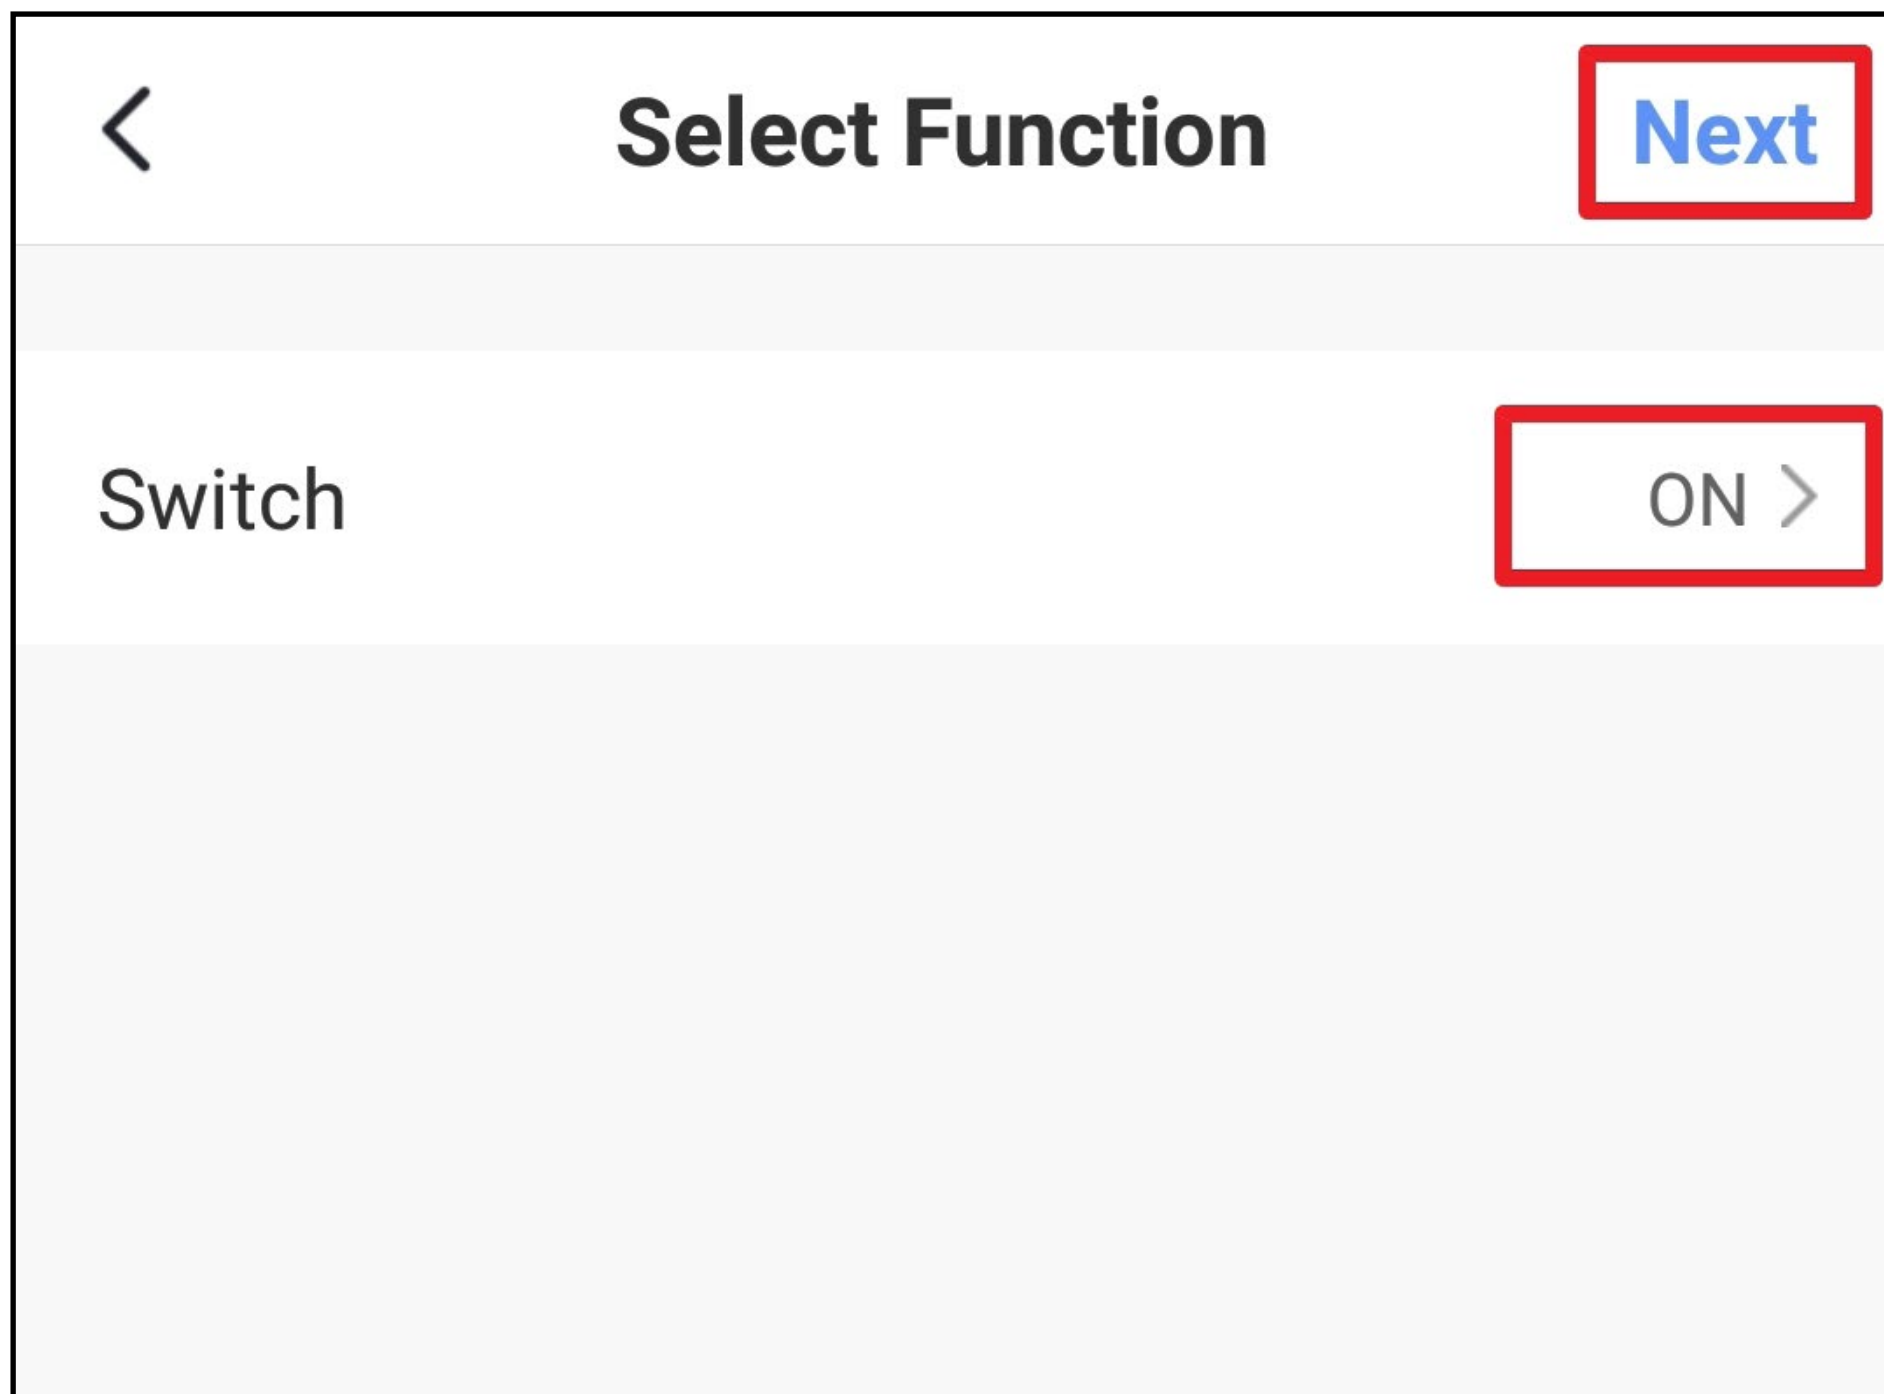

- In addition to the delay, the switch is now also displayed in the scene.
- Now choose below whether the scene should appear in the main display of the app.

If the switch is in the position as shown in the figure below, the scene will appear in the main display.

Of course, you can also add functions to this scene.

- Tap the button at the top right to save the scene.

Cancel

Smart Settings

Save

Edit Name 



Action



Time-lapse

30s



WLAN built-in switch

 
Living Room

Switch:ON


Show on Home Page



- Now enter a name for the scene and save again.

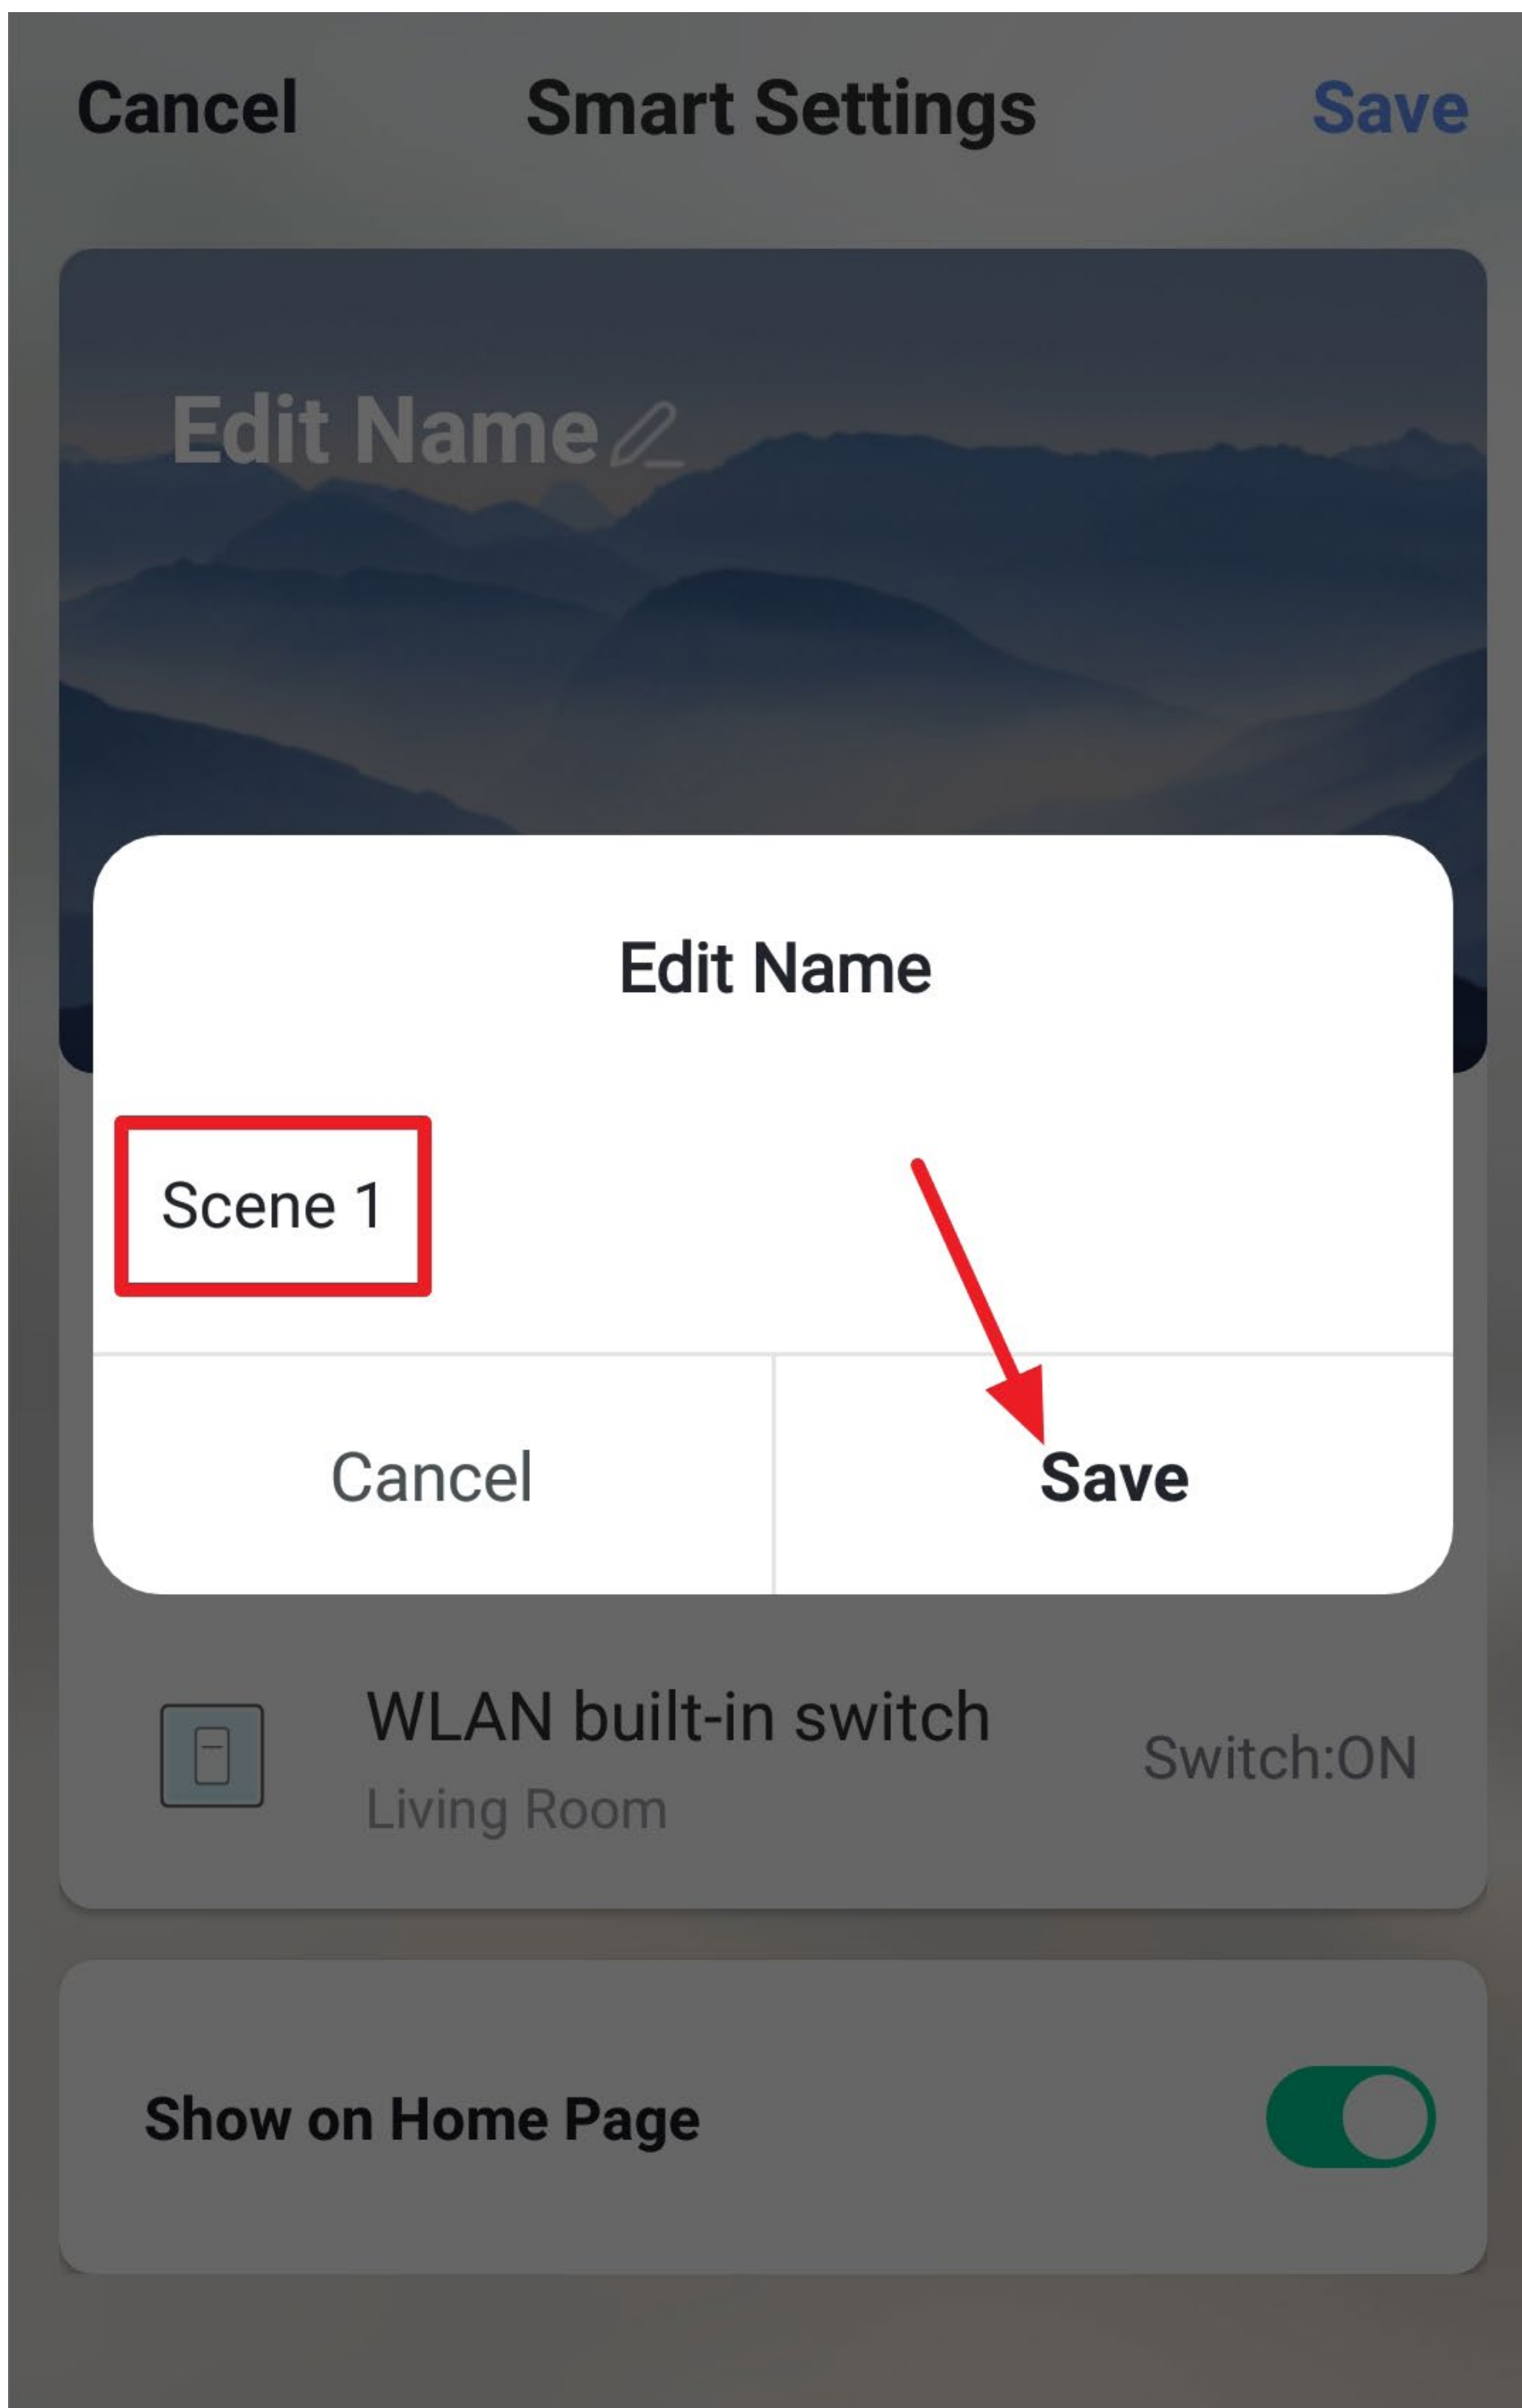


 - The scene now appears in the scene display.
- To execute the scene now, tap the corresponding button (arrow in the figure).

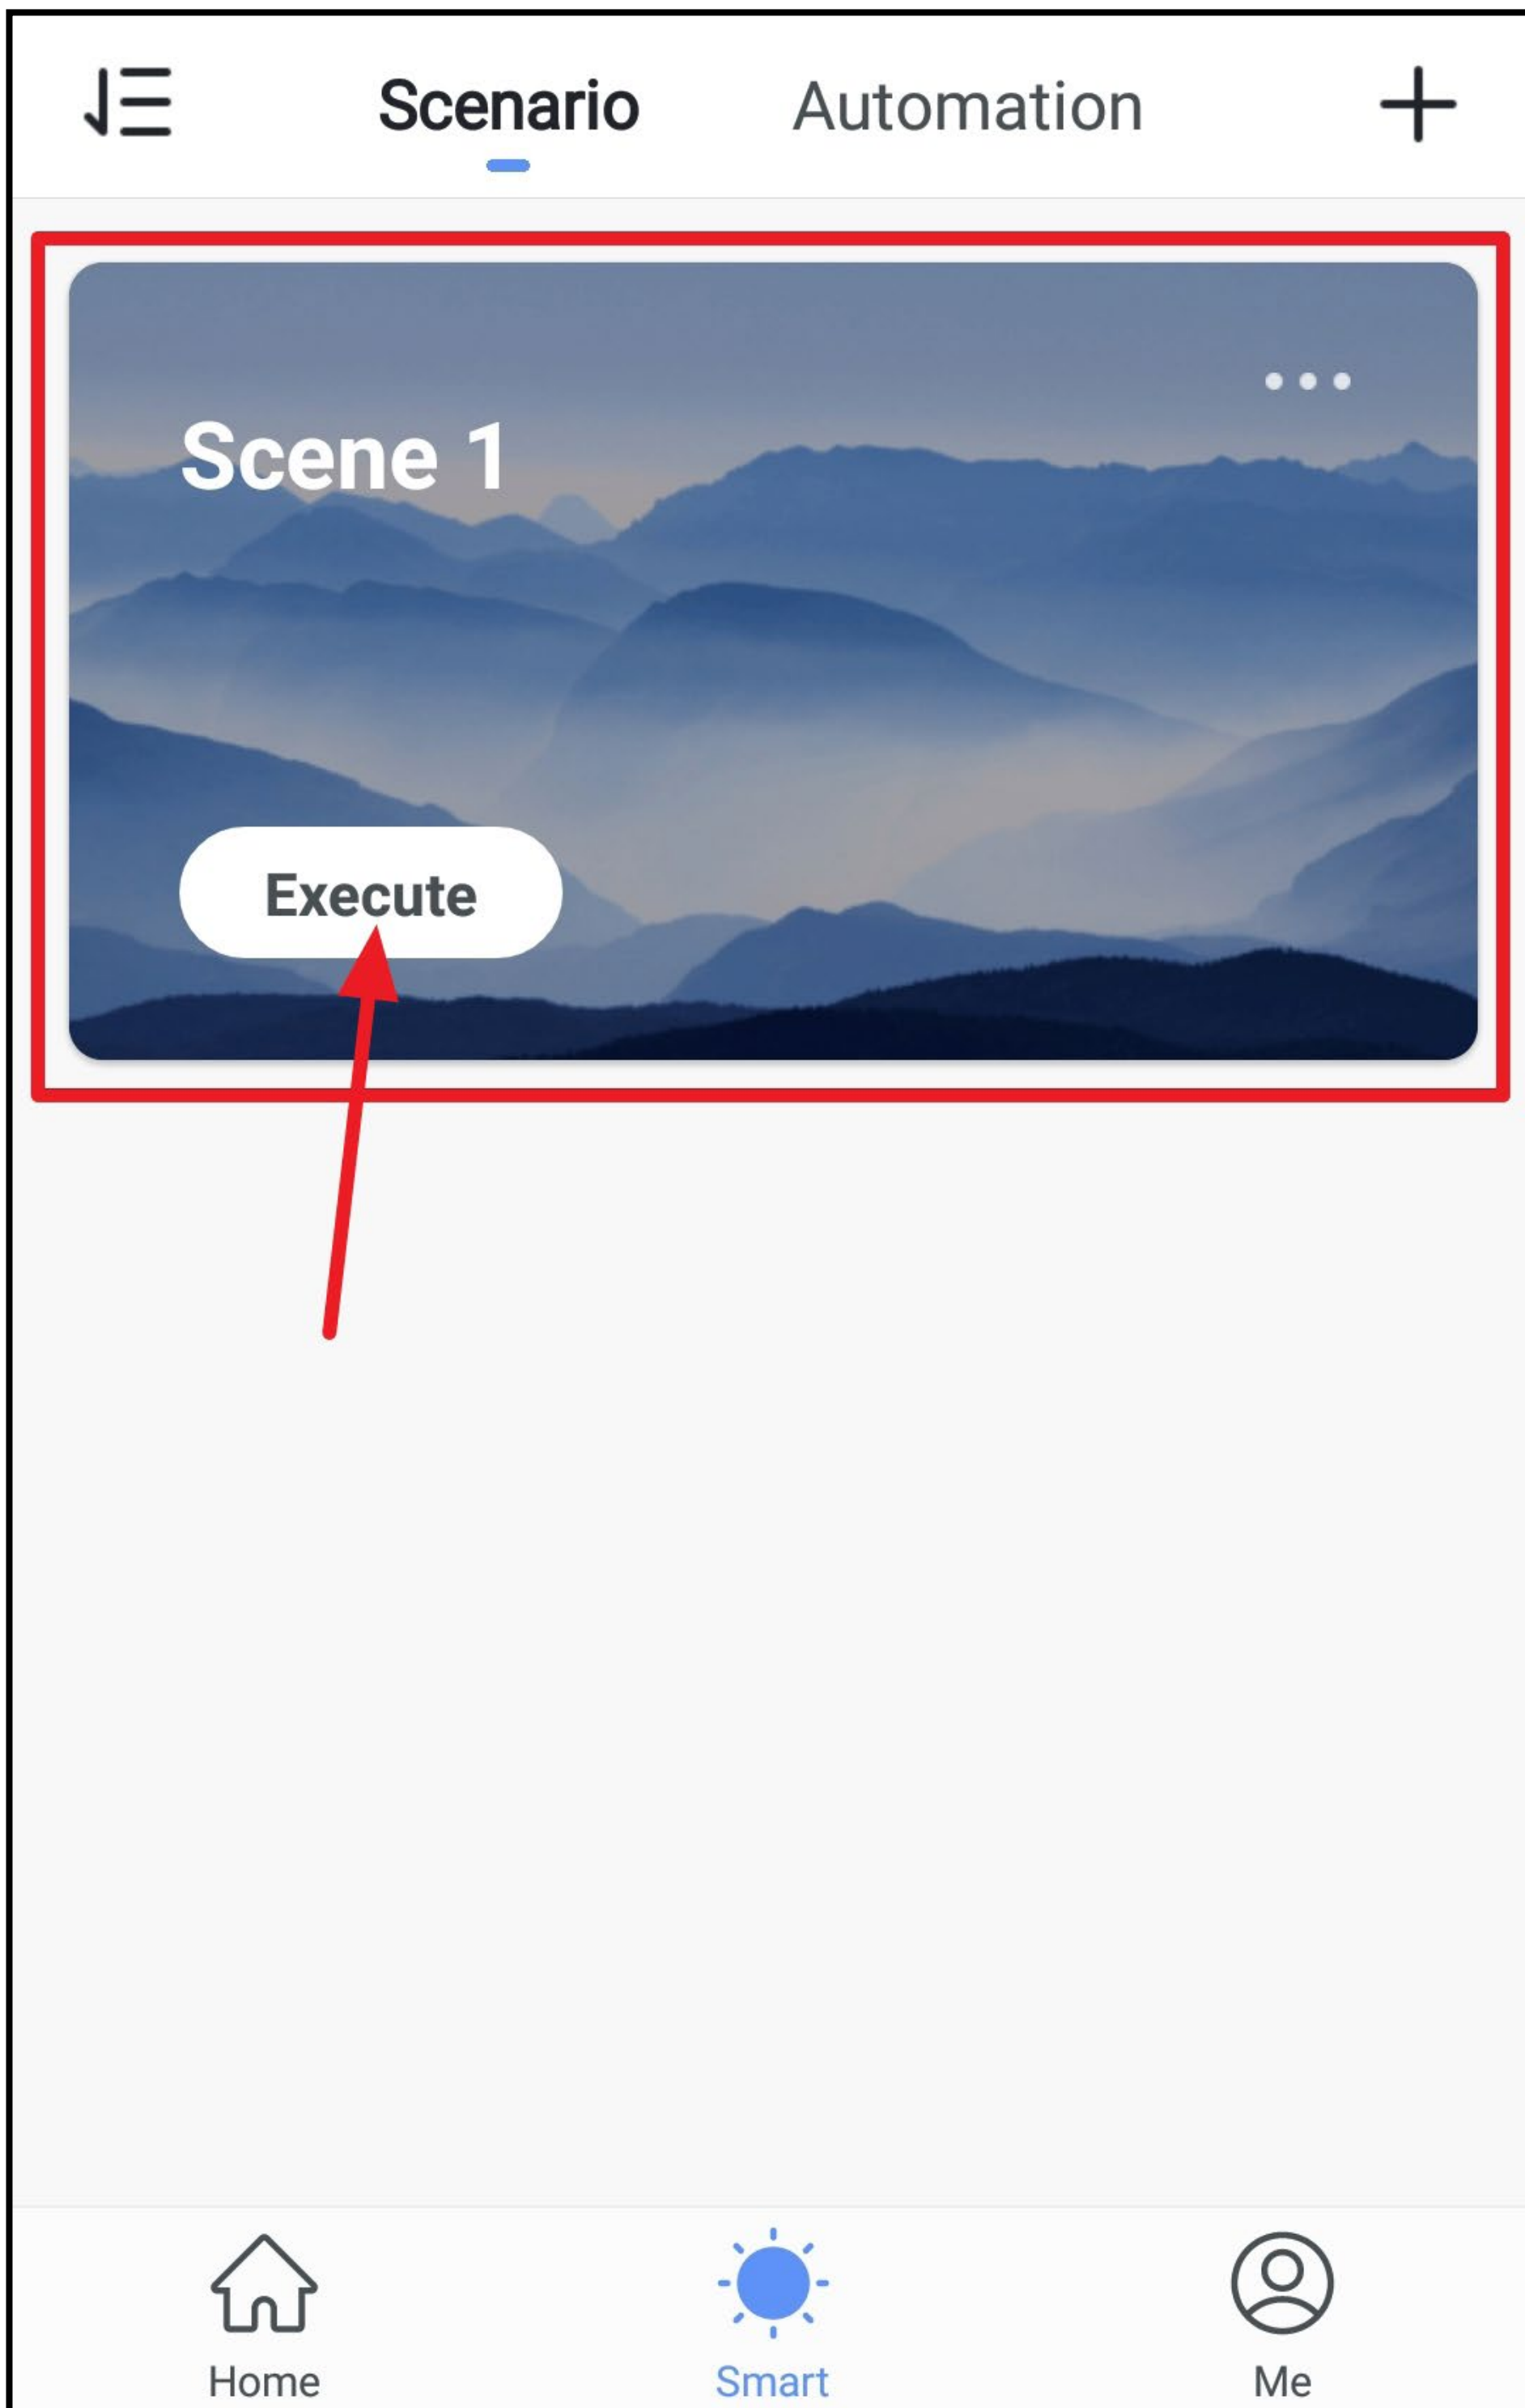


- A pop-up will appear. You can either close it or leave it open.

 
The switch will turn on after the delay.

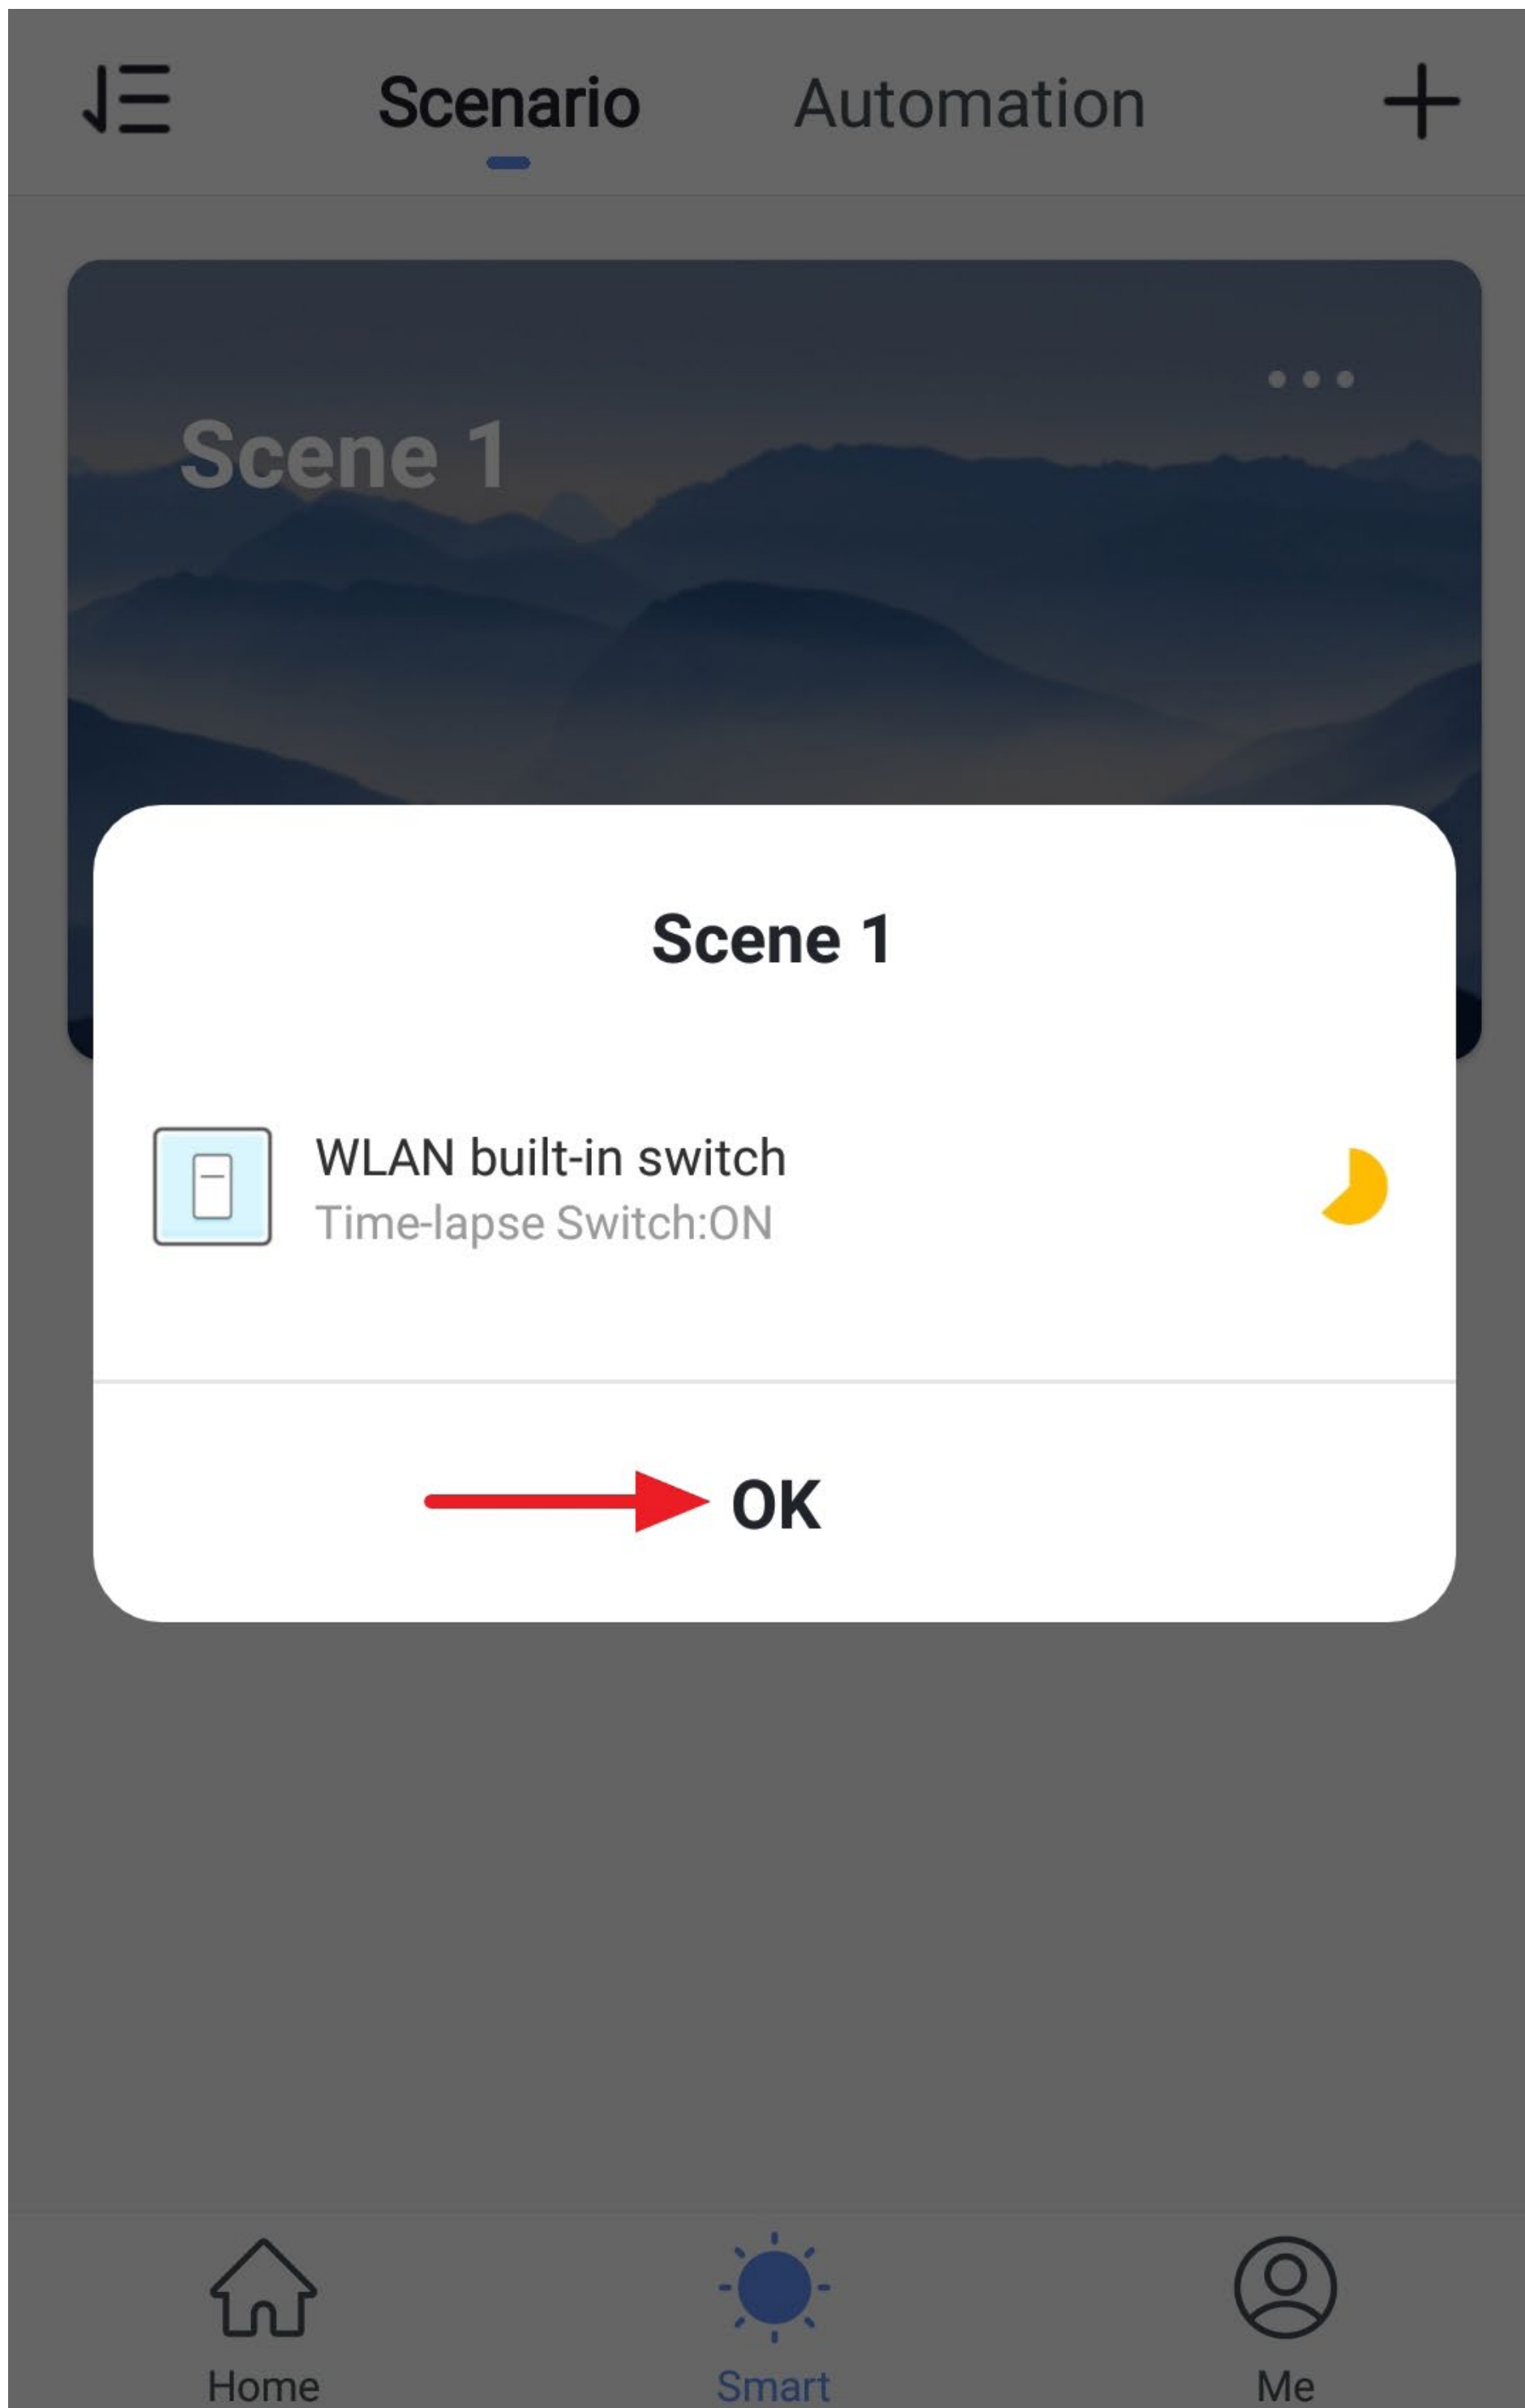

 
- If you have previously selected that the scene should also appear in the main display, you can also execute it from here.
- To do this, simply tap the scene.

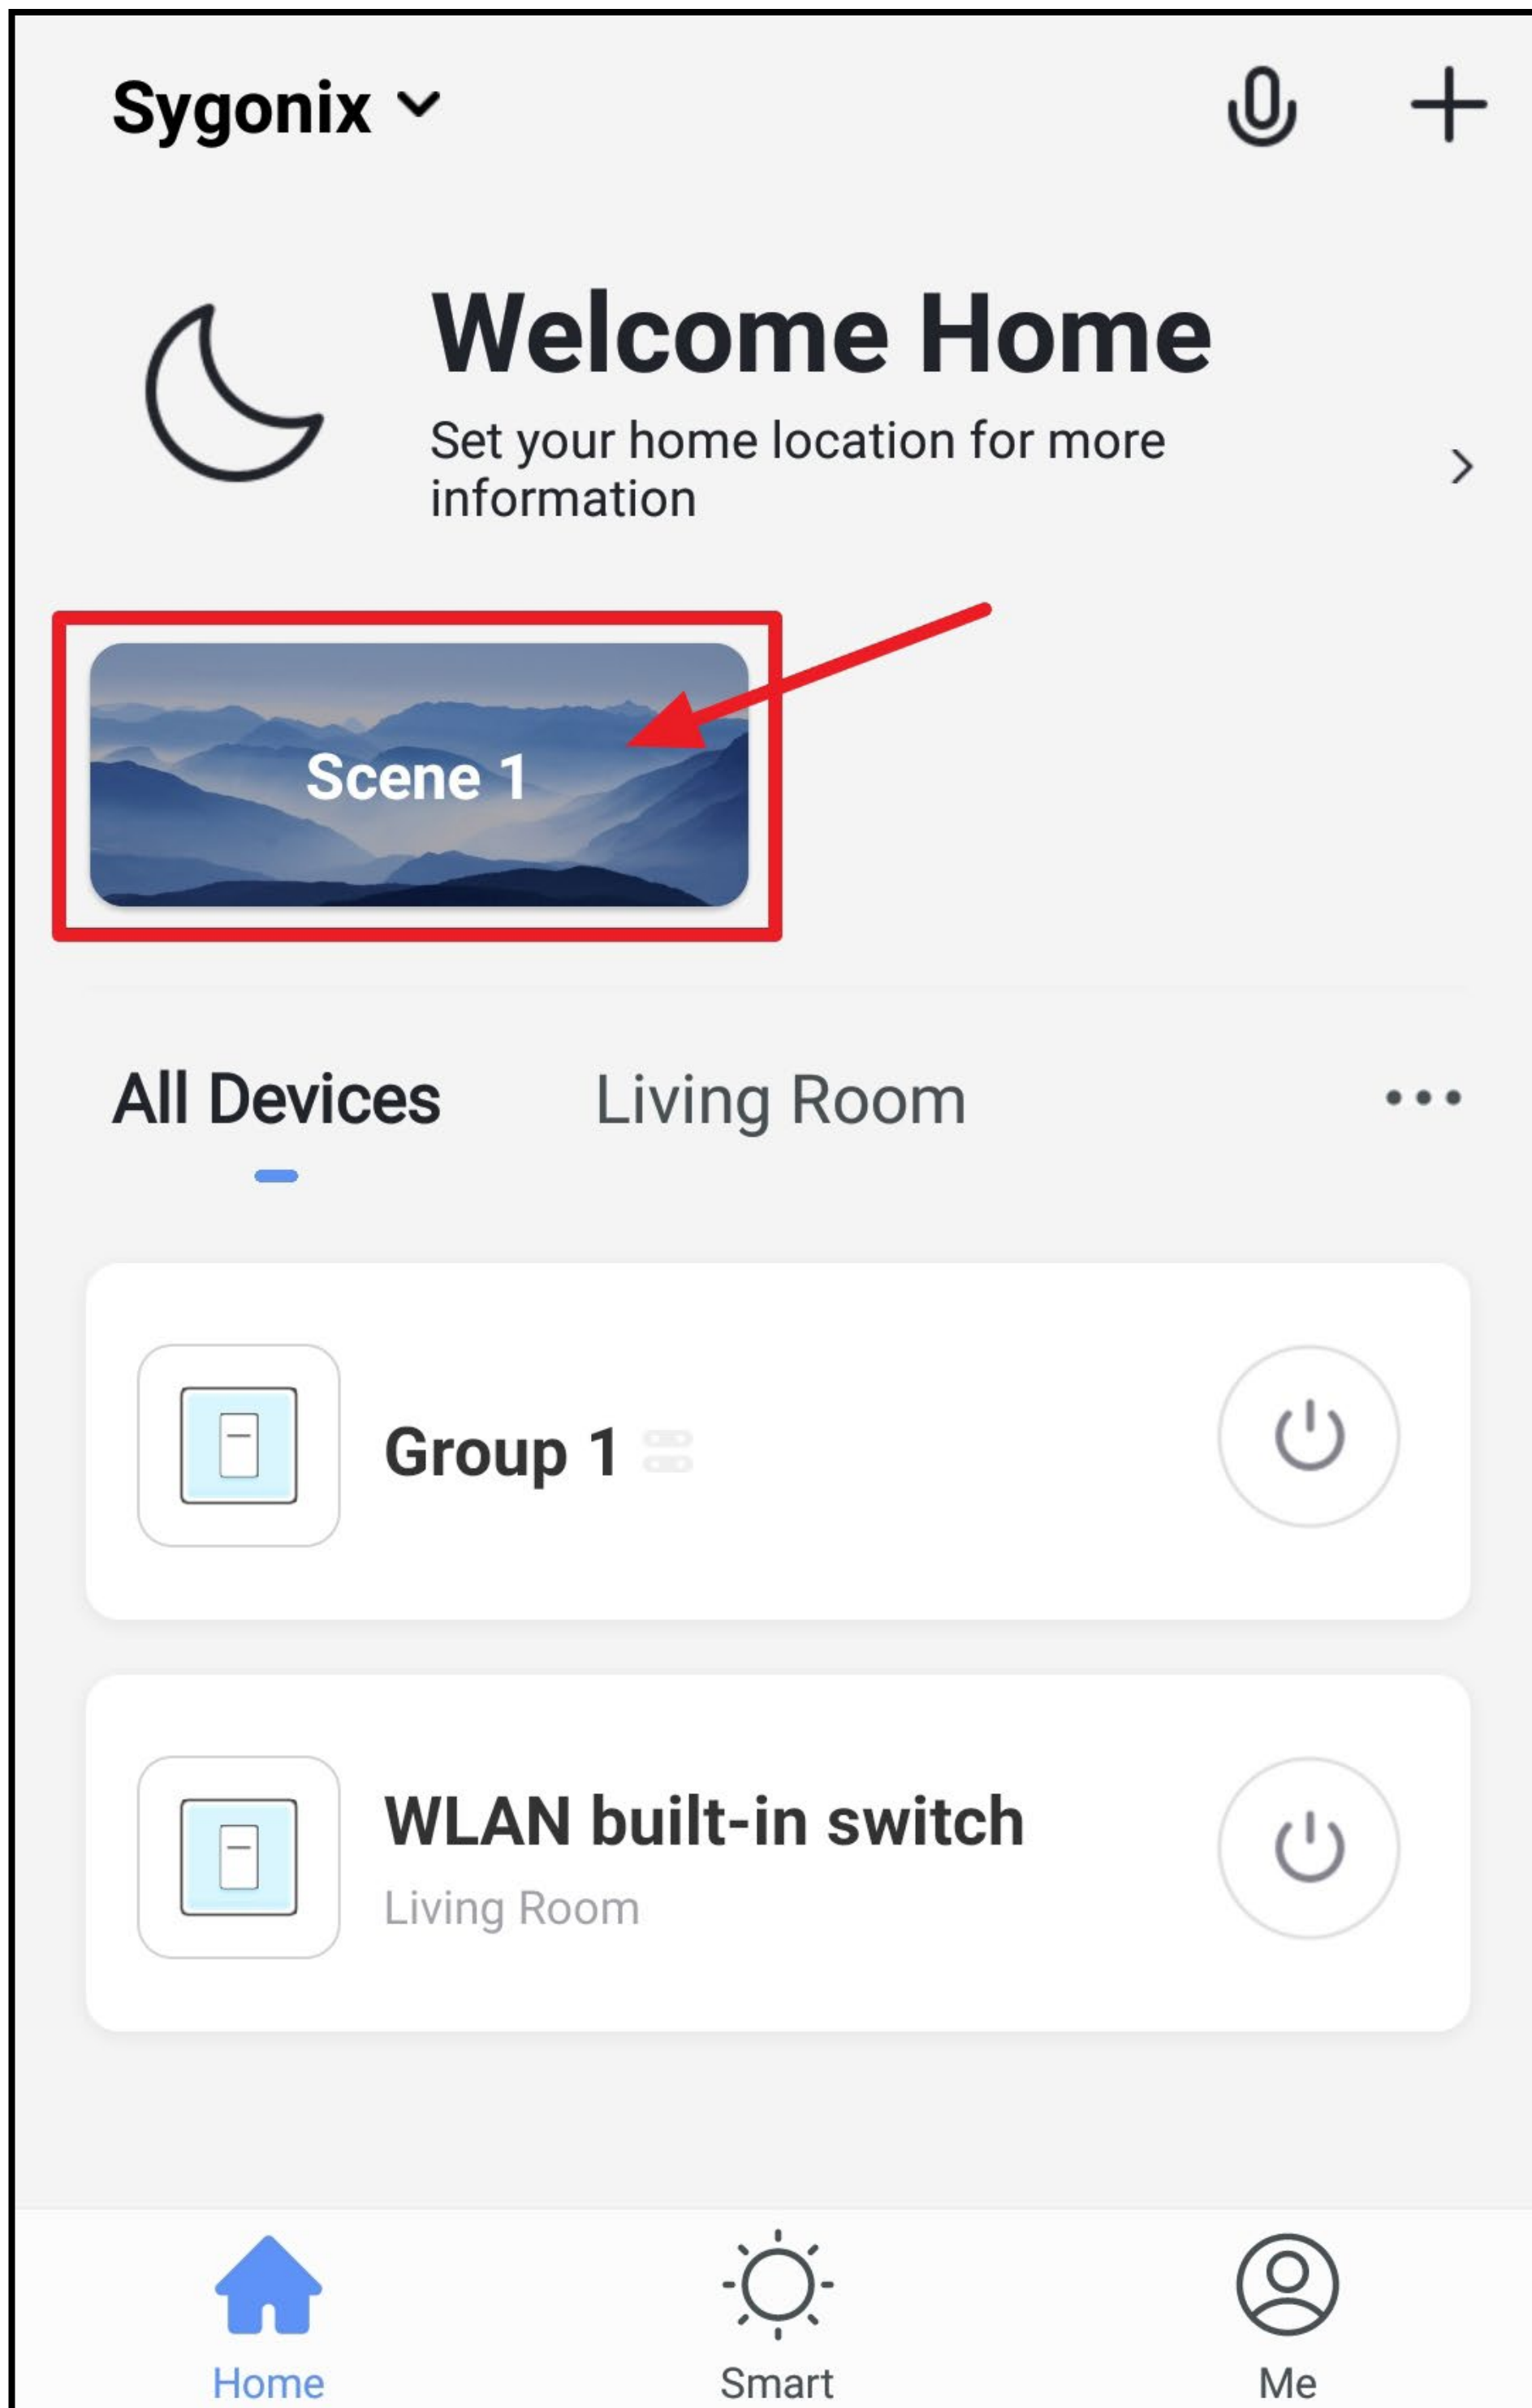

 - A pop-up will appear again and the scene will be executed.

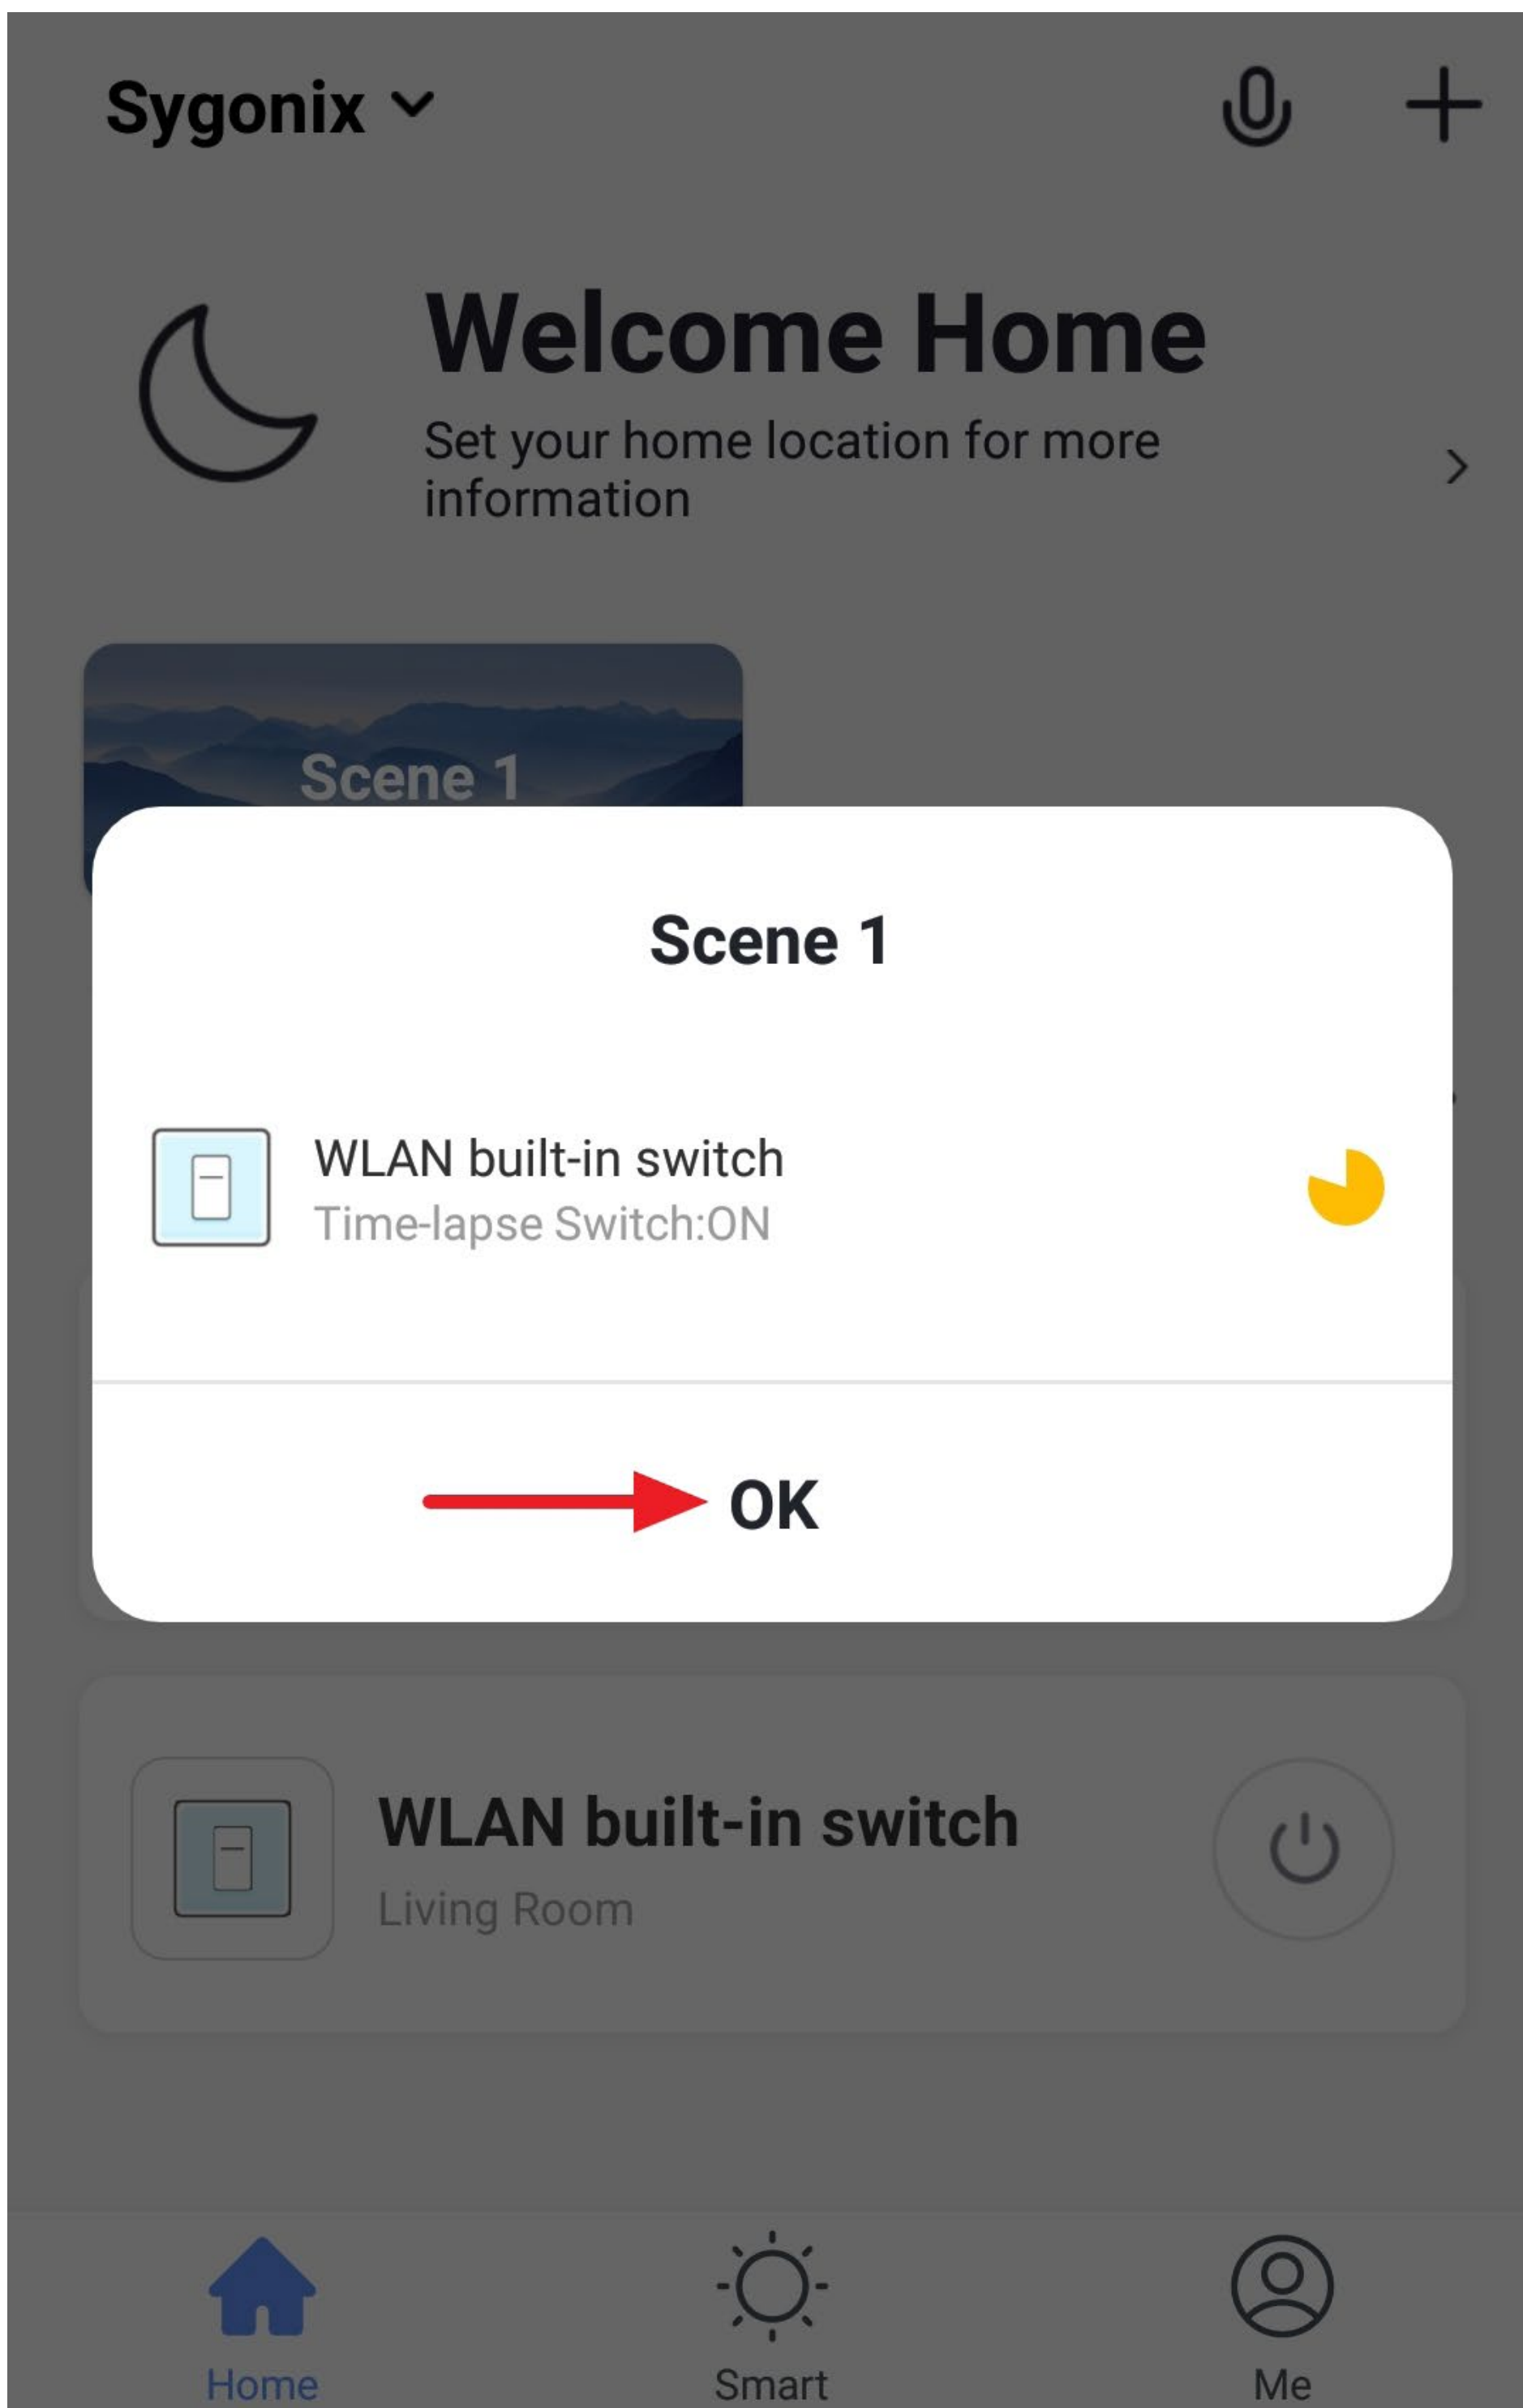

 - To delete a scene, go back to the scene display and select the desired scene.
- Swipe all the way down and tap the lowest button.
- Then confirm the deletion.

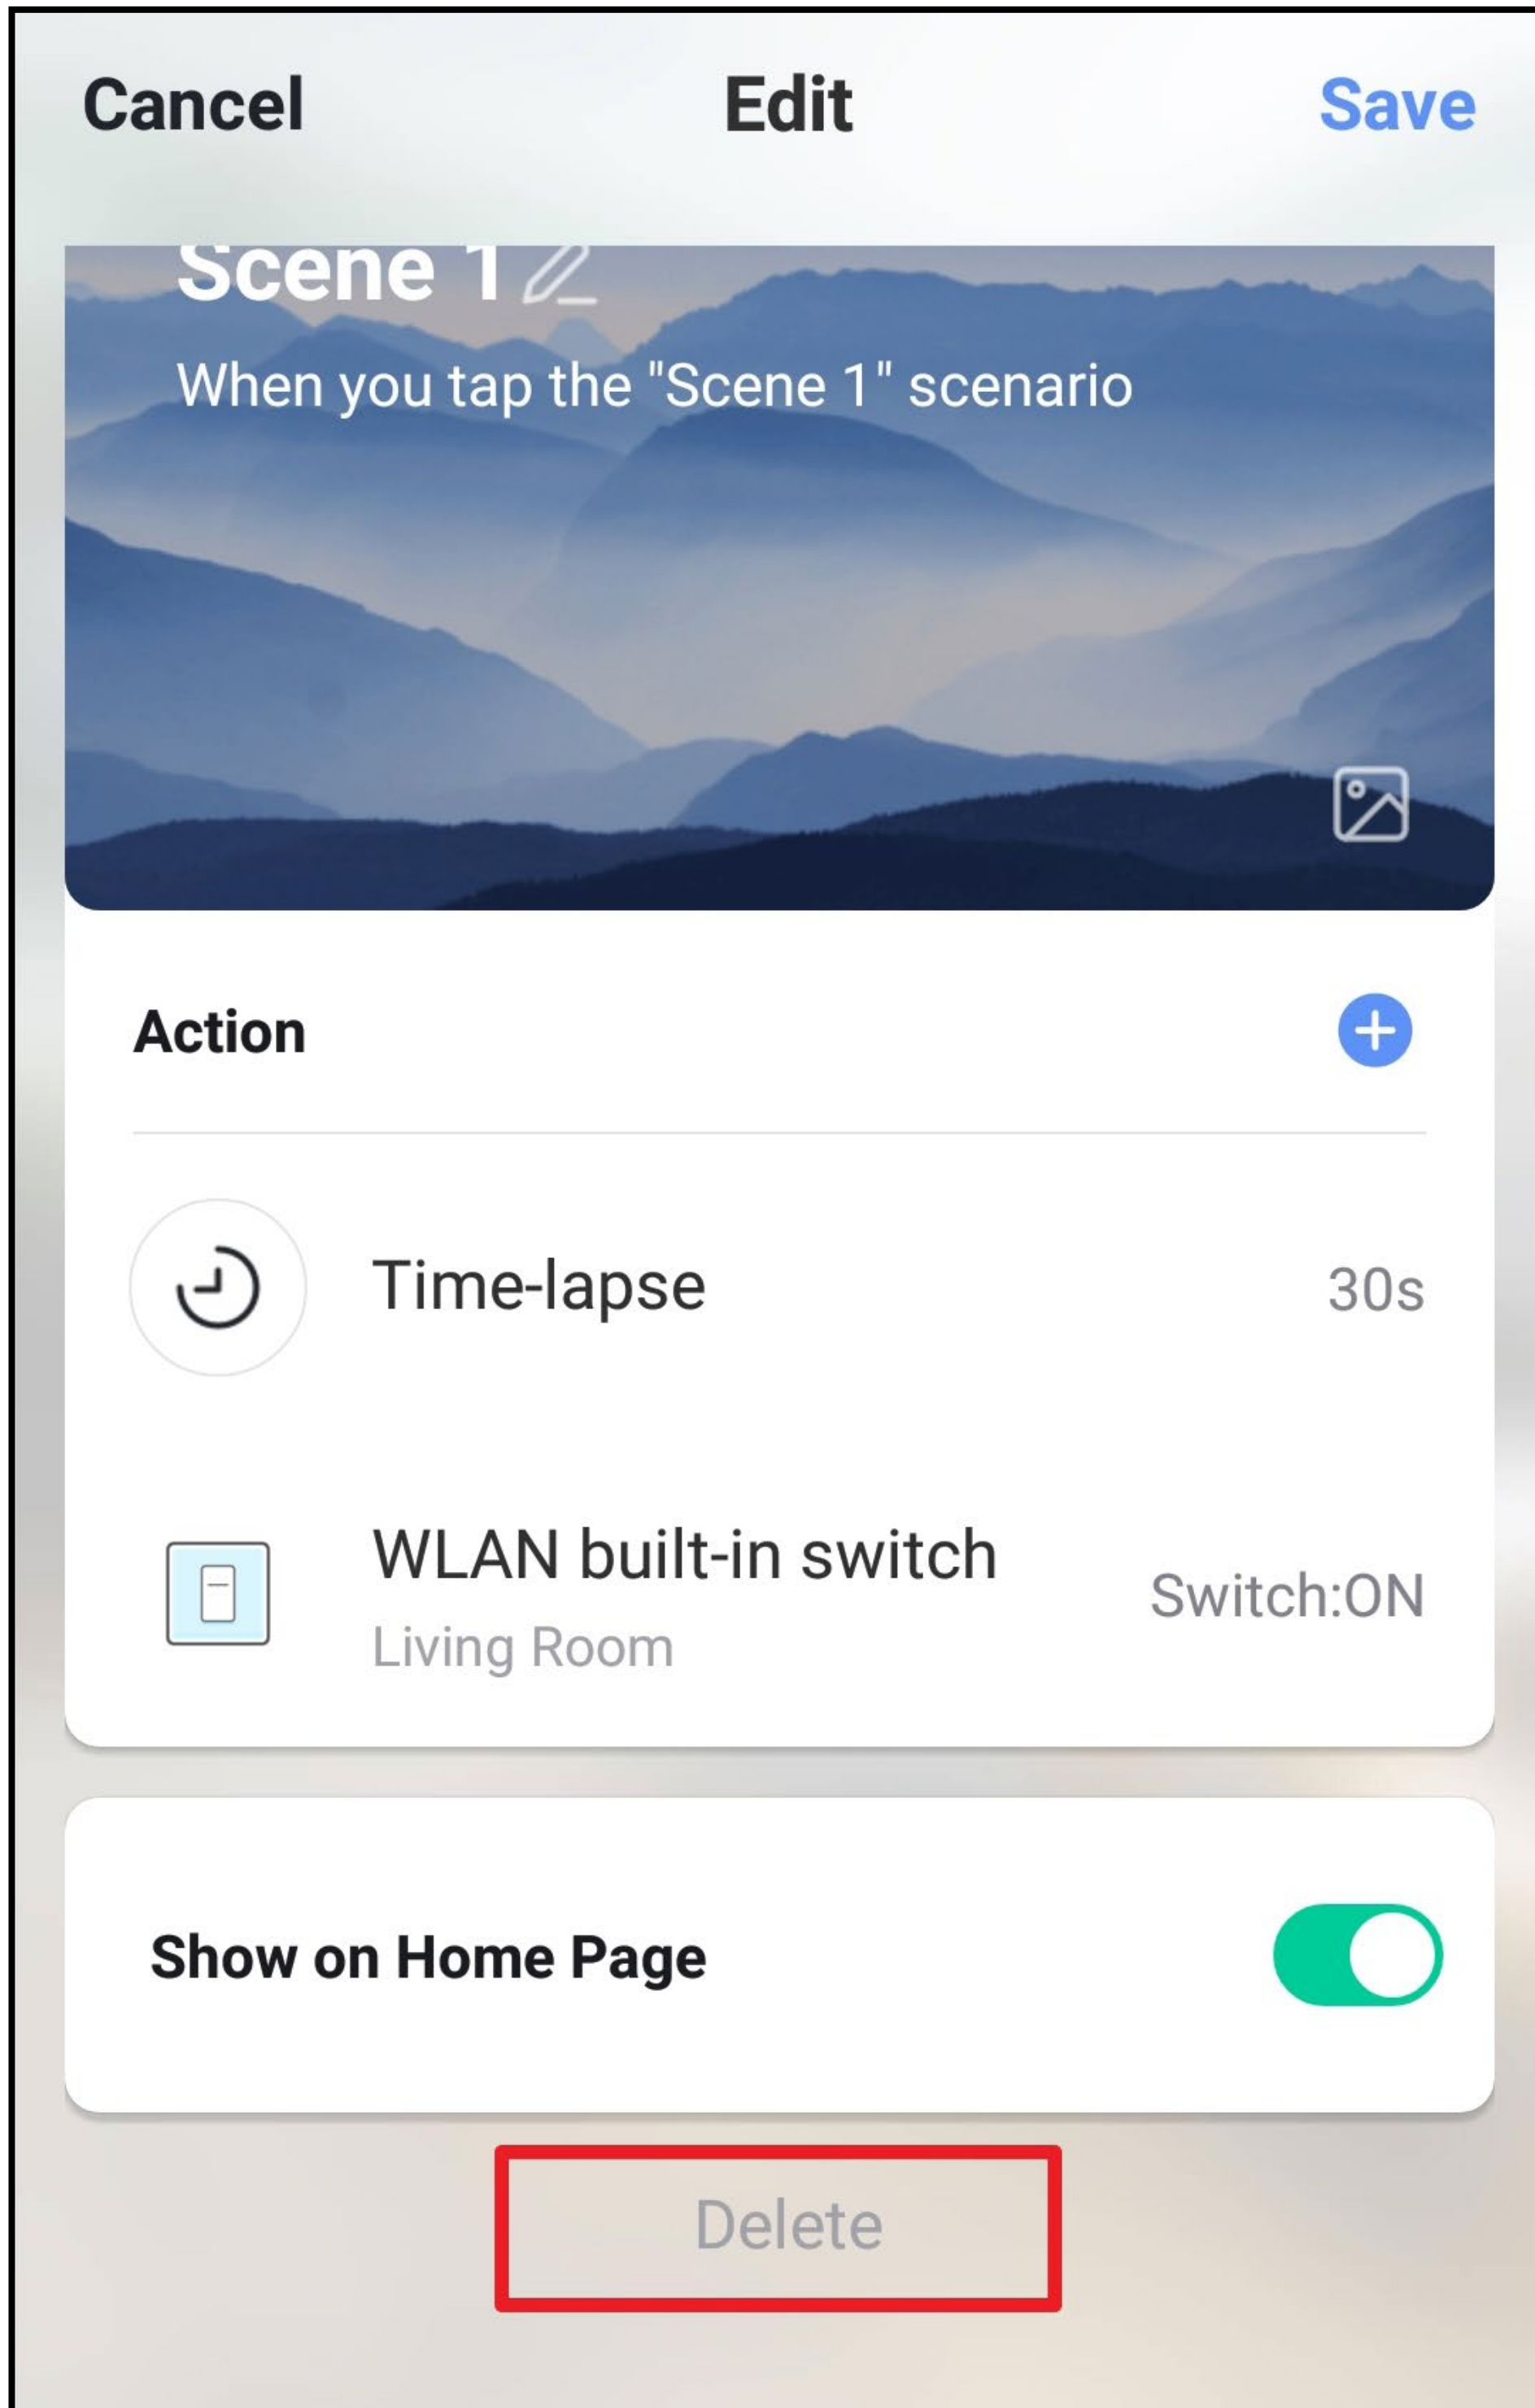


Similar to a scene, you can also create an automation. The only difference is that you have to set a condition here, an action and finally an effect.

To do this, switch the tab at the top to “Automation” after tapping the sun icon in the main display of the app.

Functions on the profile and settings page of the app


Here you can get a brief overview of the control functions on the profile and settings page of the app.

 - To go to the page, tap the bottom right button on the home page of the app.

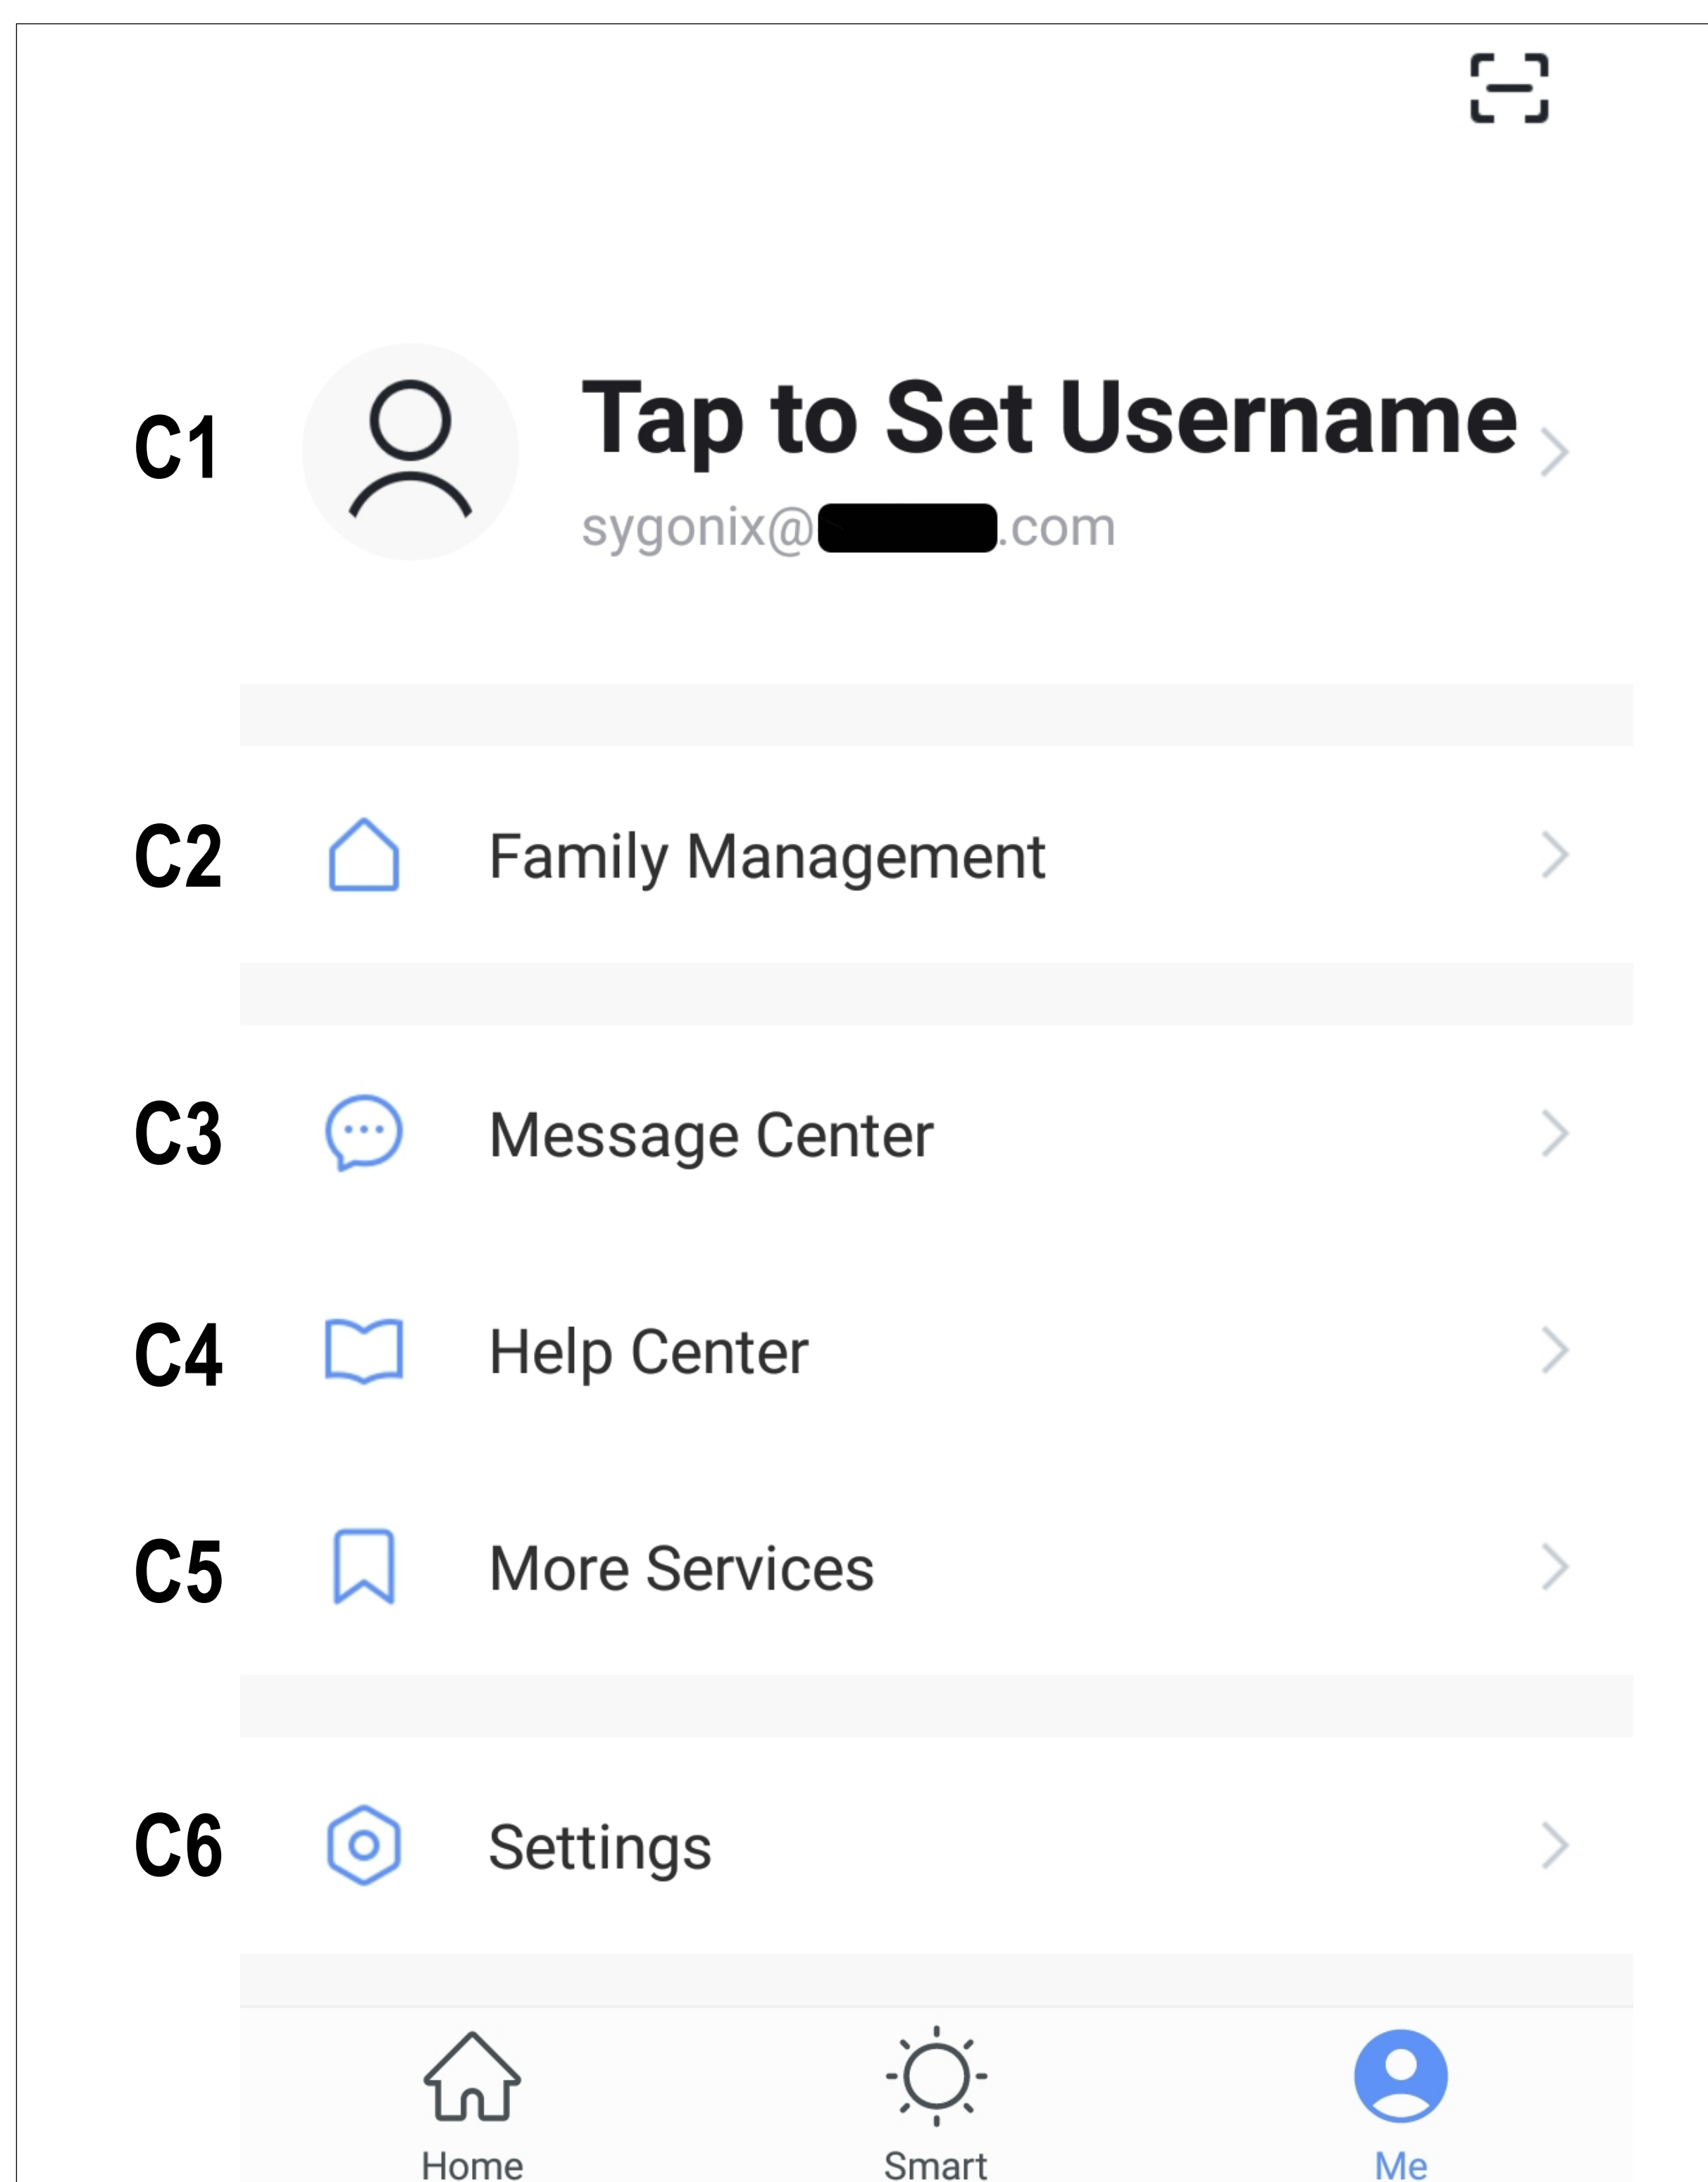

- C1** Opens the profile of the current user; see **D1** to **D5**
- C2** Opens the family management; see **E1** to **E6**
- C3** Opens the message centre; here you can view and edit all notifications
- C4** Opens the help centre with some questions and answers
- C5** Here you can select a service you would like to use to link the app and need help with that.
- C6** Opens the settings menu; see **F1** to **F6**

 Profile of the current user (C1)

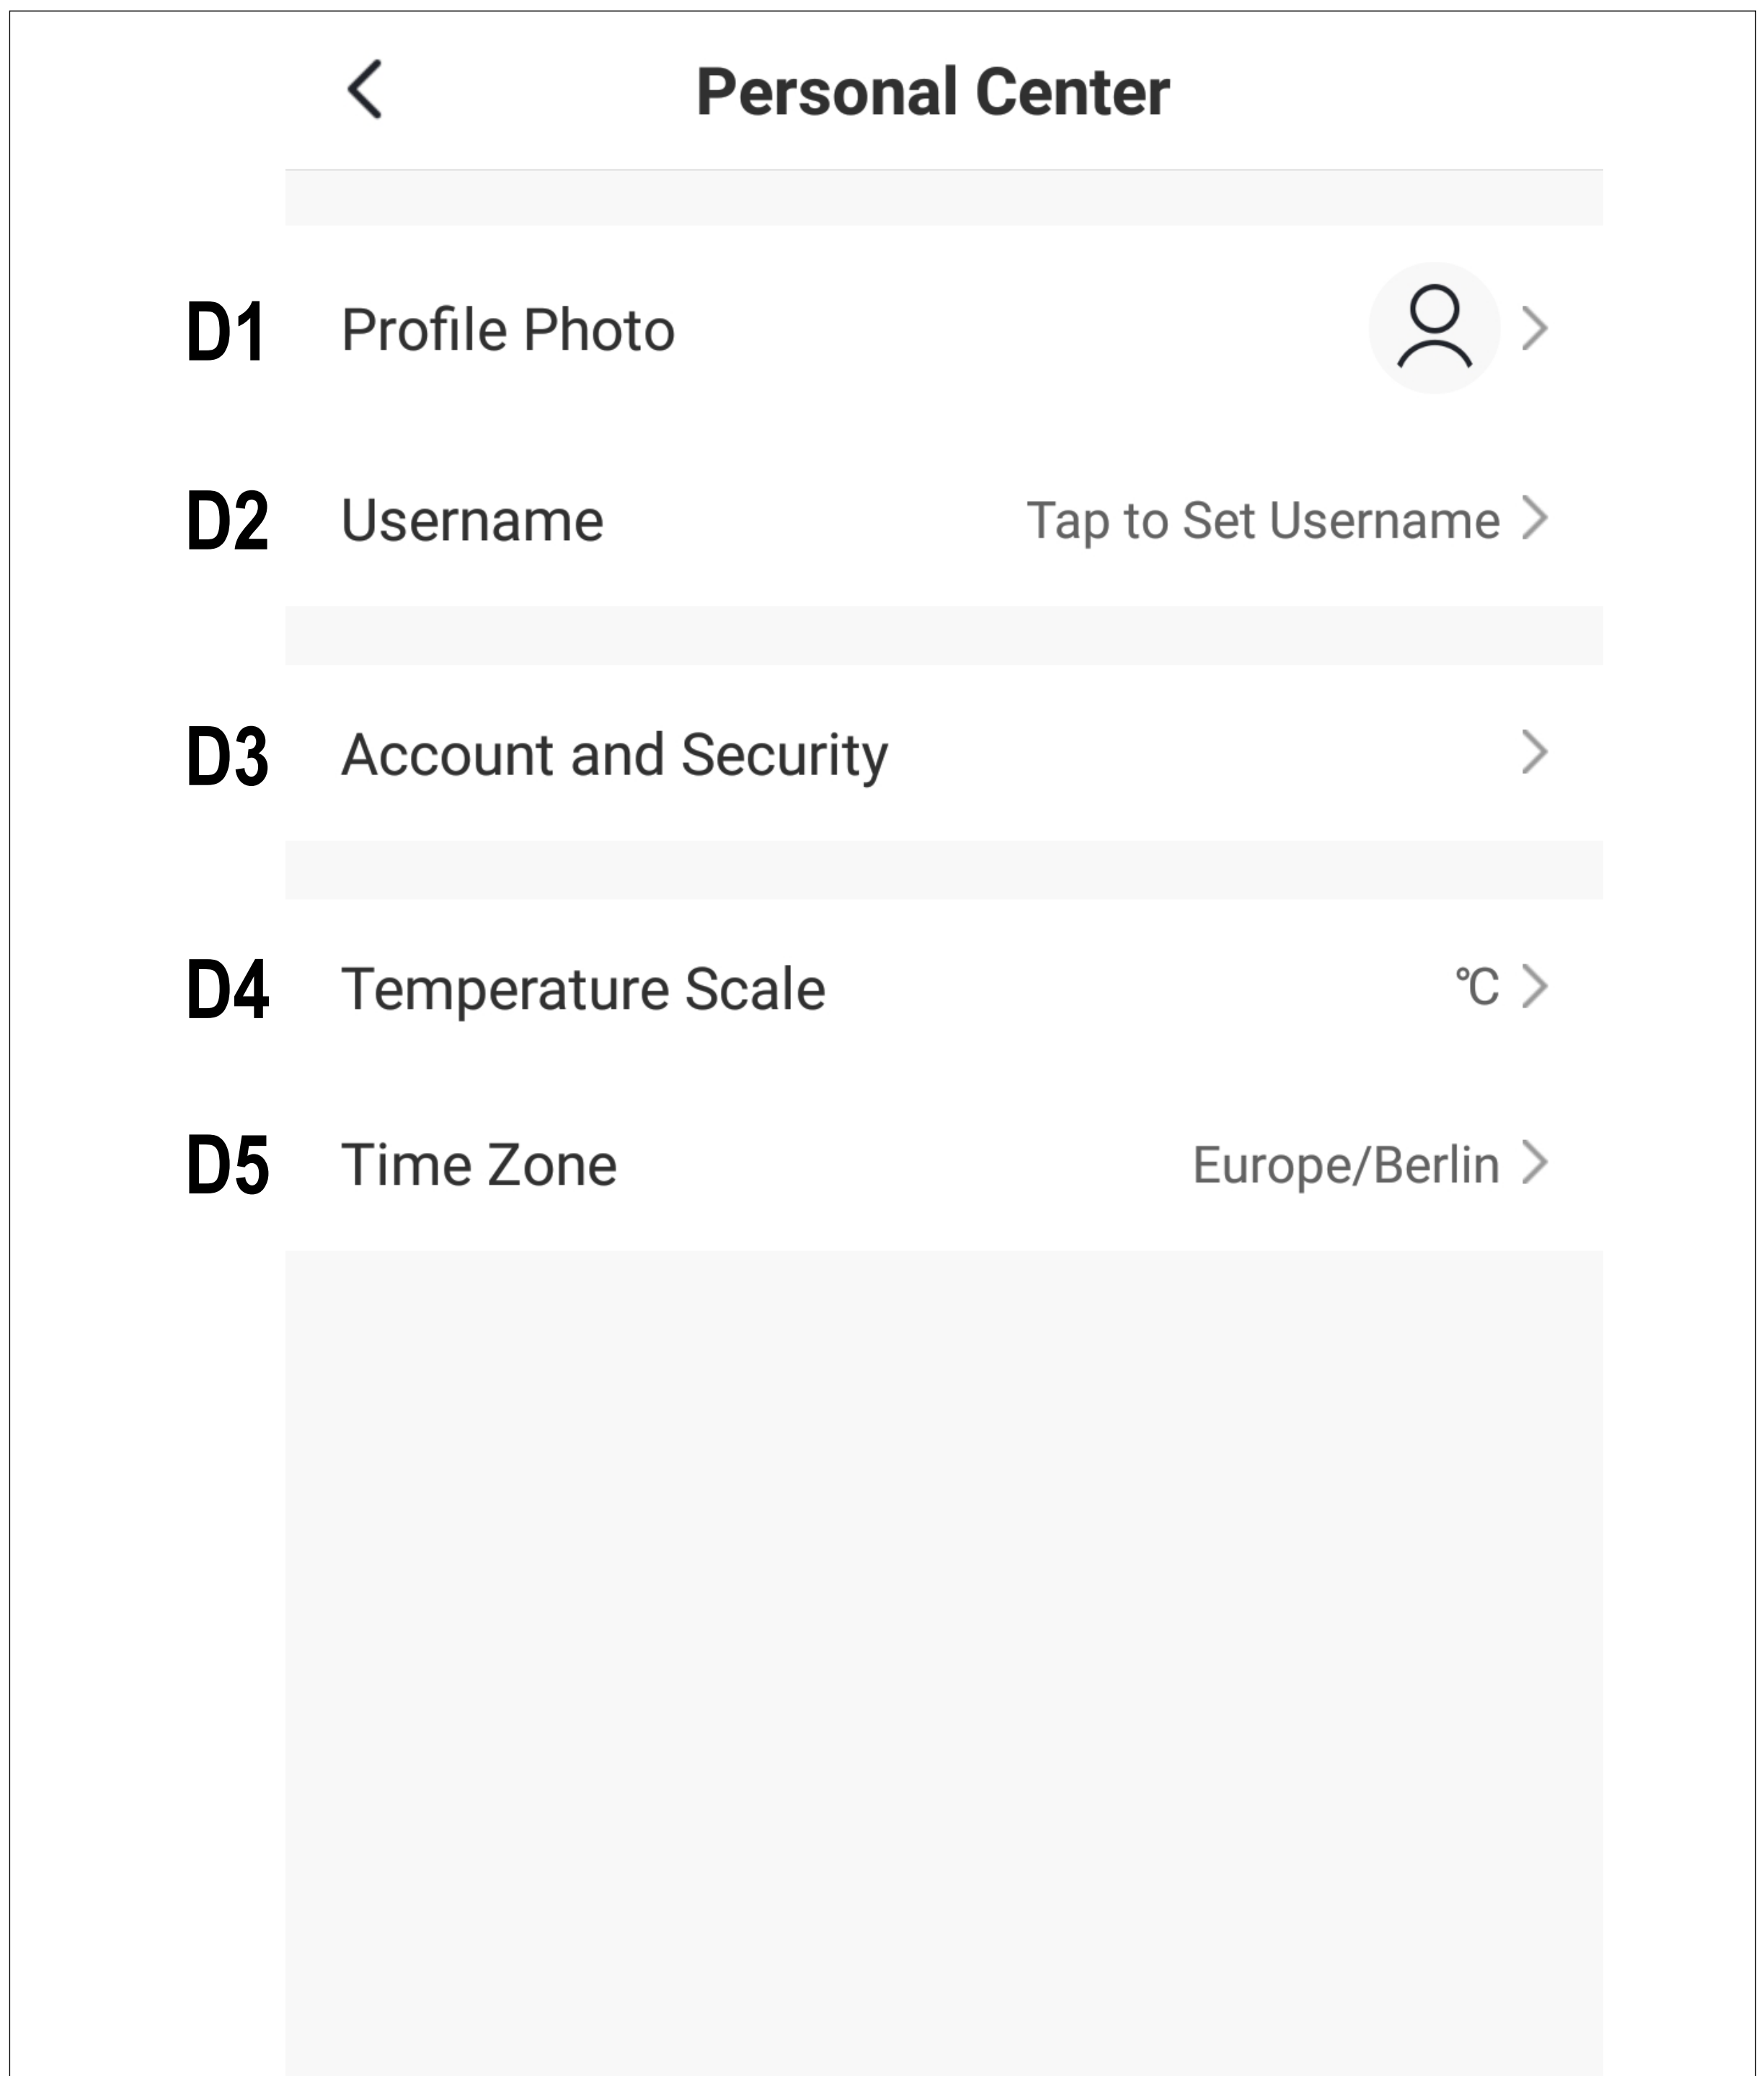

D1 Here you can set a profile image.

D2 This item enables you to add a nickname for your profile.

 
D3 Here you can view and change all the settings related to your account.

D4 Here you can select the temperature unit.

D5 In the last item you can set your time zone.


Family management (C2)

- Firstly, select the family you want to edit.

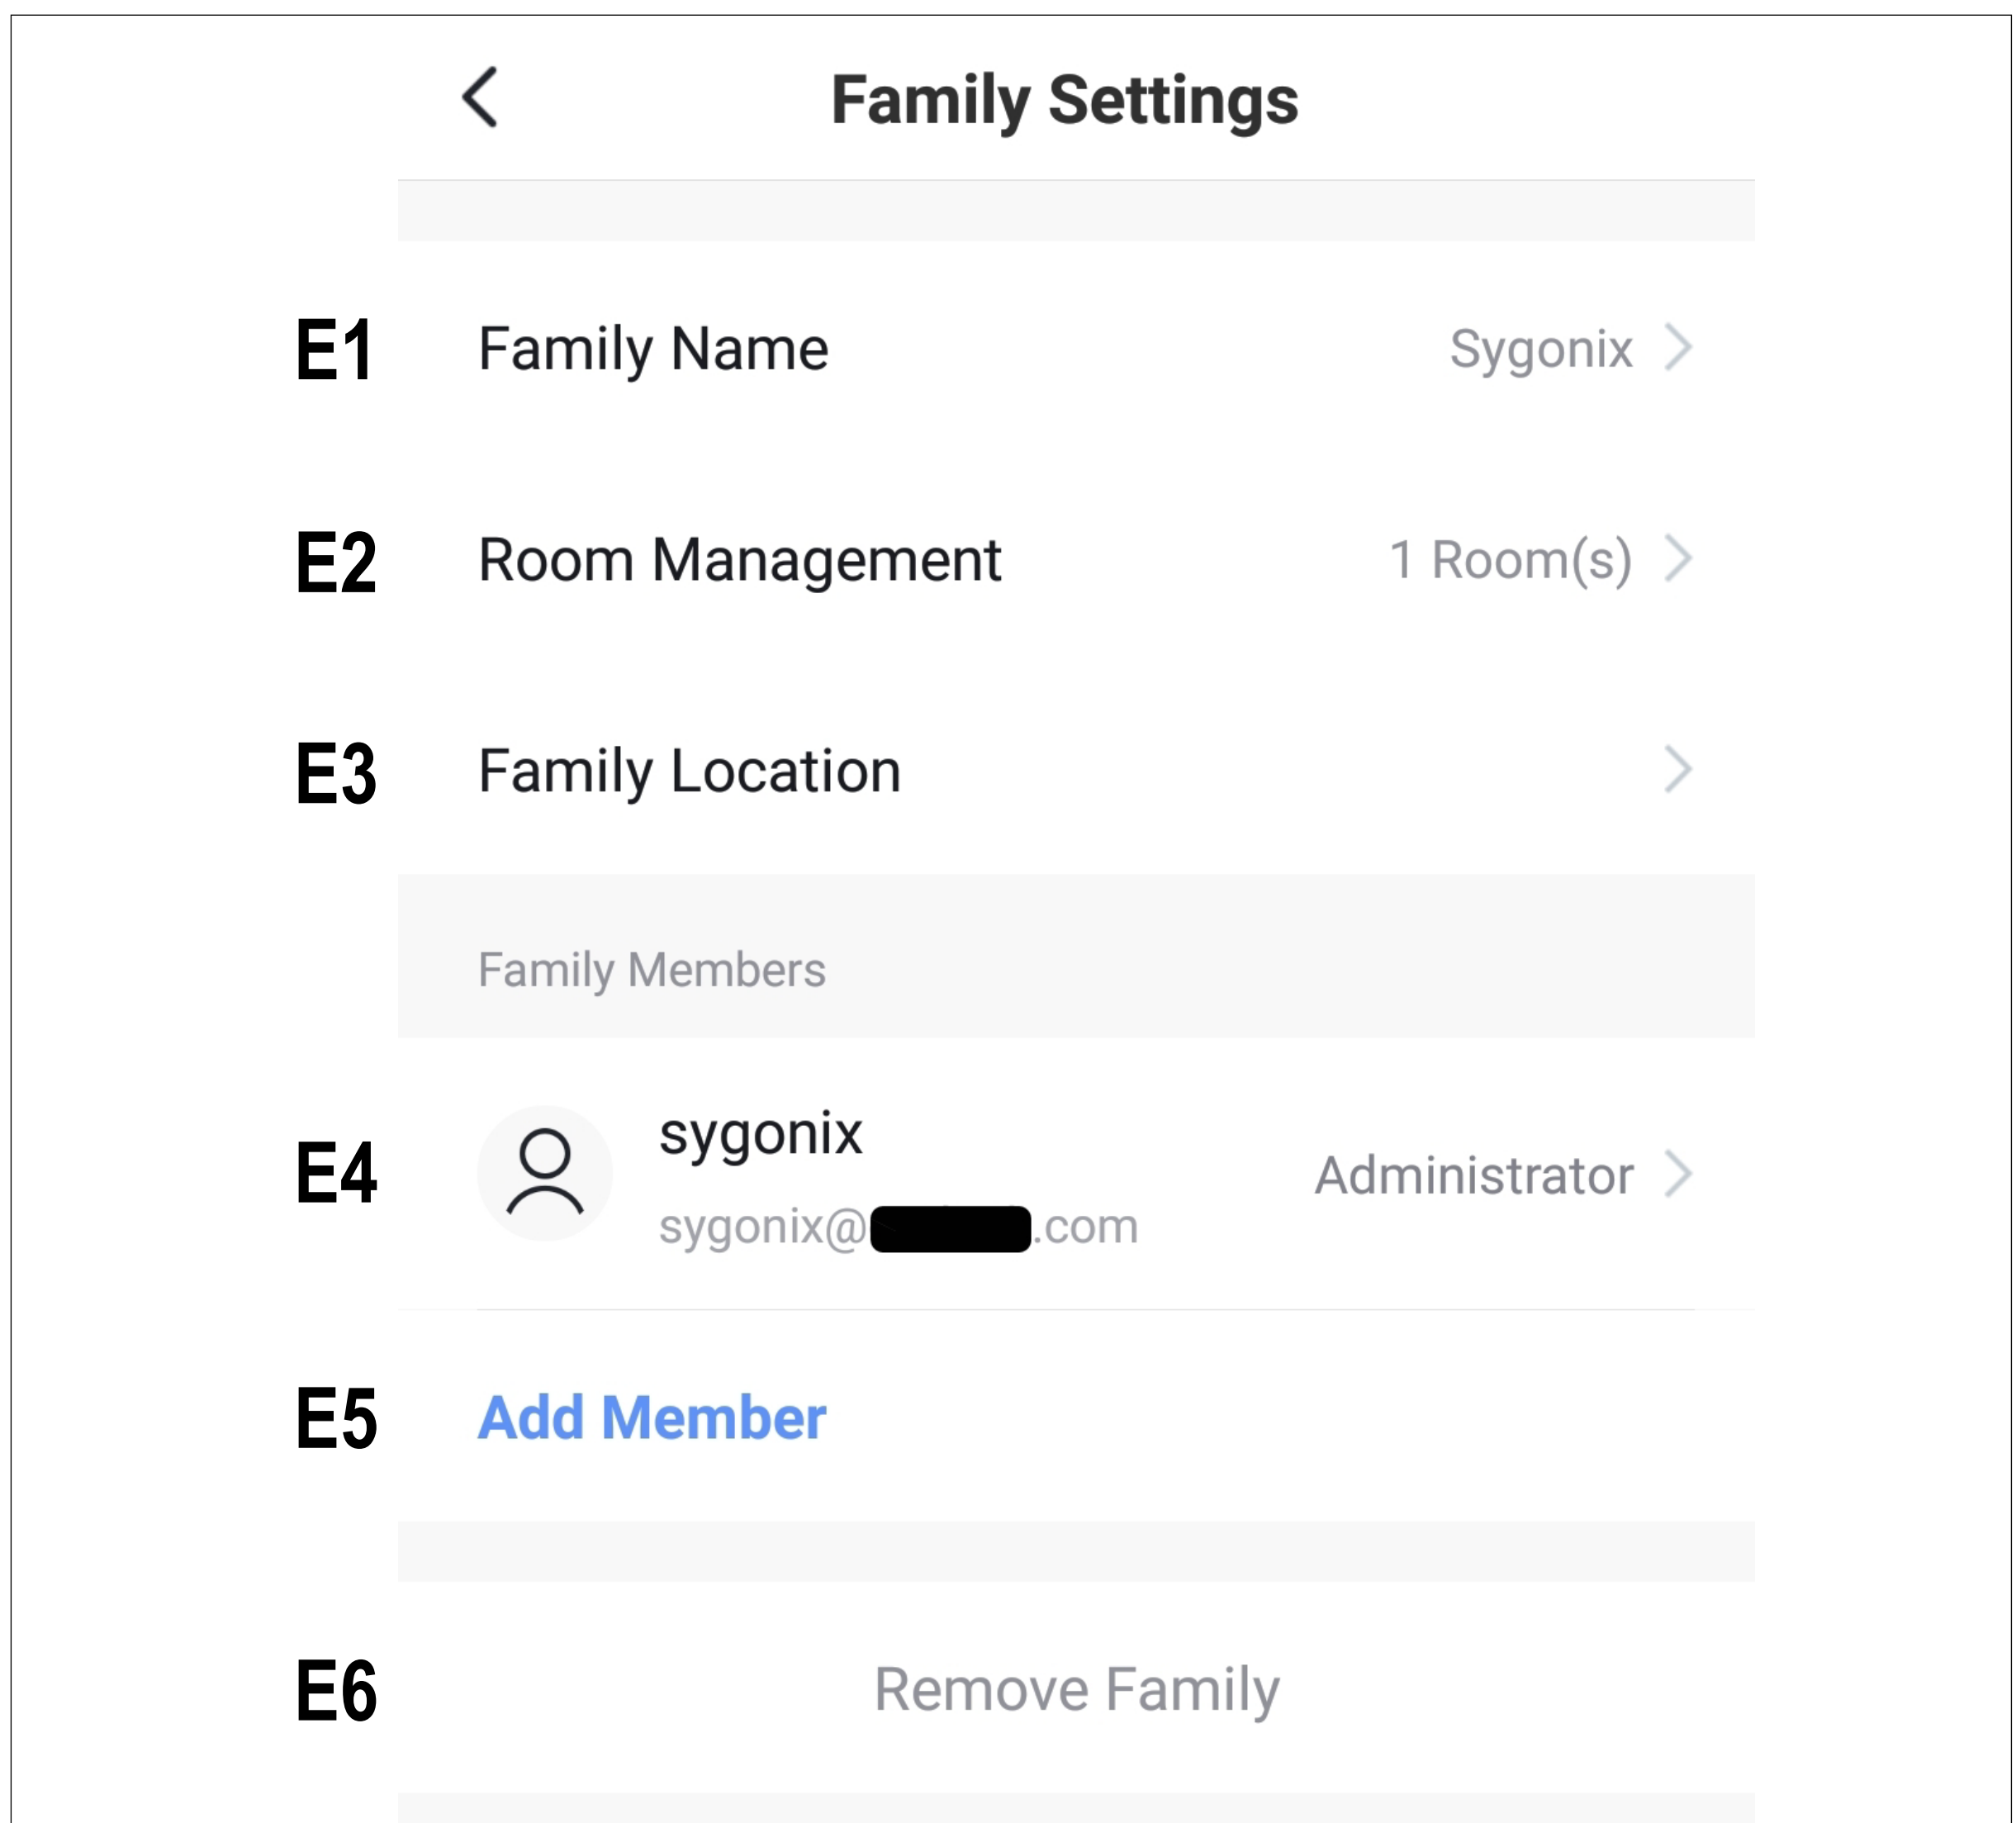

- E1** Here you can change the family name.
- E2** This item opens room management, where you can, for example, add new rooms or delete old ones.
- E3** Here you can set the family location.
- E4** Here you can manage the individual family members. Just tap the member you want to manage.
- E5** This item enables you to add new members to the family.
- E6** Tap the last item if you want to remove the current family.

 Settings (C6)

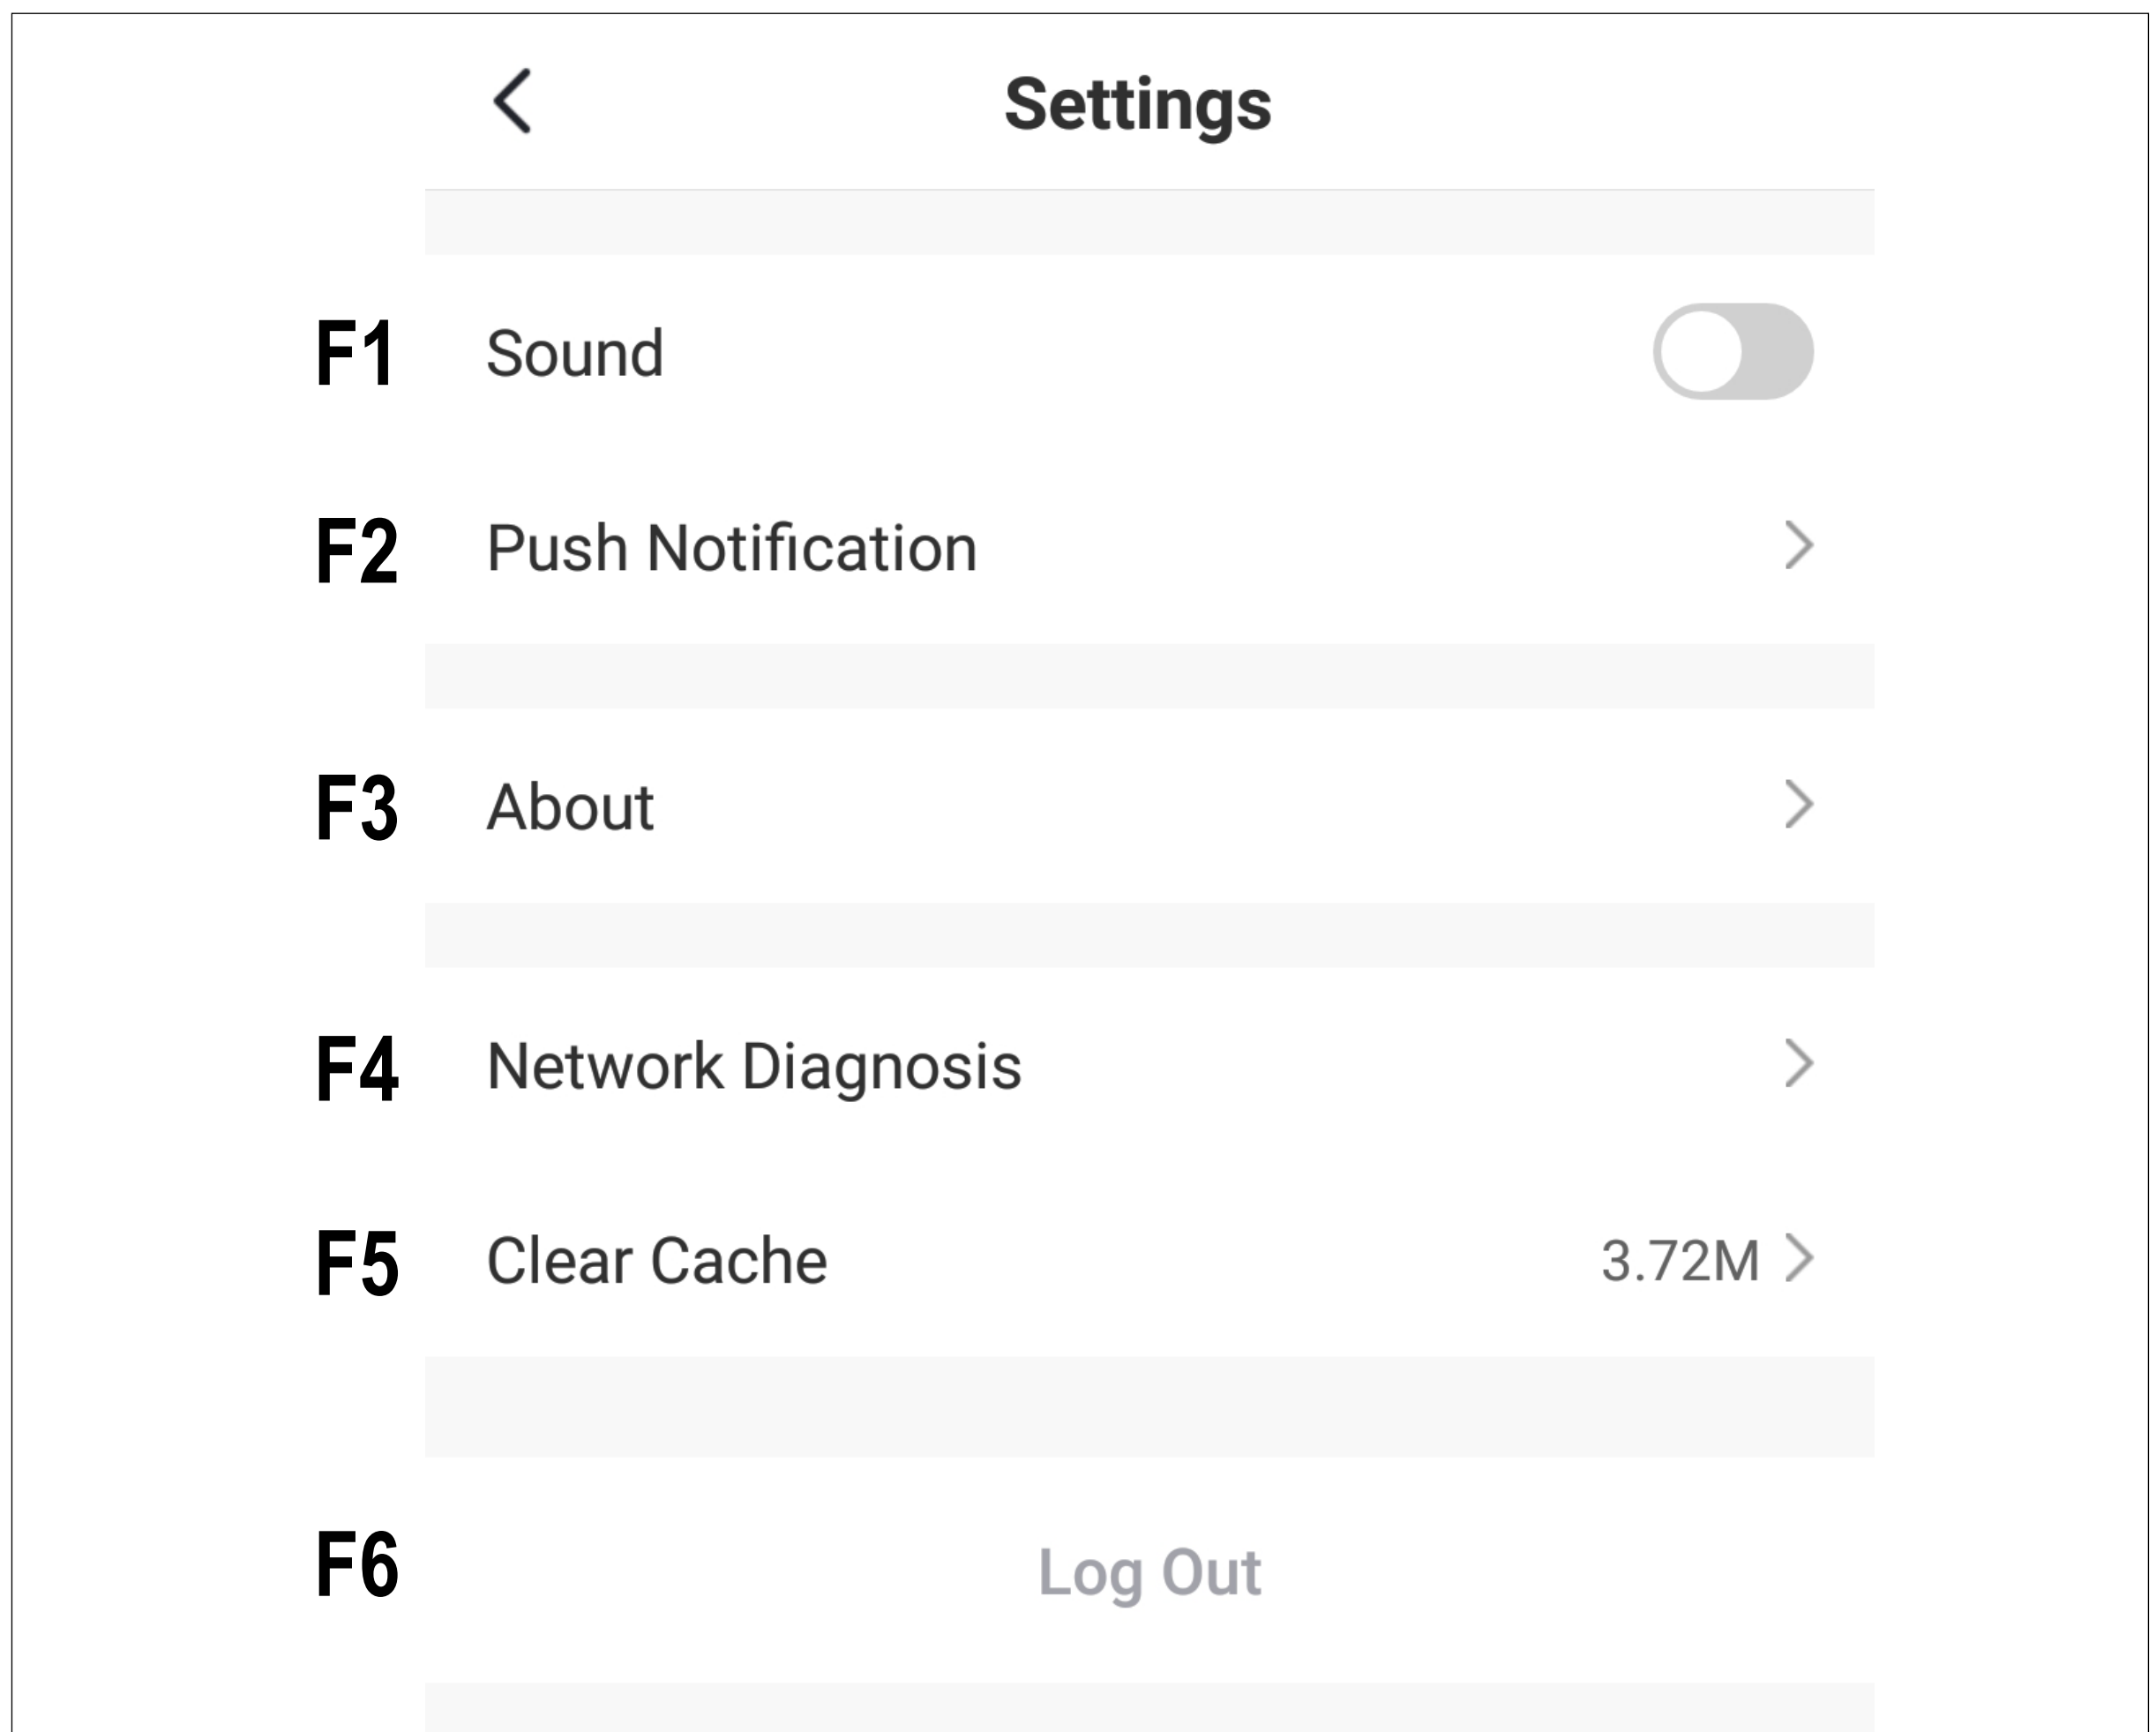

- F1** Here you can turn the app sound on and off.
- F2** This item opens the notification settings.
- F3** This item displays all information about the app.
- F4** Here you can perform a network diagnosis.
- F5** This item enables you to delete the cached data of the app.
- F6** Tap the last item if you want to log out of the app.