



- ① Light (yellow, green, red)
- ② Plate
- ③ Fingersensor
- ④ Emergency keyhole
- ⑤ Emergency keys
- ⑥ Battery-power check inlet
- ⑦ Battery backup system
- ⑧ Built-in battery box
- ⑨ Reset button

1 First time operation

Open with the emergency key

1. Uncover the plate at the bottom of the safe to reveal the emergency keyhole and battery-powered jack inlet.
2. Insert the emergency key into the keyhole, and turn the key counterclockwise.
3. Do not release the key; otherwise the key will return to its original position.
4. Turn the handle clockwise to open the door.
5. Open the battery box cover on the back of the door.
6. Mount four AA batteries in the battery box.

Open with fingerprint

1. Insert four batteries into the battery back-up system.
2. Uncover the plate at the bottom of the safe to reveal the jack inlet for the battery back-up system.
3. You will hear two beeps. Afterwards put your finger on the scanner.
4. First a green light will flash, afterwards the yellow light flashes.
5. Now you have 5 seconds to open the safe.

Saving a fingerprint

1. Push the green button on the inside of the door. You will hear a short beep and a yellow light will flash once on the outside of the door. A green light will flash several times.
2. Scan your fingerprint.
3. After a long beep, a green light will flash when the fingerprint was saved. If the fingerprint could not be saved, a red light will flash. You have to repeat. In this case repeat the procedure.
Capacity: 100 fingerprints

2 Opening & closing the safe

Opening

1. Enter your fingerprint. You will hear 1 beep, and yellow light will turn on, green light flashes, the system begins to test your fingerprint.
2. If you enter successfully, you will hear 2 beeps. Green light and the magnet actuation will last for 6 seconds.
3. If you enter unsuccessfully, you will hear 3 beeps, and red light will turn on.
4. If you enter unsuccessfully 3 times in a row, yellow light will flash, and alarm will sound for one minute.

Closing

1. Close the door and turn the handle counterclockwise to close.

Delete all fingerprints

To delete all fingerprints, press the red button on the inside of the safe door for five seconds. You will hear a long beep. When all fingerprints are deleted, the green light will flash. The safe is reset now. (see point 1)

3 Alarm

Vibration alarm mode

The vibration alarm has to be activated before in operation.

1. To activate the alarm, press the red button on the inside of the door.
2. You will hear a beep and a yellow light will flash on the outside of the door.
3. When the alarm was activated once it will sound for one minute, when the safe moves or gets shaken.
4. To stop the alarm scan your fingerprint. Afterwards it has to be activated again.
5. The alarm can be triggered with a closed as well as with a closed door.

4 Battery

Low battery level

If the green and the red light flashes at the same time, when scanning your fingerprint, the battery level is low.

Battery replacement

If the batteries are dead, open the safe with the battery backup system. Replace the batteries.

5 Fingerprint is not recognized and Emergencies

If the safe does not recognize your fingerprint or there is an error in the electronic of the safe, open the safe as follows:

1. Uncover the plate at the bottom of the safe to reveal the emergency key hole.
2. Insert the enclosed emergency key and the key anticlockwise. Do not let the key loose.
3. Turn the handle clockwise to open the safe.
4. If your fingerprint can not be recognized anymore, save it again.

6 Tips and warnings

- Do not store the user manual, emergency key or the external power supply box in the safe.
- If the safe is not in use for extended periods of time, remove the batteries to prevent damage to the safe's electronic liquid system.
- If mounting the safe onto a wall, ensure that the wall is structurally secure.