

KODAK LUMA 350

Portable Projector

Quick Start Guide



CONTENTS

EN

INTRODUCTION	5
PRODUCT OVERVIEW	5-7
CHARGING THE PROJECTOR	8
POWERING THE PROJECTOR ON/OFF	8
ADJUSTING FOCUS	8
ADJUSTING VOLUME	9
CONNECTING TO EXTERNAL DEVICES	9-10
CONNECTING TO WIRELESS NETWORKS	10
SCREEN MIRRORING (ANDROID/WINDOWS - MIRACAST®)	11-12
CUSTOMER SERVICE CONTACT INFORMATION	12

FR

PRÉSENTATION	13
VUE D'ENSEMBLE	13-15
CHARGER LE PROJECTEUR	16
MISE EN MARCHÉ/ARRÊT DU PROJECTEUR	16
RÉGLAGE DE LA MISE AU POINT	16-17
RÉGLAGE DU VOLUME	17
CONNECTER AUX RÉSEAUX SANS FIL	18-19
DIFFUSER ÉCRAN_ANDROID_WINDOWS_MIRACAST®	19-20
INFORMATIONS DE CONTACT DU SERVICE À LA CLIENTÈLE	20

INTRODUCTION

Thank you for purchasing the KODAK LUMA 350 Portable Projector. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

 
 
 
 
 
 
This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

 
Please make sure to view and download the full user guide at www.kodakphotoplus.com

PRODUCT OVERVIEW

- | | |
|--|-----------------|
| 1. Lens | 1. Power |
| 2. Air Outlet | 2. Speaker |
| 3. Up | 3. Air Inlet |
| 4. Confirm / Return
(press more than 2 seconds) | 4. Tripod Dock |
| 5. Right / Fast Forward | 5. Rating Label |
| 6. Left / Rewind | 6. Non-slip Mat |
| 7. Down | 7. Focus Wheel |
| 8. Power Indicator | 8. Speaker |

- 9. Audio Output (3.5mm)
- 10. USB Input / Power Out
- 11. HDMI Input
- 12. DC Input (15V/1.5A)

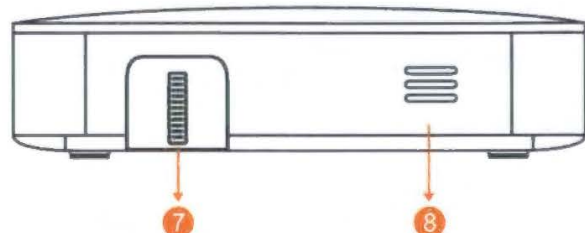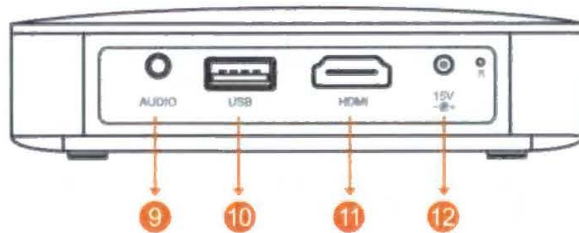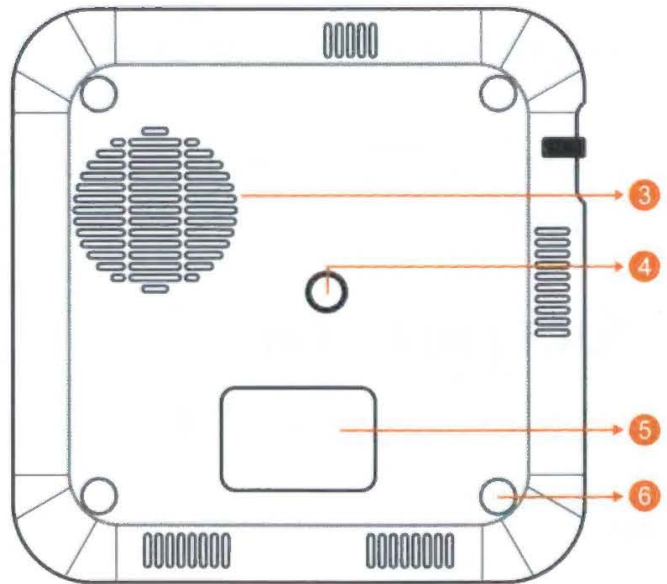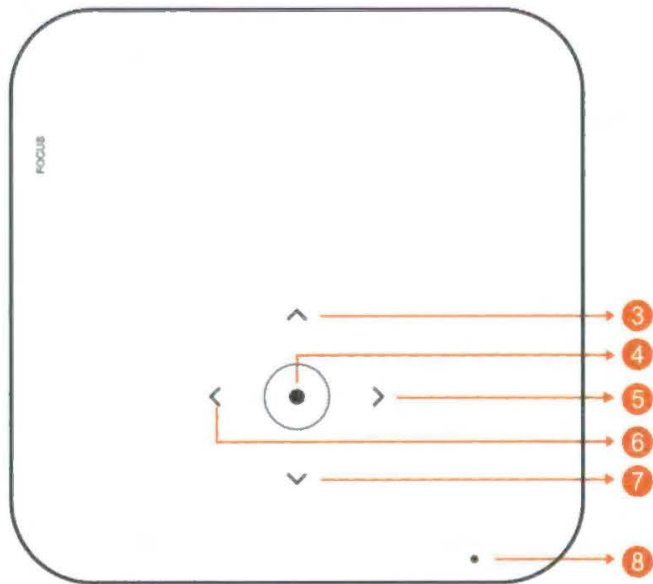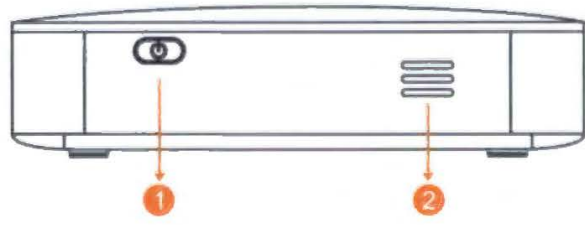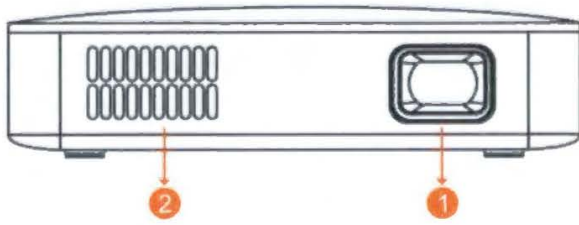

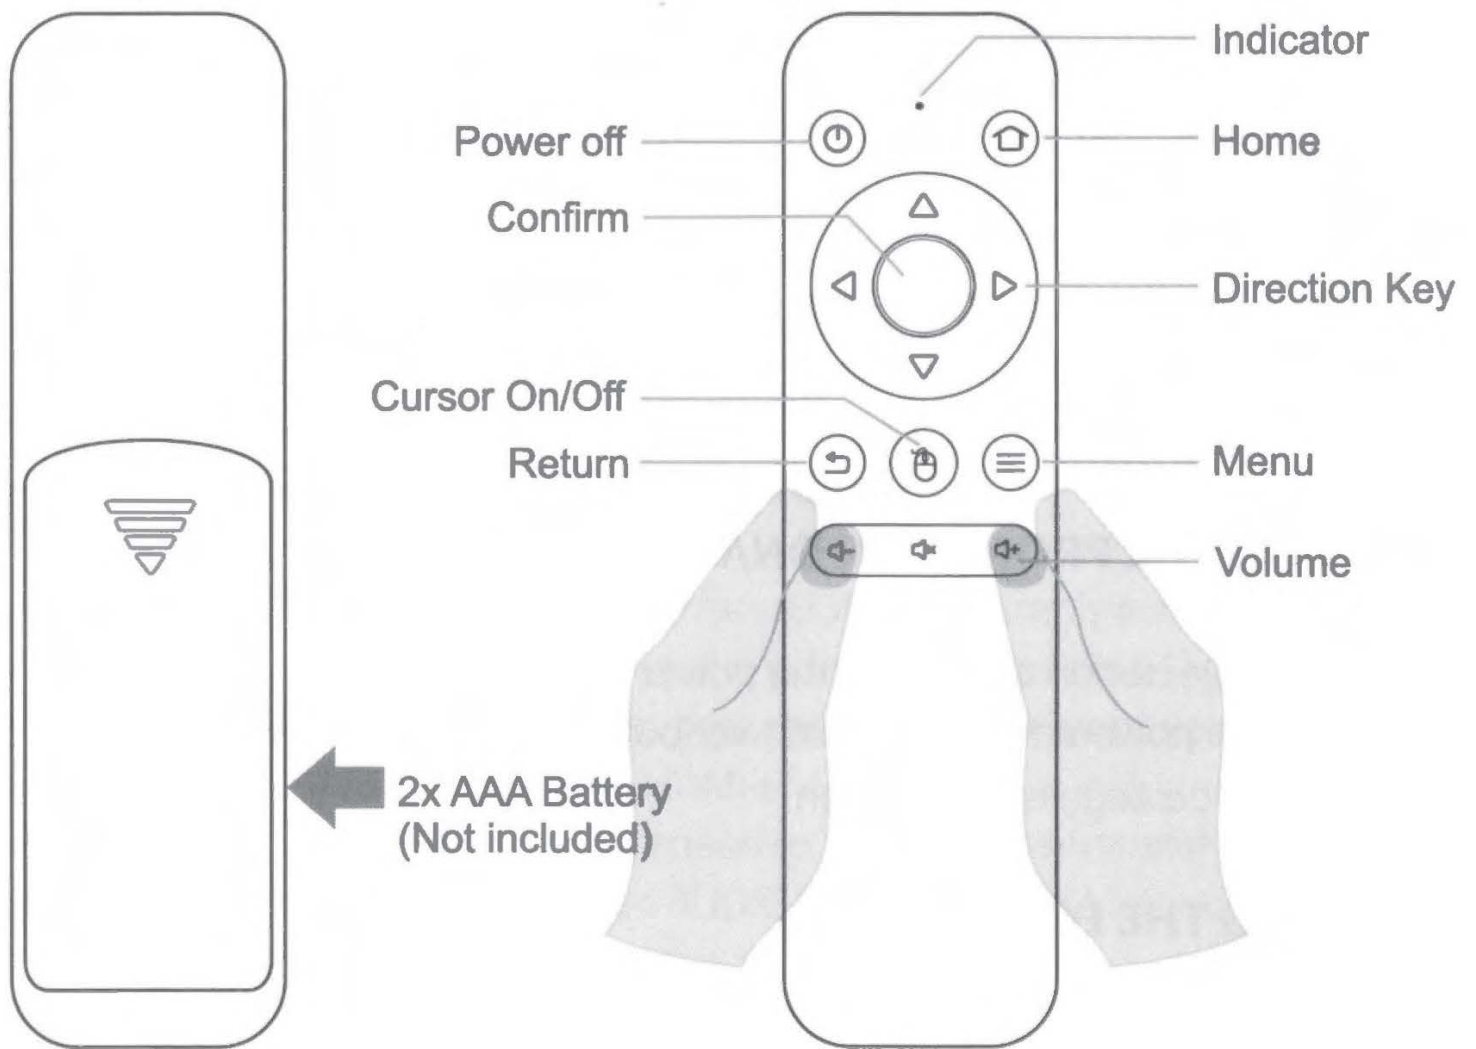

Within two (2) minutes of turning on the projector, press and hold both the Vol + and Vol - keys for approximately three seconds. The remote's indicator light will flash quickly and then stop, indicating that the remote has successfully paired with the projector.

CHARGING THE PROJECTOR

Before using the projector, connect it to the charger and allow it to fully charge. Always use the original charger that was provided to ensure proper charging.

If the red indicator LED light is flashing, this means that the battery is low. While the projector is charging, the indicator LED will be a solid red light. Once charging completes, the indicator LED will change to a solid white light.

POWERING THE PROJECTOR ON/OFF

To turn the projector on or off, hold the power button on the side for three (3) seconds. Once powered on, tap the power button lightly to display the remaining battery percentage on the screen.

ADJUSTING THE FOCUS

If the image on the screen appears fuzzy or unfocused when you turn the projector on, use the focus wheel on the side to correct the image. Turn the wheel up or down until the image appears sharp and clear.

NOTE: If a specific image or video remains fuzzy after adjusting the focus wheel, try pressing and holding the confirm button to return to the main menu. If the main menu graphics appear clear and the image is still fuzzy, the problem may be the image or video quality.

ADJUSTING VOLUME

 
To adjust the device volume during playback, use the ◀+ and ◀- buttons on the remote control.

To adjust the volume without using the remote control, from the main menu, select Settings > Sounds.

CONNECTING TO AN EXTERNAL DEVICE

To access photos or videos stored on any USB drive, simply insert the drive into the corresponding port on the side. If you're using an HDMI compatible device, connect an HDMI cable from the device to your projector to access and view images and pictures. An HDMI-to-HDMI cable is included. If your device requires an adapter, you will need to purchase it separately. For audio devices or headphones, there is an AUDIO OUT jack on the left side.

NOTE: If you connect an HDMI device as well as a USB drive, the HDMI device will take precedence over the USB drive and you will need to disconnect it to access the other connected sources.

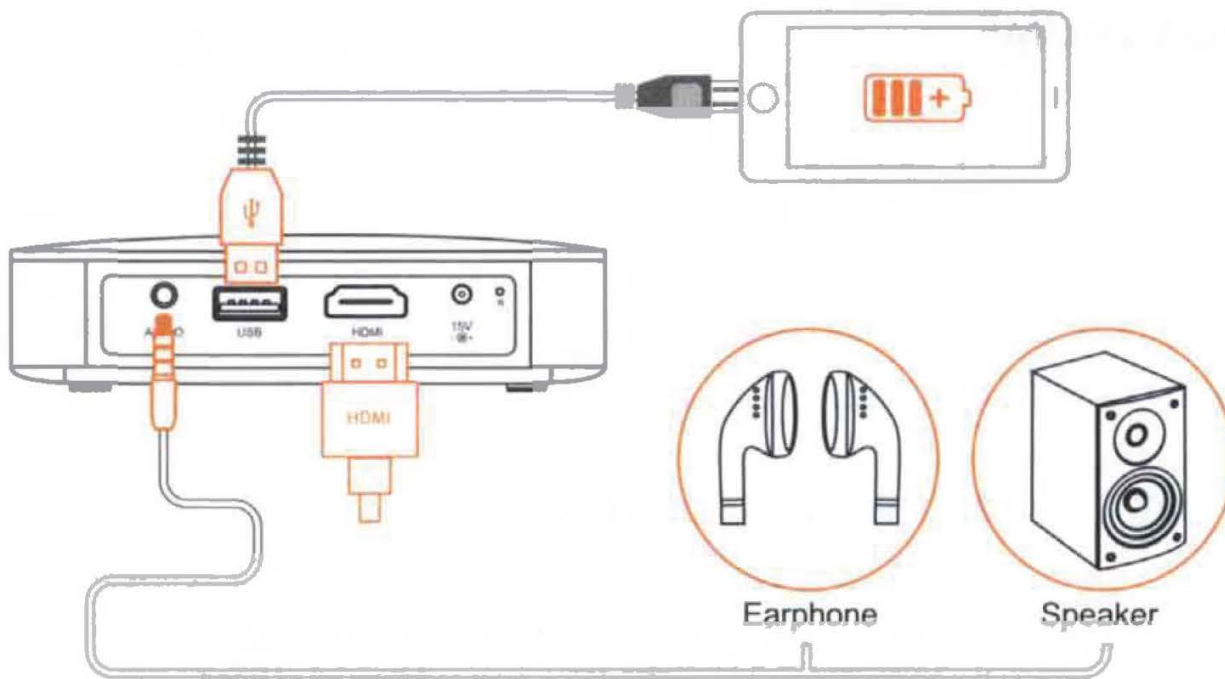

CONNECTING TO A WIRELESS NETWORK

Connecting to the wireless network will allow you to browse the web using your projector's built-in Android web browser, as well as download apps from the app store. This is a necessary step to allow you to take advantage of the Android operating system.

1. From the main menu, select Settings > WLAN.
2. Select the correct network from the list and use the arrows on top of the projector or the remote to navigate the keyboard and enter the password.
3. The projector should connect to that network whenever it is in range.

SCREEN MIRRORING (ANDROID/WINDOWS - MIRACAST®)

1. From the projector main menu, select “Screen Mirroring,” and then select “Miracast®”. The name of the projector will be displayed on the screen so that you can accurately identify it when attempting to connect.
2. Make sure your device is connected to the same network as your projector.
3. Activate the screen mirroring software on your device.
 - a. To activate screen mirroring on your Android™ device:
 - i. On Samsung devices, swipe down from the top notification bar to the expanded view, and then swipe left (if necessary) and touch the “SmartView” icon to activate screen sharing. **NOTE:** Check your device settings for the screen casting/screen mirroring options. The name of the function may vary by device model and service carrier. Other names used may include, “Cast,” or “Screen Mirroring,” as well as “Smart View”. All devices must be running at least Android version 4.1.2.
 - b. To activate screen mirroring on your Windows® 10 device:
 - i. From the start menu, select Settings.
 - ii. In the Settings menu, select Devices.
 - iii. On the left side of the Devices menu, select Connected Devices, and then click Add a Device.

4. Select the projector from the list of devices and select "Connect."
A dialog box will pop up on the projector screen for you to confirm the connection; use the arrows or the remote to highlight "Accept" and press the confirm button.
5. Your screen will now be mirrored to the projector.
6. When finished, select Disconnect on your device.

CUSTOMER SERVICE CONTACT INFORMATION

Should you experience any problems with your product, please contact us before returning the item to the place of purchase. We're here to help!

U.S. Support: kodak@camarketing.com

844-516-1539

International Support: kodakintl@camarketing.com

844-516-1540

KONTAKTINFORMATIONEN FÜR DEN KUNDENDIENST

Sollten Sie Probleme mit Ihrem Produkt haben, setzen Sie sich bitte mit uns in Verbindung, bevor Sie den Artikel an den Ort Ihres Kaufs zurückbringen. Wir sind hier, um zu helfen!

Support in den USA: kodak@camarketing.com

844-516-1539

Internationaler Support: kodakintl@camarketing.com

844-516-1540

www.kodakphotoplus.com

The Kodak trademark, logo, and trade dress are used under license from Eastman Kodak Company.

Android is a trademark of Google Inc.

IOS is a trademark of Cisco in the U.S. and other countries and is used under license.

Mac is a trademark of Apple Inc. in the U.S. and other countries.

Miracast is a trademark of Wi-Fi Alliance in the U.S. and/or other countries.

Windows is a trademark of Microsoft Corporation in the U.S. and/or other countries.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement or approval.

Distributed by: C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837, USA C&A Marketing UK LTD, 167 Hermitage Road, Crusader Industrial Estate, London N4 1LZ, UK

©2018. All Rights Reserved. Made in China.

La marque commerciale Kodak, le logo et l'habillage sont utilisés sous licence de Eastman Kodak Company.

Android est une marque commerciale de Google Inc.

IOS est une marque commerciale d'Apple Inc., enregistrée aux États-Unis et d'autres pays.

Mac est une marque commerciale d'Apple Inc., enregistrée aux États-Unis et d'autres pays.

Miracast est une marque commerciale de Wi-Fi Alliance, enregistrée aux États-Unis et d'autres pays.

Windows est une marque commerciale de Microsoft Inc., enregistrée aux États-Unis et d'autres pays.

Tous les autres produits, noms de produits, noms de sociétés ainsi que les logos sont des marques de commerce ou des marques déposées de leur détenteur respectif, et ne signifient aucun parrainage, autorisation ou approbation.

Distribué par : C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837, USA C&A Marketing UK LTD, 167 Hermitage Road, Crusader Industrial Estate, London N4 1LZ, UK

©2018. Tous droits réservés. Fabriqué en Chine.

Il marchio, il logo e l'immagine commerciale di Kodak sono utilizzati secondo licenza fornita da Eastman Kodak Company.

Android è un marchio commerciale di Google Inc.

IOS è un marchio commerciale di Cisco registrato negli Stati Uniti e altri paesi e utilizzato secondo licenza.

Apple è un marchio commerciale di Apple Inc., registrato negli USA e in altri paesi.

Miracast è un marchio commerciale di Wi-Fi Alliance registrato negli USA e in altri paesi.

Windows è un marchio commerciale di Microsoft Corporation registrato negli USA e in altri paesi.

Eventuali ulteriori prodotti, servizi, nomi e logo utilizzati sono marchi di fabbrica, di proprietà dei rispettivi produttori, utilizzati per identificare i prodotti e non per connotare finanziamenti, approvazioni o altri legami.

Distribuito da: C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837, USA USA

Marketing UK LTD, 167 Hermitage Road, Crusader Industrial Estate, Londra N4 1LZ, UK

©2018. Tutti i diritti riservati. Made in China.

La marca registrada Kodak, el logotipo y la presentación del producto se usan bajo licencia de Eastman Kodak Company.

Android es marca registrada de Google Inc.

IOS es marca registrada de Cisco en los Estados Unidos y otros países y se utiliza bajo licencia.

Mac es marca registrada de Apple Inc. en EE. UU. y en otros países.

Miracast es marca registrada de Wi-Fi Alliance en EE. UU. o en otros países.

Windows es marca registrada de Microsoft Corporation en EE. UU. o en otros países.

Todos los otros productos, nombres de marcas, nombres de compañías y logotipos son marca registrada de sus respectivos propietarios, se utilizan solo para identificar sus correspondientes productos y no pretenden connotar patrocinio, aprobación o autorización.

Distribuido por: C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837 EE. UU. C&A

Marketing UK LTD, 167 Hermitage Road, Crusader Industrial Estate, Londres N4 1LZ, Reino Unido

©2018. Todos los derechos reservados. Fabricado en China.

Die Kodak-Marke, das entsprechende Logo und die Aufmachung werden unter Lizenz von Eastman Kodak Company verwendet.

Android ist eine Marke von Google Inc.

IOS ist eine in den USA und anderen Ländern eingetragene Marke von Cisco und wird unter Lizenz verwendet.

Mac ist eine in den USA und anderen Ländern eingetragene Marke von Apple Inc.

Miracast ist eine in den USA und/oder anderen Ländern eingetragene Marke der Wi-Fi Alliance.

Windows ist eine in den USA und/oder anderen Ländern eingetragene Marke der Microsoft Corporation.

Alle anderen Produkte, Markennamen, Firmennamen und Logos sind Markenzeichen ihrer jeweiligen Eigentümer und dienen lediglich zur Kennzeichnung ihrer jeweiligen Produkte. Sie sind nicht als Sponsoring, Billigung oder Zustimmung gedacht.

Vertrieben durch: C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837, USA C&A

Marketing UK LTD, 167 Hermitage Road, Crusader Industrial Estate, London N4 1LZ, Großbritannien

©2018. Alle Rechte vorbehalten. Hergestellt in China.

